


# **DPA-D2-QSW** a video quad splitter

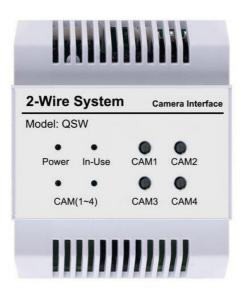

User manual


# 1.About QSW Unit

Discription:

The QSW module is designed to 2D system for the purpose of video quad splitter, four images from 4 different cameras can be displayed on screen of monitor via QSW unit.

NOTE: For monitor which support split display function, it can use the split display function of QSW.

## 2. Terminal Description

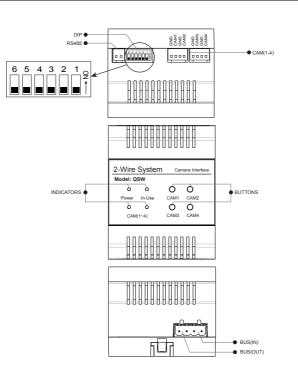

RS485:Reserved.

CAM1-4:Connect to regular analog CCTV.

BUS(IN):Connect to the bus line, no polarity.

BUS(OUT):Connect to the bus line, no polarity.

INDICATORS:

1. Power: Working indicator, always on when the QSW work normally.

2.In-Use:Video output indicator, always on when the QSW output the video.

3.CAM(1~4):Video output indicator.

In-Use	CAM(1~4)		Description
	0	0	CAM1 video output
		0	CAM2 video output
	0		CAM3 video output
			CAM4 video output

#### \* NOTE:

- A. :It shows that the indicator ON;
  :It shows that the indicator OFF.
- B. CAM(1~4) indicator always on when CAM4 video output; CAM(1~4) indicator flash when video split output video.

#### BUTTONS:

- 1.Press CAM1 button in monitoring state, the system will mandatory output the video of CAMERA 1.
- 2.Press CAM2 button in monitoring state, the system will mandatory output the video of CAMERA 2.
- 3.Press CAM3 button in monitoring state, the system will mandatory output the video of CAMERA 3.
- 4.Press CAM4 button in monitoring state, the system will mandatory output the video of CAMERA 4.
- 5.Press and hold CAM4 button for 3 seconds in monitoring state, the system will mandatory output the video of quad split.


#### DIP:DIP switches.

Bit	Bit State	Description	
DIP1~DIP2		set to the first QSW.	
		set to the second QSW.	
	1 2 3 4 5 6 ON	set to the third QSW.	
	1 2 3 4 5 6	set to the fourthQSW.	
DIP3	1 2 <b>3</b> 4 5 6	When set to OFF, it means that the third and fourth cameras unavailable; When set to ON, it means that the third camera available.	
DIP4	1 2 3 4 5 6	When set to OFF, it means that the fourth camera unavailable; When set to ON, it means that the fourth camera available.	
DIP5	<b>N N N N N N N N N N</b>	When set to OFF, it means that the system select video split display mode A, for details, see later section #; When set to ON, it means that the system select video split display mode B, fo details, see later section #.	
DIP6	1 2 3 4 5 <b>6</b>	When the system connected SC6V, and SC6V connected two cameras(the two cameras of the device is valid),it should be set to ON; When the system don't connected SC6V(or connected SC6V, but SC6V don't connected camera), it should be set to OFF.	

## # NOTE:


	Mode A	Mode B
Two cameras:	CAM2 CAM1	CAM2 CAM1
Three cameras:	CAM1 CAM2	CAM2 CAM3 CAM1
Four cameras:	CAM1 CAM3	CAM2 CAM4


### 3. Unit Mounting

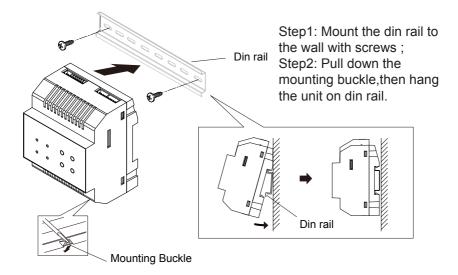

## 4. Wiring Diagram

4.1 Single door station and single QSW applications:

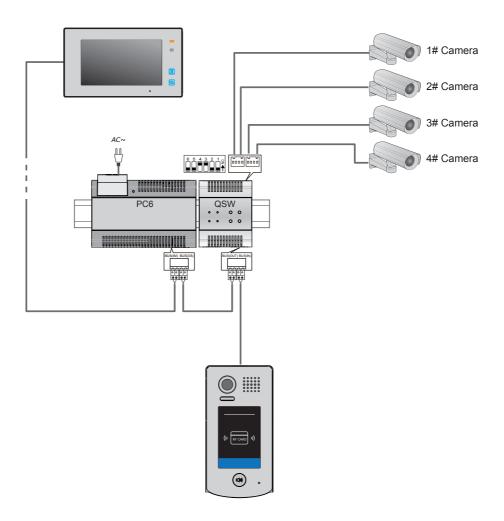

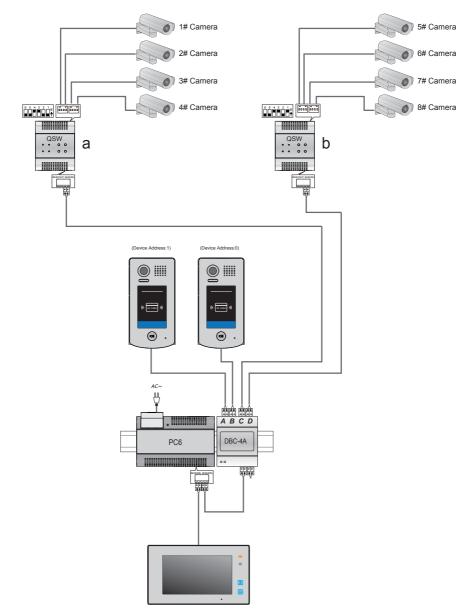

#### 4.2 Multi door station and two QSW applications:

NOTE: The system can connect SC6V, but at this time, the DIP6 of DT-QSW must be set to ON.

# 5. Specification

- Power Supply :
- Working Temperature:
- Wiring:
- Dimension:

DC24V; -15°C~+55°C; 2 wire,non-polarity; 90(H)×72(W)×60(D)mm.