



## Addendum

### Optical Line Termination unit for GEPON


#### 802.3ah

#### **Content:**



How to operate with software .....	2
How to setup uplink port.....	6
IP address change.....	9
MAC address change .....	11

## How to operate with software


1. Connect pc(computer) and GOLT11 console Port.
2. Copy all files in CD to the PC.
3. Touch the tool item in CD, Touch below folder

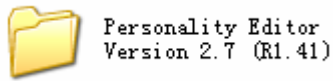

  
4. Double touching




5. Then coming out below

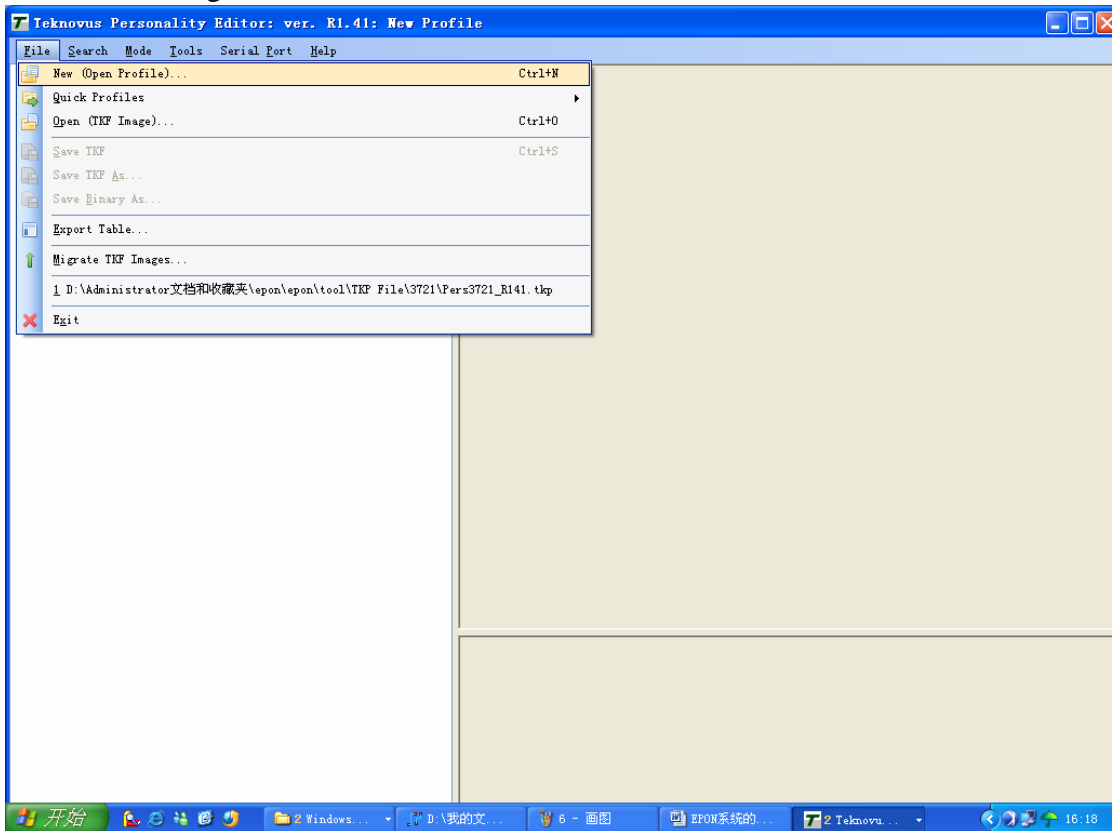

6. Touch **File** item , then Touching **New**, open  in **Tool** folder.

Then open  , Open  , Open  .


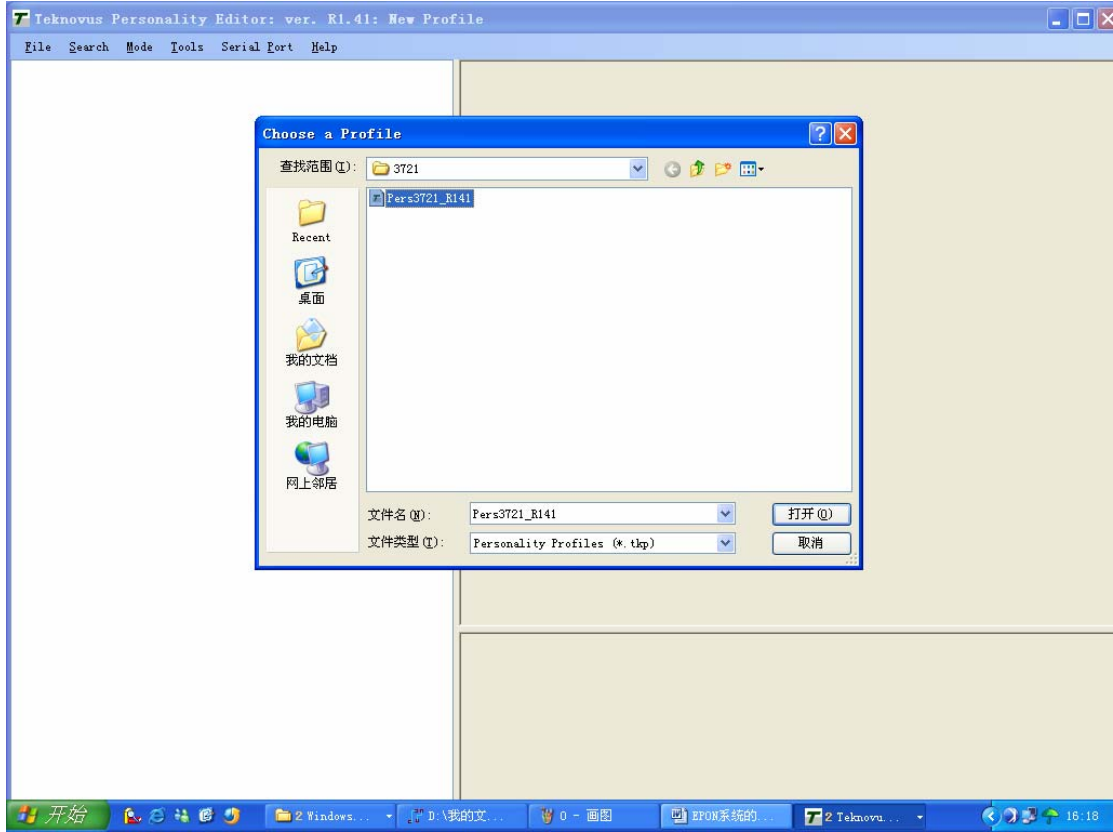






Pers3721\_R141  
Teknovus Persona...  
12 KB

7. When

is opened follow the steps in below photo

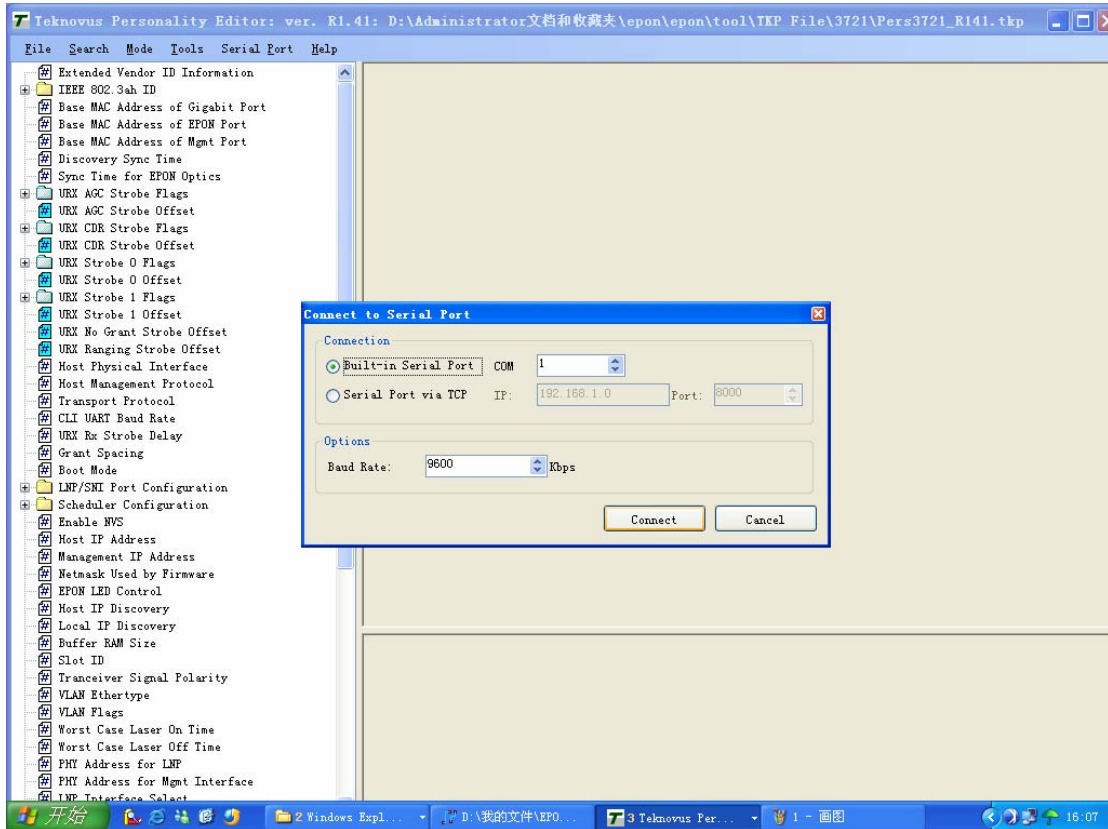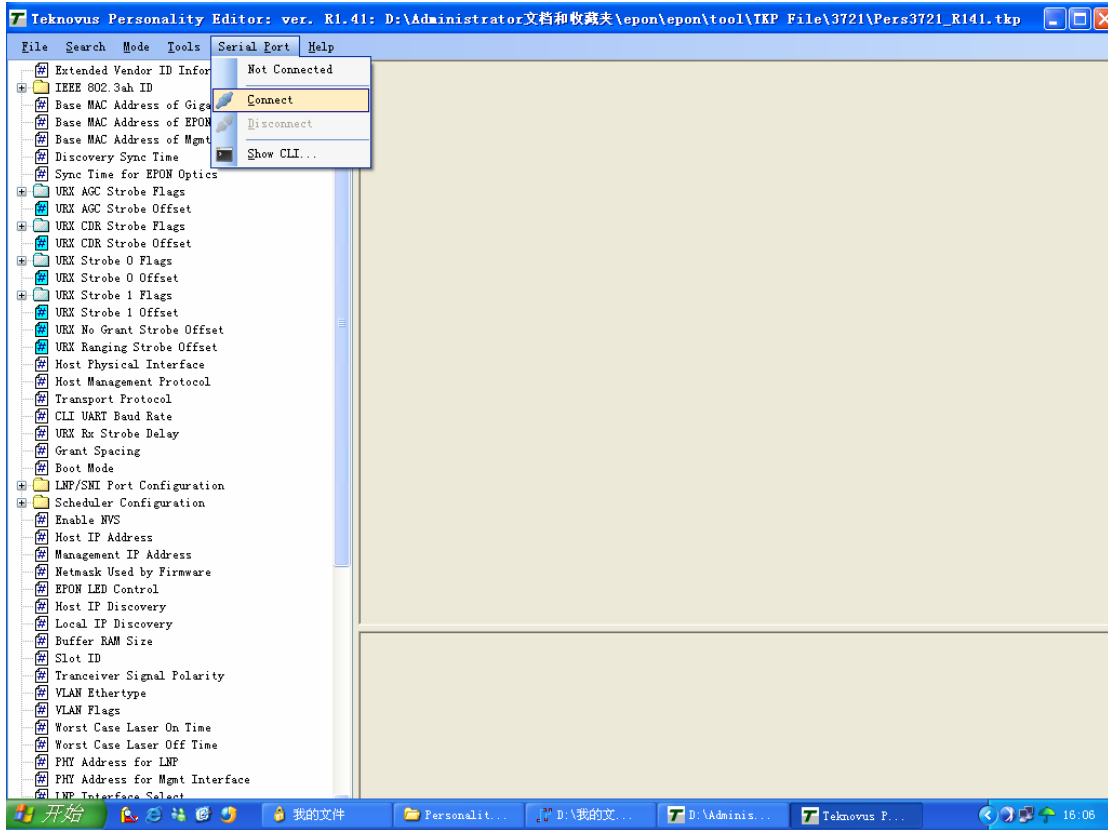


## 8. OLT connecting with pc, to read OLT , operate like below

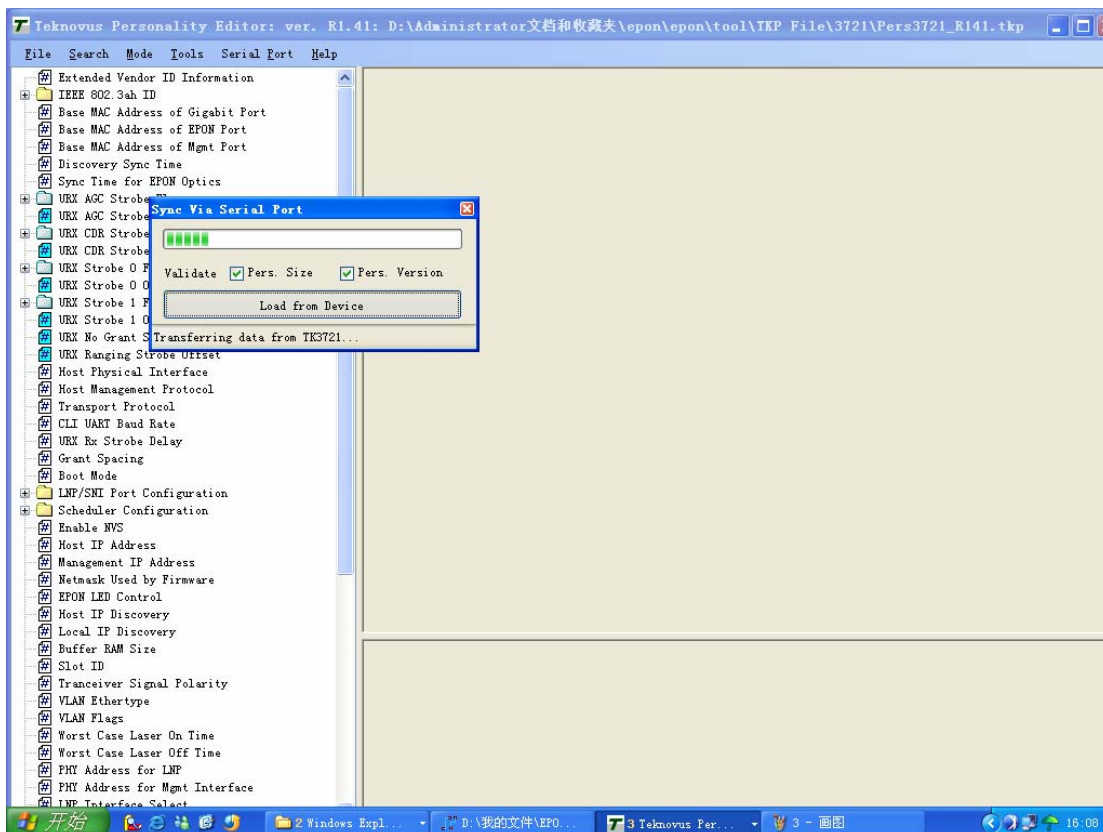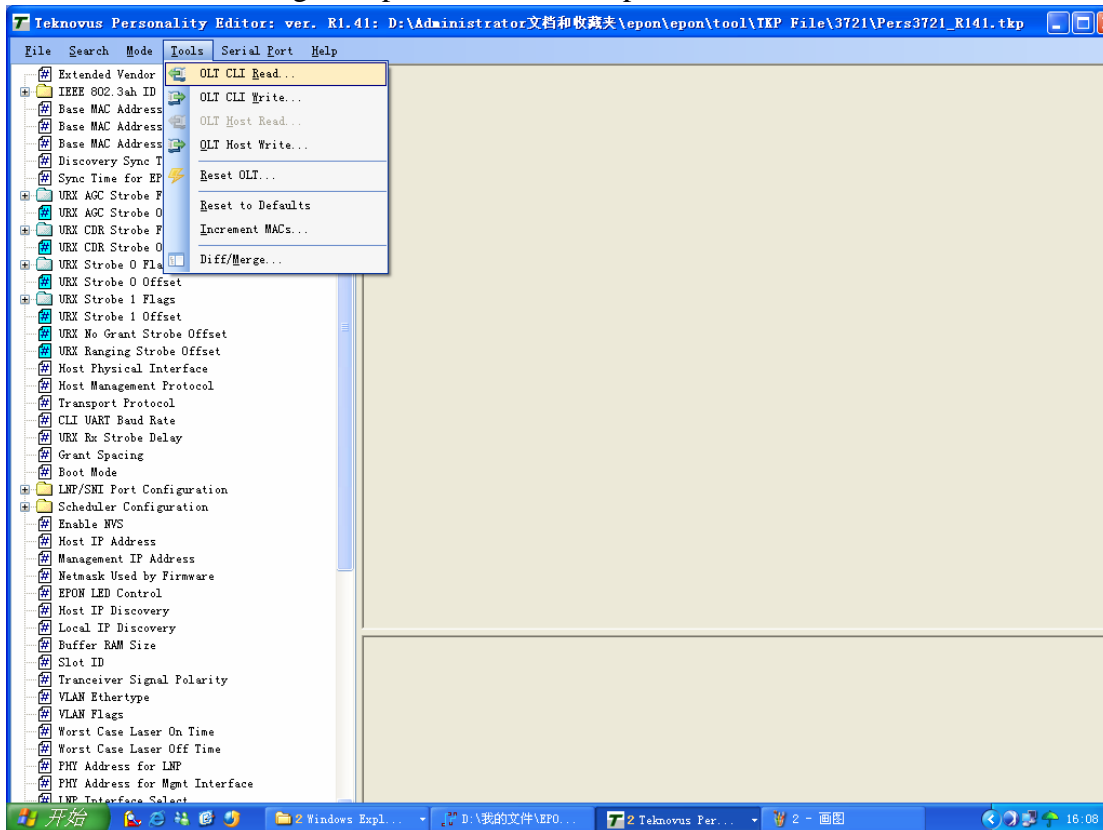



9. Now you can configure OLT.

## How to setup uplink port


Please note – when enabled both uplink ports (Fiber and Cooper) all interfaces are active. However you can use physically in same time only one of them. Connection of RJ-45 cable will de-activate fiber port and vice-versa installation of SFP module will deactivate functionality of Cooper port.

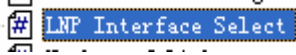1. Touch section “LNP Interface Select”  coming below :

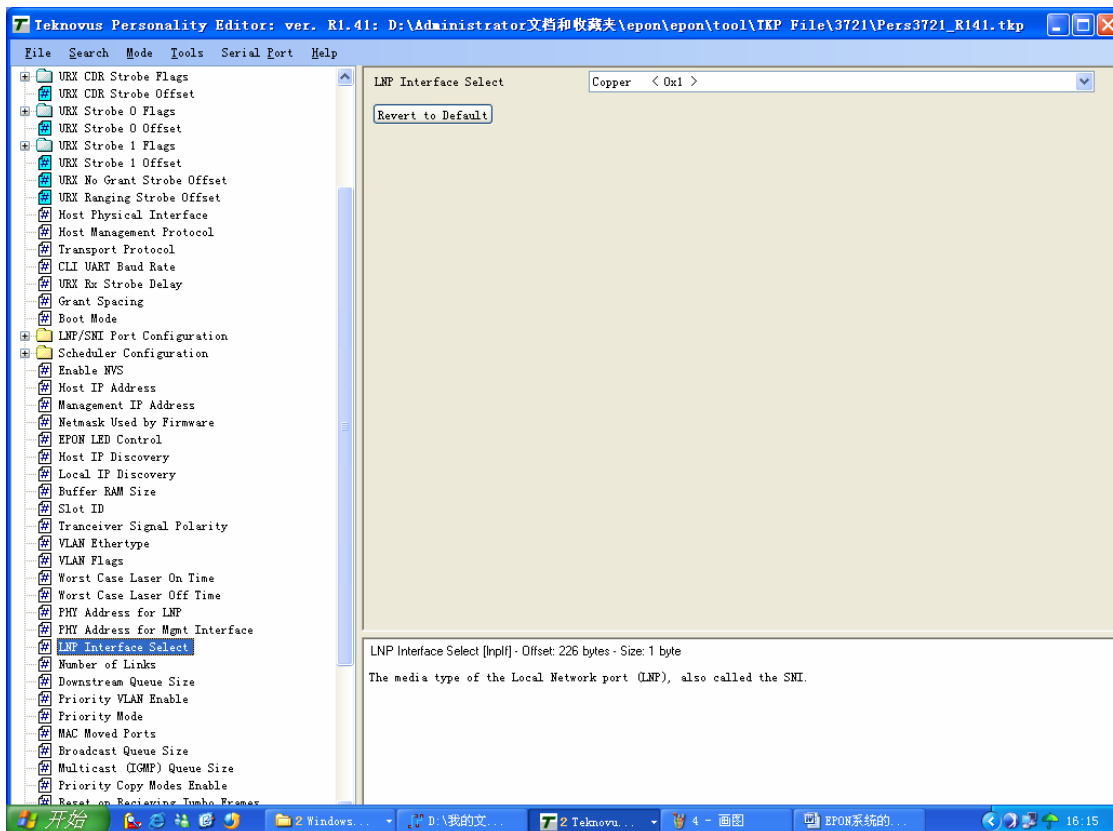


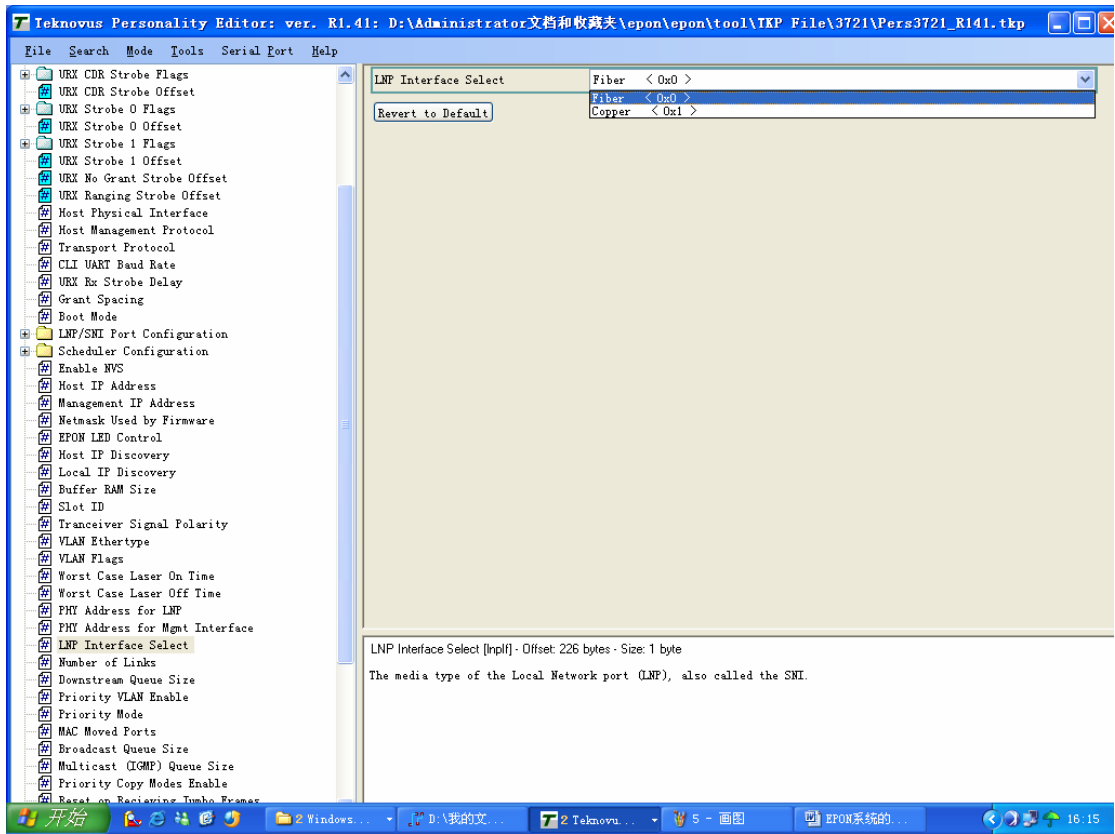


## 2. Select fiber or copper

 

When choosed Copper, it need choose this item  Flow Control

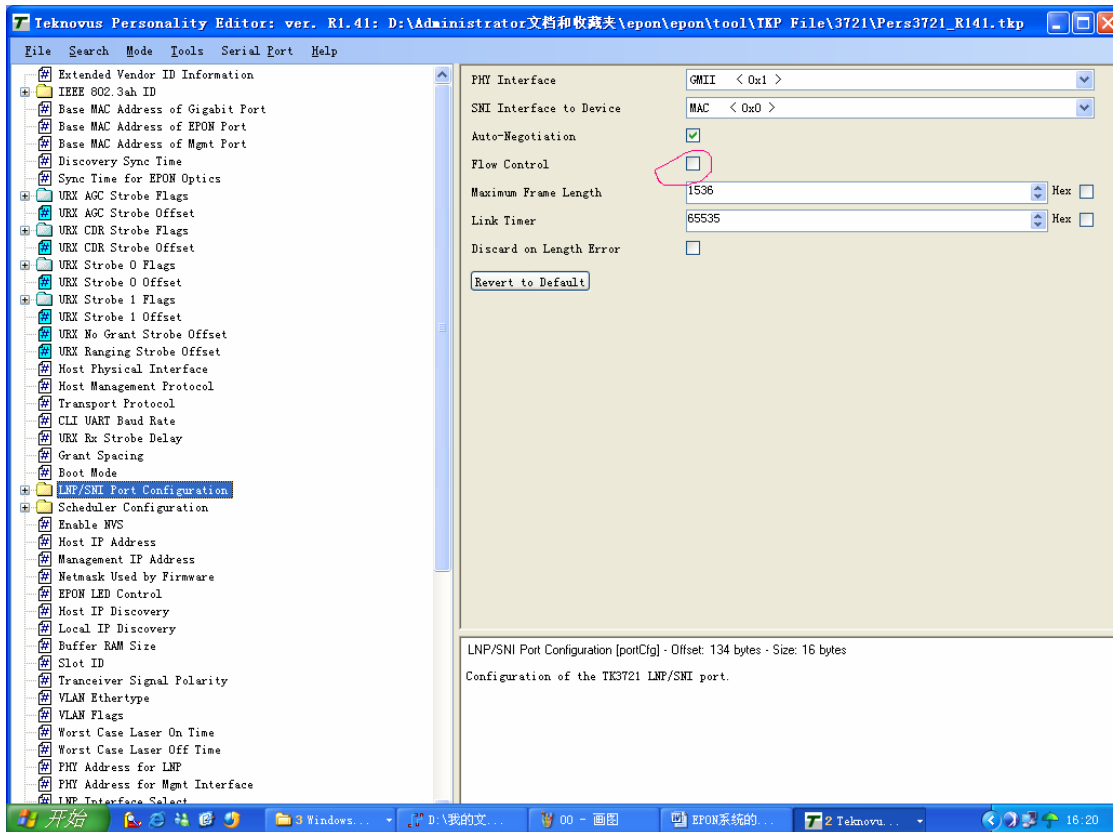


### 3. Save

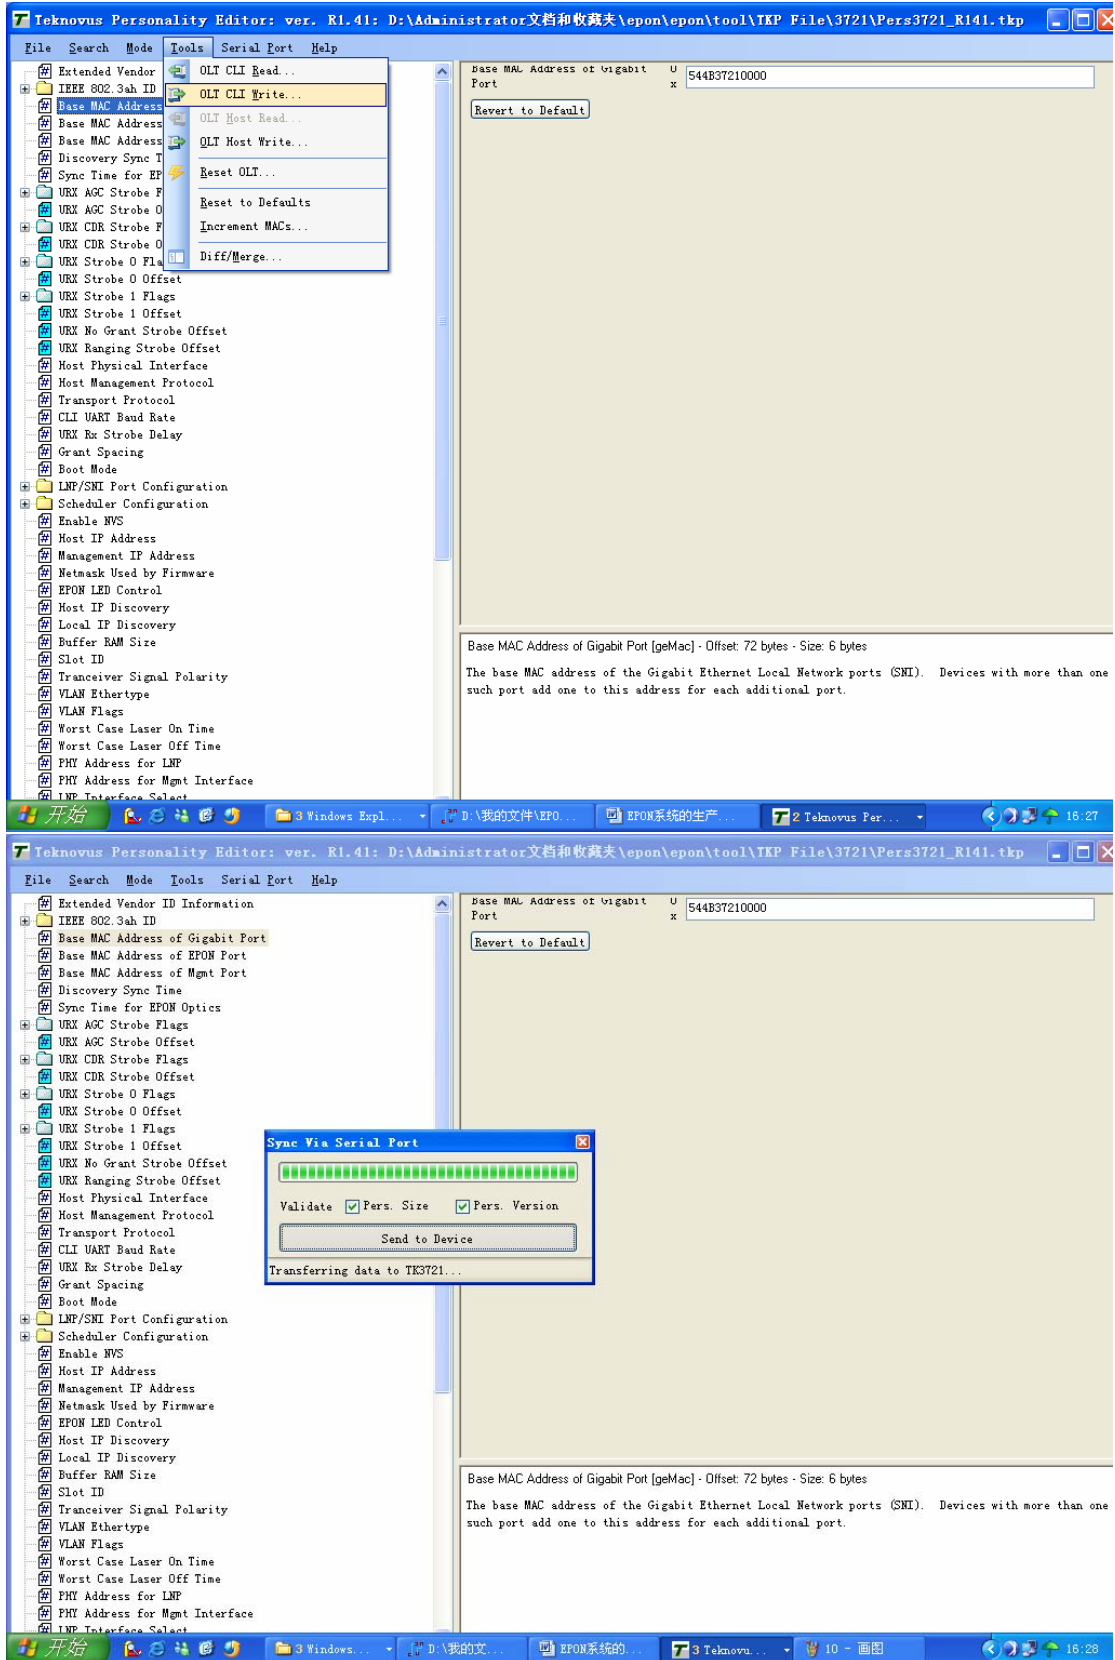






## IP address change

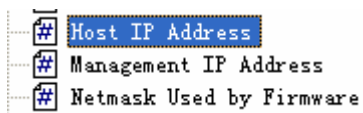


1. Touch “Host IP address” like below

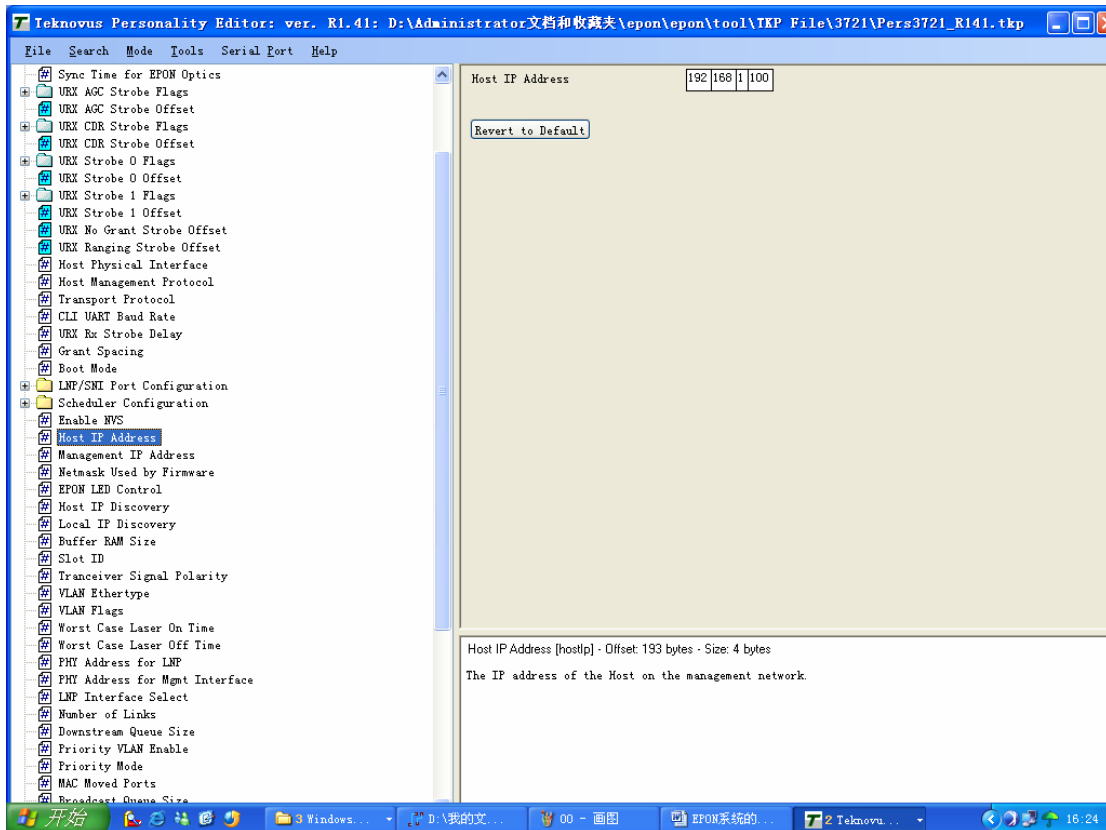

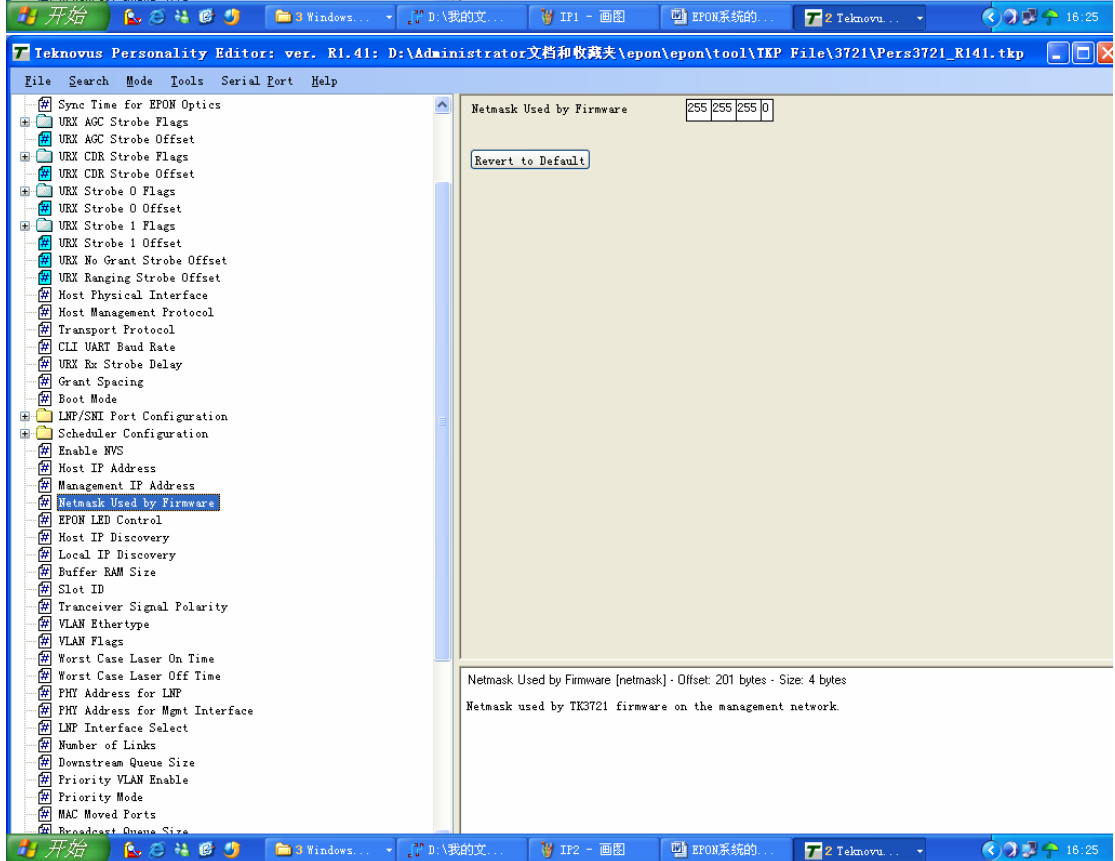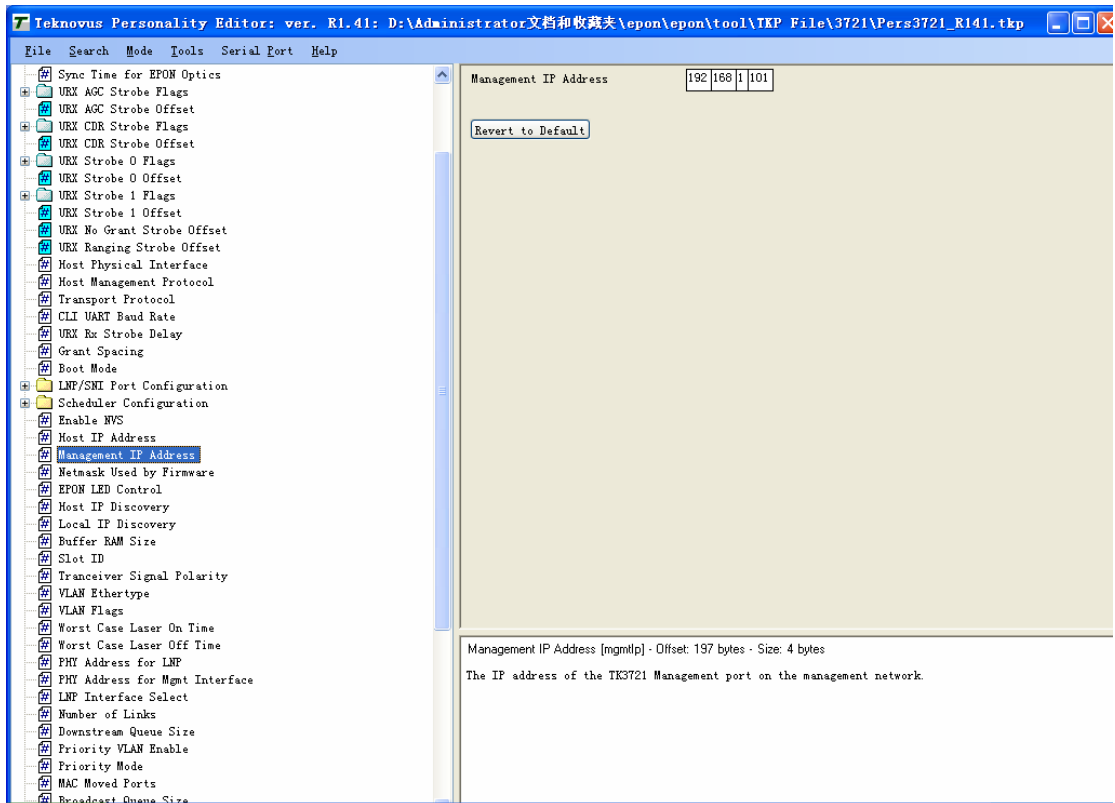

2. Save the amendment.

## MAC address change

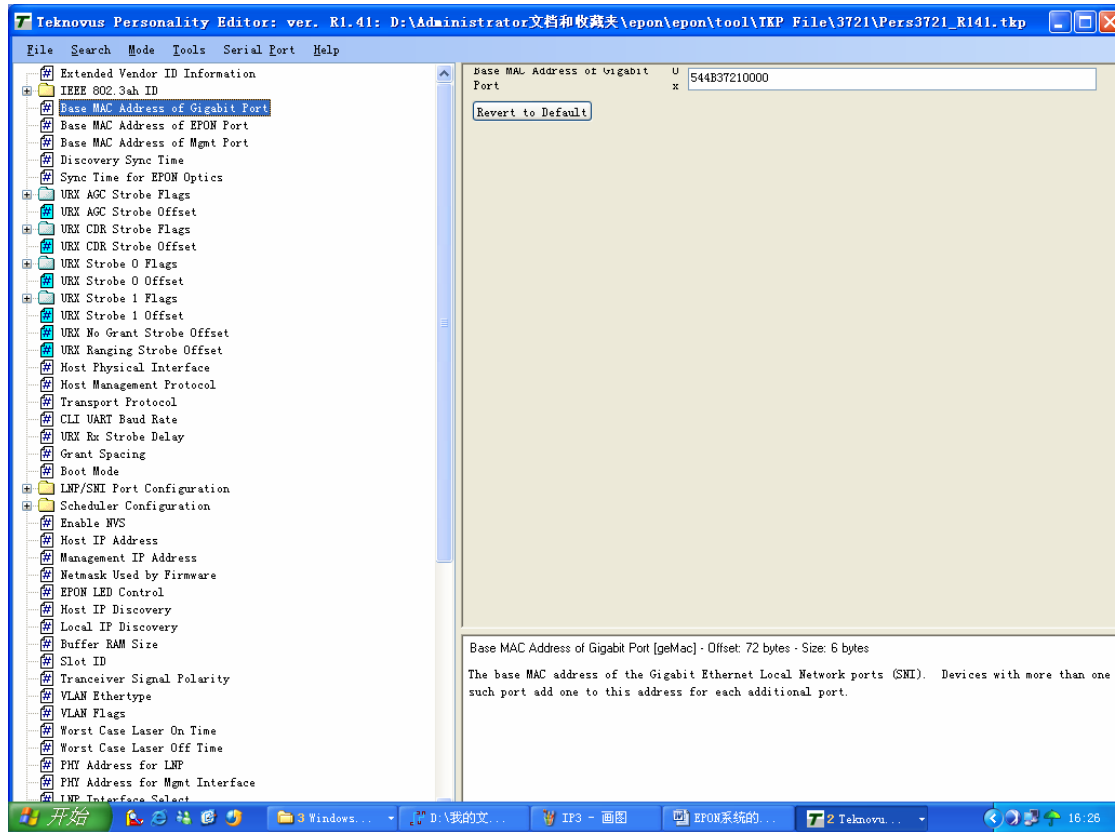

Save the amendment.