



KDOME SPECIAL PTZ CODES

Automatic Tour of high Speed Dome Camera

Remarks: “PELCO-D” protocol has no corresponding orders for part of the special functions, so we converted functions of some of the commonly-used orders, generally converting in the way of “preview preset position/ setup preset position”. Order conversion correspondence is shown in the following table:

Preview preset position No.	Keyboard operation meaning	Preview preset position No.	Keyboard operation meaning
130	Setup left position	138	Stop dome auto-scanning
131	Setup right position	140	Start tour setup
132	Start linear scanning (low speed)	141	Exit tour setup
133	Start linear scanning (high speed)	142	Running a tour
134	Start linear scanning (high speed)	145	Enter menu
135	Start dome 360° scanning □low speed□	146	Exit menu
136	Start dome 360° scanning (high speed)	162	Enter default position
137	Start dome 360° scanning (high speed)	163	Exit default position
147	Open alarm function	148	Close alarm function
150	High speed dome camera position restoration	164	Setup default position

The Setup, Entering and Exit of Default Position

The unit has a default position. The user can setup default position for a key monitoring area according to actual conditions. If not operated after 10 minutes, the dome camera will automatically monitor the preset position.

1. Setup of the Default Position

Move the dome camera to a key monitoring area through the controlling keyboard, and enter number “164” from the keyboard and press the “PREVIEW” key, and the setup is successful.

2. Entering and Exit the Default Position

The user can enter or exit the function of default position through the keyboard. Enter number “162” and press the “PREVIEW” key, and the function is activated.

Enter number “163” and press the “PREVIEW” key, and exit the function.