

## ► Contents

DVR-461

CD Disk

Battery x 2

SATA cable

Power Cord

Power Adapter

Quick Installation Guide

Remote Control

HDD Screw x 4


## ► Hard Disk Installation

**Note:** Before HDD installation, please make sure there is no pre-configured partition in this HDD.  
If yes, please delete all the partition before install.


### STEP 1: Remove the 3 screws from DVR-461



### STEP 2: Follow the direction to remove the upper case

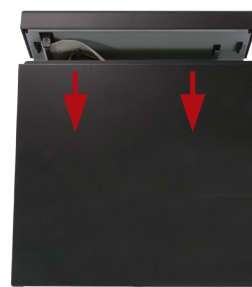


### STEP 3: Place the HDD on the HDD plate of the removed case and connect the power and the SATA cable firmly

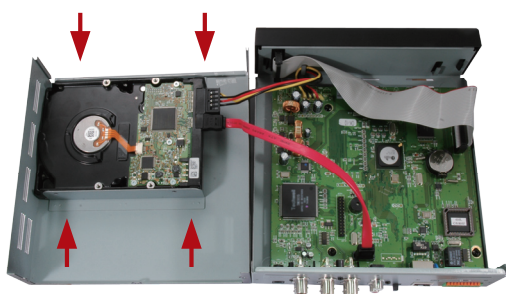


### STEP 4: Put back the upper case and tight the three screws



## ► Hardware Connection

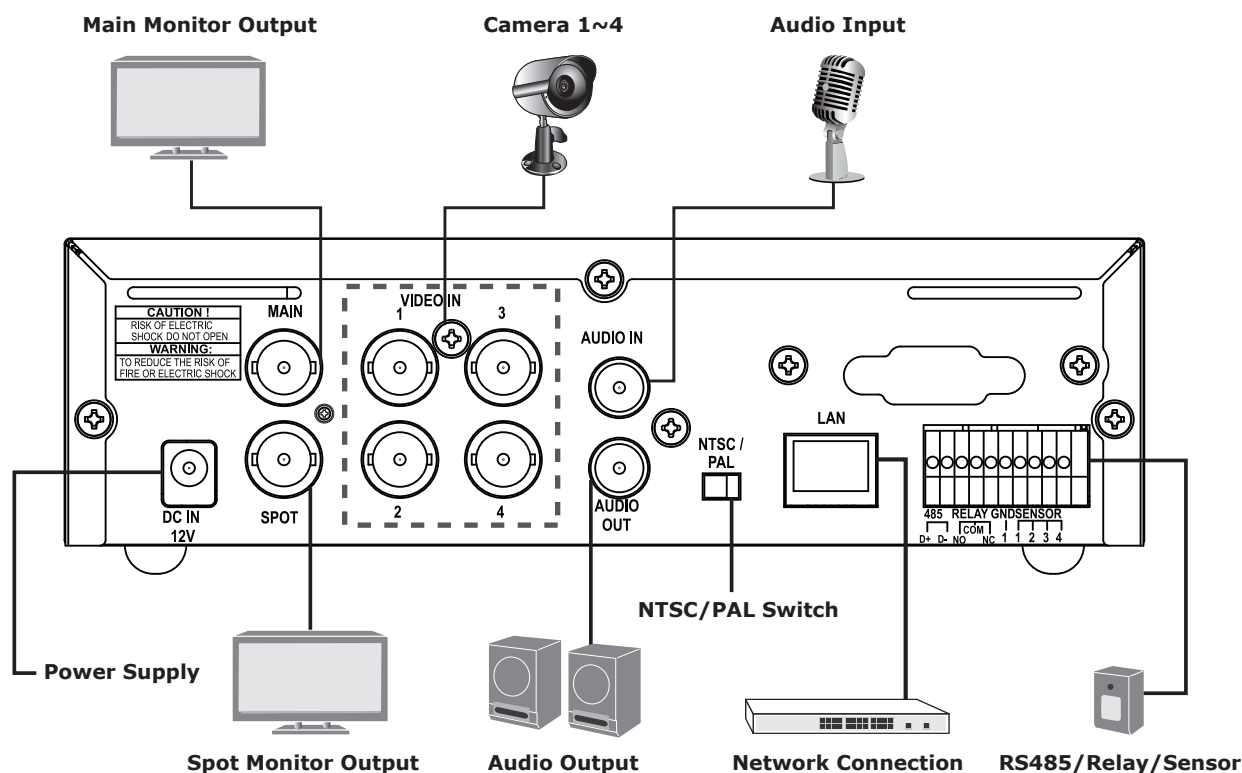

Please follow the sequence from 1 to 9 to connect the equipments to DVR-461.

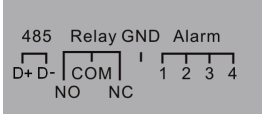Item	Description	
1	MAIN MONITOR	BNC port for the main monitor connected.
2	VIDEO IN	BNC input ports for cameras, 4 in total.
3	AUDIO IN	RCA input port for an audio signal.
4	NTSC/PAL SWITCH	Switch between NTSC and PAL format. Please adjust this switch before power on.
5	LAN	Network port. Connect to your switch or PC directly.
6	EXTERNAL I/O	EXTERNAL I/O port (see below for pin definition) <div data-bbox="662 1682 922 1797">  </div>
7	AUDIO OUT	RCA output port for an audio signal.
8	SPOT MONITOR	BNC port to display full screen image of all installed cameras in sequence.
9	DC 12V	Socket for a DC 12V power input.

For detailed information about DVR-461, please refer to the User's Manual in the CD disk.