



# ***Wireless Presentation Gateway***

## **WPG-120**

## **User's Manual**

## Copyright

Copyright © 2009 by PLANET Technology Corp. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of PLANET.

PLANET makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability or fitness for any particular purpose. Any software described in this manual is sold or licensed "as is". Should the programs prove defective following their purchase, the buyer (and not PLANET, its distributor, or its dealer) assumes the entire cost of all necessary servicing, repair, and any incidental or consequential damages resulting from any defect in the software. Further, PLANET reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation to notify any person of such revision or changes.

All brand and product names mentioned in this manual are trademarks and/or registered trademarks of their respective holders.

## Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio technician for help.

## FCC Caution

To assure continued compliance. (example-use only shielded interface cables when connecting to computer or peripheral devices). Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the Following two conditions: ( 1 ) This device may not cause harmful interference, and ( 2 ) this Device must accept any interference received, including interference that may cause undesired operation.

## Federal Communication Commission (FCC) Radiation Exposure

### Statement

This equipment complies with FCC radiation exposure set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antenna shall not be less than 20 cm (8 inches) during normal operation.

## R&TTE Compliance Statement

This equipment complies with all the requirements of DIRECTIVE 1999/5/CE OF THE EUROPEAN PARLIAMENT AND THE COUNCIL OF 9 March 1999 on radio equipment and telecommunication terminal Equipment and the mutual recognition of their conformity (R&TTE)

The R&TTE Directive repeals and replaces in the directive 98/13/EEC (Telecommunications Terminal Equipment and Satellite Earth Station Equipment) As of April 8, 2000.

## Safety

This equipment is designed with the utmost care for the safety of those who install and use it. However, special attention must be paid to the dangers of electric shock and static electricity when working with electrical equipment. All guidelines of this and of the computer manufacture must therefore be allowed at all times to ensure the safe use of the equipment.

## WEEE regulation



To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, end users of electrical and electronic equipment should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of WEEE as unsorted municipal waste and have to

collect such WEEE separately.

## Revision

User's Manual for PLANET Wireless Presentation Gateway

Model: WPG-120

Rev: 1.0 (October. 2009)

Part No. EM-WPG120

## ***Table of Contents***

<b>1. Overview.....</b>	<b>5</b>
<b>2. Quick Start.....</b>	<b>6</b>
<b>3. Windows Client Utility.....</b>	<b>9</b>
<b>3.1 Starting Program.....</b>	<b>9</b>
<b>3.2 Login .....</b>	<b>10</b>
<b>3.3 Main User Interface.....</b>	<b>10</b>
<b>3.4 Screen Projection.....</b>	<b>10</b>
<b>3.5 Menu Description .....</b>	<b>11</b>
<b>3.5.1 Show Login Code.....</b>	<b>11</b>
<b>3.5.2 Open Admin Web Page.....</b>	<b>12</b>
<b>3.5.3 Searching Server.....</b>	<b>13</b>
<b>3.5.4 Projection Quality.....</b>	<b>13</b>
<b>3.5.5 Projection Source.....</b>	<b>14</b>
<b>3.5.6 Connection Profile.....</b>	<b>15</b>
<b>3.5.7 Auto WiFi Connect.....</b>	<b>16</b>
<b>3.5.8 Auto Power Manager.....</b>	<b>16</b>
<b>3.5.9 Hide UI.....</b>	<b>17</b>
<b>3.5.10 Advanced Screen Capture.....</b>	<b>17</b>
<b>3.5.11 Make PnS Token .....</b>	<b>18</b>
<b>3.5.12 Copy Application to desktop.....</b>	<b>19</b>
<b>3.5.13 About.....</b>	<b>20</b>
<b>3.5.14 Exit.....</b>	<b>20</b>
<b>4. Web Management.....</b>	<b>21</b>
<b>4.1 Home Page.....</b>	<b>21</b>
<b>4.2 Download Software.....</b>	<b>22</b>
<b>4.3 Login Web Admin.....</b>	<b>23</b>
<b>4.3.1 System Status.....</b>	<b>23</b>
<b>4.3.2 Network Setup.....</b>	<b>24</b>
<b>4.3.3 Projection Setup.....</b>	<b>25</b>
<b>4.3.4 Change Passwords.....</b>	<b>25</b>
<b>4.3.5 Reset to Default.....</b>	<b>26</b>
<b>4.3.6 Firmware Upgrade.....</b>	<b>27</b>
<b>4.3.7 Reboot System.....</b>	<b>28</b>
<b>4.3.8 Logout.....</b>	<b>29</b>

# 1. Overview

PLANET WPG-120 is a portable wireless presentation gateway based on 802.11g technology. The size is only 8\*3.5\*2 cm and the weight is 53g. You can take WPG-120 to anywhere you want present at anytime. It can provide four wireless users to easily display their presentations without swapping cables at the same time.

The output resolution of WPG-120 supports up to 1024x768 with 16-bit color, which gives the high quality displaying in both presentation. To ensure the session security, every user is required to key in a valid password prior than using WPG-120. Also, the built-in wireless AP supports 64/128-bit WEP and WPA-PSK/WPA2-PSK encryption to secure its communication.

The WPG-120 is compatible with VGA-equipped devices; you can connect this gadget to any projector, LCD TV or large screen display. The embedded windows-based utility enables connected users directly download the utility from the WPG-120 web screen, CD or USB adapter, that offers the most convenient way for the new user access to presentation in seconds.

## ■ Plug & Show

With Plug & Show USB Token, wireless presentation becomes easy! Just link your PC/Laptop to WPG-120, plug the token into a USB port, and in seconds, your screen will be wirelessly projected to the connected projector!

## ■ High performance screen projection

WPG-120 provides the latest generation screen projection technology. The smoothest screen works by the projection wirelessly, no matter what screen shows on your PC.

## ■ 4-to-1 Split Screen Projection


With this 4-to-1 split screen feature, up to four PC screens can be projected to one projector at the same time. Thus you can easily do side-by-side comparison from four PC / PDAs to increase meeting productivity!

## ➤ Features

- Web-based GUI for and Control Panel for easily configuration
- Projection Quality Option
- Support Windows Vista, XP, 2000.
- Auto Power Manager
- Hide Utility Panel
- Supports 64/128-bit WEP, WPA –TKIP(PSK), WPA2-AES(PSK), contents and keep good security to office networks.
- Supports Win-XP Virtual Desktop


## 2. Quick Start

- 1) Plug the WPG-120 into the projector VGA input or connect a VGA cable to the WPG-120 VGA connector and turn on projector power.

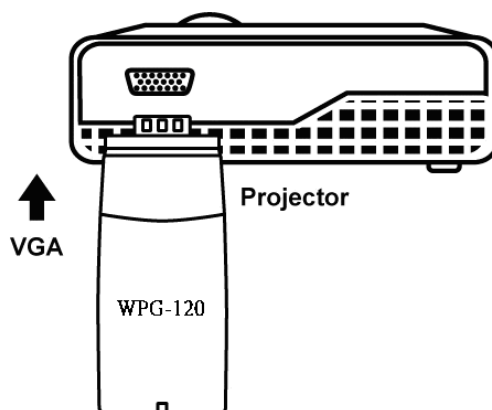

- 2) Turn on WPG-120.


- ◆ When projector shows the default menu on the screen as below, it indicates the WPG-120 is ready.

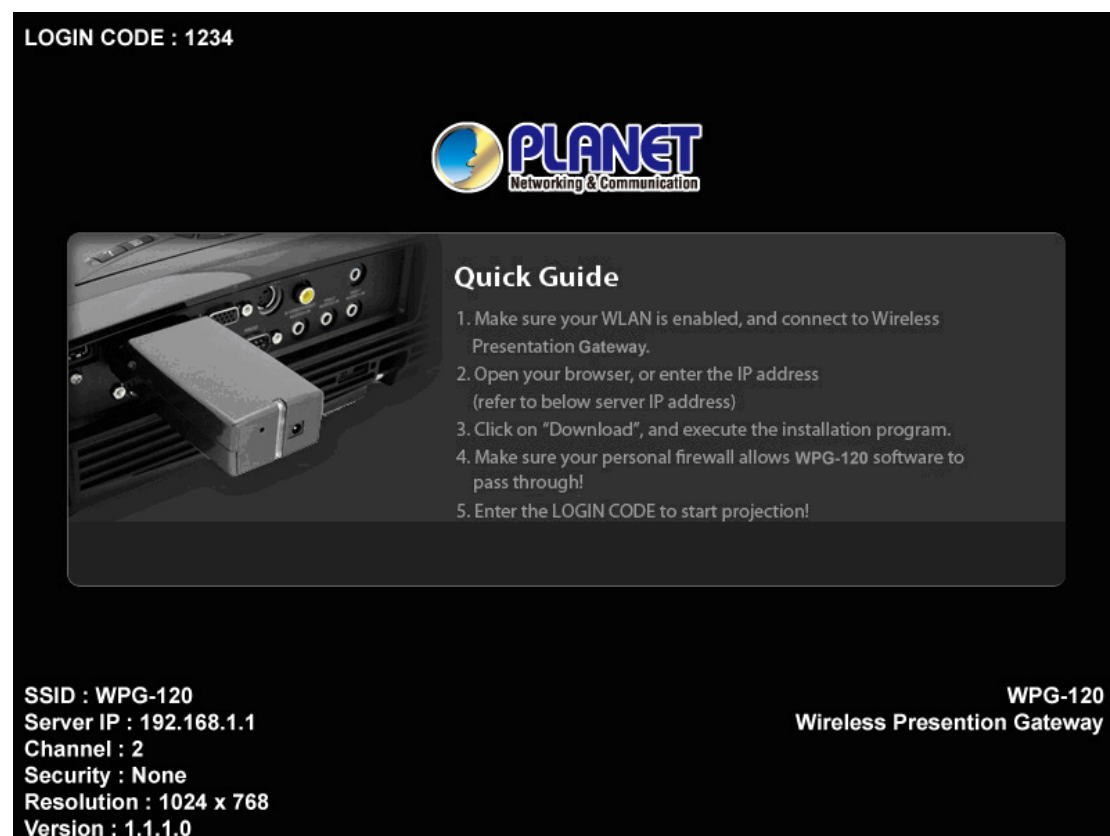


- 3) Make sure your PC WLAN is enabled then connect to your PC with the


WPG-120.

- 4) Open your browser and it will redirect to the WPG-120 main page automatically, or you can enter the IP address to access the WPG-120 web home page.
  - ◆ The default IP address of WPG-120 is **192.168.1.1** or refers to the IP address shown on the bottom left corner of projector screen.

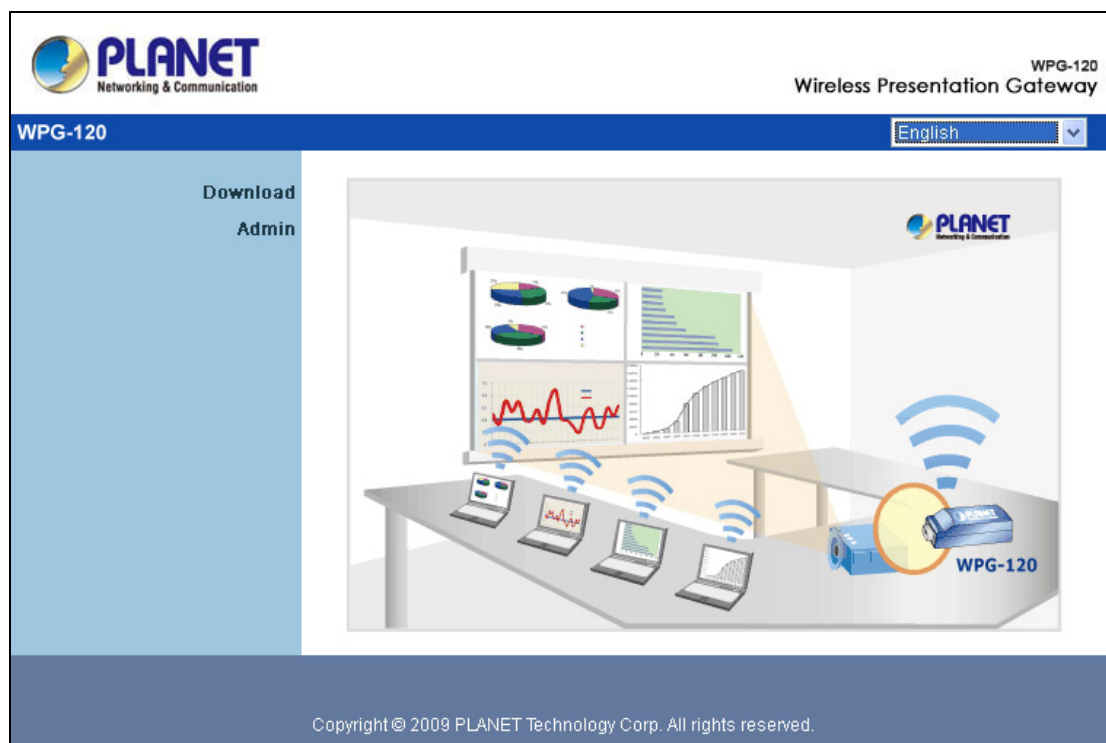

- 5) Download the client software, select " Windows Vista / XP / 2000" and execute the installation program.
  - ◆ After installing the program, you will see the WPG-120 shortcut on the PC screen.

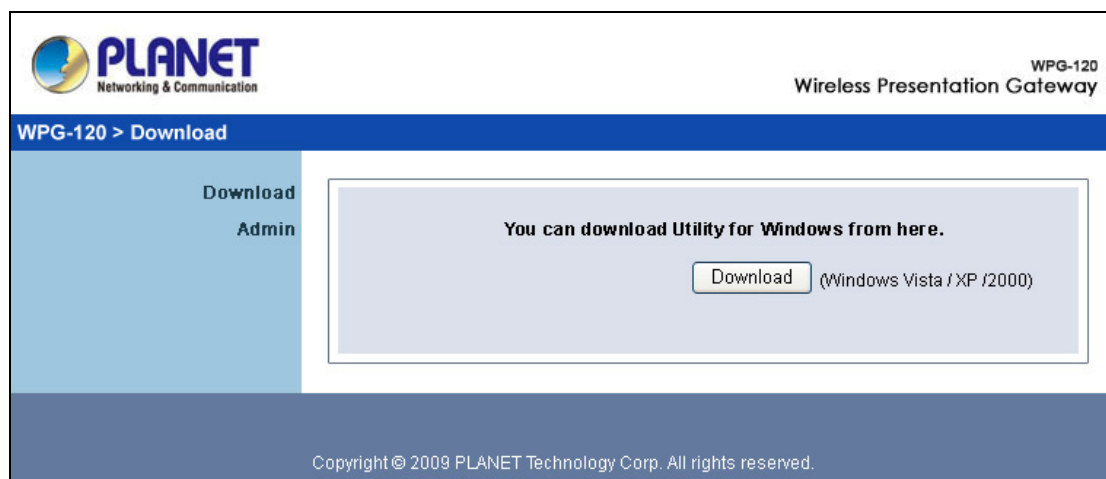

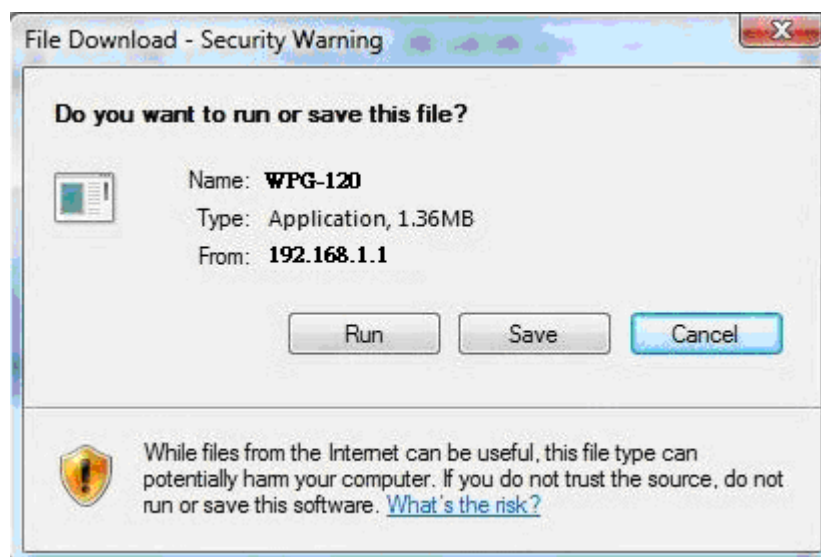

- 6) Make sure your personal firewall allows WPG-120 software to pass through.
- 7) Enter the **LOGIN CODE** and
  - ◆ You can see the login code is the top left of the projector screen.



- 8) Click the **"Play"** button to start projection!





## 3.Windows Client Utility

### 3.1 Starting Program

After you download the WPG-120 windows program via web page successfully follow the steps below to start.

- 1) Click WPG-120 icon to execute the program.




- 2) Program will start to search for WPG-120 automatically,
- 3) If WPG-120 is found the **"Login Code"** dialog box will pop up on the PC screen.

- **Searching for WPG-120.**



- **When WPG-120 is found, enter login code to start.**

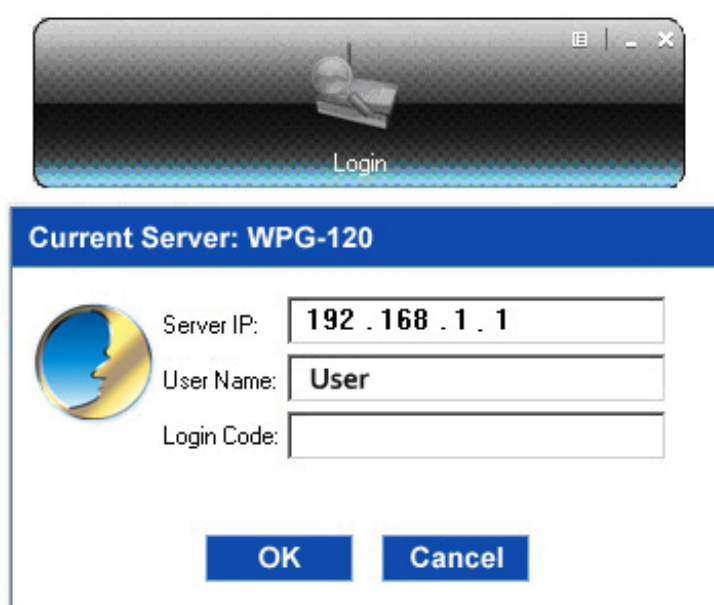


## 3.2 Login

- 1) After "Login Code" dialog box shown, enter login code to start presentation.
- 2) You can see the login code shown in the top left of the projector screen.



A login dialog box titled "Current Server: WPG-120". It features a Planet logo on the left. To the right of the logo are three input fields: "Server IP:" with the value "192 . 168 . 1 . 1", "User Name:" with the value "User", and "Login Code:" which is empty. At the bottom are two buttons: "OK" and "Cancel".

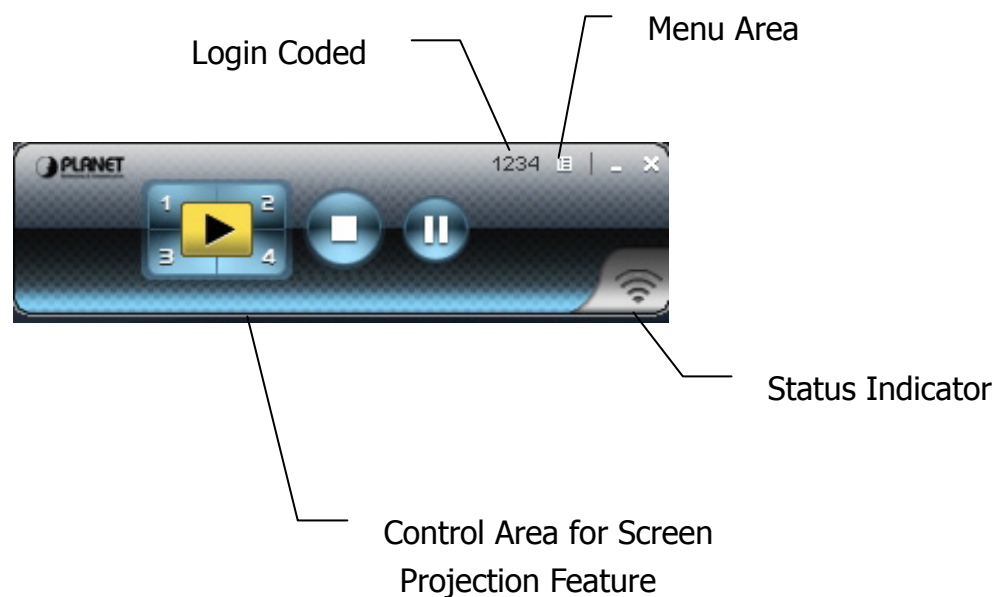


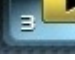
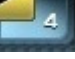


## 3.3 Main User Interface




## 3.4 Screen Projection

Click the "Play" button for full or split screen, you can project the main screen on to the display immediately, click the "Pause" button, to freeze the image, and click the "Stop" button to end the presentation.



Button	Description
	Full Screen projection
	Project to Split #1
	Project to Split #2
	Project to Split #3
	Project to Split #4
	Stop projecting
	Pause projecting


## 3.5 Menu Description

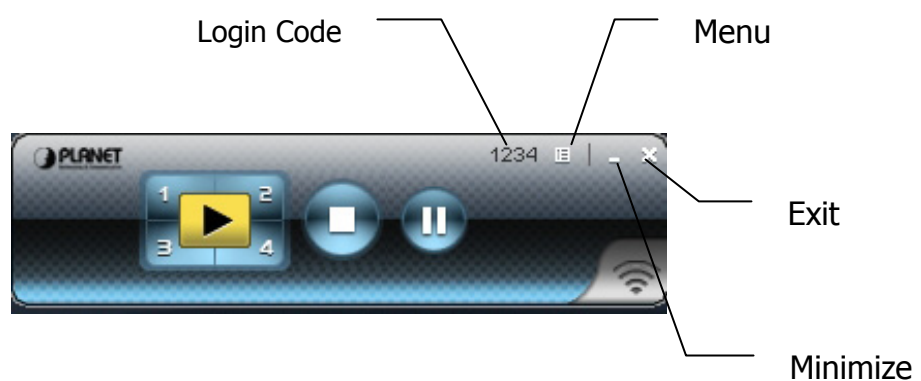


### 3.5.1 Show Login Code


Click "Show Login Code" to display the login code on the top right of the desktop and it will close automatically after 10 seconds. You can also click on

the area to close this window manually.

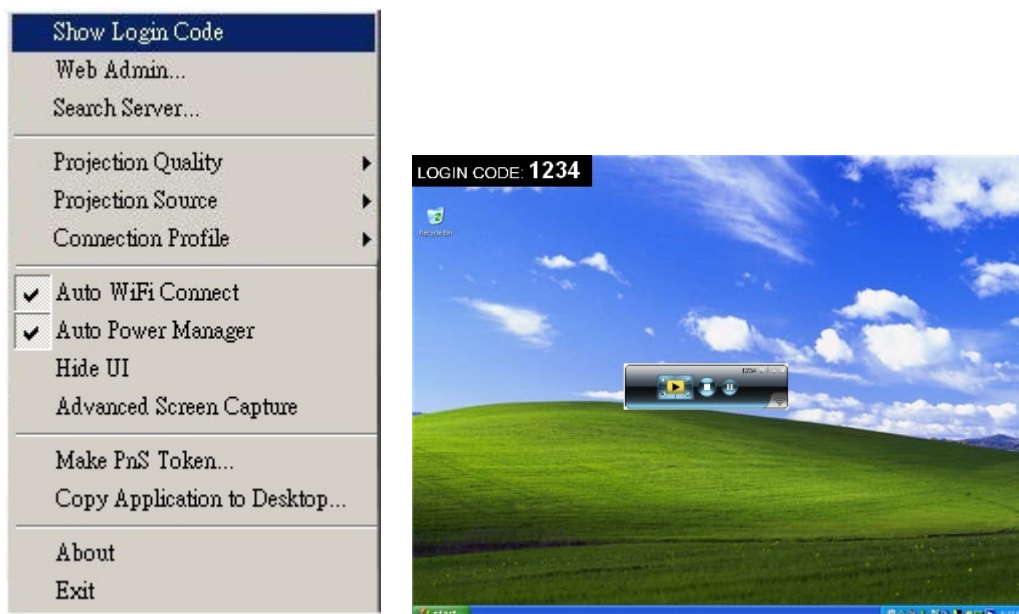


### 3.5.2 Open Admin Web Page

Click  to open the function menu and select “**Web Admin**” management web page. The detailed functions of the web page will be described in the next chapter.

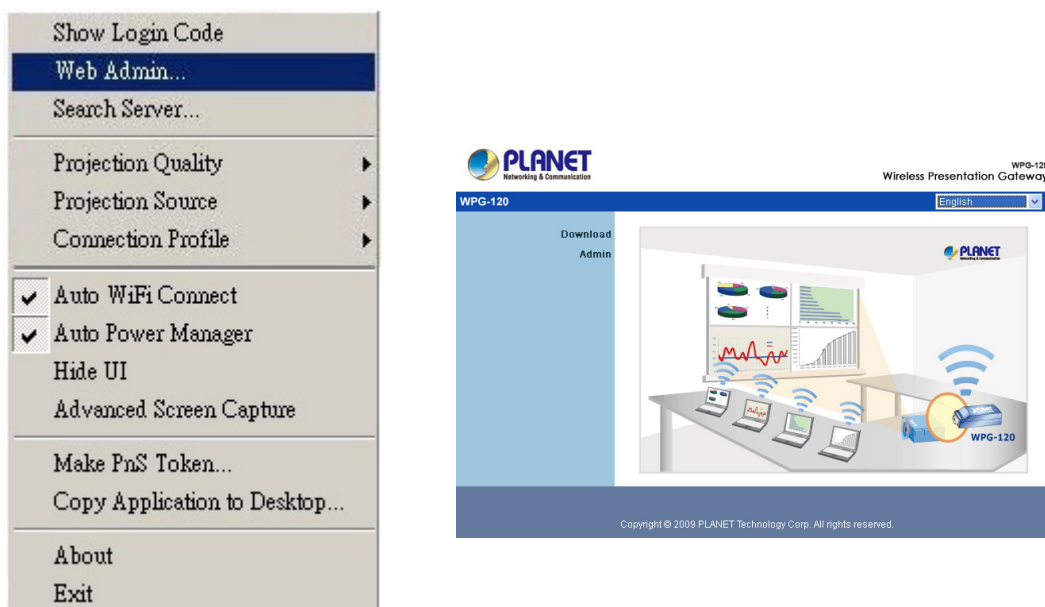

### 3.5.3 Searching Server

Click **"Search Server"** to search for the WPG-120 again.

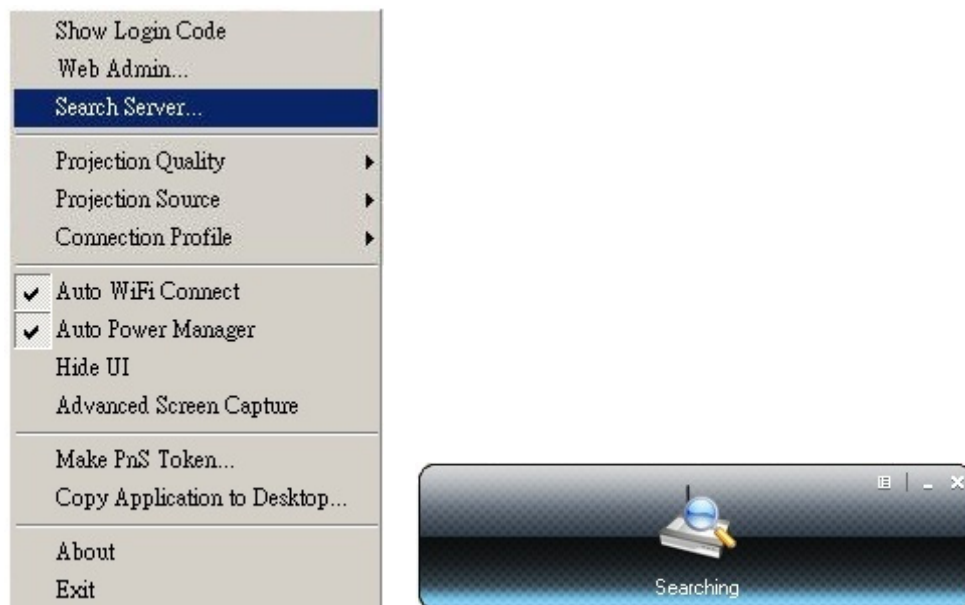

### 3.5.4 Projection Quality


Click the "Projection Quality", choose "Normal" for faster projection speed with lower screen image quality, and "Best" for better image quality but slower projection speed.



### 3.5.5 Projection Source


Click "Projection Source" to project the main screen of the desktop or the virtual extended screen.

**Note** -This function is only supported by Windows XP and a virtual display utility must first be installed.

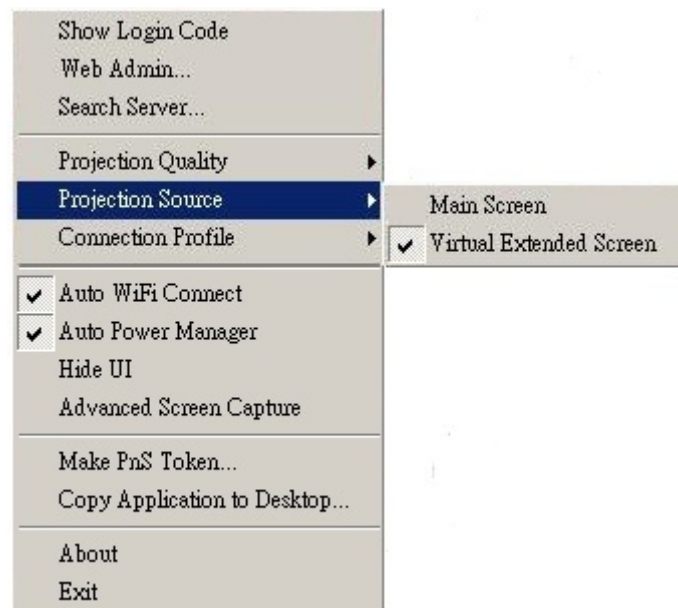


### 3.5.6 Connection Profile

Click "Connection Profile", then click "save current as" to save current connection configuration into Profile, or click the "Manage Profile" to add, delete or modify current profiles.

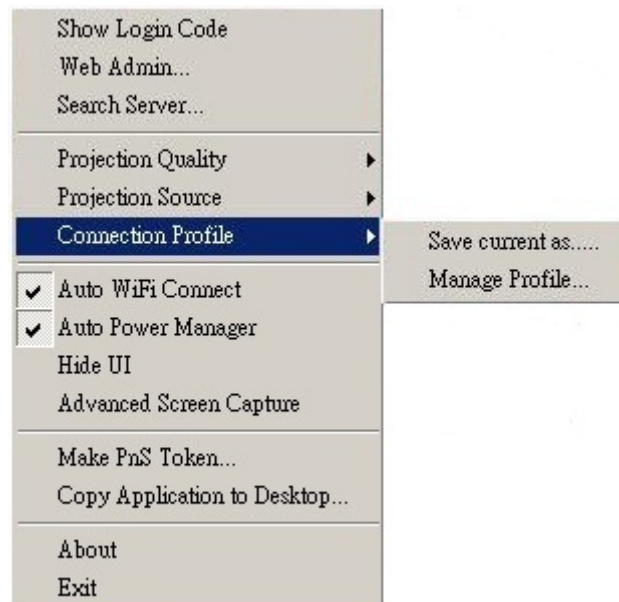

- Save Current as

Click "Save current as", to save your current connection as a profile for future quick-connect.

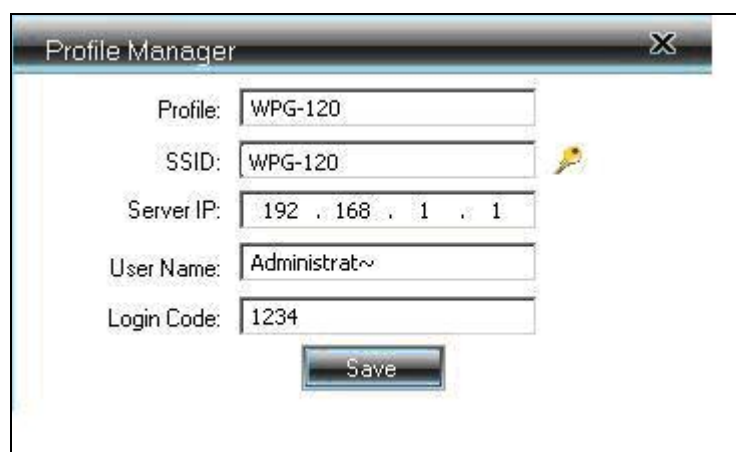

- Manage Profile


Click "Manage Profile" to view current profile, add or delete the profile, and edit the existing profile.





### 3.5.7 Auto WiFi Connect


Click "Auto WiFi Connect" to enable the AWZC function, this function can save the WiFi connection steps.

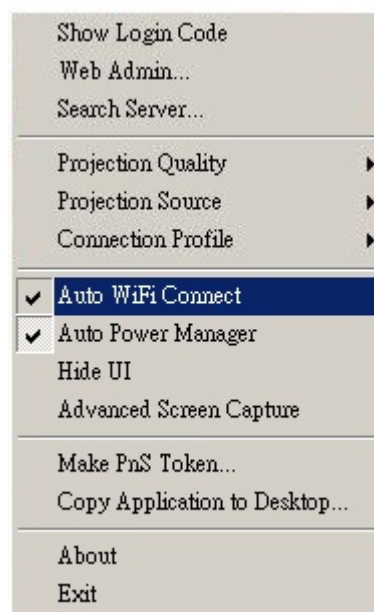

### 3.5.8 Auto Power Manager

For best projection performance the auto power manager application will switch the PC's current power setting to "highest performance". Click the "Auto Power Manager" to enable or disable this function.



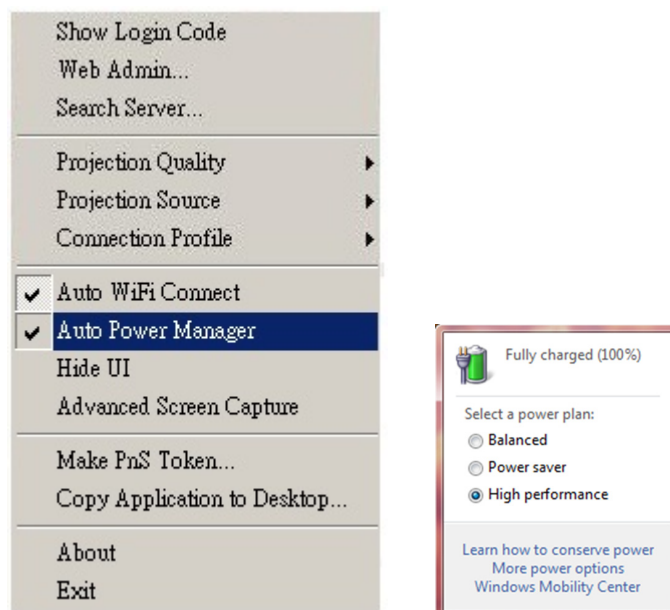

### 3.5.9 Hide UI

Click the “Hide UI” to hide or display the application control panel.




### 3.5.10 Advanced Screen Capture


Click “Advanced Screen Capture” to see tip windows and other layered windows (including the main UI) on the connected display.

The mouse cursor may blink from time to time when you are projecting your PC screen!

- Disable “Advanced Screen Capture”.

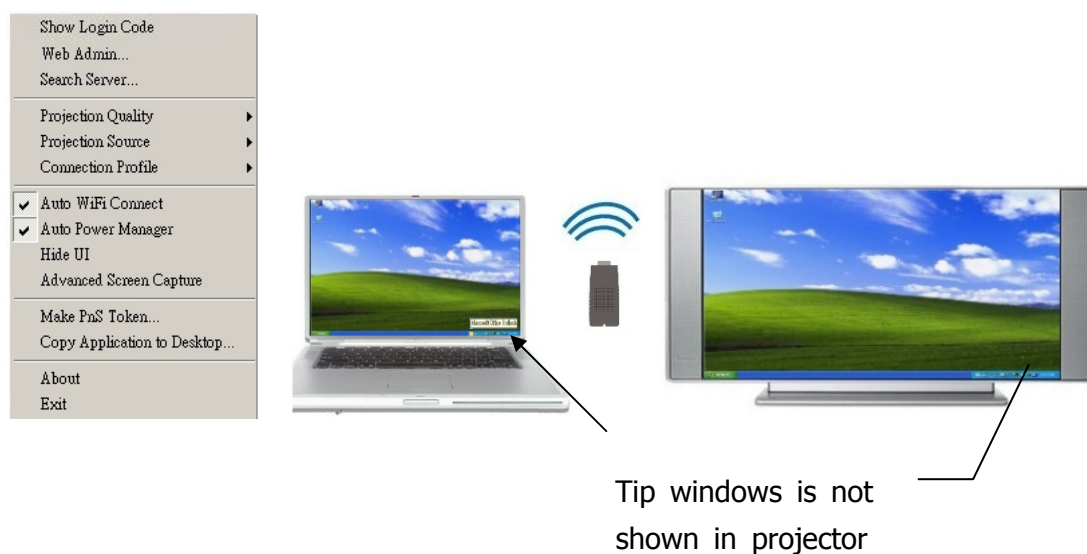


- Enable "Advanced Screen Capture".

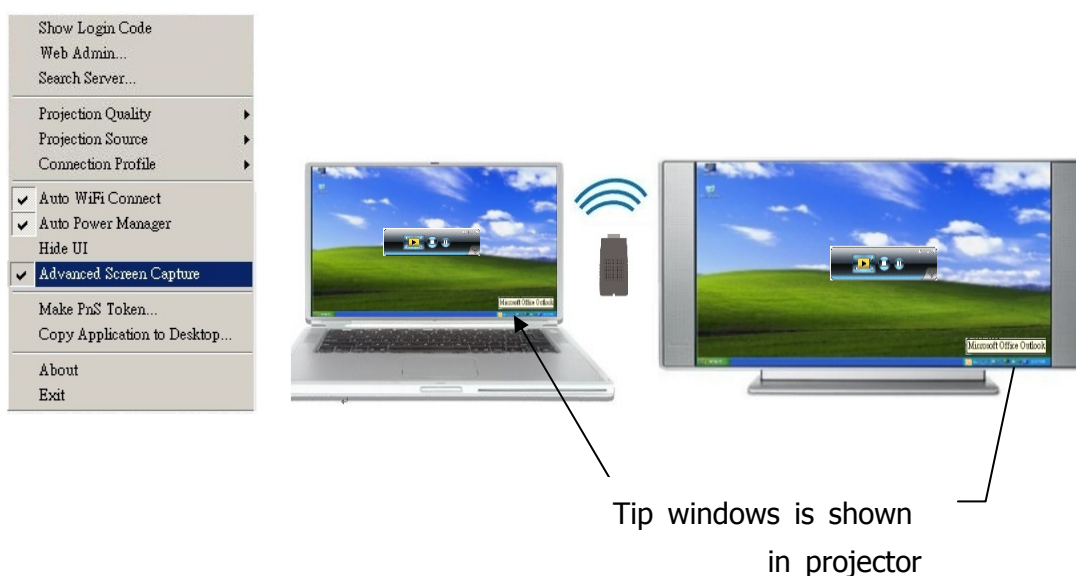

### 3.5.11 Make PnS Token

Click "Make PnS Token" to make a USB Token, you can insert a USB thumb drive and follow the wizard instructions to make the Token.

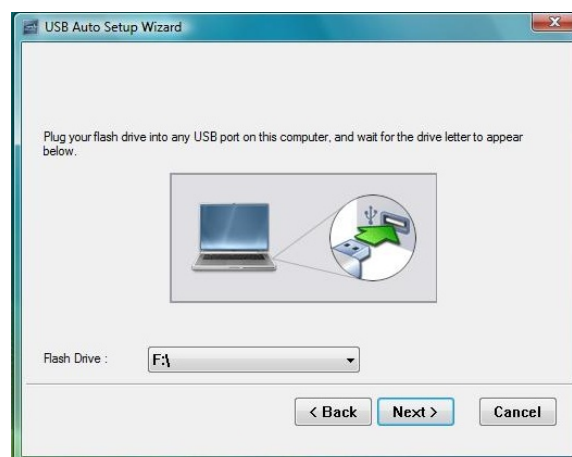

### 3.5.12 Copy Application to desktop

Click "Copy Application to desktop" to copy the application to your desktop immediately even if you don't have the system privilege.



### 3.5.13 About

Click **"About"** to show system information, including Client version, IP address and other information.



### 3.5.14 Exit


Click **"Exit"** to exit this application. It will stop current session and close the application immediately.



## 4. Web Management

### 4.1 Home Page

1. Make sure your PC connects to WPG-120 successfully.
2. Open your browser, it will enter WPG-120 home page automatically.
3. If not, enter your IP address on the browser, you can see the IP on the projector screen.
4. The default IP is 192.168.1.1

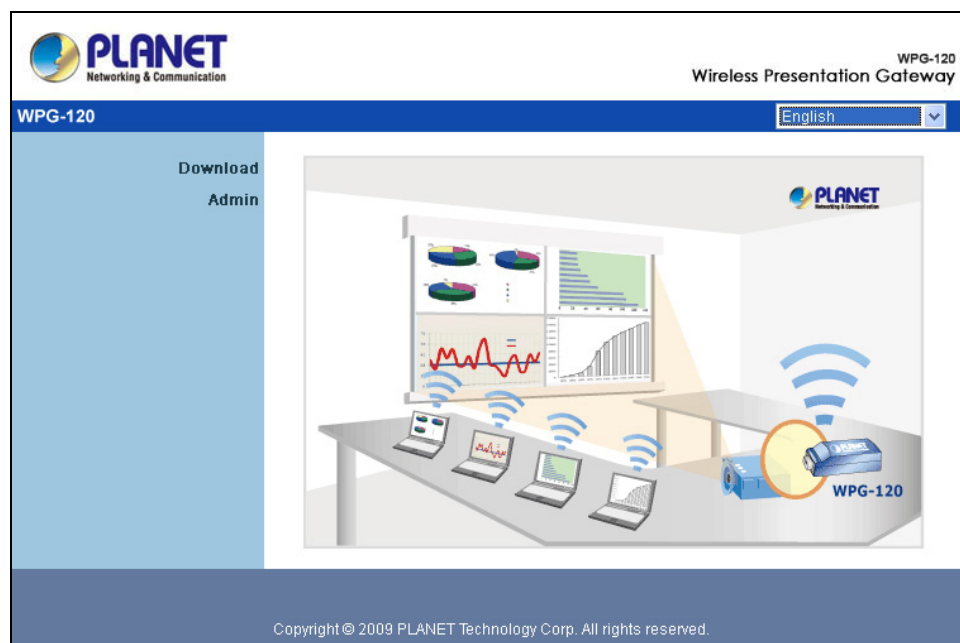


## 4.2 Download Software

1. Select "Download software" function.
2. Please select the 'Windows Vista / XP / 2000' and execute the installation program.
3. Follow Installation Wizard instructions to proceed till the installation process complete.
4. If pop up "**Windows Security Alert**" because Windows firewall block this program. You just press "**Unblock**" button to continue installation.
5. Once installation complete, a utility shortcut come out on the screen.



## 4.3 Login Web Admin

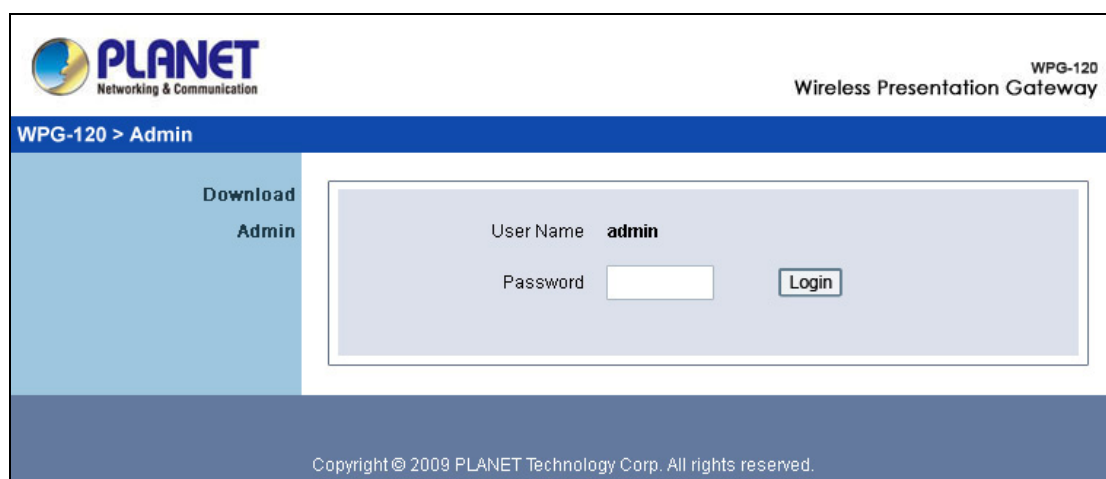

PLANET  
Networking & Communication

WPG-120  
Wireless Presentation Gateway

WPG-120 > Admin

Download  
Admin

User Name **admin**


Password

Login

Copyright © 2009 PLANET Technology Corp. All rights reserved.

1. Click [**Admin**] and then enter password to login web page.
2. The password default value is "admin".

### 4.3.1 System Status

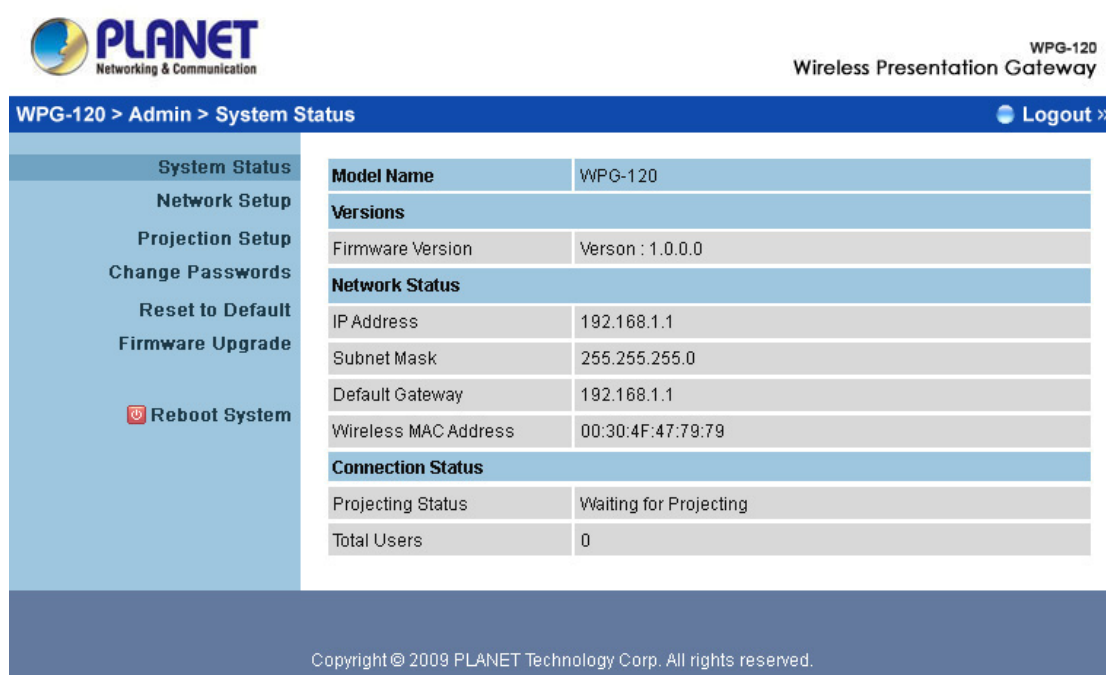

PLANET  
Networking & Communication

WPG-120  
Wireless Presentation Gateway

WPG-120 > Admin > System Status Logout >>

System Status  
Network Setup  
Projection Setup  
Change Passwords  
Reset to Default  
Firmware Upgrade  
Reboot System

<b>Model Name</b>	WPG-120
<b>Versions</b>	
Firmware Version	Version : 1.0.0.0
<b>Network Status</b>	
IP Address	192.168.1.1
Subnet Mask	255.255.255.0
Default Gateway	192.168.1.1
Wireless MAC Address	00:30:4F:47:79:79
<b>Connection Status</b>	
Projecting Status	Waiting for Projecting
Total Users	0

Copyright © 2009 PLANET Technology Corp. All rights reserved.

Click [**System Status**], shows current system status.

**Model Name:** Product model name.

**Versions:**

1. **Firmware version no.:** Product firmware version number.

**Network Status:**



1. **IP address** : IP address of WPG-120 device.
2. **Subnet Mask** : subnet mask
3. **Default Gateway** : default gateway
4. **Wireless MAC address** : wireless MAC address

#### Connection Status:

1. **Projecting status**: which is "Waiting for projecting" or "Projecting"
2. **Total Users**: It shows how many users login into WPG-120.

## 4.3.2 Network Setup

There are many kinds of operating configurations as below.

The screenshot displays the 'WPG-120 > Admin > Network Setup' interface. On the left, a sidebar lists various system management options. The 'Network Setup' section is active, leading to the 'Wireless Setup' configuration page. This page includes several settings: 'Region' is set to 'WORLDWIDE'; 'SSID' is 'WPG-120'; 'SSID Broadcast' is enabled; 'Channel' is set to 'Auto'; 'Encryption' is set to 'Disable'; and the 'Key' field is empty. 'Apply' and 'Cancel' buttons are located at the bottom right of the configuration area.

#### < Wireless Setup>

- ◆ Region: default value is "Worldwide".
- ◆ SSID: SSID string, max. Length is 32 bytes.
- ◆ SSID Broadcast: The default value is "Enable"
- ◆ Channel: to set fixed channel or Auto.  
In "Auto" mode the WPG-120 will scan all of wireless channels and select one clear channel automatically.
- ◆ Encryption: you can select "Disable" or one of WEP/WPA/WPA2 64bit or 128bit in ASCII or HEX string.
- ◆ Key: If Encryption is enabled, you have to set key value according to the encryption mode you selected.

**<Apply >**: press button to confirm changes.

**<Cancel>**: press button to abort action.



**<Back>**: Back to main menu.

### 4.3.3 Projection Setup

PLANET Networking & Communication

WPG-120 Wireless Presentation Gateway

WPG-120 > Admin > Projection Setup Logout >>

System Status  
Network Setup  
**Projection Setup**  
Change Passwords  
Reset to Default  
Firmware Upgrade  
Reboot System

**Projection Setup**

Resolution: SVGA (800x600)

Login Code:  
☐ Disable  
☒ Random  
☐ Use the following code:

Apply Cancel

Copyright © 2009 PLANET Technology Corp. All rights reserved.

Click **[Projection Setup]** button

- ◆ **<Resolution>**: XGA (1024x768) and SVGA (800x600). The default value is "XGA".
- ◆ **<Login Code>**: You can select "Disable", "Random", or "Use the following code" to set a specified 4-characters Number.
- ◆ **<Apply>**: Confirm and Save modifications.
- ◆ **<Cancel>**: Cancel all the modifications.

### 4.3.4 Change Passwords

PLANET Networking & Communication

WPG-120 Wireless Presentation Gateway

WPG-120 > Admin > Change Passwords Logout >>

System Status  
Network Setup  
Projection Setup  
**Change Passwords**  
Reset to Default  
Firmware Upgrade  
Reboot System

**Admin**

Enter New Password:

Confirm New Password:

Apply

Copyright © 2009 PLANET Technology Corp. All rights reserved.

Click **[Change Password]** button, to change password value.

The length of password is up to 8 characters.

- ◆ **<Enter New Password>**: enter new password you want to change for each category.
- ◆ **<Confirm New Password>**: confirm new password.
- ◆ **<Apply>**: Confirmation and Save modifications.

### 4.3.5 Reset to Default




Click **[Reset to Default]** button to restore factory default settings.

**<Apply>**: Confirmation and action.

**\*\*\* Another way to restore Factory Default Settings, Follow below procedures.**

1. Press **[Reset]** button and **Hold**.
2. Turn on WPG-120.
3. Wait for over 10 seconds and release **[Reset]** button.
4. It will take effect to restore factory default settings.

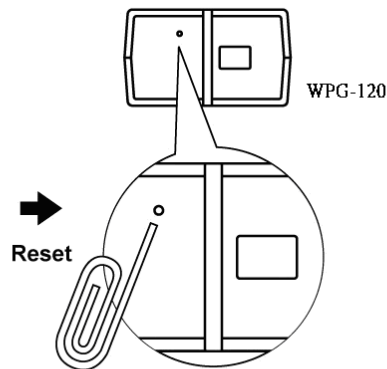

\* Press reset button and hold it for over 10 seconds.

## 4.3.6 Firmware Upgrade

The screenshot shows the WPG-120 Web Management Interface. At the top left is the PLANET logo with the tagline 'Networking & Communication'. At the top right, it says 'WPG-120 Wireless Presentation Gateway'. Below the header is a blue navigation bar with the text 'WPG-120 > Admin > Firmware Upgrade' and a 'Logout >>' link. On the left is a sidebar menu with the following items: 'System Status', 'Network Setup', 'Projection Setup', 'Change Passwords', 'Reset to Default', 'Firmware Upgrade' (which is highlighted), and 'Reboot System' (with a power icon). The main content area shows the 'Firmware Upgrade' page. It includes a table with 'Firmware Version' (0.0.0.8) and 'Release Date' (20090703). Below the table is a warning message: 'After you apply Upgrade button, projecting function will be terminated.' There is a 'File Name' input field with a 'Browse...' button next to it, and an 'Upgrade' button below the input field. At the bottom of the page, there is a copyright notice: 'Copyright © 2009 PLANET Technology Corp. All rights reserved.'

Click **[Firmware Upgrade]** button to upgrade firmware.

1. First, download latest firmware.
2. Click **<Browse>** to select file you want to upgrade.
3. Click **<Upgrade>** to start.
4. A warning message and countdown timer will appear on screen.
5. After a few minutes, a "complete" message will appear on screen.
6. Restart WPG-120 to allow upgrade to take effect.



Please wait while System burns new firmware into your device.

Warning: It needs to take 3~4 minutes to burn the file you transferred into flash memory. **During this period, any interrupt such as shut down or reboot the system will cause system crash!!**

Estimated Time remaining: : 237 seconds

## 4.3.7 Reboot System


The screenshot shows the PLANET WPG-120 Wireless Presentation Gateway Admin interface. The top header includes the PLANET logo and the text 'WPG-120 Wireless Presentation Gateway'. Below the header, a blue navigation bar shows 'WPG-120 > Admin > Reboot System' and a 'Logout >>' link. On the left, a sidebar menu lists various system management options: System Status, Network Setup, Projection Setup, Change Passwords, Reset to Default, Firmware Upgrade, and Reboot System (which is highlighted with a red power icon). The main content area features a yellow warning triangle icon next to the title 'Reboot System'. Below the title, a message states: 'This will reboot the device immediately.' At the bottom of this section is a 'Reboot' button. The footer of the page contains the copyright notice: 'Copyright © 2009 PLANET Technology Corp. All rights reserved.'

Click [**Reboot System**] button, to restart system

- ◆ **<Reboot>**: reboot system automatically.

## 4.3.8 Logout

Click **[Logout]** button, to leave the control system.

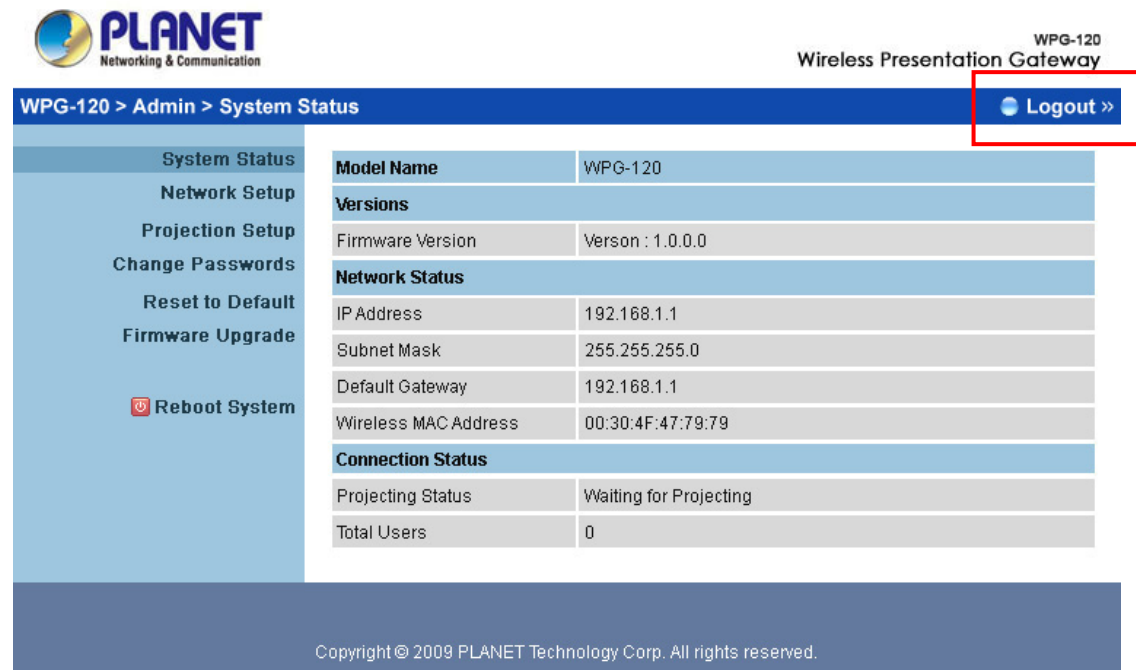

The screenshot shows the PLANET WPG-120 Wireless Presentation Gateway Admin interface. The top navigation bar is blue and contains the text "WPG-120 > Admin > System Status". In the top right corner, there is a "Logout >>" button with a red box around it. The main content area is divided into two columns. The left column is a sidebar with a light blue background, containing a list of menu items: "System Status", "Network Setup", "Projection Setup", "Change Passwords", "Reset to Default", "Firmware Upgrade", and "Reboot System" (with a red power button icon). The right column displays system information in a table format. The table has a light blue header and alternating light blue and light gray rows. The information is organized into sections: "Model Name" (WPG-120), "Versions" (Firmware Version: 1.0.0.0), "Network Status" (IP Address: 192.168.1.1, Subnet Mask: 255.255.255.0, Default Gateway: 192.168.1.1, Wireless MAC Address: 00:30:4F:47:79:79), and "Connection Status" (Projecting Status: Waiting for Projecting, Total Users: 0). At the bottom of the page, there is a dark blue footer with the text "Copyright © 2009 PLANET Technology Corp. All rights reserved."

PLANET  
Networking & Communication

WPG-120  
Wireless Presentation Gateway

WPG-120 > Admin > System Status

Logout >>

System Status	Model Name	WPG-120
Network Setup	Versions	
Projection Setup	Firmware Version	Version : 1.0.0.0
Change Passwords	Network Status	
Reset to Default	IP Address	192.168.1.1
Firmware Upgrade	Subnet Mask	255.255.255.0
Reboot System	Default Gateway	192.168.1.1
	Wireless MAC Address	00:30:4F:47:79:79
	Connection Status	
	Projecting Status	Waiting for Projecting
	Total Users	0

Copyright © 2009 PLANET Technology Corp. All rights reserved.

## EC Declaration of Conformity

For the following equipment:

\*Type of Product : Wireless Presentation Gateway  
\*Model Number : WPG-120

\* Produced by:

Manufacturer's Name : **Planet Technology Corp.**  
Manufacturer's Address: 11F, No 96, Min Chuan Road,  
Hsin Tien, Taipei, Taiwan, R.O.C.

is herewith confirmed to comply with the requirements set out in the Council Directive on the Approximation of the Laws of the Member States relating to 2004/108/EC R&TTE.

For the evaluation regarding the R&TTE the following standards were applied:

EN 55022	(2006 + A1: 2007, Class B)
EN 61000-3-2	(2006)
EN 61000-3-3	(1995 + A1:2001 + A2: 2005)
EN 55024	(1998 + A1: 2001 + A2: 2003)
IEC 61000-4-2	(2001)
IEC 61000-4-3	(2006)
IEC 61000-4-4	(2004)
IEC 61000-4-5	(2005)
IEC 61000-4-6	(2003 + A1: 2004 + A2: 2006)
IEC 61000-4-8	(2001)
IEC 61000-4-11	(2004)
EN 62311	(2008-11)
EN 301 489-1 V1.8.1	(2008-04)
EN 301 489-17 V1.3.2	(2008-04)
EN 300 328 V1.7.1	(2006-10)
EN 60950-1	(2006 + A11: 2009)
IEC 60950-1	(2005, 2nd Edition)

Responsible for marking this declaration if the:

☒ Manufacturer ☐ Authorized representative established within the EU

Authorized representative established within the EU (if applicable):

Company Name: Planet Technology Corp.

Company Address: 11F, No.96, Min Chuan Road, Hsin Tien, Taipei, Taiwan, R.O.C

Person responsible for making this declaration

Name, Surname Allen Huang

Position / Title : Product Manager

Taiwan  
Place

5<sup>th</sup> Nov., 2009  
Date

  
Legal Signature

**PLANET TECHNOLOGY CORPORATION**

e-mail: sales@planet.com.tw http://www.planet.com.tw

11F, No. 96, Min Chuan Road, Hsin Tien, Taipei, Taiwan, R.O.C. Tel:886-2-2219-9518 Fax:886-2-2219-9528