

Hot Spot Wireless Subscriber Gateway WSG-403

User's Manual

Copyright

Copyright (C) 2006 PLANET Technology Corp. All rights reserved.

The products and programs described in this User's Manual are licensed products of PLANET Technology, This User's Manual contains proprietary information protected by copyright, and this User's Manual and all accompanying hardware, software, and documentation are copyrighted.

No part of this User's Manual may be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form by any means by electronic or mechanical. Including photocopying, recording, or information storage and retrieval systems, for any purpose other than the purchaser's personal use, and without the prior express written permission of PLANET Technology.

Disclaimer

PLANET Technology does not warrant that the hardware will work properly in all environments and applications, and makes no warranty and representation, either implied or expressed, with respect to the quality, performance, merchantability, or fitness for a particular purpose.

PLANET has made every effort to ensure that this User's Manual is accurate; PLANET disclaims liability for any inaccuracies or omissions that may have occurred.

Information in this User's Manual is subject to change without notice and does not represent a commitment on the part of PLANET. PLANET assumes no responsibility for any inaccuracies that may be contained in this User's Manual. PLANET makes no commitment to update or keep current the information in this User's Manual, and reserves the right to make improvements to this User's Manual and/or to the products described in this User's Manual, at any time without notice.

If you find information in this manual that is incorrect, misleading, or incomplete, we would appreciate your comments and suggestions.

FCC Warning

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the Instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

CE mark Warning

The is a class B device, In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

Trademarks

The PLANET logo is a trademark of PLANET Technology. This documentation may refer to numerous hardware and software products by their trade names. In most, if not all cases, these designations are claimed as trademarks or registered trademarks by their respective companies.

WEEE Warning



To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, end users of electrical and electronic equipment should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of WEEE as unsorted municipal waste and have to collect such WEEE separately.

Revision

User's Manual for PLANET Hot Spot Wireless Subscriber Gateway

Model: WSG-403 Rev: 1.0 (Jul. 2006)

Part No. EM-WSG403V1 (2081-B41050-000)

Table of Contents

1. Introduction	5
1.1 Package Contents	5
1.2 Features	5
1.3 Precautions	6
1.4 Outlook	6
1.4.1 Top Panel	6
1.4.2 Rear Panel	8
1.5 Technical Specifications	8
1.5.1 Hardware Specifications	8
1.5.2 Software Specifications	9
2. Installation	12
2.1 Wall-Mounting	12
2.2 Connecting the Antennas	12
2.3 Installation Requirements	13
2.3.1 System Requirements	13
2.3.2 ISP Requirements	13
2.3.3 Your PC Requirements	14
2.4 Getting Start	14
2.5 POE (Power over Ethernet) Application	15
3. Configuring the WSG-403	16
3.1 Setting Wizard	16
3.2 Advanced Setup	32
3.2.1 System	33
3.2.2 WAN/LAN	36
3.2.3 Server	40
3.2.4 Authentication	42
3.2.5 RADIUS Authentication	44
3.2.6 Billing	45
3.2.7 Accounting	49
3.2.8 Credit Card	59
3.2.9 Keypad	64
3.2.10 Customization	70
3.2.11 Pass Through	86
3.2.12 Filtering	88
3.2,13 Share	89
3.2.14 Portal Page	90
3.2.15 Advertisement	91
3.2.16 Walled Garden	92
3.2.17 DDNS	93
3.2.18 LAN Devices	95
3.2.19 Syslog	96

3.2.20 Session Trace	101
3.2.21 Bandwidth	101
3.2.22 Secure Remote	102
3.2.23 SNMP	103
3.2.24 Wireless	104
3.2.25 Account Generator	107
3.3 System Status	108
3.3.1 System	109
3.3.2 Account List	110
3.3.3 Account Log	111
3.3.4 Current User	111
3.3.5 DHCP Clients	112
3.3.6 Session List	112
3.3.7 LAN Devices	112
3.4 System Tools	113
3.4.1 Configuration	113
3.4.2 Firmware Upgrade	114
3.4.3 Boot Code	116
3.4.4 System Account	116
3.4.5 SSL Certificate	115
3.4.6 Ping Command	115
3.4.7 Restart	120
3.4.8 Logout	120
Appendix A Signal Connection Arrangements	121
Appendix B Regulations/EMI Compliance	122
LIMITED WARRANTY	123

1. Introduction

The PLANET Wireless Subscriber Gateway – WSG-403 is a compact intelligent gateway integrated with a four-port port-based VLAN switch. It provides Plug' Play Internet access, advanced security and network management.

The WSG-403 is designed for service providers, system integrator or hotspot venue operator without backend-RADIUS-Server to have integrated solution for rapid deployment, which can start hotspot service quickly and easily and enhance service performance.

The WSG-403 is an ideal solution for hotel lobbies, coffee bars, airport lounges, conference facilities and other sites that commonly host business travelers, and offers instant high-speed Internet connections. With its IP Plug and Play technology, it accepts any client configuration login, when client open browser the WSG-403 immediately recognizes new end-user and redirects their browser to customized Web pages. There's no need for end-user to change any of their default network (Static IP), e-mail (SMTP Server behind firewall), or browser settings (HTTP Proxy) or load any special software to access hotspot service. It's completely Plug' Play with any browser.

1.1 Package Contents

Please inspect your package. The following items should be included in the WSG-403 packages:

- One Wireless Subscriber Gateway
- Two antennas
- One AC Power Adapter for Wireless Subscriber Gateway
- One CD containing User's Manual
- Two screws for wall-mount
- One UTP Ethernet/Fast Ethernet cable (Cat.5 Twisted-pair)

If any of the above items are damaged or missing, please contact your dealer immediately.

Optional Product that can co-work with WSG-403:

WSG-ACG3 Account Generator Printer

- One AC Power Adapter for mini account generator printer
- One UTP Ethernet/Fast Ethernet cable (Cat.5 Twisted-pair)
- One Account Generator Printer User's Guide

In this guide, the information of WSG-ACG3 will also be included in some sections. This Account Generator is an optional device that can work with WSG-403. With this Account Generator it is much easier for operator to create the accounts for any guests. Without the Account Generator, all the account generation can be done through Administrator's Web management page. The demand of this Account Generator can vary on the install site.

1.2 Features

- Wireless data rates up to 54Mbps
- Supports 100 Simultaneous Users
- IP Plug and Play (iPnP)
- Comprehensive security

64/128-bit WEP encryption

WPA encryption

IP/URL filtering

- Intelligent Management
- Built-in AAA (Authentication/Accounting/Authorization) and Billing mechanism

Note: The "PnP" Function only can be used with TCP/IP-based Network.

1.3 Precautions

- Never remove or open the cover. You may suffer serious injury if you touch these parts.
- Never install the system in the wet locations.
- Use only the original fitting AC power adapter otherwise there is a danger of severe electrical shock.
- Avoid exposing the WSG-403 to direct sunlight or another heat source.
- Choose a well-ventilated area to position your WSG-403.

1.4 Outlook



Figure 1-1 WSG-403 Outlook

1.4.1 Top Panel

The top panel of the WSG-403 is shown below.

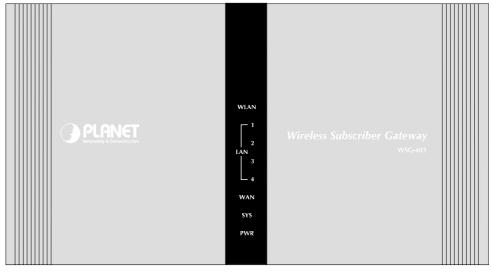


Figure 1-2 WSG-403 Top Panel



Figure 1-3 LEDs

LEDs Indication

LED	State	Description	
PWR	Off	The WSG-403 is not receiving electrical power.	
	Green*	The WSG-403 is receiving electrical power.	
SYS	Off	The WSG-403 status is defective while PWR LED steady ON.	
	Green	The WSG-403 status is complete.	
	Green (Blinking)*	During firmware upgrades, this system LED will blink.	
WAN	Off	WAN Port has not established any physical network connection.	
	Green The port has established a valid 10/100Mbps network		
	Green (Blinking)	10/100Mbps traffic is traversing WAN port.	
LAN-1~	Off	The Port has not established any physical network connection.	
LAN-4	Green	The port has established a valid 10/100Mbps network connection.	
	Green (Blinking)	10/100Mbps traffic is traversing the port.	
WLAN	Off	The Wireless is not ready.	
	Green	The WSG-403 has established a valid wireless connection.	
	Green (Blinking) The Wireless connection is active.		

Note:

- 1. Use only the bundled AC-DC adapter for the power system, other power adapter could damage the device permantly.
- 2. During the firmware upgrade process, please do not power off the device, otherwise it could damage the device permantly.

1.4.2 Rear Panel

The rear panel of the WSG-403 is shown below.

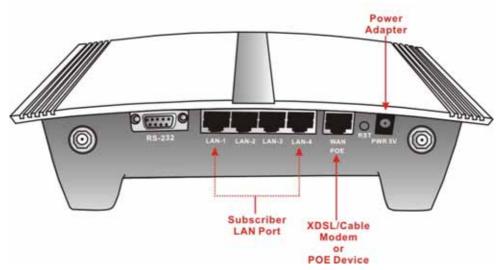


Figure 1-4 WSG-403 Rear Panel

1. RS-232: Reserve for manufacture use.

2. LAN (1-4):

The rear panel supports four auto-sensing RJ-45 ports and all ports can be auto-switched to MDI-II connections. The LAN ports used for linking hosts or other network devices. The individual port can be either connected to 100Base-TX networks or 10Base-T networks. When connecting to a 100Base-TX network, the ports operate at 100Mbps in half-duplex mode or 200Mbps in full-duplex mode. When connecting to a 10Base-T network, the ports operate at 10Mbps in half-duplex mode or 20Mbps in full-duplex mode.

3. WAN: One Ethernet port used for linking xDSL or Cable Modem. 10/100Base-TX auto-negotiation and auto MDI also supported. This WAN port also complied with IEEE802.3af Power over Ethernet that can direct connect to IEEE802.3af complied injector (Mid-span) or PSE (End-span) for WSG-403's power system.

Note:

- 1. Either 5C DC power or IEEE802.3af PoE is allowed for the device. Use of both power systems could damage the device permantly.
- Please consult your local dealer about the IEEE802.3af Power over Ethernet equipments. Use of non 802.3af complied Power over Ethernet equipments could damage the device permantly.

4. Reset Button:

The WSG-403 has a reset button at the rear panel of the device. Use this function to reset the system back to factory defaults. One push and release will reboot the system. Hold the button for 5 seconds and release will factory reset the WSG-403.

5. Power Jack: Used to connect the external power supply with the WSG-403.

1.5 Technical Specifications

1.5.1 Hardware Specifications

Network Specification

IEE802.3 10Base-T Ethernet

IEE802.3u 100Base-TX Fast Ethernet

IEE802.11g Wireless LAN

IEEE802.3af Power over Ethernet (mid-span)

Wi-Fi Compatible

Connectors

One RS-232 Port

Four LAN Ports (10Base-T/100Base-TX Auto MDI)

One WAN Port (10Base-T/100Base-TX Auto MDI)

Encryption

WEP (Wired Equivalent Privacy) 64/128-bit RC4

WPA (Wi-Fi Protected Access)

External Antenna Type

2dBi (Max) Dual detachable diversity antenna with reverse SMA

LED Indicators

One POWER LED

One WAN 10/100M Link/Activity LED

Four LAN 10M/100M Link/Activity LEDs

One Wireless Link/Activity LED

One System LED

Power Requirement

External Power Adapter

Input: 100-240 VAC, 50/60 Hz

Output: 5V DC, 2A

Environment Conditions

Operating Temperature: 0 to 50°C Storage Temperature: -10 to 60°C

Operating Humidity: 10~80% non-condensing

Storage Humidity: 10% to 90% non-condensing

Certifications

FCC part 15 Class B, CE, CSA, VCCI Class B, CE / R&TTE, C-Tick

Dimension

Size: 242 (L) x 130.5 (W) x 77 (H) mm

Weight: About 420g (Net)

Mounting

Desktop, Wall mounted

1.5.2 Software Specifications

Networking

- IEEE802.3 10Base-T Ethernet
- IEEE802.3u 100Base-TX Fast Ethernet
- IEEE802.3af Power over Ethernet (mid-span)

- IEEE802.11b Wireless LAN
- IEEE802.11g Wireless LAN
- Supports 100 Simultaneous Users
- IP Plug and Play (iPnP)
- HTTP Proxy Support
- SMTP Server Redirection
- DHCP Server
- DHCP Relay
- Static IP WAN Client
- DHCP WAN Client
- PPPoE WAN Client
- PPTP WAN Client
- NAT
- NTP (Network Time Protocol) Support
- DDNS

Marketing Cooperation

- Advertisement URL link
- Walled garden
- Customizable log-on and log-off pages
- Portal Page
- WISPr Smart Client

User Accounting and Authentication

- Built-in Authentication
- Web-based Authentication
- RADIUS AAA Support (RFC 2865, 2866)
- Secondary RADIUS
- User Authentication and Accounting
- Logout Window Timer Control

Security and Firewall

- Layer 2 Isolation Security
- SSL User Login page/ Configuration Page
- SSL Administration
- VPN Pass through (IPSec/PPTP)
- Customize SSL Certificate
- Pass Through IP/MAC/URL Address
- Restricted Destination Filtering IP/URL
- VPN (IPSec/PPTP) Pass through
- PPTP VPN Client
- WEP

WPA

Management

- Web-based Management Tool
- Firmware Upgrade via HTTP/TFTP
- Wizard setup for step-by-step Configuration
- Backup/Restore/Factory Default Setting
- Remote Authorized Management
- Real-time Session List
- LAN Device Management
- Syslog (System/Subscriber/LAN device)
- E-mail logs
- SNMP v1/v2 (MIB II, Private MIB)
- System Information Table
- Status Report (Daily/Monthly/System/Network)
- SSL certificate upload

Extra Function with optional WSG-ACG3

- Local Authentication
- Local Accounting
- Local Billing

WSG-ACG3 Account Generator (Thermal Printer)

Interface: Ethernet

Print Width: 48mm (Paper width: 58mm)

Paper Length: 50 M

2. Installation

The followings are instructions for setting up the WSG-403. Refer to the illustration and follow the simple steps below to quickly install your WSG-403.

2.1 Wall-Mounting

The WSG-403 can be wall-mounted on a wall by applying the two mounting brackets on screws.

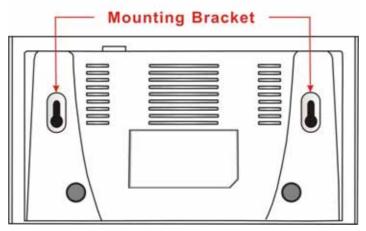


Figure 2-1 Wall-Mounting Bracket - Bottom of WSG-403

Please refer to the following instructions for mounting a WSG-403 on a wall or other surface.

1. Install two screws on a wall according to the relative positions shown below.

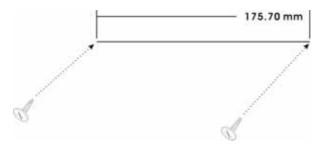


Figure 2-2

2. Hang WSG-403 on the wall by sliding the two screws in the mounting brackets.

Note: If the screws are not properly anchored, the strain of the cables connected to the WSG-403 rear panel connectors could pull out the WSG-403 from the wall.

2.2 Connecting the Antennas

The WSG-403 provides two antenna connectors on the rear of the unit.

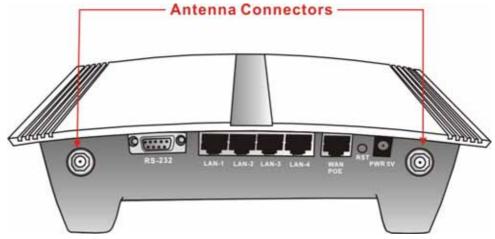


Figure 2-3 Antenna Connectors

2.3 Installation Requirements

Before installing the WSG-403, make sure your network meets the following requirements.

2.3.1 System Requirements

The WSG-403 requires one of the following types of software:

- Windows 98 Second Edition/NT/2000/XP
- Red Hat Linux 7.3 or later version
- MAC OS X 10.2.4 or later version
- Any TCP/IP-enabled systems like Mac OS and UNIX (TCP/IP protocol installed)
- Standard phone line for xDSL modem

Oı

Coaxial cable for Cable modem

- Web Browser Software (Microsoft I.E 5.0 or later version or Netscape Navigator 5.0 or later version)
- One computer with an installed 10Mbps, 100Mbps or 10/100Mbps Ethernet card
- UTP network Cable with a RJ-45 connection (Package contents)

Note: Prepare twisted-pair cables with RJ-45 plugs. Use Cat.5 cable for all connections. Make sure each cable not exceed 328 feet (Approximately 100 meters).

2.3.2 ISP Requirements

Verify whether your ISP use fixed or dynamic IP. If it is a fixed IP, be sure to get the IP from your ISP. For dynamic IP, which is mostly used, the PC will get the IP automatically whenever it hooks up on the modem.

Dynamic IP

Dynamic IP Setting

Fixed IP

- Your fixed IP address for the WSG-403
- Your subnet mask for the WSG-403
- Your default gateway IP address
- Your DNS IP address

PPPoE

• Your user name from your ISP

Your password from your ISP

PPTP

- PPTP Server IP Address from your ISP
- PPTP Local IP address from your ISP.
- PPTP Local IP subnet mask from your ISP.
- Your user name from your ISP
- Your password from your ISP

2.3.3 Your PC Requirements

The Static IP settings for the PC

- Your PC's fixed IP address
- Your PC's subnet mask
- Your PC's default gateway IP address
- Your PC's primary DNS IP address

Note:

- 1. The gateway's default IP address setting is "192.168.0.1".
- 2. The gateway's default subnet mask setting is "255.255.255.0".

The Dynamic IP settings for the PC

We recommend that you leave your IP settings as automatically assigned. By default, the WSG-403 is a DHCP server, and it will give your PC the necessary IP settings.

Note:

Before turn on the WSG-403, make sure there is no other DHCP server in the LAN network, otherwise it will influence the whole network operation.

2.4 Getting Start

- 1. Place the WSG-403 and WSG-ACG3 Printer on a flat work surface.
- 2. Connect the Ethernet cable to the WSG-403's LAN port.
- 3. [optional] Connect the other end of the Ethernet cable to the WSG-ACG3Account Generator Printer's RJ45 port.
- 4. Ensure that your modem and computer are both switched on.
- 5. Use the supplied cable to connect the WSG-403's WAN port to the modem. Check that the Cable/xDSL Status LED lights.
- 6. Connect your computer to one of the 10/100 LAN ports on the WSG-403. Check that the LAN Port Status LED lights.
- 7. Configure the further parameters via a Web browser.

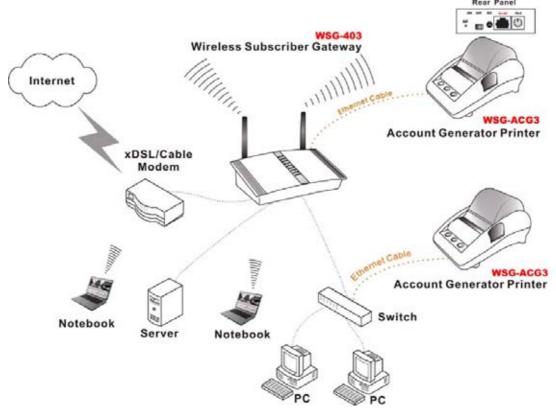


Figure 2-4 WSG-403 Connection

2.5 POE (Power over Ethernet) Application

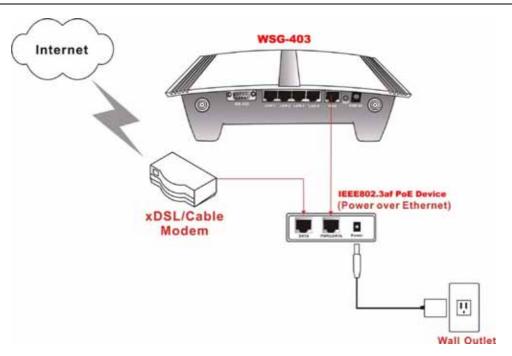


Figure 2-6 POE Connection

Note: WSG-403 supports IEEE802.3af standard. To use the WSG-403's POE feature, follow the instructions for your specific POE device such as PLANET POE-151, POE injector.

3. Configuring the WSG-403

3.1 Setting Wizard

Step 1: Start your browser, and then enter the factory default IP address 191.168.0.1 in your browser's location box. Press Enter.



Field (Factory Default)

Step 2: The WSG-403 configuration tools menu will appear. In the Username and Password field, type the factory default user name admin and password password and click Login. If you are first time setting the system, the wizard setup screen will appear. You will be guided, step-by-step, through a basic setup procedure.



Figure 3-2 Configuration Tools Menu



Figure 3-3 Wizard Setup Screen

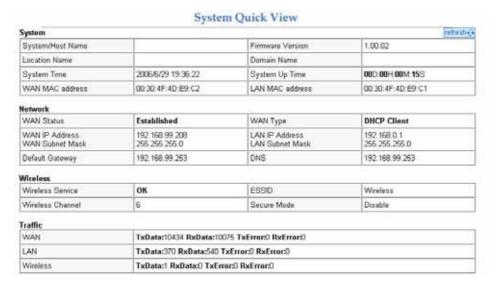


Figure 3-4 System Quick View



Click on reset button to clear the username and password data.

Note:

- This Web agent is best viewed with IE 5.0 or Netscape 6.0 and above browsers.
- F If you would like to change the password please see Step 10.
- Username and Password can consist of up to 20 alphanumeric characters and are case sensitive.
- If for some reason your password is lost or you cannot gain access to the WSG-403 Configuration Program, please press the reset button to load the device to manufacturer defaults.
- If the WSG-403 doesn't send packet in 5 minutes (default), the WSG-403 wills logout automatically.
- Proxy needs to set disable first when administrator accesses admin UI.

Step 3: Internet Connection Setting

Select the appropriate Internet connection type to connect to your ISP. There are options for DHCP client, Static IP address, PPPoE and PPTP. Please consult your ISP for the collection connection type.

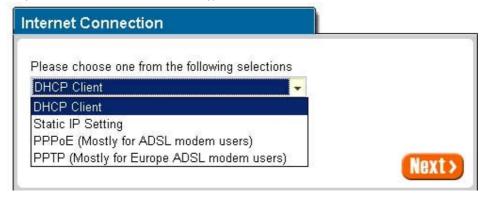


Figure 3-5 Internet Connection Setting Screen

DHCP Client

The device can work as a DHCP client. This allows the device to obtain the IP address and other TCP/IP settings from your ISP. If your xDSL/Cable comes with this feature, please enable Use DHCP Client.



Figure 3-6 Internet Connection Setting Screen—DHCP Client Setting

Static IP Setting

If Static IP Setting is selected, then this screen will appear. Enter the IP address information provided by your ISP.

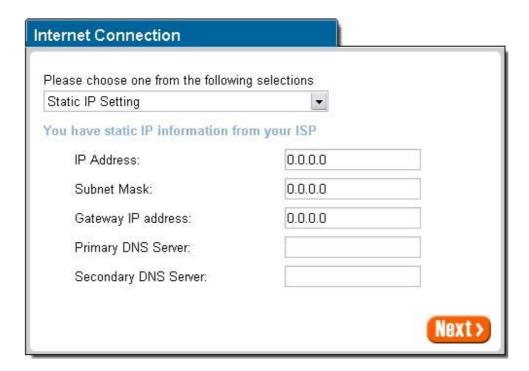


Figure 3-7 Internet Connection Setting Screen—Static IP Setting

Item	Default	Description
IP Address	0.0.0.0	Enter the IP address provided by your ISP.
Subnet Mask	0.0.0.0	Enter the subnet mask for the IP address.
Gateway IP	0.0.0.0	Enter the Gateway IP Address provided by your ISP.
Address		
Primary DNS	Empty	Enter the primary DNS server IP address for the xDSL/Cable
Server		connection (provided by your ISP).
Secondary	Empty	Enter the secondary DNS server IP address for the xDSL/Cable
DNS Server		connection (provided by your ISP). If the primary DNS Server IP were
		not available, meanwhile, Secondary DNS Server IP would start in the
		same time.

• PPPoE (Point-to-Point Protocol over Ethernet)

If "PPPoE" is selected, then this screen will appear. Enter the username, password and other major fields.

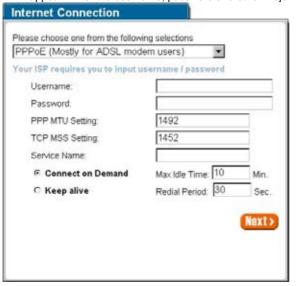


Figure 3-8 Internet Connection Setting Screen—PPPoE Setting

Item	Default	Description
Username Empty		Enter the user name provided by your ISP. The user name can consist
		of up to 80 alphanumeric characters and is case sensitive.
December	-	Enter the user password provided by your ISP. The password can
Password	Empty	consist of up to 80 alphanumeric characters and is case sensitive.
DDD MTU Catting	4.400	MTU (Maximum Transfer Unit) specifies maximum transmission unit
PPP MTU Setting	1492	size.
TCP MSS Setting	1452	MSS (Maximum Segment Size) specifies maximum segment size.
Service Name	Empty	Enter the service name provided by your ISP. The service name can
Service Marrie	Епріу	consist of up to 64 alphanumeric characters and is case sensitive.
Item	Default	Description
Connect on Deman	d and Max	dle Time
Connect on	Enable	You can configure your WSG-403 to cut your connection with your ISP
Demand	Enable	after a specified period of time (Max Idle Time). If you have been
		disconnected due to inactivity, Connect on Demand enables your
		WSG-403 to automatically re-establish your connection as soon as you
Max Idle Time	10	attempt to access the Internet again. If you wish to activate Connect on
IWAX IGIE TIME	Minutes	Demand, click the radio button. If you want your Internet connection to
		remain, click the radio button of keep alive. The Max Idle Time
		maximum value is 65535 minutes.
Keep alive and Red	lial Period	
Keep alive	Disable	This option keeps your PPPoE enabled Internet access connected
Redial Period	30	indefinitely, even when it sits idle. The Redial Period maximum value is
	Seconds	65535 seconds.

• PPTP Client (Point-to-Point Tunneling Protocol)

If "PPTP" is selected, then this screen will appear. Fill out all the information provided by your ISP.

ing selections
SL modem users) 💌
isername / password / PPTP
1460
1400
Max Idle Time: 10 Min.
Redial Period: 30 Sec.
Next>

Figure 3-9 Internet Connection Setting Screen—PPTP Client Setting

Item	Default	Description	
My IP Address	Empty	Enter the PPTP local IP address provided by your ISP.	
My Subnet Mask	Empty	Enter the PPTP local Subnet Mask IP address for the IP address (My IP Address).	
Gateway IP Address	Empty	Enter the PPTP server Gateway IP address provided by your ISP.	
PPTP Server IP Address	Empty	Enter the PPTP server IP address provided by your ISP.	
Username	Empty	Enter the user name provided by your ISP. The user name can consist of up to 80 alphanumeric characters and is case sensitive.	
Password	Empty	Enter the user password provided by your ISP. The password can consist of up to 80 alphanumeric characters and is case sensitive.	
PPP MTU Setting	1460	MTU (Maximum Transfer Unit) specifies maximum transmission unit size.	
TCP MSS Setting	1400	MSS (Maximum Segment Size) specifies maximum segment size.	

Item	Default	Description
		Enter the connection ID or connection name. The connection
Connection ID/Name	Empty	ID/Name can consist of up to 81 alphanumeric characters
		and is case sensitive.
Connect on Demand and	Max Idle Tim	ne
Connect on Demand	Enable	You can configure your WSG-403 to cut your connection with
		your ISP after a specified period of time (Max Idle Time). If
	10 Minutes	you have been disconnected due to inactivity, Connect on
		Demand enables your WSG-403 to automatically re-establish
Max Idle Time		your connection as soon as you attempt to access the
wax rule Time		Internet again. If you wish to activate Connect on Demand,
		click the radio button. If you want your Internet connection to
		remain, click the radio button of keep alive. The Max Idle
		Time maximum value is 65535 minutes.
Keep alive and Redial Period		
Keep alive	Disable	This option keeps your PPTP enabled Internet access
De Kal De Kal	30 Seconds	connected indefinitely, even when it sits idle. The Redial
Redial Period		Period maximum value is 65535 seconds.

Step 4: Wireless Setting

This page allows you to define ESSID, Channel ID for wireless connection.



Figure 3-10 Wireless Setting Screen

Item	Default	Description
ESSID	Wireless	The ESSID is the unique name that is shared among all points in a
		wireless network. It is case sensitive and must not exceed 32
		characters.
Channel	6	Enter the channel ID for wireless connection.

Step 5: E-mail Server Setting

WSG-403 allows an extra Email server parameter to forward the subscriber's E-mail.



Figure 3-11 E-mail Service Setting Screen

Item	Default	Description
Email Server Redirect	No	Disables or enables email server redirect function. To prevent some subscriber's original Email server may protect by firewall or NAT network. WSG-403 provides an extra Email server parameter to forward the subscriber's Email. The WSG-403 not only forwards the subscribers' E-mail via other E-mail server but also changes the SMTP header. The recipient of your E-mail sees the message as if you sent it from your local Internet Service Provide, not form the hotel or other place.
Email Server's IP address or Domain name	Empty	Before setting this field, please make sure the E-mail sever relay function is opened. Enter the email server IP address or domain name. The field must not exceed 50 characters.
addices of Domain name		
SMTP Port	25	Enter the SMTP port. The SMTP port allowed range is 25 or 2500 to 2599.

Step 6: Authentication Service Setting

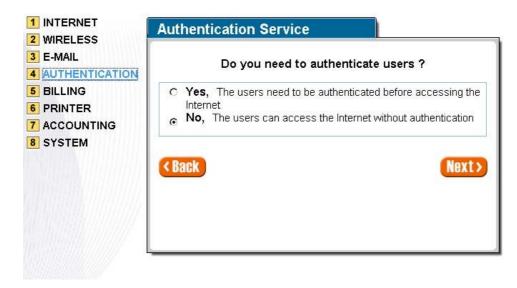


Figure 3-12 Authentication Service Setting Screen

Item	Default	Description
Built-in Authentication/	No	Yes—
No Authentication		WSG-403 provides Built-in Authentication for service provider to build up an Internet service without any extra authentication software. If Yes is selected, service provider can generate the

subscriber account inside WSG-403, and the system will authenticate the subscriber login according to the generated account.
No—
Subscriber can direct access the Internet without

Step 7: Billing Profile Setting

The function is used to setup a billing profile. A billing profile is a description of how you want to charge your customer.

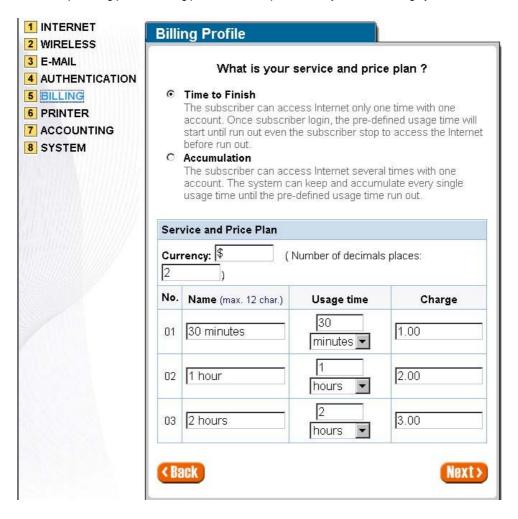


Figure 3-13 Billing Profile Setting Screen

Item	Default	Description	
Service	Time to Finish	Options: Time to Finish or Accumulation.	
		Time to Finish—	
		The subscriber can access Internet only one time with one account. Once subscriber login, the pre-defined usage time will start until run out even the subscriber stop to access the Internet before run out.	
		Accumulation—	
		The subscriber can access Internet many times with one account. The system can keep and accumulate every single usage time until the pre-defined usage time run out.	
Item	Default	Description	
Currency	\$	Enter the appropriate currency unit or currency symbol.	
Number of	2	Enter the billing decimal value. The field maximum value is 3.	
decimals			
places			

No	01~03	The index number of billing profile. In Wizard setup, we provide only	
		3 billing profile.	
Name	30 minutes/	It is the name of billing profile. The maximum allowed characters	
	1 hour/	length is 12.	
	2 hours		
Usage Time	30 minutes/	The duration of the billing period. When this period expires, user	
	1 hour/	account will be discontinued.	
	2 hours		
Charge	1.00/2.00/3.00	Enter the amount of Internet service. The amount maximum value is	
		999999.	

Step 8: Account Generator Printer Setting

There are two different choices, one is exclusive printer (Account Generator Printer – the WSG-ACG3), and the other is non-exclusive printer. Exclusive printer is a portable thermal printer that is integrated with WSG-403 to press one button to generate accounts and receipt immediately without PC operating. Non-exclusive printer can use the PC Web-based browser to print out user account.

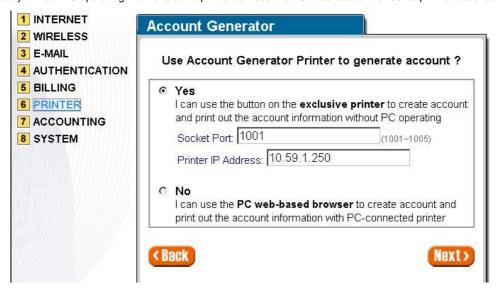


Figure 3-14 Printer Setting Screen

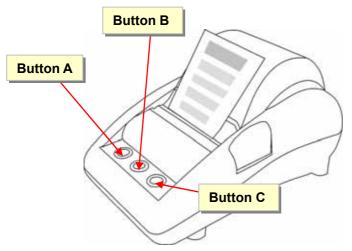


Figure 3-15 Account Generator / Thermal Printer

Step 9: Accounting Setting

• Three-buttons Printer Setting

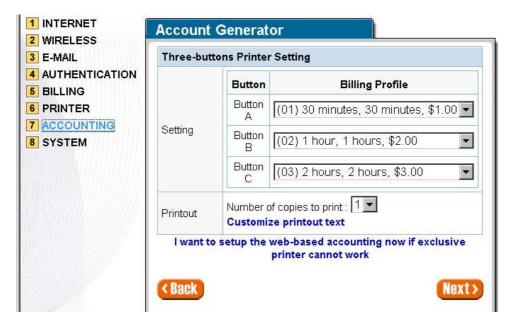


Figure 3-16 Accounting Setting Screen (Three Buttons Printer)

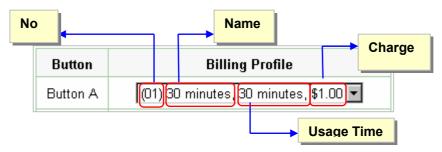


Figure 3-17 Billing Profile Setting Screen

rigate 3 17 Dinning Frome detailing defecti			
Item	Default	Description	
Dutter A. C.	01	Define each button's billing profile. Select one billing profile	
Button A~ C		by clicking in the list box.	
Printout			
Niverbourge coning to maint	1	The system allows you to print all your bills. This value is	
Number of copies to print		number of copies.	
Contamina maintant to the	This function allows you to produce custom bill based on your		
Customize printout text	requirements.		
I want to setup the web-based accounting now if exclusive printer cannot work			
Click "I want to setup the web-based accounting now if exclusive printer cannot work" to open the			
"Web-based Account Generator Setting" screen to start the web-based accounting function.			

• Web-based Account Generator Setting



Figure 3-18 Web-based Account Generator Setting Screen

Item	Default	Description	
Billing Profile	Define each button's billing profile. Select one billing profile by clicking		
(Button A~C)	in the list box.		
Printout	Printout		
Number of copies to	1	The system allows you to print all your bills. Select one	
print		number of copies by clicking in the list box.	
Customize printout text	-	This function allows you to produce custom bill based on	
		your requirements.	
Web-based Account			
Username	account	Enter the user name for web-based account generator.	
		The user name can consist of up to 80 alphanumeric	
		characters and is case sensitive.	
Password	account	Enter the password for web-based account generator. The	
		password can consist of up to 80 alphanumeric characters	
		and is case sensitive.	
Confirm	Empty	Enter the password for confirmation.	

Preview / Operate Click on button to preview and operate account generator panel.

While click on the customization hyper link, the following screen shall show up for customized printing for account information list.

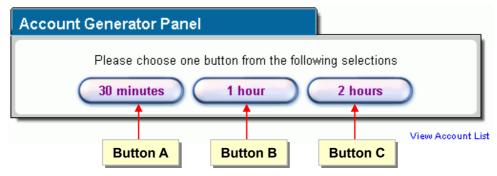


Figure 3-19 Account Generator Panel

Click on button to create a new account.

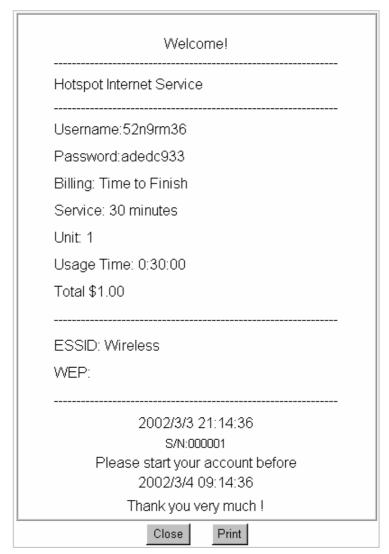


Figure 3-20 Example-Account Printout

View Account List

Click "View Account List" to display current account information.


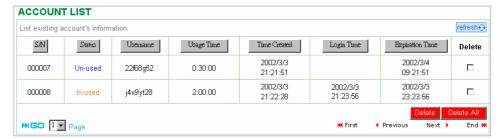


Figure 3-21 Account List

refresh⊕

Click on refresh button to update the account list page.

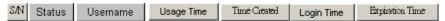

The field name button in this list show that this list can be sorted in ascending/descending order according to the corresponding field name.

Delete

Select the check boxes and click 'Delete' to delete accounts.



Delete all accounts in account list.

Note: This page will refresh automatically every 5 minutes.

This function allows you to produce custom bill based on your requirements.

CUSTOMIZATION

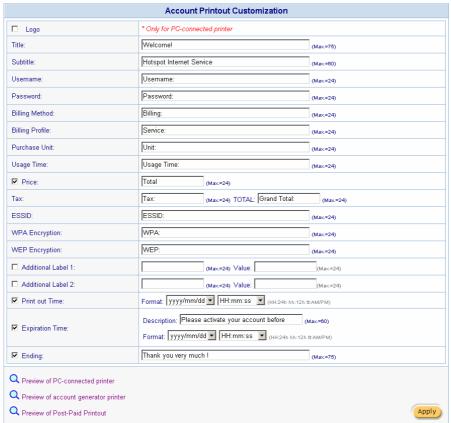


Figure 3-22 Customize Printout Text Setting Screen

Q Preview of PC-connected printer

Q Preview of account generator printer

Q Preview of Post-Paid Printout

Click the button to displays the account on the screen as it would appear when printed.

Welcome!				
Hotspot Internet Service				
Username:)0000000C			
Password:	>0000000X			
Billing:	Time to Finish			
Service:	30 minutes			
Unit:	1			
Usage Time:	0:30:00			
Total	\$1.00			
ESSID:	Wireless			
S/N:000001	2004/12/13 17:03:13			
Please activate your account before 2004/12/14 05:03:13				
Thank you very much!				
Close	Print			

Figure 3-23 Example- PC-connected printer Printout (Time to Finish)



Please activate your account before 2004/12/14 06:48:17 Please finish your usage time within 3 months after your first login



Figure 3-24 Example- PC-connected printer Printout (Accumulation)



Figure 3-25 Example- Account Generator Printer Printout (Time to Finish)



Figure 3-26 Example- Account Generator Printer Printout (Accumulation)

Example Preview 1.Create accounts 2.Bill accounts Welcome! Welcome! S/N:001234 S/N:001234 Hotspot Internet Service Hotspot Internet Service Username:xxxxxxxxxx Username:xxxxxxxxx Password:xxxxxxxx Password:xxxxxxxx Usage Time: Billing: Time to Finish ESSID: Wireless Total \$ 100.00 2005/2/1 10:50:14 2005/2/1 10:50:14 Please activate your acc ount before 2005/2/1 22:50:14 Thank you very much ! Thank you very much !

Figure 3-27 Example-Post-paid Printout

Close

Press" * " "001234 "and "ENTER "

Press "ENTER"

Step 10: System Setting

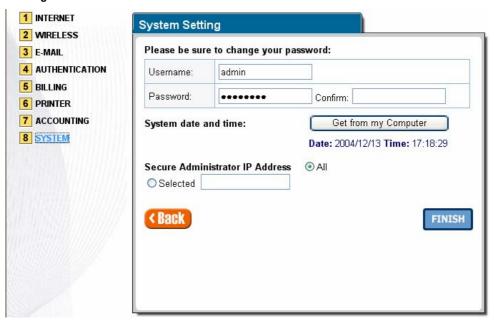


Figure 3-28 System Setting Screen

Item	Default	Description
Username	admin	Enter the user name. The user name can consist of up to
		80 alphanumeric characters and is case sensitive.

		·
Password	admin	Enter the user password. The password can consist of up
		to 80 alphanumeric characters and is case sensitive.
Confirm	Empty	Enter the password of administrator for confirmation.
System date and time	YYYY/MM/DD HH:MM:SS	Get from my Computer Click Get from my Computer button to correct the system date and time.
Secure Administrator IP Address	All	This function allows remote user to management the device. You can specify one or any IP addresses for remote control the system.



Click the button to save the settings then the system will restart.

3.2 Advanced Setup

The Advanced Setting enables you to configure advanced settings related to accessing the Internet, including,

- 1. System
- 2. WAN/LAN
- Server
- 4. Authentication
- 5. RADIUS
- 6. Billing
- 7. Accounting
- 8. Credit Card
- 9. Keypad
- 10. Customization
- 11. Pass Through
- 12. Filtering
- 13. Share
- 14. Portal Page
- 15. Advertisement
- 16. Walled Garden
- 17. DDNS
- 18. LAN Devices
- 19. Syslog
- 20. Session Trace
- 21. Bandwidth
- 22. Secure Remote
- 23. SNMP
- 24. Wireless
- 25. Account Generator

- SYSTEM
- WAN/LAN
- SERVER
- AUTHENTICATION
- RADIUS
- **BILLING**
- ACCOUNTING
- CREDIT CARD
- KEYPAD
- CUSTOMIZATION
- PASS THROUGH
- FILTERING
- SHARE
- PORTAL PAGE
- ADVERTISEMENT
- WALLED GARDEN
- **DDNS**
- LAN DEVICES
- ▶ SYSLOG
- SESSION TRACE
- BANDWIDTH
- SECURE REMOTE
- SNMP
- ▶ WIRELESS
- ACCOUNT GENERATOR

Figure 3-29 Advanced Setting Item Screen

Note: After change the settings of device, please click apply button to save the new settings.

3.2.1 System

Define the WSG-403 System configuration.

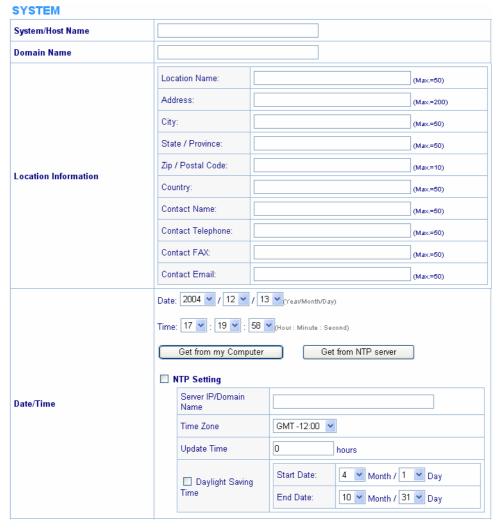


Figure 3-30 System Setting Screen

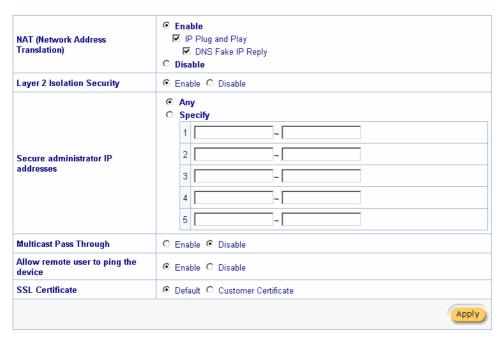


Figure 3-31 System Setting Screen

Item	Default	Description
		The system name can consist of up to 40
System/Host Name	Empty	alphanumeric characters.
		The Domain name can consist of up to 80
Domain Name	Empty	alphanumeric characters.
Location Information	Empty	Enter your location information.
Date/Time		
	System	The system date of the WSG-403. The valid setting of
Date (Year/Month/Day)	Date	year is from 2002 to 2035.
Time (Hour:Minute:Second)	System Time	The system time of the WSG-403.
Get from my Computer		Click "Get from my Computer" button to correct the
	-	system date and time.
Get from NTP server		Click "Get from NTP server" button to correct the
	-	system date and time.
		Enables or disables NTP (Network Time Protocol)
		Time Server. Network Time Protocol can be utilized to
NTP Setting	Disable	synchronize the time on devices across a network. A
		NTP Time Server is utilized to obtain the correct time
		from a time source and adjust the local time.
Carrier ID/Damain Name	Empty	Enter the IP address/domain name of NTP server. The
Server IP/Domain Name		maximum allowed characters length is 100.
Time Zone	GMT-12:00	Select the appropriate time zone for your location.
Update Time	0 hours	Enter the number of hours for update time.
	Disable	Enables or disables Daylight Saving Time (DST).
Daylight Saving Time	Month/Day	Set the Daylight Saving Time (DST) on the WSG-403.
		Adjust the begin time and end time.
NAT (Network Address Transla	tion)	
NAT	Enable	Enables or disables NAT Address Translation function.
		Enables or disables user session limit function. This
User Session Limited	Enable,30	feature provides you an ability to control a number of
Oser Session Limited	Lilable,50	sessions allowed for particulars user(s) at the one
		time.
IP Plug and Play (iPnP		Enables or disables plug & play function. When
Technology)	Enable	enabled, the user needn't change their network
recimology)		configuration to access the Internet.
		If enable plug and play is selected, you can enable
Layer 2 Isolation Security	Enable	Layer 2 Isolation Security function. When the "Layer 2
Layer 2 Isolation Security		Isolation Security" enabled, everyone cannot
		communicate with each other.

Item	Default	Description
Secure administrator IP Addresses	Any	Options: Any and Specify. Administrator can specify 5 IP addresses or a range to allow remote control access from network.
Multicast Pass Through	Disable	This function allows for multiple transmissions to specific recipients at same time.
Allow remote user to ping the device	Enable	This function allows remote user to ping the WSG-403 through Internet. Ping is normally used to test the physical connection between two devices, to ensure that everything is working correctly.
SSL Certificate	Default	Option: default or customize certificate, These are two ways to create a certificate, one is purchase a certificate from a certificate authority (Ex. Verisign or Thawte), and another is creating a self-certificate (For example: Uses OpenSSL tool).

Apply Click Apply button to save the new settings.

Click Apply button, then Restart dialog box will appear. Click Apply to restart the system.

RESTART Do you want to restart the system? Apply

Figure 3-32 Restart Dialog Box

3.2.2 WAN/LAN

WAN / LAN

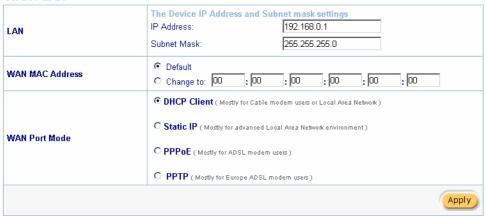


Figure 3-33 WAN/LAN Setting Screen

Apply Click **Apply** button to save the new settings.

Click Apply button, then Restart dialog box will appear. Click Apply to restart the system.



Figure 3-34 Restart Dialog Box

Device IP (LAN IP) Setting

WAN / LAN



Figure 3-35 Device IP (LAN IP) Setting

Item	Default	Description
IP Address	10.59.1.1	The internal LAN IP address of your Wireless Subscriber Server
		Gateway.
Subnet Mask	255.0.0.0	Enter the subnet mask for the IP address.

WAN MAC Address



Figure 3-36 WAN MAC Address Setting

Item	Description
IP Address	The default MAC address is set to the WAN physical interface on device.

WAN Port Mode



Figure 3-37 WAN Port Mode Setting

DHCP Client

The device can work as a DHCP client. This allows the device to obtain the IP address and other TCP/IP settings from your ISP. If your xDSL/Cable comes with this feature, please enable Use DHCP Client.

• DHCP Client (Mostly for Cable modem users or Local Area Network)

Figure 3-38 DHCP Client Setting Screen

Static IP

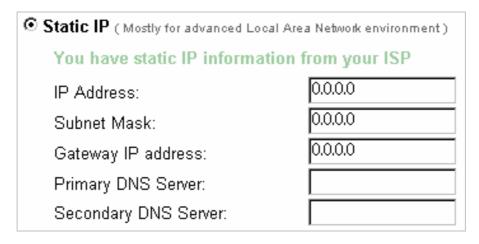


Figure 3-39 Static IP Setting Screen

Item	Description
IP Address	Enter the IP address for the xDSL/Cable connection (provided by your
	ISP).

Subnet Mask	Enter the subnet mask for the IP address.		
Gateway IP Gateway	Enter the Gateway IP address for the xDSL/Cable connection (provided by		
	your ISP).		
Primary DNS Server	A primary DNS server IP address for the xDSL/Cable connection (provided		
	by your ISP).		
Secondary DNS Server	A secondary DNS server IP address for the xDSL/Cable connection		
	(provided by your ISP). If the primary DNS Server IP were not available,		
	meanwhile, Secondary DNS Server IP would start in the same time.		

<u>PPPoE</u>

• PPPoE (Mostly for ADSL modem users)		
Your ISP requires you to input username / password		
Username:		
Password:		
PPP MTU Setting:	1492	
TCP MSS Setting:	1452	
Service Name:		
Connect on Demand	Max Idle Time: 10 Min.	
C Keep alive	Redial Period: 30 Sec.	

Figure 3-40 PPPoE Setting Screen

Item	Default	Description
User Name	Empty	Enter your PPPoE account name. The user name can consist
		of up to 80 alphanumeric characters and is case sensitive.
Password	Empty	Enter your PPPoE password. The password can consist of up
		to 80 alphanumeric characters and is case sensitive.
PPP MTU Setting	1492	MTU (Maximum Transfer Unit) specifies maximum
		transmission unit size.
TCP MSS Setting	1452	MSS (Maximum Segment Size) specifies maximum segment
		size.
Item	Default	Description
Service Name	Empty	Enter the service name provided by your ISP. The service
		name can consist of up to 64 alphanumeric characters and is
		·
		case sensitive.
Connect on Demand	and Max Idle	
Connect on Demand Connect on Demand	<u> </u>	
	<u> </u>	Time
Connect on Demand	Enable	Time You can configure your WSG-403 to cut your connection with
Connect on Demand	Enable	Time You can configure your WSG-403 to cut your connection with your ISP after a specified period of time (Max Idle Time). If
Connect on Demand	Enable	Time You can configure your WSG-403 to cut your connection with your ISP after a specified period of time (Max Idle Time). If you have been disconnected due to inactivity, Connect on

		click the radio button. If you want your Internet connection to
		remain, click the radio button of keep alive. The Max Idle
		Time maximum value is 65535 minutes.
Keep alive and Redial Period		
Keep alive	Disable	This option keeps your PPPoE enabled Internet access
Redial Period	30 Seconds	connected indefinitely, even when it sits idle. The Redial
		Period maximum value is 65535 seconds.

• PPTP

PPTP (Mostly for Europe ADSL modem users)	
Your ISP requires you to input userna	me / password / PPTP setting
My IP Address:	
My Subnet Mask:	
Gateway IP address:	
PPTP Server IP Address:	
Username:	
Password:	
PPP MTU Setting:	1460
TCP MSS Setting:	1400
Connection ID/Name:	
Connect on Demand	Max Idle Time: 10 Min.
C Keep alive	Redial Period: 30 Sec.

Figure 3-41 PPTP Setting Screen

Item	Default	Description
My IP Address	Empty	A PPTP local IP address for the xDSL/Cable connection
		(provided by your ISP).
My Subnet Mask	Empty	Enter the PPTP local IP address for the xDSL/Cable
		connection.
Gateway IP Address	Empty	A PPTP local default gateway for the xDSL/Cable
		connection (provided by your ISP).
PPTP Server IP Address	Empty	Enter the PPTP server IP address for the xDSL/Cable
		connection (provided by your ISP).
Username	Empty	Enter your PPTP account name. The user name can
		consist of up to 80 alphanumeric characters and is case
		sensitive.
Password	Empty	Enter your PPTP password. The password can consist
		of up to 80 alphanumeric characters and is case
		sensitive.

Item	Default	Description
PPP MTU Setting	1460	MTU (Maximum Transfer Unit) specifies maximum
		transmission unit size.
TCP MSS Setting	1400	MSS (Maximum Segment Size) specifies maximum
		segment size.
Connection ID/Name	Empty	Enter the connection ID or connection name. The
		connection ID/Name can consist of up to 81
		alphanumeric characters and is case sensitive.
Connect on Demand and N	Max Idle Time	
Connect on Demand	Enable	You can configure your WSG-403 to cut your
Max Idle Time	10 Minutes	connection with your ISP after a specified period of time
		(Max Idle Time). If you have been disconnected due to
		inactivity, Connect on Demand enables your WSG-403
		to automatically re-establish your connection as soon as
		you attempt to access the Internet again. If you wish to
		activate Connect on Demand, click the radio button. If
		you want your Internet connection to remain, click the
		radio button of keep alive. The Max Idle Time maximum
		value is 65535 minutes.
Keep alive and Redial Period		
Keep alive	Disable	This option keeps your PPTP enabled Internet access
Redial Period	30 Seconds	connected indefinitely, even when it sits idle. The Redial
Redial Period 30 Seconds	30 Seconds	Period maximum value is 65535 seconds.

3.2.3 Server

SERVER

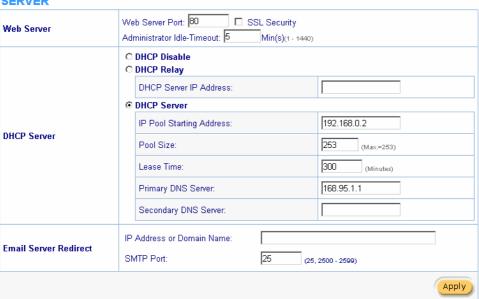


Figure 3-42 Server Setting Screen

Item	Default	Description
Web Server		

	ı			
		Enter the HTTP port number. The HTTP port allowed		
HTTP Port	80	range is 80 or 8010 to 8060. For access the WSG-403		
		system under NAT, please tab the "http://HTTP Port IP		
		Address: Port Number".		
		Enter the HTTPS port number. The HTTPS port allowed		
LITTEC Dark	440	range is 443 or 4430 to 4440. For access the WSG-403		
HTTPS Port	443	system, please tab the "https://HTTPS Port IP Address:		
		Port Number".		
		The idle time out valid range is 1-1440. If the idle time out		
	- N	is set as 5 minutes, it means if the administrator doesn't		
Administrator Idle-Timeout	5 Minutes	send packet in 5 minutes, the administrator will logout		
		automatically.		
		There are three types of DHCP Services.		
		DHCP Disable—Disable the DHCP server function.		
DHCP Server	Enable	DHCP Relay—Enable DHCP Relay function.		
		DHCP Server—Enable DHCP server function.		
	To route DI	l HCP through an external server, the administrator needs to		
DHCP Relay	enable the	enable the DHCP relay and assign a valid DHCP server IP address.		
DHCP Server IP Address	Empty	Enter the IP address of DHCP server.		
	The WSG-	L 403's DHCP server is turned on and running by default		
DHCP Server	when you install it in your network.			
DHCP Pool Starting				
Address	10.59.1.2	Enter the DHCP Pool Starting IP address.		
Pool Size	253	The DHCP pool size range is 1 to 512.		
	300	The DHCP lease time. The DHCP lease time range is 1 to		
Lease Time	Minutes	71582788 minutes.		
Primary DNS Server	168.95.1.1	Enter the IP address of the network's primary DNS server.		
Secondary DNS Server	Empty	Enter the IP address of a second DNS server on the		
		network.		
Email Server Redirect	To prevent	some subscriber's original Email server may protect by		
	·	NAT network. WSG-403 provides an extra Email server		
		to forward the subscriber's Email. The WSG-403 not only		
		e subscribers' E-mail via other E-mail server but also		
		e SMTP header. The recipient of your E-mail sees the		
		s if you sent it from your local Internet Service Provide, not		
		otel or other place. Note: Before setting this sever, please		
	make sure the e-mail sever relay function is opened. It must not			
	exceed 50 characters.			
IP Address or Domain	Empty	Enter the E-mail server IP address or domain name.		
Name				
-				

SMTP Port	25	Enter the SMTP port number for mail server. The SMTP
		port allowed range is 25 or 2500 to 2599.

Apply Click **Apply** button to save the new settings.

3.2.4 Authentication

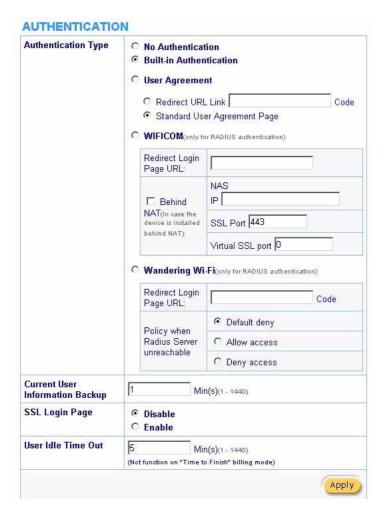


Figure 3-43 Authentication Setting Screen

Item	Default	Description
Authentication Type	No Authentication	Option: No Authentication, Built-in Authentication or User Agreement. No Authentication— Subscriber can direct access the Internet without enter username and password.
Item	Default	Description
Authentication Type	No Authentication	Built-in Authentication— WSG-403 provides "Built-in Authentication" for service provider to build up an Internet service without any extra authentication software. If "Built-in Authentication" is selected, service provider can generate the subscriber account inside WSG-403, and the system will authenticate the subscriber login according to the generated account. User Agreement— Subscriber must accept the service usage agreement before they can access the Internet. WIFICOM— WSG-403 provides this Authentication for WIFICOM service provider to build up an Internet service with RADIUS server. For the detail setup, please contact WiFicom. (http://www.wificom.com) Wandering Wi-Fi—

		WSG-403 provides this Authentication for Wandering Wi-Fi service provider to build up an Internet service with RADIUS server. For the detail setup, please contact Wandering Wi-Fi. (http://wanderingwifi.com)
Current User	1 Min(s)	The system provides automatically backup account information and unused account to flash ROM. This
Information Backup		function allow administrator to adjust the backup time. The default value is 1 minute. The Current User Information Backup valid range is 1 to 1440.
Redirect Login Page	Empty	The input format can be http://www.yahoo.com. The maximum character of the URL Link is 200.
URL		
Code	Copy and paste the redirect subscribe	he following HTML Code into your home page to produce r login page.
Code		

Copy and paste the following HTML Code into your home page to produce user agreement login page.

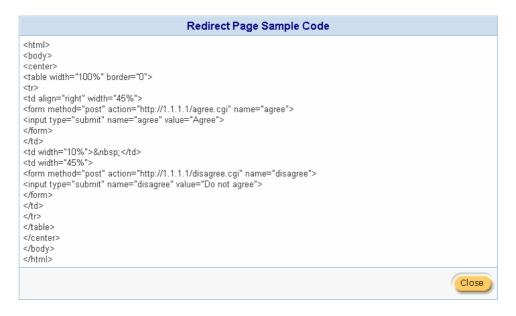


Figure 3-44 Preview Redirect Login Page Code

Item	Default	Description
SSL Login Page	Disable	Enables or disables SSL security of login page.
User Idle Time Out 5 Minutes		The user idle time out valid range is 1-1440.

Apply Click **Apply** button to save the new settings.

3.2.5 RADIUS Authentication

RADIUS

	Disak Enab				
	•	Time to Finish			
			he subscriber can access Internet only one time with one account. Once subscriber login, the pre-defined sage time will start until run out even the subscriber stop to access the Internet before run out.		
	0	Accumulation			
			in access Internet until the pre-defini		il times with one account. The system can keep and accumulate every ige time run out.
		Idle Time Out:	5 Mi	n(s)(1	. 1440)
			Server IP addres	s	
	Prir	nary RADIUS	Authentication P	ort	1812
	Ser	ver	Accounting Port		1813
			Shared Secret K	(ey	
			Server IP addres	s	
	Sec	condary RADIUS	Authentication P	ort	1812
	Server Ac		Accounting Port		1813
			Shared Secret K	(ey	
	Retr	ry times when Prim	ary fail 1 🔽		
				0	Disable
	Acc	ounting Service		•	Enable Interim Update Time: 5 Min(s)
	Aut	Authentication Method		СНА	₽ ▼
					Smart Client
	IPAS	SS GIS			
Log	O Directly Reply Proxy Reply with "Redirect Login Page" URL Proxy Reply with Specific URL				
		'			Apply

Figure 3-45 Authentication Setting Screen

		·
Item	Default	Description
RADIUS Authentication	Disable	Option: No Authentication or RADIUS Server.
		Disable (No Authentication) —
		Subscriber can direct access the Internet without enter
		username and password.
		Enable (RADIUS Authentication) —
		WSG-403 provides "RADIUS Authentication" for service
		provider to build up an Internet service with RADIUS server. If
		RADIUS Authentication is enabled, all subscribers'
		authentication will send to RADIUS Server by RADIUS
		protocol (RFC 2865, 2866).
Time to Finish/	Enable	Service provider provides two different accounting calculate

Accumulation		for the Internet service.	
Primary RADIUS Server	L		
Server IP	Empty	Enter the IP address of RADIUS server.	
Authentication Port	1812	Enter the authentication port number; the authentication port	
		number must match with the RADIUS server setting. The	
		allowed numbers are from 0 to 65535.	
Accounting Port	1813	Enter the accounting port number; the accounting port number	
		must match with the RADIUS server setting. The allowed	
		numbers are from 0 to 65535.	
Share Secret Key	Empty	The share secret key, the key number also has to match with	
		the Server setting. Up to 64 characters are allowed.	
Secondary RADIUS Ser	ver		
Server IP	Empty	Enter the IP address of RADIUS server.	
Authentication Port	1812	Enter the authentication port number; the authentication port	
		number must match with the secondary RADIUS server	
		setting. The allowed numbers are from 0 to 65535.	
Accounting Port	1813	Enter the accounting port number; the accounting port number	
		must match with the secondary RADIUS server setting. The	
		allowed numbers are from 0 to 65535.	
Share Secret Key	Empty	The share secret key, the key number also has to match with	
		the secondary RADIUS Server setting. Up to 64 characters are	
		allowed.	
Retry times when	1	Specify the retry times when primary fail.	
Primary fail			
Item	Default	Description	
Retry Frequency ~	3	The field default value is 3 seconds.	
Seconds			
Accounting Service	Enable	Enables or disables the accounting service.	
Interim Update Time	5 Minutes	Specify the interim update time.	
Authentication Method	CHAP	Enter the authentication method of RADIUS server.	
WISPr Smart Client	_		
Enable	Disable	Enables or disables WISPr Smart Client roaming function.	
Login Mode	Directly	Options: Directly Reply, Proxy Reply with "Redirect Login	
	Reply	Page" URL and Proxy Reply with Specific URL. The login	
		mode information for the IPASS GIS connection. (Provided by	
		your ISP).	

3.2.6 Billing

The function is used to setup a billing profile. A billing profile is a description of how you want to charge your customer.

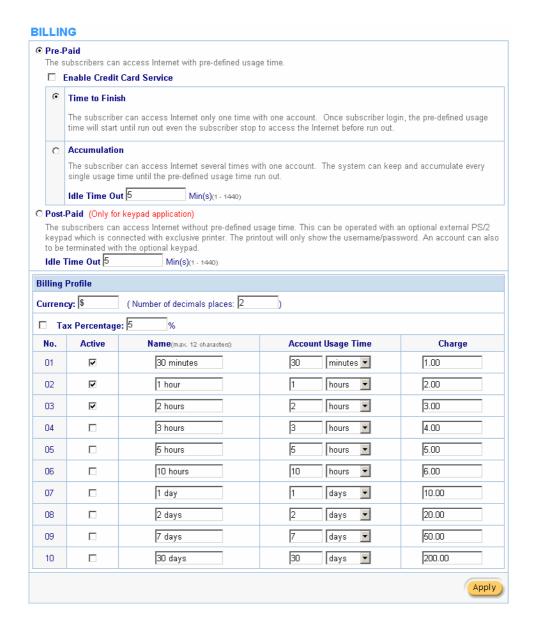


Figure 3-46 Billing Setting Screen

Item	Default	Description
Pre-Paid	Enable	The subscribers can access Internet with pre-defined usage time.

If you change billing mode (Pre-paid→Post-paid or Post-paid→Pre-paid), the system will erase all account and disconnect all on-line users.



Figure 3-47 Message Box

Item	Default	Description
Enable Credit Card Service	Disable	Enables or disables the credit card service. Before you
		enable credit card service, make sure that your credit
		service is configured to work and the currency is American

dollars. You must be converting all prices on your billing page into American dollars (U.S. dollars). For details, see section 3-2-8 Credit Service. The credit card function only supports the American dollars.

CREDIT CARD


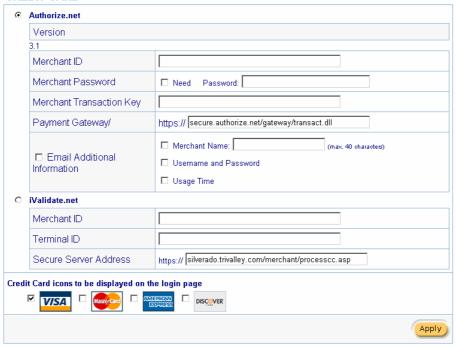


Figure 3-48 Credit Service Setting Screen



Figure 3-49 Error Dialog Box (Credit Card Service=Enable)

Item	Default	Description
Time to Finish	Enable	The subscriber can access Internet only one time with one account.
		Once subscriber login, the pre-defined usage time will start until run
		out even the subscriber stop to access the Internet before run out.
Accumulation		
Accumulation	Disable	The subscriber can access Internet many times with one account. The
		system can keep and accumulate every single usage time until the
		pre-defined usage time run out.
Idle Time Out	5 Min(s)	The idle time out valid range is 1-1440. If the idle time out is set as 5
		minutes, it means if the account doesn't send packet in 5 minutes, the
		account will logout automatically.

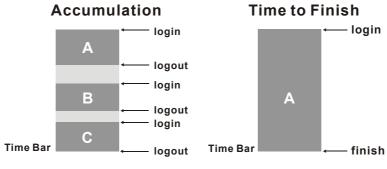

Usage time= A+B+C

Usage time= A

Figure 3-50 Accumulation and Time to Finish

Item	Default	Description
Post-Paid	Disable	The subscribers can access Internet without pre-defined
		usage time. This can be operated with an optional
		external PS/2 keypad that is connected with exclusive
		printer. The printout will only show the
		username/password. An account can also to be
		terminated with the optional keypad.
Idle Time Out	5 Min(s)	The idle time out valid range is 1-1440. If the idle time out
		is set as 5 minutes, it means if the account doesn't send
		packet in 5 minutes, the account will logout automatically.
Billing Profile		
Currency	\$	Enter the appropriate currency unit or currency symbol.
Number of decimals places	2	Enter the number. The field maximum value is 3.
Tax Percentage	Disable	This check box is used to indicate the taxable status of the
		account.
	5%	Enter the tax rate (i.e. a 5% sales tax is entered as 5).
No.	+1~+10	The index number of billing profile. In Advanced setup, we
		provide 10 billing profile.
Active	-	Click on check box, active or inactive the billing profile.
Name	-	It is the name of billing profile. The maximum allowed
		characters length is 12.
Account Usage time	-	The duration of the billing period. When this period
		expires, user account will be discontinued.
Charge	-	Enter the unit rate amount (i.e. 35.00) that most of your
		accounts are charged for one day of service.

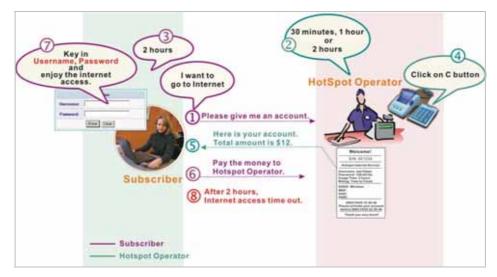


Figure 3-51 Pre-paid Procedure Diagram

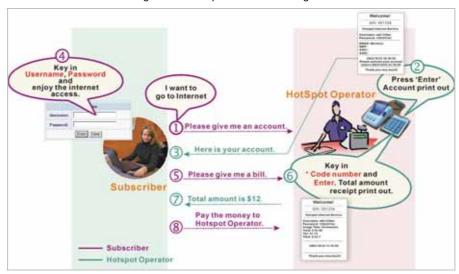


Figure 3-52 Post-paid Procedure Diagram

Click **Apply** button to save the new settings.

Click Apply button, the success dialog box appears. Click on Back to return to Billing setting screen.



Figure 3-53 Success Dialog Box

3.2.7 Accounting

This function allow service provider to generate the subscriber accounts.

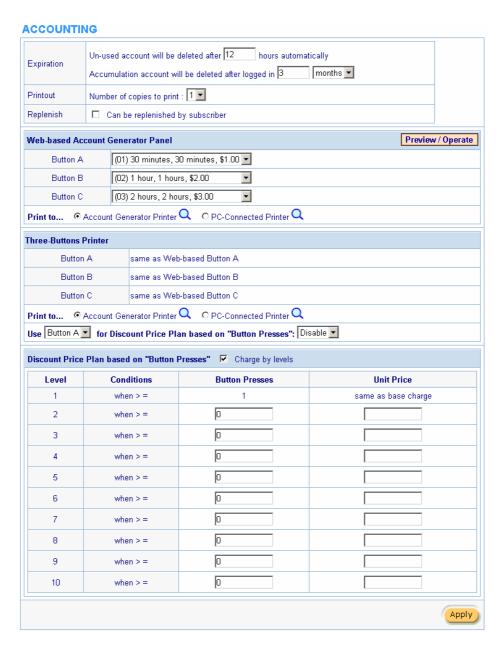


Figure 3-54 Accounting Setting Screen



Figure 3-55

Item	Default	Description
Expiration		
Un-used account will be	12 hours	Enter the number of hours/minutes/days. The field maximum
deleted after ~hours		value is 30 hours/minutes/days.
automatically		
Accumulation account	3 months	Enter the number and select time unit from list box. The field
will be deleted after		maximum value is 30 month/ days/ hours.
logged in ~		
Printout		

Number of copies to print	1	The system allows you to print all your bills. Select one number
		of copies by clicking in the list box.
Can be replenished by	Enable	Click the check box to enable the replenish function.
subscriber		

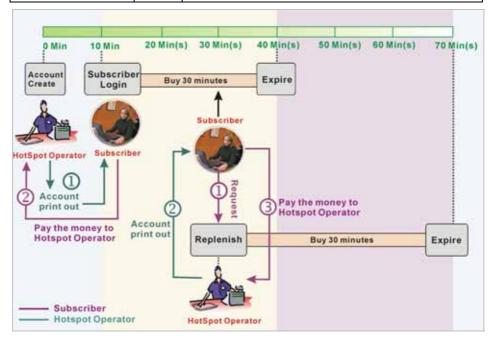


Figure 3-56 Account Process Diagram

Can be replenished by subscriber=Enable

Three-Button Printer/ Web-based Account Generator Panel



Figure 3-57 Three-Button Printer/ Web-based Account Generator Panel Setting Screen

Item	Default	Description
Button A~C	-	Define each button's billing profile. Select one billing
		profile by clicking in the list box.
Print to	Account	Select a printer to print out your account.
	Generator	
	Printer	
Item	Default	Description
Use ~ for Discount	Button A,	Select one button (A~C) by clicking in the list box to
Price Plan based on	Disable	assign the base charge and select enable to active the
"Button Presses"		discount price plan.

Preview / Operate Click on button to preview and operate account generator panel.



Figure 3-58 Account Generator Panel

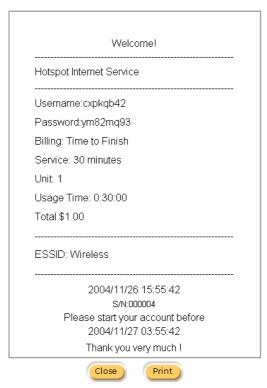


Figure 3-59 Web-based Account Generator Printout (Time to Finish)



Figure 3-60 PC-connected Printer Printout (Time to Finish)

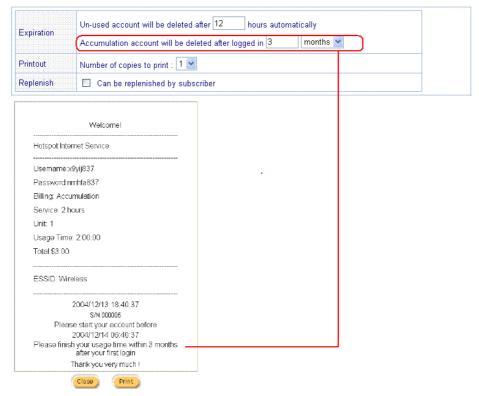


Figure 3-61 Web-based Account Generator Printout (Accumulation)



Figure 3-62 PC-connected Printer Printout (Accumulation)

Note: Before configuring the accounting, you have to setting the billing profile of Web-based account generator panel.

Example: If press 7 times

Discount Price Plan based on "Button Presses" is disabled.



Welcome!

Hotspot Internet Service

Username: 27i28n32 Password: 5a789i35 Billing: Time to Finish

Service: 1 hour

Unit: 7

Usage Time: 07:00:00

Total: \$14.00

ESSID: Wireless

2004/11/29 10:34:58 S/N:000011 Please activate your account before 2004/11/29 22:34:58

Thank you very much!

Amount: 7 x \$2.00= \$14.00

Figure 3-64 Account Printout

- Discount Price Plan based on "Button Presses" is enabled.
- The Charge by level is disabled.

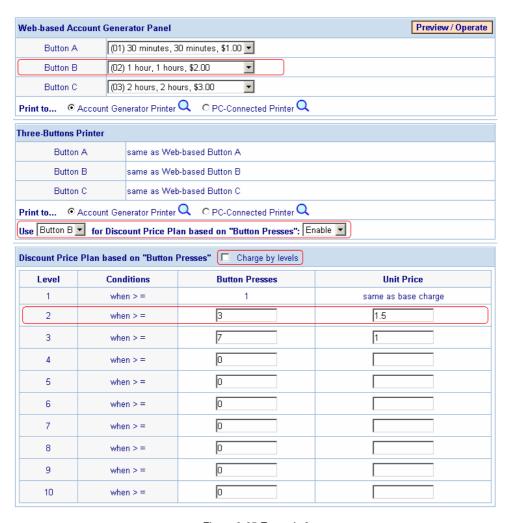


Figure 3-65 Example 2

Amount: 7 x \$ 1 = \$ 7.00

Welcome! Hotspot Internet Service Username: 2ds5ke24 Password: 8e3zte33 Billing: Time to Finish Service: 1 hour Unit: 7 Usage Time: 07:00:00 Total: \$7.00 **ESSID: Wireless** 2004/11/29 10:45:14 S/N:000012 Please activate your account before 2004/11/29 22:45:14 Thank you very much!

Figure 3-66 Account Printout

Discount Price Plan based on "Button Presses" is enabled.

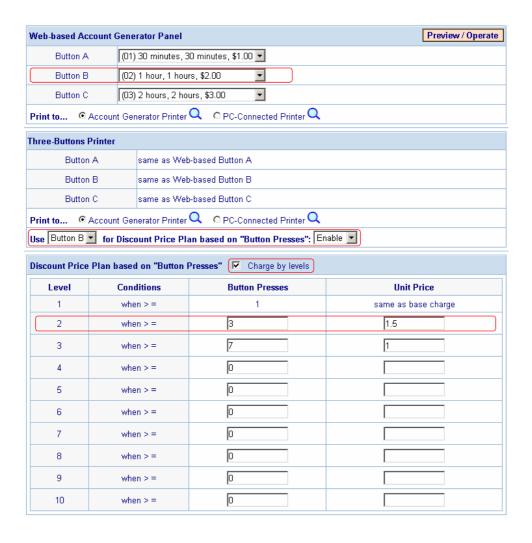


Figure 3-67 Example 3 Charge by level is enabled

Amount: 2 x \$2.00 + 4 x\$ 1.50+1x\$1= \$11.00

Below is an example of the account printout.




Figure 3-68 Account Printout

.evel	Conditions	Button Presses	Unit Price
1	when > =	1	same as base charge
2	when > =	0	
3	when > =	0	
4	when > =	0	
5	when > =	0	
6	when > =	0	
7	when > =	0	
8	when > =	0	
9	when > =	0	
10	when > =	0	

• Discount Price Plan based on "Button Presses"

Figure 3-69 Discount Price Plan Setting Screen

	J	G
Item	Default	Description
Charge by levels	Enable	Enables or disables the charge by levels function.
Level	1~10	This field displays the level number of charge rate.
Conditions	When>=	The discount condition.
Button Presses	-	Enter the times of pressing button.

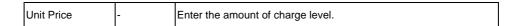



Click Apply button to save the new settings.

Click Apply button, the success dialog box appears. Click on Back to return to Accounting setting screen.



Figure 3-70 Success Dialog Box

3.2.8 Credit Card

WSG-403 provides three credit card services (**Authorize.net**, **iValidate.net and Secure Pay**) that allow service provider to authorize, process, and manage credit transactions directly from Internet.

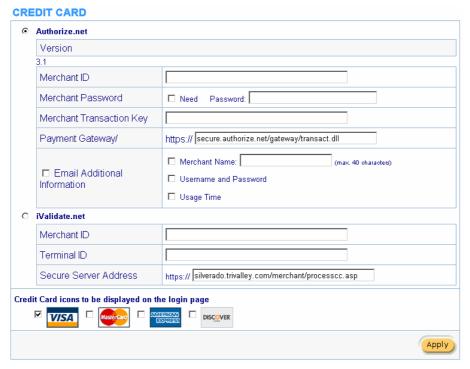


Figure 3-71 Credit Card Setting Screen

Item	Default	Description
Authorize.net		
Version	3.1	This field displays the merchant version.
Merchant ID	Empty	Enter your Merchant ID. This is a Merchant Identification Number that you're received from your Merchant Provider. The maximum character of the Merchant ID is 50.
Merchant Password	This is a Me Provider.	erchant password that you're received from your Merchant
Item	Default	Description
Need	Disable	If your Merchant Provider need password to authorize, click the check box to enable this function.

Password	Empty	Enter your Merchant password.
Merchant Transaction	Empty	The Merchant Transaction Key can be obtained directly
Key		from "Authorize.net". The Merchant Transaction Key is
		similar to a password and is used by the Payment Gateway
		to authenticate transactions. The maximum character of the
		Merchant Transaction Key is 50.
Payment Gateway	https://secur	Enter the address of Payment Gateway.
	e.authorize.	
	net/gateway	
	/transact.dll	
Email Additional	The Email /	Additional Information included subscriber username and
Information	password wo	ould be sent to subscriber.
Email Additional	Disable	Indicates whether Email additional information should be
Information		sent to the subscriber (customer).
Merchant Name	Disable	Indicates whether Merchant Name should be sent to the
Enable/Disable		Email of subscriber.
Merchant Name	Empty	Enter the merchant's company name. The maximum
		allowed characters length is 40.
Username and Password	Disable	The Email Additional Information included subscriber
Enable/Disable		username and password would be sent to subscriber.
Usage Time	Disable	The Email Additional Information included subscriber usage
Enable/Disable		time would be sent to the subscriber.
iValidate.net		
Merchant ID	Empty	Enter your Merchant ID. This is a Merchant Identification
		Number that you're received from your Merchant Provider.
		The maximum character of the Merchant ID is 20.
Device ID	Empty	Enter your Device ID. This is a Device Identification Number
		that you're received from your Merchant Provider. The
		maximum character of the Device ID is 20.
Secure Server Address	https://www.	Enter the secure server address.
	vious.net/m	
	erchant/proc	
	esscc.asp	
Secure Pay	•	
Merchant ID	Empty	Enter your Merchant ID. This is a Merchant Identification
		Number that you're received from your Merchant Provider.
		The maximum character of the Merchant ID is 7.
SecurePay Address	https://www.	Enter the address of SecurePay Payment Gateway.
	securepay.c	
	om.au/secur	
	l .	

	epay/payme	
	nts/process	
	2.asp	
Credit Card icons to be	VISA	Click on check box to display credit card icon on the login
displayed on the login		page.
page		

Apply Click **Apply** button to save the new settings.

Click **Apply** button, the success dialog box appears. Click on **Back** to return to Accounting setting screen.



Figure 3-72 Success Dialog Box

Please follow steps below to pay using credit card.

Step 1: Choose Credit Card service on the login page.



Figure 3-73 Login Page

Step 2: Select Service and enter payment information.

		Hot Spot I	ternet Service	
Please	choose from th	e following servic	e selection	
	Service Code	Service Name	Usage Time	Charge
•	1	30 minutes	30 minutes	1.00
0	2	1 hour	1 hours	2.00
0	3	2 hours	2 hours	3.00
low ma	ny unite of Inte	ernet access wou	d you like to purchase	21 🔻
			connectivity is confirmed. is based on continuous usage	
icase iii				·
Enter	Pavment Infor	mation (all info is	required) (all into is required)	
Enter	-		required) (all info is required)	
Enter	Cr	edit card number:		
Enter	Cr Credit car	edit card number: d expiration date:	required) (all info is required)	
Enter	Cr Credit car	edit card number:		
Enter	Cr Credit car	edit card number: d expiration date:		
Enter	Cr Credit car	edit card number: d expiration date: ter Email Address		
Enter	Cr Credit car	edit card number: d expiration date: ter Email Address First Name:		
Enter	Cr Credit car	edit card number: d expiration date: ter Email Address First Name: Last Name:		
Enter	Cr Credit car	edit card number: d expiration date: ter Email Address First Name: Last Name: Address:		
Enter	Cr Credit car	edit card number: d expiration date: ter Email Address First Name: Last Name: Address: City:		
Enter	Cr Credit car	edit card number: d expiration date: ter Email Address First Name: Last Name: Address: City: State/Province:		
Enter	Cr Credit car	edit card number: d expiration date: ter Email Address First Name: Last Name: Address: City: State/Province: ZIP/Postal Code:		(123)123-1234

Figure 3-74 Service & Payment Information Setting Screen (Authorize.net)

Item	Default	Description
Payment Information		
Credit card number	Empty	Enter your credit card number.
Credit card expiration date	Empty	Enter the credit card expiration date. The allowed format is
		ммүү.
Enter Email Address	Empty	Enter your email address. The system will e-mail you
		account information once your payment information has
		been successfully authorized.
First Name, Last Name	Empty	Enter the customer information, including name, city, country
		and country.

oose from the	Hot Spot Intern	et Service	
oose from the			
oose nom un	e following service s	election	
Service Code	Service Name	Usage Time	Charge
1	30 minutes	30 minutes	1.00
2	1 hour	1 hours	2.00
3	2 hours	2 hours	3.00
that the time blo	ck of selected service is ba		
		sed on continuous usage.	
ayment Inforn	ck of selected service is ba	sed on continuous usage.	
ayment Inforn	ck of selected service is ba	sed on continuous usage.	
ayment Inforn Cre Credit care	ck of selected service is ba nation (all info is requedit card number:	sed on continuous usage.	
ayment Inforn Cre Credit card	ck of selected service is ba nation (all info is reque dit card number:	sed on continuous usage.	
	3 y units of Inte	2 1 hour 3 2 hours	2 1 hour 1 hours 3 2 hours 2 hours y units of Internet access would you like to purchase?

Figure 3-75 Service & Payment Information Setting Screen (iValidate.net)

Item	Default	Description
Payment Information		
Credit card number	Empty	Enter your credit card number.
Credit card expiration date	Empty	Enter the credit card expiration date. The allowed format is
		ммүү.
Enter Email Address	Empty	Enter your email address. The system will e-mail your
		account information once your payment information has
		been successfully authorized.
Billing Address ZIP code	Empty	Enter the ZIP code.

Step 3: After valid payment information has been provided, the subscriber will obtain one valid account to login or the *Figure 3-78* screen will appear.



Figure 3-76 User Account Information

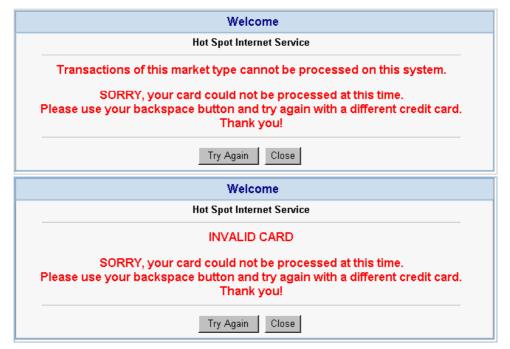


Figure 3-77

3.2.9 Keypad

KEYPAD

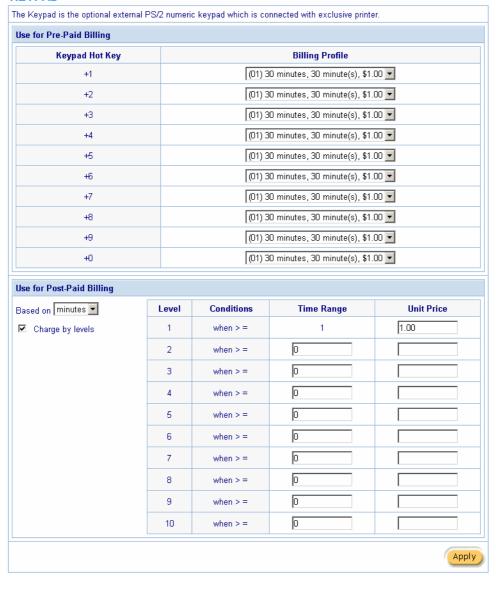


Figure 3-78 Keypad Setting Screen

Item	Default	Description
Use for Pre-Paid Billing	The syste	m provides ten user definable hot keys through the use of the
	+ Key plu	s the 1 through 0 keys across the top of the keypad.
Keypad Hot Key	+1~+0	It is the combination hot key for keypad application.
Billing Profile	-	Select the billing profile you want to assign to the
		combination hot key.
Use for Post-Paid Billing	Define the basic rate of accounts.	
Base on ~	Minutes	Select the billing unit by clicking in the list box.
Charge by levels	Enable	Enables or disables the charge by levels function.
Level (1~10)	1~10	This field displays the level number of charge rate.
Time Range	0	Enter the number.
Unit Price	-	Enter the amount of charge level.

Please follow steps below to create accounts using keypad function.

• Use for Pre-Paid Billing

Step 1: Click the Billing in the Advanced Setup menu, select enable Pre-Paid, click Apply.

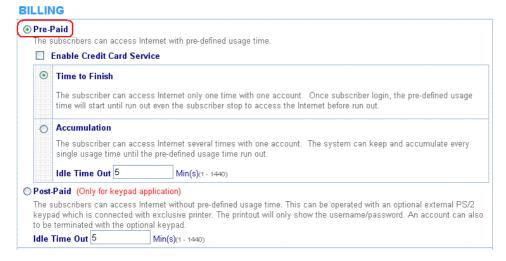


Figure 3-79 Billing Setting Screen

Step 2: Click the Keypad in Advanced Setup Menu, define the Billing plan of pre-paid, and click **Apply**.

The Keypad is the optional external PS/2 numeric keypad which is connected with exclusive printer. Use for Pre-Paid Billing Keypad Hot Key Billing Profile +1 (01) 30 minutes, 30 minute(s), \$1.00 \rightarrow +2 (01) 30 minutes, 30 minute(s), \$1.00 \rightarrow (01) 30 minutes, 30 minute(s), \$1.00 \rightarrow

Figure 3-80 Keypad's Hot Key Setting Screen

Step 3: You can use keypad to create subscriber accounts now. Press keypad hot key and then press **Enter**. A new subscriber account is generated, and the account information should be printed.

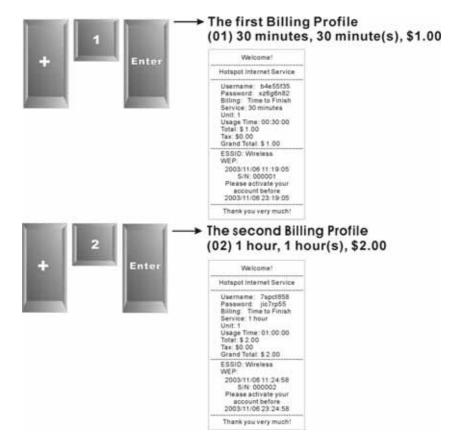


Figure 3-81

Step 4: Subscriber can use this account to access Internet now.

• Use for Post-Paid Billing

Step 1: Click the Billing in the Advanced Setup menu, select enable Post-paid, click Apply.



Figure 3-82 Billing Setting Screen

Step 2: Click the Keypad in Advanced Setup Menu, Define the billing plan of post-paid, click Apply.

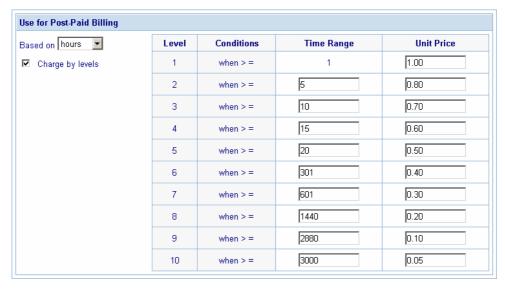


Figure 3-83 Keypad's Hot Key Setting Screen

Step 3: You can use keypad to create subscriber accounts now. Press **Enter**, a new subscriber account is generated, and the account information should be printed. This account information is including serial number, username, password and account create time.

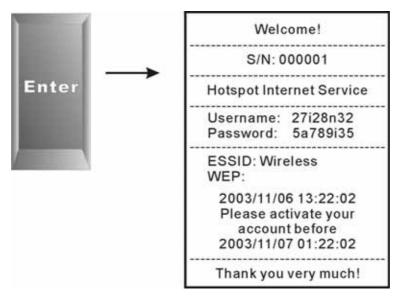


Figure 3-84

Step 4: When subscriber wants to terminate the Internet service, press *, serial number and then press Enter, a bill should be printed.


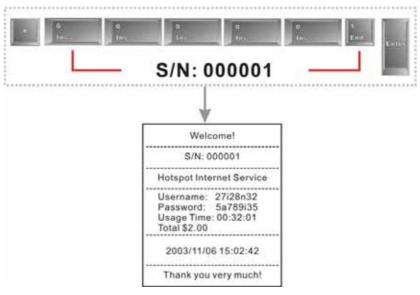


Figure 3-85

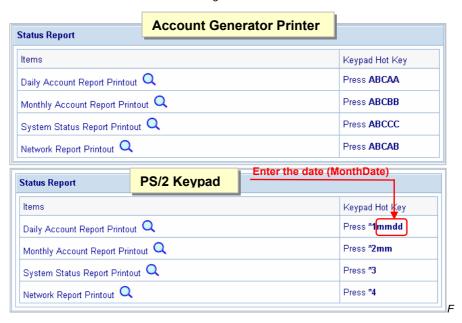

igure 3-86 Keypad's Hot Key List

• Daily Account Report Printout

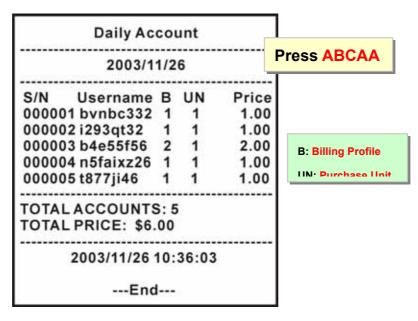


Figure 3-87 Daily Account

Monthly Account Report Printout

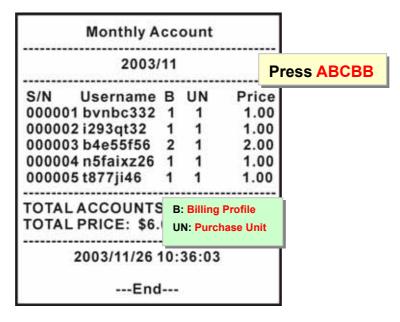


Figure 3-88 Monthly Account

• System Status Report Printout

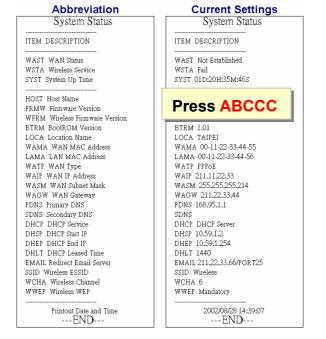


Figure 3-89 System Status Report Printout

Network Report Printout

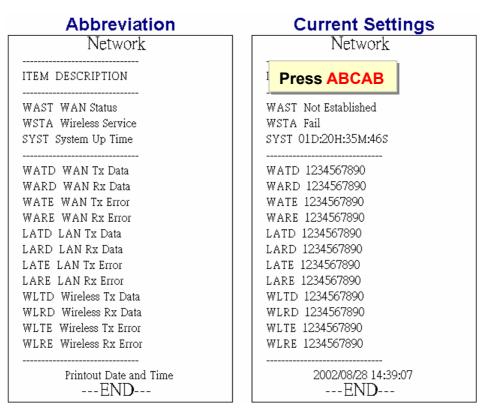


Figure 3-90 Network Report Printout

3.2.10 Customization

Login Page

The WSG-403 provides three different login page formats, including standard, redirect, advanced and frame format.

<u>Standard</u>

For some service providers, they may hope to have a customize subscriber's login page to the users. This function helps them to realize the ideal. The page elements are including login page title, background color, subtitle etc.



Figure 3-91 Standard Login Page Customization Setting Screen

Item	Default	Description
Logo	Disable	Select the check box to display service provider's logo.
Title	Welcome	Enter the title name of subscriber login page. The maximum allowed characters length is 80.
Subtitle	Hot Spot	Enter the subtitle name of subscriber login page. The maximum

	Internet	allowed characters length is 80.
	Service	
Footnote	Disable	Allow the administrator to input the footnote such like "Pleas
		Contact to our Customer Service Center, EXT 141". The maximum
		character of the footnote is 240.
Item	Default	Description
Copyright	Enable	The copyright is allowed the administrator to input a paragraph in
		the subscriber login page for copyright information. The maximum
		character of the copyright is 80.
Background Color	FFFFFF	The background text color can be specified color. For the specified
		text color format please views the color grid. The allowed format is



Figure 3-92 Login Page Screen

Before you add logo to the login page, please make sure the logo image file is defined. For details, see section 3-2-10



Customization->Logo.

Figure 3-93 Error Dialog Box

Redirect

This allow service provider to redirect the subscriber's browser to a specified home page.

Figure 3-94 Redirect Login Page Setting Screen

Copy and paste the following HTML Code into your home page to produce redirect subscriber login page.





Figure 3-95 Redirect Login Page Code
Screen

Advanced

This function allow user to design login page of WSG-403.

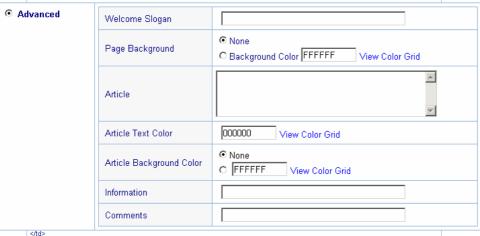


Figure 3-96 Advanced Login Page
Setting Screen

		Close
Item	Default	Description
Welcome Slogan	Welcome	The maximum allowed characters length is 80.
Page Background	None	The page background can be none or specified color. For the
		background color format please views the color grid. The allowed
		format is Hexadecimal.
Article	Empty	The article is allowed the administrator to input a paragraph in the
		subscriber login page for advisement or announcement. The
		maximum character of the article is 1024.
Article Text Color	000000	The article text color can be specified color. For the specified text color
		format please views the color grid. The allowed format is
		Hexadecimal.
Article Background	None	The article background can be specified color. For the background
Color		color format please views the color grid. The allowed format is
		Hexadecimal.
Information	Empty	Allow the administrator to input the text information such like address,
		telephone number and fax information. The maximum character of the
		information is 80.
Comments	Empty	Allow the administrator to input the text comments such like "Pleas
		Contact to our Customer Service Center, EXT 141". The maximum

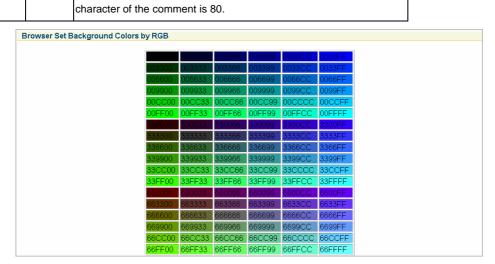


Figure 3-97 Color Gird

Frame

If "Frame" is selected the subscriber login page will be separate into Top Frame and Bottom Frame. Bottom Frame is a default format for username and password input, Top Frame is allowed to be specified a URL to link.



Figure 3-98 Frame Login Page Setting Screen

Item	Default	Description
Top Frame URL Link	Empty	The input format can be http://www.yahoo.com. The maximum
		character of the URL Link is 200.
Bottom Frame	-	This frame will show the standard login page.



Figure 3-99 Example-Login Page Screen

• Logo

This function allows service provider to upload the customer's logo image file which can be shown on the standard login page and account printout of PC-connected printer.

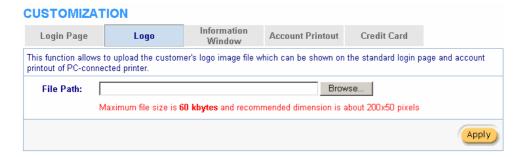


Figure 3-100 Logo Setting Screen

Item	Default	Description
File Path	Empty	Enter the file pathname of the logo file in the File Path field.
Apply	Click Apply	button to save the logo file to system.
Delete	Click Delete	e button to delete the logo file.

CUSTOMIZATION

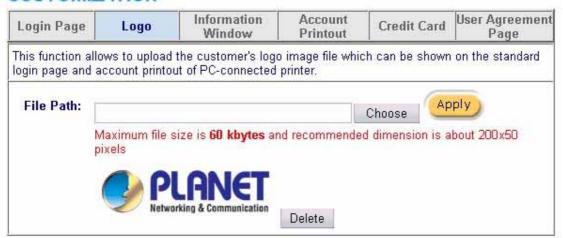


Figure 3-101 Logo Setting Screen



Figure 3-102 Login Page

Information Window

This function allow service provider can decide whether they want an "Information Window" pop-up on subscriber PC when authenticate successful or not and specified text of information window. Subscriber can type "http://1.1.1.1/info" to open the information window again or enter "http://1.1.1.1/logout" to logout immediately if accumulation billing selected.

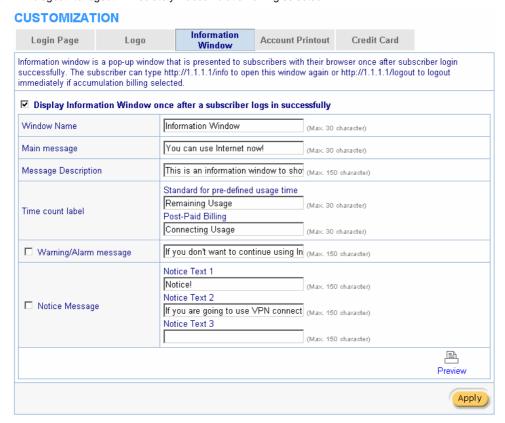


Figure 3-103 Example-Login Page Screen



Figure 3-104 Example-Login Page Screen



Billing Type=Time to Finish Can be replenished by subscriber=Disable

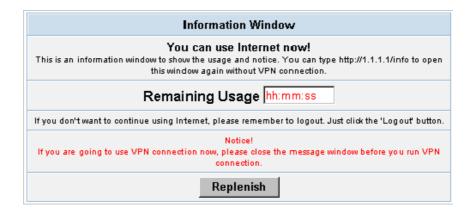


Figure 3-106 Information Window

Billing Type=Time to Finish Can be replenished by subscriber=Enable



Figure 3-107 Information Window

Billing Type=Accumulation

Can be replenished by subscriber=Disable



Figure 3-108 Information Window

Billing Type=Accumulation

Can be replenished by subscriber=Enable

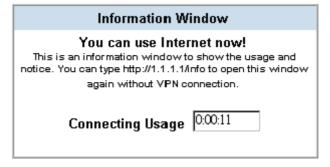


Figure 3-109 Information Window

Super Subscriber Account (Default username="super" & password="super")

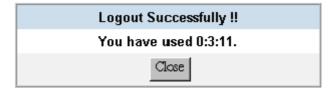


Figure 3-110 Logout Successfully Dialog Box

Billing Type=Accumulation

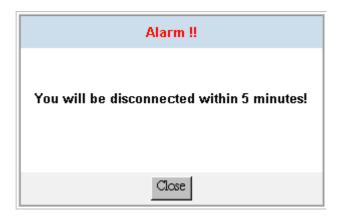


Figure 3-111 Alarm Dialog Box1

Account Printout

This function allow service provider to specified text of account printout.

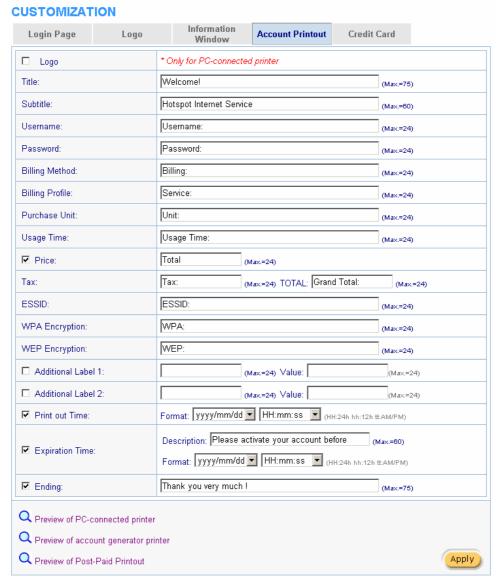


Figure 3-112 Account Printout Customization Setting Screen

Apply Click Apply button to save the new settings.

Click Apply button, the success dialog box appears. Click on Back to return to Account Printout Customization setting screen.



Figure 3-113 Success Dialog Box



Figure 3-114 PC-connected Printer Printout

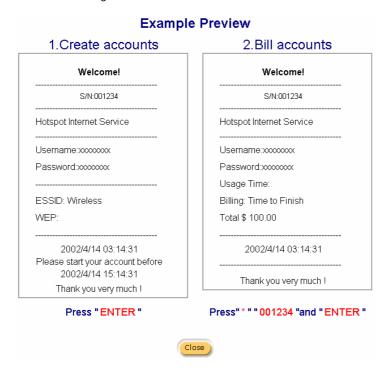


Figure 3-115 Account Generator Printer Printout



Figure 3-116 Account Generator Printer Printout


Credit Card

Standard Login Page

This function allow service provider to customize the additional credit card message for the standard login page.



Figure 3-117 Credit Customization Setting Screen

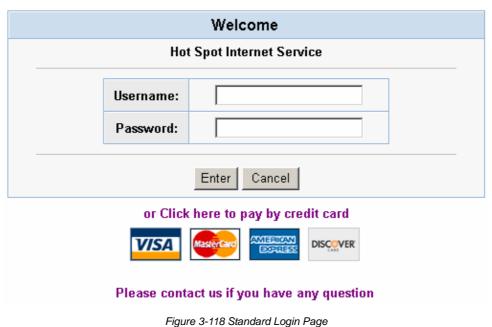

(Enable Credit Card Service=enable)

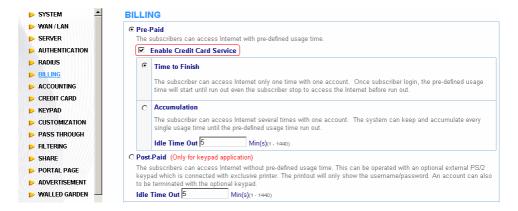


Figure 3-119 Billing Setting Screen

Service Selection Page

This function allow service provider to customize the additional credit card message for the standard login page.

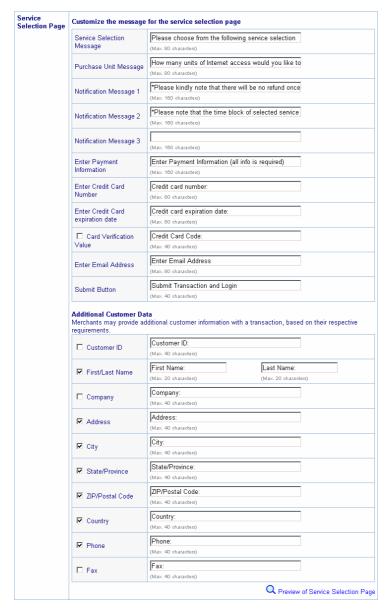


Figure 3-120 Service Selection Page Setting Screen (Authorize.net)

Service Selection Page	Customize the message	for the service selection page
	Service Selection Message	Please choose from the following service selection (Max. 80 characters)
	Purchase Unit Message	How many units of Internet access would you like to (Max. 80 characters)
	Notification Message 1	*Please kindly note that there will be no refund once (Max. 160 characters)
	Notification Message 2	*Please note that the time block of selected service (Max. 160 characters)
	Notification Message 3	(Max. 160 oharaoters)
	Enter Payment Information	Enter Payment Information (all info is required) (Max. 160 characters)
	Enter Credit Card Number	Credit card number: (Max. 80 characters)
	Enter Credit Card expiration date	Credit card expiration date: (Max. 80 characters)
	☐ Card Verification Value	Credit Card Code: (Max. 40 characters)
	Enter Email Address	Enter Email Address (Max. 80 characters)
	Submit Button	Submit Transaction and Login (Max. 40 characters)
	Additional Customer Da Merchants may provide ac requirements.	ta Iditional customer information with a transaction, based on their respective
	☐ First/Last Name	First Name Last Name (Max. 20 characters) (Max. 20 characters)
	☑ Billing Address ZIP code	Billing Address ZIP code (Max. 40 characters)
		Q Preview of Service Selection Page

Figure 3-121 Service Selection Page Setting Screen (iValidate.net)

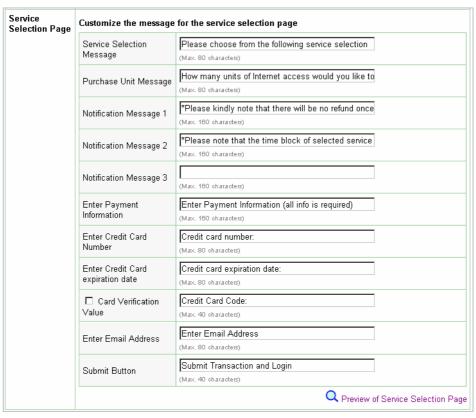


Figure 3-122 Service Selection Page Setting Screen (Secure Pay)

			come			
		Hot Spot Int	ernet Service			
Please	Please choose from the following service selection					
	Service Code	Service Name	Usage Time	Charge		
•	1	30 minutes	30 minutes	1.00		
0	2	1 hour	1 hours	2.00		
0	3	2 hours	2 hours	3.00		
			I you like to purchase?	1 🔻		
Miease ki			onnectivity is confirmed			
Please no		e will be no refund once o ock of selected service is	based on continuous usage.			
	te that the time blo	ock of selected service is	based on continuous usage.			
	Payment Infor	mation (all info is re				
	Payment Infor	ock of selected service is mation (all info is re edit card number:	equired) (all info is required)			
	Payment Infor	mation (all info is redit card number:	based on continuous usage.			
	Payment Infor	ock of selected service is mation (all info is re edit card number:	equired) (all info is required)			
	Payment Infor	mation (all info is redit card number:	equired) (all info is required)			
	Payment Infor	mation (all info is received to card number: d expiration date: ter Email Address	equired) (all info is required)			
	Payment Infor	mation (all info is redit card number: d expiration date: ter Email Address First Name:	equired) (all info is required)			
	Payment Infor	mation (all info is recedit card number: d expiration date: ter Email Address First Name: Last Name: Address: City:	equired) (all info is required)			
	Payment Infor	mation (all info is recedit card number: d expiration date: ter Email Address First Name: Last Name: Address: City: State/Province:	equired) (all info is required)			
	Payment Infor	mation (all info is redit card number: d expiration date: ter Email Address First Name: Last Name: Address: City: State/Province: ZIP/Postal Code:	equired) (all info is required)			
	Payment Infor	mation (all info is recedit card number: d expiration date: ter Email Address First Name: Last Name: Address: City: State/Province:	equired) (all info is required)			

Figure 3-123 Service Selection Page (Authorize.net)

		Welc	ome			
		Hot Spot Inte	net Service			
lease	ease choose from the following service selection					
	Service Code	Service Name	Usage Time	Charge		
•	1	30 minutes	30 minutes	1.00		
0	2	1 hour	1 hours	2.00		
0	3	2 hours	2 hours	3.00		
Please k	indly note that there	will be no refund once co	you like to purchase? nectivity is confirmed. ased on continuous usage.	1 🔻		
Please k	indly note that there	will be no refund once co	nnectivity is confirmed.	1		
Please k Please n	indly note that there ote that the time blo	will be no refund once co	nnectivity is confirmed. ased on continuous usage.	1 💌		
Please k Please n	indly note that there ote that the time blo	will be no refund once co ock of selected service is b	nnectivity is confirmed. ased on continuous usage.	1 💌		
Please k Please n	indly note that there ote that the time blo Payment Inforr Cre	will be no refund once conce of selected service is be mation (all info is rec	nnectivity is confirmed. ased on continuous usage.	1 💌		
Please k Please n	indly note that there ote that the time blo Payment Inforr Cre Credit care	will be no refund once conce of selected service is be mation (all info is recedit card number:	nnectivity is confirmed. ased on continuous usage. uired) (all info is required)	1		
Please k Please n	Payment Inforr Credit care	will be no refund once co ck of selected service is be mation (all info is rec edit card number: d expiration date: ter Email Address	nnectivity is confirmed. ased on continuous usage. uired) (all info is required)	1 💌		
Please k Please n	Payment Inforr Credit care	will be no refund once co ck of selected service is be mation (all info is rec edit card number: d expiration date:	nnectivity is confirmed. ased on continuous usage. uired) (all info is required)	1		

Figure 3-124 Service Selection Page (iValidate.net)

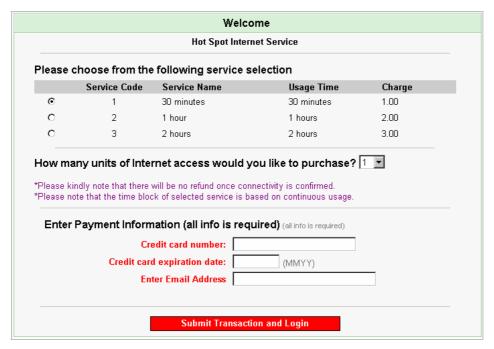


Figure 3-125 Service Selection Page (SecurePay)

Successful Page

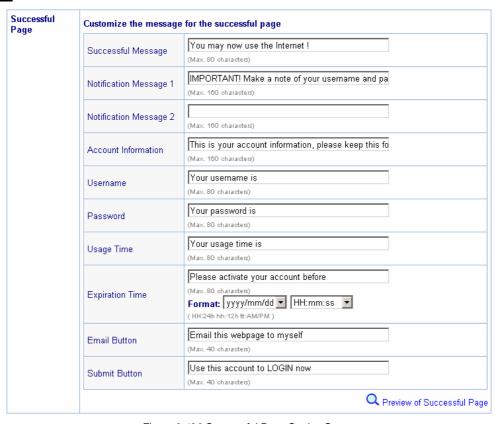


Figure 3-126 Successful Page Setting Screen



Figure 3-127 Example-Successful Page

Fail Page

This function allow service provider to customize the message for the fail page.

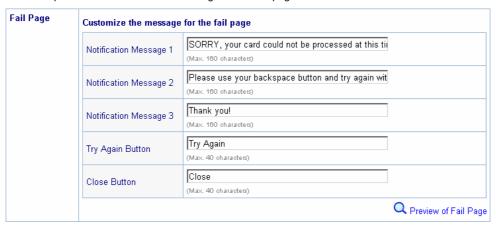


Figure 3-128 Fail Page Setting Screen

Apply Click **Apply** button to save the new settings.

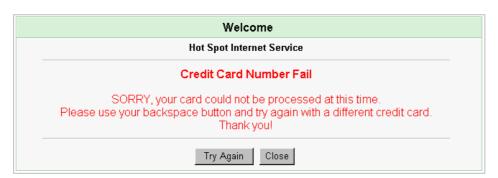


Figure 3-129 Fail Page

Click Apply button, the success dialog box appears. Click on Back to return to Credit Card Customization setting screen.



• User Agreement Page

This function allow user to design user agreement page of Internet Subscriber Server.

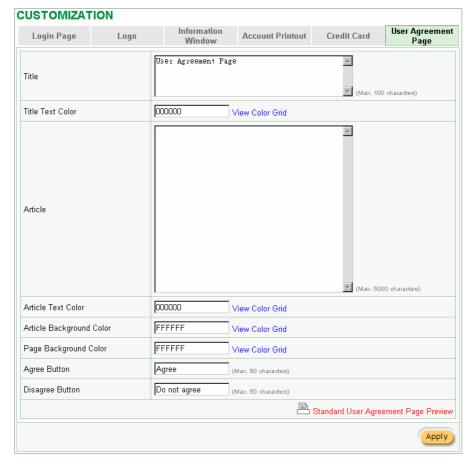


Figure 3-131 User Agreement Page Setting Screen



Figure 3-132 User Agreement Page

3.2.11 Pass Through

This function allow administrator to set some special devices pass through the WSG-403 system. Because some network devices might be constructed under the WSG-403. However these devices needn't be checked and authorized. The WSG-403 provides a pass through list and the administrator can control which devices can be pass through with authentication.

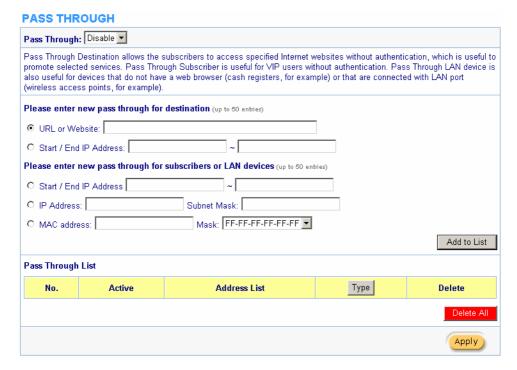


Figure 3-133 Pass through Setting Screen

Item	Default	Description			
Pass Through	Disable	Enables or disables the pass through function.			
Destination URL/IP Address Pass Through					
• URL or Webs	ite:				
URL or Website	Empty	Enter the URL Page; please use this format such like			
		"http://www.yahoo.com". The maximum character of the URL Page			
		is 50.			
⊙ Start / End IF	⊃ Addres	s: ~			
Start IP Address	Empty	Enter the start IP address of you wants pass through.			
End IP Address	Empty	Enter the end IP address of you wants pass through.			
Subscriber IP/MAC	Address	or LAN Device Pass Through			
Start / End IF	^D Addres	es: ~			
Start IP Address	Empty	Enter the start IP address of you wants pass through.			
End IP Address	Empty	Enter the end IP address of you wants pass through.			
⊙ IP Address:		Subnet Mask:			
IP Address	Empty	Enter the IP address of you wants pass through.			
Subnet Mask	Empty	Enter the subnet mask of you wants pass through.			
MAC addres	MAC address: Mask: FF-FF-FF-FF ▼				
MAC Address	Empty	Enter the MAC address of you wants pass through.			
Mask	Empty	Enter the subnet mask of you wants pass through.			

Pass Through List	Display the pass through Information of WSG-403.		
No.	-	The index number of pass through address.	
Active	Disable	Click on check box, active or inactive the pass through address.	
Address List	-	Display the pass through address(s).	
Туре	-	Display the type of pass through address.	
Delete	Disable	Select the check boxes and click 'Delete' to delete the pass through	
		address(s).	

Add to List Click Add to List button to add a new entry.

Apply Click Apply button to save the new settings.

Delete All Click Delete All & Apply button to delete all entries.

Note: The priority of "pass through" is higher than "Filtering".

3.2.12 Filtering

Filtering allows the system administrator to have a list of restricted destinations, which is useful to block specified Internet websites or Intranet areas.

FILTERING



Figure 3-134 Filtering Setting Screen

Item	Default	Description
Filtering	Disable	Enables or disables filtering function.
HTTP Message	The Web Site	Enter the http message. The maximum character of the HTTP
to display when a	is blocked by	message is 200.
website is	System	
blocked		

Warning!!

This Web Site is blocked by System

Back

Figure 3-135 Error Dialog Box

Item	Default	Description		
Restrict Destination				
	osite:			
URL or Website	Empty	Enter the URL Page of you wants to filter; please use this format		
OTTE OF WODOIG	Linpty	such like "http://www.yahoo.com". The maximum character of the		
		URL Page is 50.		
⊙ Start / End	IP Address	× ~		
Start IP Address	Empty	Enter the start IP address of you wants to filter.		
End IP Address	Empty	Enter the end IP address of you wants to filter.		
		Subnet Mask:		
IP Address	Empty	Enter the destination IP address of you wants to filter.		
Subnet Mask	Empty	Enter the destination subnet mask.		
No	-	The index number of filtering address.		
Active	Disable	Click on check box, active or inactive the filtering address.		
Address List	-	Display the filtering address(s).		
Delete	Disable	Select the check boxes and click 'Delete' to delete the filtering		
		address(s).		
Add to List Click Add to List button to add a new entry.				
Click Apply button to save the new settings.				
Delete All Click Poloto All & Apply button to delete all entries				

Note: The priority of "pass through" is higher than "Filtering".

3.2,13 Share

This feature allows sharing the network devices after subscriber successful login.

SHARE Share LAN resource: Disable This feature allows to share the network resource after subscriber successful login. Please enter new sharing LAN resource (up to 50 entries) Resource Name Resource IP Address Resource MAC Address Interface Wired Add to List Restricted Destination List Resource Name IP Address MAC address Interface Delete Active Apply


Figure 3-136 Share Device Setting Screen

Item	Default	Description
Share LAN resource	Disable	Enables or disables share LAN resource function.
Resource Name	Empty	Enter the device name. The maximum character of the
		resource name is 30.
Resource IP Address	Empty	Enter the IP address of device in the format "xxx.xxx.xxx.xxx".
Resource MAC Address	Empty	Enter the MAC address of device. For input the device MAC
		address, please use this format such like"0050BA8D2296".
Interface	Wired	Select the interface.
Share LAN resource List		
No.	-	The index number of share LAN device.
Active	Disable	Click on check box, active or inactive the share LAN device.
Resource Name	-	Display the device name.
IP Address	-	Display the IP address of device.
MAC Address	-	Display the MAC address of device.
Interface	-	Display the interface of device.
Delete	Disable	Select the check boxes and click 'Delete' to delete the share
		device(s).

Note:

- 1. You must use the "Search IP" method to search for a device on the network. Please follow steps below to search your device.
 - F Click Start, and then click Search.

 - PClick "A computer on the network".
 - In Computer, type the IP address of the device you want to find. Click Search.
- 2. The function support only Unicast and IP Protocol.

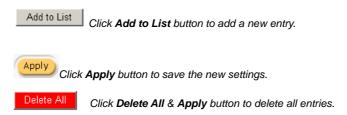

3.2.14 Portal Page

This feature allows redirecting subscriber's browser to a specified portal page after successful login.

PORTAL PAGE This feature allows to redirect subscriber's browser to a specified portal page after successful login. URL Link Apply

Figure 3-137 Portal Page Setting Screen

Item	Default	Description
URL Link	Empty	Enter the URL Link page. The input format can be
		"http://www.yahoo.com". The maximum character of the URL Link is 200.

Apply Click Apply button to save the new settings.

Click Apply button, the success dialog box appears. Click on Back to return to Portal Page setting screen.



Figure 3-138 Success Dialog Box

3.2.15 Advertisement

The system allow service provider to input 10 URL links for advertisement link purpose.

ADVERTISEMENT This feature allows ISP to specify the advertisement URL link. The advertisement Web page will show on the browser when the subscribers start Network access. C Every 0 Frequency One Time Only Min(s) Sequence Randomly Orderly (From 1 to 10) **URL Link 1 URL Link 2 URL Link 3 URL Link 4 URL Link 5 URL Link 6 URL Link 7** URL Link 8 **URL Link 9 URL Link 10** Apply

Figure 3-139 Advertisement URL Link Setting Screen

Item	Default	Description
Frequency	One Time	One Time Only—One Time Only means to send the advertisement link
	Only	once after the subscriber Login.
		Every~Min(s)—The field means to send the advertisement link every
		interval minutes. The value range is 1 to 60 (minutes).
Sequence	Randomly	Randomly—Display the advertisement page in the random order.

		From 1 to 10 —Display the advertisement page in the order as setting.
URL Link	Empty	This function allows the administrator to input ten different websites in the
1~10		table for advertisement. And these 10 websites will display to the
		subscribers at random when the subscribers login in the WSG-403
		system. The input format can be "http://www.yahoo.com". The maximum
		character of the URL Link # is 200.

Apply
Click Apply button to save the new settings.

Click Apply button, the success dialog box appears. Click on Back to return to Advertisement URL Link setting screen.



Figure 3-140 Success Dialog Box

3.2.16 Walled Garden

We prepare ten URL links that allows subscriber to access the specific Web pages even they didn't have a username or password. It's free trying and can use for advertisement.

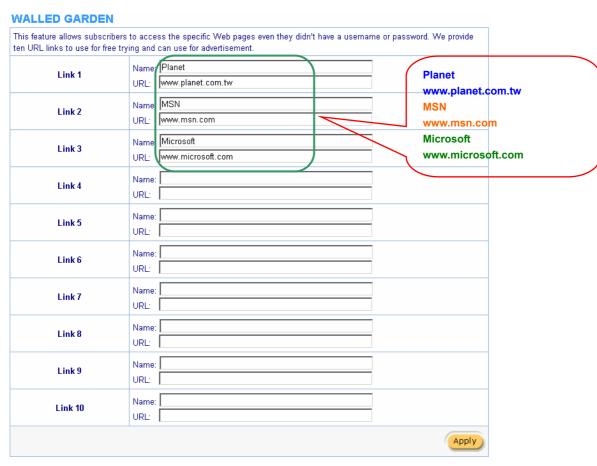


Figure 3-141 Walled Garden

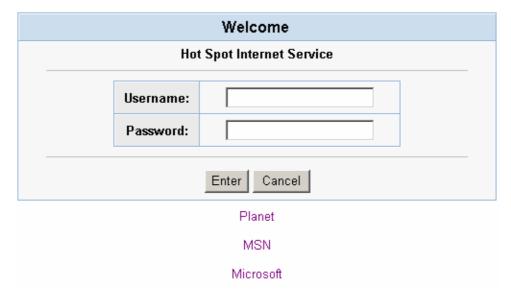


Figure 3-142 Login Page

Item	Description
Link 1~10	
Name	The name is allowed user to set the prompt string in user customize login page. The
	maximum allowed characters length is 80.
URL 1~10	The input format can be "http://www.yahoo.com". The maximum character of the
	Link# is 200.

Click Apply button, the success dialog box appears. Click on Back to return to Walled Garden setting screen.



Figure 3-143 Success Dialog Box

3.2.17 DDNS

The DDNS service (Dynamic Domain Name Service), an IP Registry provides a public central database where information such as email addresses, host names, IP addresses etc. can be stored and retrieved. This solves the problems if your DNS server uses an IP associated with dynamic IP addresses. When the ISP assigns the WSG-403 a new IP, the WSG-403 must inform the DDNS server the change of this IP so that the server can update its IP-to-DNS entry. Once the IP-to-DNS table in the DDNS server is updated, the DNS name for your web server (i.e., xyz.dyndns.org) is still usable.

DDNS

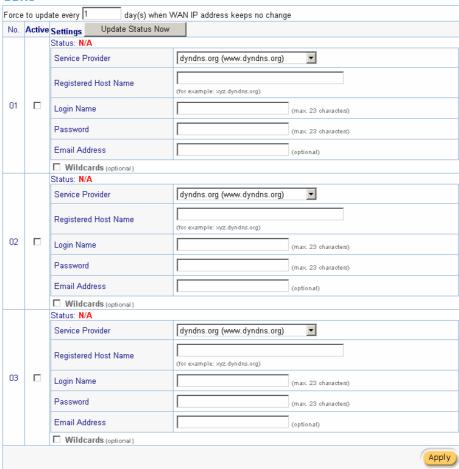


Figure 3-144 DDNS Setting Screen

Item	Default	Description
Force to update every	1 day	Enter a number in the field to set the force update interval
~day(s) when WAN IP		(in days).
address keeps no		
change		
No	01~03	The index number of a DDNS account.
Active	Disable	Click on check box, active or inactive the DDNS record.
Update Status Now	Click the Update S	Status Now button to do manual update.
Settings	Enter the account	information of DDNS Server.
Status	YY/MM/DD	Display the update date, time and status. The Status area
	HH:MM:SS:	shows the update time and current state of the DDNS
		Client.
		N/A—DDNS Client service not installed.
		Update Successfully—DDNS Client service installed;
		service running.
		Update Fail—DDNS Client service installed; service not
		running.
Service Provider	Dyndns.org	Select a DDNS service provider by clicking in the list box.
	(www.dyndns.org)	Note: Before configuring the DDNS settings, you have to

		register a dynamic domain at one of the dynamic domain
		service providers' list box.
Registered Host Name	Empty	Enter the host name of DDNS server. The maximum
		character of the registered host name is 100.
Login Name	Empty	Enter the user name of DDNS server.
Password	Empty	Enter the user password of DDNS server.
Email Address	Empty	Enter your email address. The DDNS Server will e-mail you
		important information once your Internet Name has been
		successfully registered.
Wildcards (optional)	Disable	Enable this function to be able to use
		*.mydomain.dyndns.org and not only
		mydomain.dyndns.org.

Apply Click **Apply** button to save the new settings.

Click **Apply** button, the success dialog box appears. Click on **Back** to return to DDNS setting screen.



Figure 3-145 Success Dialog Box

3.2.18 LAN Devices

Administrator can direct remote control to LAN Devices via the WSG-403 implemented the feature.

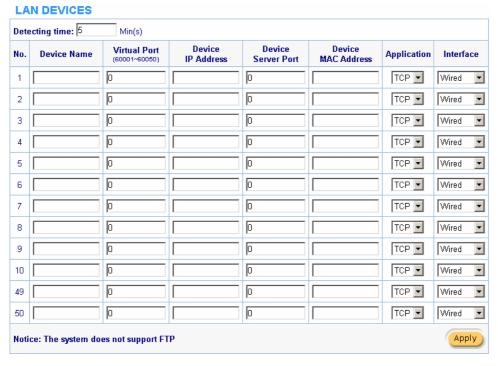


Figure 3-146 LAN Devices Setting Screen

Item	Default	Description
Polling Interval	5 Min.	The default value is 5 minutes. The Polling Interval valid range is 1 to
		1440.
Device Name	Empty	The LAN device name. The maximum character of the device name
		is 20.
Virtual Port	0	The virtual port number valid range is 60001 to 60050 or 5900 to
		5910.
Device IP Address	Empty	Enter the IP address of LAN device in the format "xxx.xxx.xxx"
Device Server Port	0	Enter the server port of LAN device.
Device MAC Address	Empty	The MAC address of LAN device. For input the device MAC
		address, please use this format such like"0050BA8D2296".
Application	TCP	Select one protocol type of LAN device by clicking in the list box.
Interface	Wired	Select one interface of LAN device by clicking in the list box.

Delete All

Click Delete All button to delete all entries.



Click **Apply** button to save the new settings.

Note: The system does not support FTP.

3.2.19 Syslog

The function allows the device to transmit event messages to your syslog server or your email address for monitoring and troubleshooting.

Syslog Setting

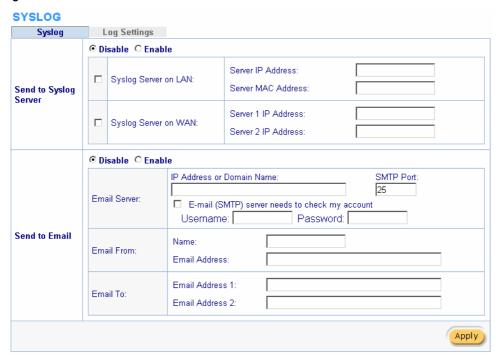


Figure 3-147 Syslog Setting Screen

Item	Default	Description
Syslog	Disable	Enables or disables the syslog server function.
Syslog on LAN		

Server IP Address	Empty	Enter syslog server's IP address. The WSG-403 will send all of its
		logs to the specified syslog server.
Server MAC Address	Empty	Enter the syslog server's MAC address. The WSG-403 will send
		all of its logs to the specified syslog server.
Item	Default	Description
Syslog on WAN		
Server 1 IP Address	Empty	Enter IP address of first syslog server.
Server 2 IP Address	Empty	Enter IP address of second syslog server.
Send to Email	Disable	Enables or disables the send to e-mail function.
E-mail Server		
IP Address or Domain	Empty	Enter the SMTP server IP address or domain name. The
Name		maximum allowed characters length is 50.
SMTP Port	25	The SMTP port allowed range is 25 or 2500 to 2599.
E-mail (SMTP) Server	Disable	If your SMTP server requires authentication before accepting
needs to check my		e-mail, click on check box. These values (username and
account		password) are supplied by your network administrator, SMTP
		server provider or ISP.
Username	Empty	Enter the username for the SMTP server. The maximum allowed
		characters length is 64.
Password	Empty	Enter the password for the SMTP server
Email From		
Name	Empty	Enter the name you would like to appear in the "message from"
		field of your outgoing message. The maximum allowed
		characters length is 20.
Email Address	Empty	Enter your e-mail address. This is the address others will use to
		send email to Email Address 1/Email Address 2.
Email To		
Email Address 1	Empty	Enter your first e-mail address to receive the logs.
Email Address 2	Empty	Enter your second e-mail address to receive the logs.

Apply Click **Apply** button to save the new settings.

Click **Apply** button, the success dialog box appears. Click on **Back** to return to Syslog setting screen.



Figure 3-148 Success Dialog Box

Log Categories

SVSLOG

System				
Syslog	Email	Syslog Name	Description	Interval Time
		System Information	A log including the system information will be sent according to specified interval time	60 minute(s
		System Boot Notice	Once system reboots, the log will be sent	When system reboo
		System Manager Activity Information	A log will be sent if system manager (Administrator, Supervisor or Account Manager) login to or logout from the device	When system manager login or logout
ubscrib	ег			
Syslog	Email	Syslog Name	Description	Interval Time
		Wireless Association Information	A log including wireless users information will be sent according to specified interval time	60 minute(s)
		Logged-in Users	A login users information will be sent according to specified interval time	60 minute(s
Propriet	агу Ассо	ounting		
Syslog	Email	Syslog Name	>Description>	Interval Time
		Account Created	A log will be sent once after an account is created	When an account is created
		Account Activated	A log will be sent once after an account is activated	When an account is activated
		Subscriber Trace	A log including subscribers login/logout time will be sent once after subscriber logout	When subscriber logout
Billing	<u> </u>			
Syslog	Email	Syslog Name	Description	Interval Time
		Billing Log	A log would be sent after a billing log is created	When log created
.AN Dev	ices Ma	inagement Category		
Syslog	Email	Syslog Name	Description	Interval Time
		LAN Devices Information	A log including current LAN Devices Status will be sent according to specified interval time	60 minute(s)
		LAN Devices Alarm	A log will be sent if one of the LAN Devices detected result is "Fail"	When device fail

Figure 3-149 Log Settings Screen

Item	Interval Time	Description
Syslog	Disable	Click on check box, send log information to your syslog
		server.
Email	Disable	Click on check box, send log information to your e-mail
		address.
Item	Interval Time	Description
System		
Syslog Information	60 minutes	The log included system information would be sent according
		to specified interval time.
		Format:
		(Id, Mac Address) (System Uptime, 0 days 00h:04m:00s) (Location Name, Location Name) (WAN, FrameTxOK, FrameRxOK, FrameTxError, FrameRxError) (LAN, FrameTxOK, FrameRxOK, FrameTxError, FrameRxError)
		(Wireless, FrameTxOK, FrameRxOK, FrameTxError,
		FrameRxError)
System Boot Notice	When System	If device have been rebooted, the log would be sent.
	reboot	Format: (Id, MAC Address) (System Up)

When system	A log will be sent if system manager (Administrator,
manager login	Supervisor or Account Manager) login to or logout from the
or logout	device.
	Format:
	(Id, Mac Address) (System Account Activity Information,
	Username, User IP, Status)
	Username: Administrator Supervisor Accounting Operator
	Status: Login Logout Idle Time Out
60 minutes	A log included wireless associated users information would be
	sent according to specified interval time.
	Format:
	(Id, Mac Address) (Wireless Association Information, Number
	of associated users, Start Number, End number) (Signal
	strength, Signal quality, Connection speed, MAC
	address)()()
Interval Time	Description
	A log included logged-in users information would be sent
	according to specified interval time.
	according to opcomed interval time.
	Format:
	Format: (Id, Mac Address) (Logged-in Users, Type, Number of logged-in users, Start Number, End number) (Username, User IP, User MAC, Interface, Login time, RxData count, TxData count)()() Type: Dynamic Super User agreement No Authentication
	(Id, Mac Address) (Logged-in Users, Type, Number of logged-in users, Start Number, End number) (Username, User IP, User MAC, Interface, Login time, RxData count, TxData count)()() Type: Dynamic Super User agreement No Authentication If the type of Logged-in user is Super Subscriber, Username
	(Id, Mac Address) (Logged-in Users, Type, Number of logged-in users, Start Number, End number) (Username, User IP, User MAC, Interface, Login time, RxData count, TxData count)()() Type: Dynamic Super User agreement No Authentication
	(Id, Mac Address) (Logged-in Users, Type, Number of logged-in users, Start Number, End number) (Username, User IP, User MAC, Interface, Login time, RxData count, TxData count)()() Type: Dynamic Super User agreement No Authentication If the type of Logged-in user is Super Subscriber, Username
	(Id, Mac Address) (Logged-in Users, Type, Number of logged-in users, Start Number, End number) (Username, User IP, User MAC, Interface, Login time, RxData count, TxData count)()() Type: Dynamic Super User agreement No Authentication If the type of Logged-in user is Super Subscriber, Username will be "********.
J	(Id, Mac Address) (Logged-in Users, Type, Number of logged-in users, Start Number, End number) (Username, User IP, User MAC, Interface, Login time, RxData count, TxData count)()() Type: Dynamic Super User agreement No Authentication If the type of Logged-in user is Super Subscriber, Username will be "***********. If the build-in account mode is disabled, Username is
J When an	(Id, Mac Address) (Logged-in Users, Type, Number of logged-in users, Start Number, End number) (Username, User IP, User MAC, Interface, Login time, RxData count, TxData count)()() Type: Dynamic Super User agreement No Authentication If the type of Logged-in user is Super Subscriber, Username will be "***********. If the build-in account mode is disabled, Username is
	(Id, Mac Address) (Logged-in Users, Type, Number of logged-in users, Start Number, End number) (Username, User IP, User MAC, Interface, Login time, RxData count, TxData count)()() Type: Dynamic Super User agreement No Authentication If the type of Logged-in user is Super Subscriber, Username will be "***********. If the build-in account mode is disabled, Username is "Anonymous". A log would be sent if account were created. Format:
When an	(Id, Mac Address) (Logged-in Users, Type, Number of logged-in users, Start Number, End number) (Username, User IP, User MAC, Interface, Login time, RxData count, TxData count)()() Type: Dynamic Super User agreement No Authentication If the type of Logged-in user is Super Subscriber, Username will be "***********. If the build-in account mode is disabled, Username is "Anonymous".
When an account is	(Id, Mac Address) (Logged-in Users, Type, Number of logged-in users, Start Number, End number) (Username, User IP, User MAC, Interface, Login time, RxData count, TxData count)()() Type: Dynamic Super User agreement No Authentication If the type of Logged-in user is Super Subscriber, Username will be "***********. If the build-in account mode is disabled, Username is "Anonymous". A log would be sent if account were created. Format: (Id, Mac Address) (Account Create, Type, S/N, Username, Unit, Account usage time, Billing profile information) Type: TimeToFinish Accumulation PostPaid
When an account is	(Id, Mac Address) (Logged-in Users, Type, Number of logged-in users, Start Number, End number) (Username, User IP, User MAC, Interface, Login time, RxData count, TxData count)()() Type: Dynamic Super User agreement No Authentication If the type of Logged-in user is Super Subscriber, Username will be "**********. If the build-in account mode is disabled, Username is "Anonymous". A log would be sent if account were created. Format: (Id, Mac Address) (Account Create, Type, S/N, Username, Unit, Account usage time, Billing profile information) Type: TimeToFinish Accumulation PostPaid Billing profile information: [index, name]
When an account is created.	(Id, Mac Address) (Logged-in Users, Type, Number of logged-in users, Start Number, End number) (Username, User IP, User MAC, Interface, Login time, RxData count, TxData count)()() Type: Dynamic Super User agreement No Authentication If the type of Logged-in user is Super Subscriber, Username will be "**********. If the build-in account mode is disabled, Username is "Anonymous". A log would be sent if account were created. Format: (Id, Mac Address) (Account Create, Type, S/N, Username, Unit, Account usage time, Billing profile information) Type: TimeToFinish Accumulation PostPaid Billing profile information: [index, name] Account usage time: 00:59:59 (example)
When an account is created.	(Id, Mac Address) (Logged-in Users, Type, Number of logged-in users, Start Number, End number) (Username, User IP, User MAC, Interface, Login time, RxData count, TxData count)()() Type: Dynamic Super User agreement No Authentication If the type of Logged-in user is Super Subscriber, Username will be "************. If the build-in account mode is disabled, Username is "Anonymous". A log would be sent if account were created. Format: (Id, Mac Address) (Account Create, Type, S/N, Username, Unit, Account usage time, Billing profile information) Type: TimeToFinish Accumulation PostPaid Billing profile information: [index, name] Account usage time: 00:59:59 (example) A log would be sent if account were activated. Format:
When an account is created. When an account is	(Id, Mac Address) (Logged-in Users, Type, Number of logged-in users, Start Number, End number) (Username, User IP, User MAC, Interface, Login time, RxData count, TxData count)()() Type: Dynamic Super User agreement No Authentication If the type of Logged-in user is Super Subscriber, Username will be "************. If the build-in account mode is disabled, Username is "Anonymous". A log would be sent if account were created. Format: (Id, Mac Address) (Account Create, Type, S/N, Username, Unit, Account usage time, Billing profile information) Type: TimeToFinish Accumulation PostPaid Billing profile information: [index, name] Account usage time: 00:59:59 (example) A log would be sent if account were activated. Format:
When an account is created. When an account is	(Id, Mac Address) (Logged-in Users, Type, Number of logged-in users, Start Number, End number) (Username, User IP, User MAC, Interface, Login time, RxData count, TxData count)()() Type: Dynamic Super User agreement No Authentication If the type of Logged-in user is Super Subscriber, Username will be "***********. If the build-in account mode is disabled, Username is "Anonymous". A log would be sent if account were created. Format: (Id, Mac Address) (Account Create, Type, S/N, Username, Unit, Account usage time, Billing profile information) Type: TimeToFinish Accumulation PostPaid Billing profile information: [index, name] Account usage time: 00:59:59 (example) A log would be sent if account were activated. Format: (Id, Mac Address) (Account Activate, username, user IP, user MAC, Interface)
When an account is created. When an account is activated	(Id, Mac Address) (Logged-in Users, Type, Number of logged-in users, Start Number, End number) (Username, User IP, User MAC, Interface, Login time, RxData count, TxData count)()() Type: Dynamic Super User agreement No Authentication If the type of Logged-in user is Super Subscriber, Username will be "************. If the build-in account mode is disabled, Username is "Anonymous". A log would be sent if account were created. Format: (Id, Mac Address) (Account Create, Type, S/N, Username, Unit, Account usage time, Billing profile information) Type: TimeToFinish Accumulation PostPaid Billing profile information: [index, name] Account usage time: 00:59:59 (example) A log would be sent if account were activated. Format: (Id, Mac Address) (Account Activate, username, user IP, user
When an account is created. When an account is activated	(Id, Mac Address) (Logged-in Users, Type, Number of logged-in users, Start Number, End number) (Username, User IP, User MAC, Interface, Login time, RxData count, TxData count)()() Type: Dynamic Super User agreement No Authentication If the type of Logged-in user is Super Subscriber, Username will be "***********************************
	manager login or logout

time, Usage Time, Time Left, RxData count, TxData count)
Type: TimeToFinish Accumulation PostPaid Super
Event: Finished Replenished Logout Idle-Timeout
Account Expired Deleted
If the type of Subscriber Trace is Super, the Username will be
"******", and S/N will be "*****".
Usage time: 00:59:59 (example)

Subscriber Trace Relationship

Type	Event	Time Left
TimeToFinish	Finished	00:00:00
TimeToFinish	Replenished	00:12:00 to S/Nxxxxxx
TimeToFinish	Deleted	00:12:00
Accumulation	Finished	00:00:00
Accumulation	Replenished	00:12:00 to S/Nxxxxxx
Accumulation	Logout	00:48:00
Accumulation	Idle-Timeout	00:48:00
Accumulation	Deleted	00:48:00
Accumulation	Account Expired	00:48:00
PostPaid	Logout	****
PostPaid	Idle-Timeout	****
PostPaid	Deleted	****
PostPaid	Finished	****
PostPaid	Account Expired	****
Super	Idle-Timeout	****
Super	Deleted	****

Item	Interval Time	Description
Billing		
Billing Log	When log	A log would be sent after a billing log is created.
	created	Format:
		(Id, MAC Address) (Billing Log, Type, S/N, Username, Billing profile information, Units, Usage time, Bill, Payment) Type: TimeToFinish Accumulation PostPaid Billing profile name: [Name] Usage time: "00:59:59" (example) Billing profile information: [index, name] Payment: Cash Credit Card "Credit Card" does not support "PostPaid".
		If Type is "PostPaid", the billing profile information and Units
		will be "*".
Item	Interval Time	Description
LAN Devices Managemer	nt Category	
LAN Devices Information	60 minutes	A log including current LAN Devices Status will be sent
		according to specified interval time.
		Format:
		(Id, MAC Address) (LAN Devices Information, Number of
		devices, Start Number, End number) (Device name,
		Status)()
LAN Devices Alarm	When device	A log will be sent if one of the LAN Devices detected results
	fail	is "Fail".
		Format:
		(Id, MAC Address) (LAN Device Alarm, Device name, FAIL)

Apply Click **Apply** button to save the new settings.

Click **Apply** button, the success dialog box appears. Click on **Back** to return to Logs setting screen.



Figure 3-150 Success Dialog Box

3.2.20 Session Trace

Session Trace is an intelligent function to help service provider to trace every user's access behavior. When "session trace" is enable, the system will collect information such like destination IP, destination port, source IP, source MAC, source port by every user and send the collected information in text format file to specified TFTP server.

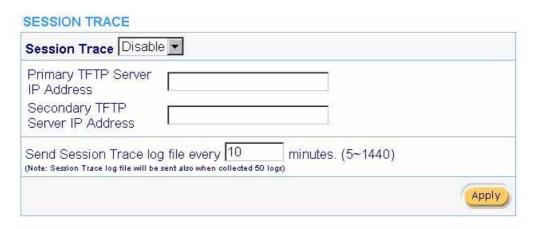


Figure 3-151 Session Trace Setting Screen

Item	Default	Description
Session Trace	Disable	Disables or enables session trace function.
Primary TFTP Server IP	Empty	Enter the IP address of the primary TFTP server.
Address		
Secondary TFTP Server	Empty	Enter the IP address of the second TFTP server.
IP Address		
Send Session Trace log	10 minutes	The field means to send the session trace log file every
file every~ minutes.		interval minutes. The value range is 5 to 1440 (minutes).

3.2.21 Bandwidth

The function enables administrator to limit bandwidth usage on a per user basis (MAC address). That prevents users from consuming a disproportionately large amount of bandwidth so every user gets a fair share of the available bandwidth.

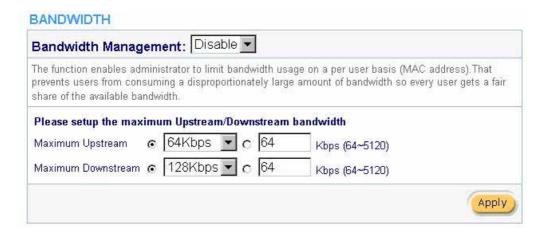


Figure 3-152 Bandwidth Setting Screen

Item	Default	Description
Bandwidth	Disable	Enables or disables Bandwidth Management.
Maximum Upstream	64Kbps	Specify the amount of upstream bandwidth.
Maximum Downstream	128Kbps	Specify the amount of downstream bandwidth.

3.2.22 Secure Remote

This feature allows you to create a secure connection to a remote site or back end system with VPN PPTP Client. If "Secure Remote" is enabled, the RADIUS packet/ syslog will be transferred to this secure connection.

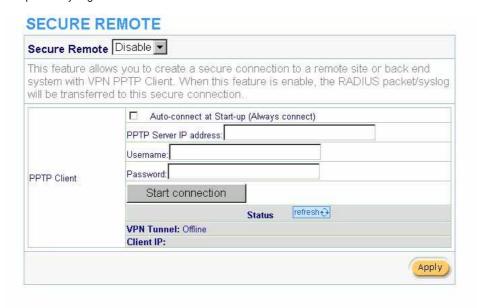


Figure 3-153 Secure Remote Setting Screen

Item	Default	Description
Auto-connect at	Disable	Enable the check box to automatically establish the PPTP
Start-up (Always		connection.
connect)		
PPTP Server IP	Empty	Enter the PPTP server IP address provided by your ISP.
address		
Username	Empty	Enter the user name provided by your ISP. The user name can
		consist of up to 80 alphanumeric characters and is case

		sensitive.
Password	Empty	Enter the user password provided by your ISP. The password
		can consist of up to 80 alphanumeric characters and is case
		sensitive.
Start connection		Click on Start/Stop connection button to start/stop PPTP
		connection.
refresh⊕	Click on refresh button to update the status.	
VPN Tunnel	Display the status.	
Client IP	Display the IP address.	

3.2.23 SNMP

The SNMP Agent Configuration screen enables you to access to your device via Simple Network Management Protocol. If you are not familiar with SNMP, please consult your Network Administrator or consult SNMP reference material. You must first enable SNMP on the SNMP Agent Configuration screen.

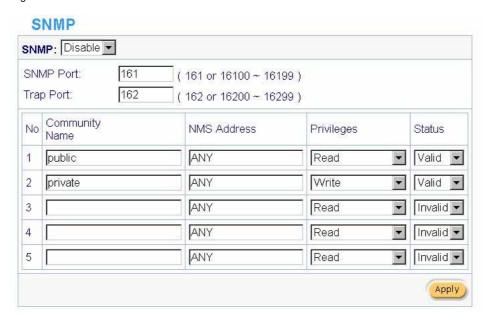


Figure 3-154 SNMP Setting Screen

Item	Default	Description
SNMP	Disable	Disables or enables the SNMP management.
SNMP Port	161	If the SNMP enables, also allowed to specific the SNMP port
Trap Port	162	number via NAT. The allowed SNMP port numbers are 161
		(default), 16100-16199 and Trap port numbers are 162 (default),
		16200-16299. This Port setting is useful for remote control via
		NAT network.
Configuration		
Community Name	public/private	Every unit with SNMP enable must be configured to recognize
		one or more community names up to 20 characters. The default
		setting for the community of entry 1 is "public" and for the entry 2
		is "private" and others are empty.

Item	Default	Description
NMS Address	ANY	The address of the NMS. The default settings for the NMS
		Networking are "ANY".
Privileges	Read/Write	Choose "Read", "Write", "Trap Recipients" and "All" for different
		privileges. The default setting of the entry 2 is "write" and others
		are "read".
Status	Valid/Invalid	Chosen "Valid" or "Invalid". The default setting of entry 1, 2 are
		valid and others are invalid.

3.2.24 Wireless

WIRELESS	
General Settings	ESSID: Wireless
	Channel: 6
	Security: © Disable © WPA
	Group Key Rekeying: per 86400 seconds
	Pre-shared Key: (8~63 characters)
	C Use WPA with RADIUS Server
	Server IP:
	Authentication Port: 1812
	Shared Secret Key:
	O WEP
	⊕ Use Static WEP
	Encryption: © 64 bit C 128 bit
	Mode: HEX ▼
	WEP Key:
	⊙ 1. 0000000000
	C 2. 000000000
	C 3. 0000000000
	C 4. 000000000
	Note:You have to restart the system to apply the WEP settings
	O 802.1X
	Encryption: © 64 bit C 128 bit
	Re-Key Time: 86400 seconds
	Server IP
	Authentication Port: 1812
	Shared Secret Key:
	ss you make sure you understand all the meaning of setting. , You can press "DEFAULT" setting once you made setting changed to cause wireless not work
Beacon Interval	200 (msec, range:1~1000, default:200)
RTS Threshold	2432 (range:256~2432, default:2432)
Fragmentation Threshold	2432 (range:256~2432, default:2432, even number only)
Preamble Type	○ Short Preamble ○ Long Preamble ⊙ Dynamic Preamble
Authentication Method	● Open System C Shared Key C Both
Default	Apply

Figure 3-155 Wireless Setting Screen

Item	Default	Description
General Settings		
		The ESSID is the unique name that is shared among all
ESSID	Wireless	points in a wireless network. It is case sensitive and must not
		exceed 32 characters.
Channel	6	Select the channel ID for wireless connection.
		Select disable to allow wireless station to communicate with
Security	Disable	the device without any data encryption. Select enable to
		enable WPA or WEP data encryption.
WPA Encryption	Wi-Fi Protected /	Access Encryption
		Enter a pre-shared key from 8 to 63 case sensitive ASCII
Pre-shared Key	Empty	characters.
Group Key		
Re-Keying	86400 Seconds	Enter a number in the field to set the force re-keying interval.
Use WPA with Pre-shared Key	Enable	
-	_	Enter a pre-shared key from 8 to 63 case sensitive ASCII
Pre-Shared Key	Empty	characters.
Use WPA with		
RADIUS	Disable	
		Enter the RADIUS server IP address or domain name. The
Server IP	Empty	maximum allowed characters length is 15.
		Enter the authentication port number. The allowed numbers
Authentication Port	1812	are from 0 to 65535.
Share Secret Key	Empty	Enter the RADIUS secret key
WEP Encryption	Wired Equivalent	t Privacy Encryption
Encryption	64 bit	The WSG-403 supports 64-bit or 128 bit WEP encryption.
		Options: HEX (Hexadecimal) and ASCII (American Standard
Mode	HEX	Code for Information Interchange).
		This selects which of the Keys the WSG-403 uses when it
		transmits. You can change the selected encryption key every
		now and then to increase the security of your network.
		Note: You have to configure all WEP keys (1~4), and select
		one of the four WEP key.
=		Enter 5 characters (case sensitive) for ASCII 64-bit WEP
WEP Key	1	Key.
		Enter 10 characters (case sensitive) for Hex 64-bit WEP Key.
		Enter 13 characters (case sensitive) for ASCII 128-bit WEP
		Key.
		Enter 26 characters (case sensitive) for Hex 128-bit WEP
		Key.
<u> </u>	1	1

Item	Default	Description
802.1x	Disable	Enables or disables the 802.1x function.
Encryption	64 bit	The WSG-403 supports 64-bit or 128 bit 802.1x encryption.
Re-key Time	86400 Seconds	Enter a number in the field to set the force re-keying interval.
	_	Enter the RADIUS server IP address or domain name. The
Server IP	Empty	maximum allowed characters length is 15.
		Enter the authentication port number. The allowed numbers
Authentication Port	1812	are from 0 to 65535.
Share Secret Key	Empty	Enter the RADIUS secret key.
Beacon Interval	200	This value valid range is 1 to 1000 indicates the frequency
Deacon interval	200	interval of the beacon.
RTS Threshold	2347	This value valid range is 256-2342. This setting determines the packet size at which the WSG-403 issues a request to send (RTS) before sending the packet. A low RTS Threshold setting can be useful in areas where many client devices are associating with the WSG-403, or in areas where the clients are far apart and can detect only the WSG-403 and not each other.
Fragmentation Threshold	2432	This setting determines the size at which packets are fragmented. Enter a setting ranging from 256 to 2432 bytes. Use a low setting in areas where communication is poor or where there is a great deal of radio interference.
Preamble Type	Long Preamble	The preamble type is a section of data at the head of a packet that contains information the WSG-403 and client devices need when sending and receiving packets. The setting menu allows you to select a long, short or dynamic preamble type.
Authentication Method	Open System	Select open system, shared Key or both. Open System—Allows any device to authenticate and then attempt to communicate with the WSG-403. Using open authentication, any wireless device can authenticate with the WSG-403, but the device can only communicate if its WEP keys match the WSG-403. Devices not using WEP do not attempt to authenticate with a Wireless Service Gateway that is using WEP. Shared Key—During shared key authentication, the WSG-403 sends an unencrypted challenge text string to any device attempting to communicate with the WSG-403. The device-requesting authentication encrypts the challenge text and sends it back to the WSG-403. If the challenge text is encrypted correctly, the WSG-403 allows the requesting device to authenticate. Both the unencrypted challenge and the encrypted challenge can be monitored, however, which leaves the WSG-403 open to attack from an intruder who calculates the WEP key by comparing the unencrypted and encrypted text strings. Because of this weakness, shared key authentication can be less secure than open authentication. Both—With this setting wireless stations can communicate with or without data encryption.



Click Apply button, the restart dialog box appears. Click on Apply to restart the system.



Figure 3-156 Restart Dialog Box

Default This operation will load the default manufacturer configuration to the system. All this page

(Wireless) configuration setup will be replaced by default settings.

3.2.25 Account Generator

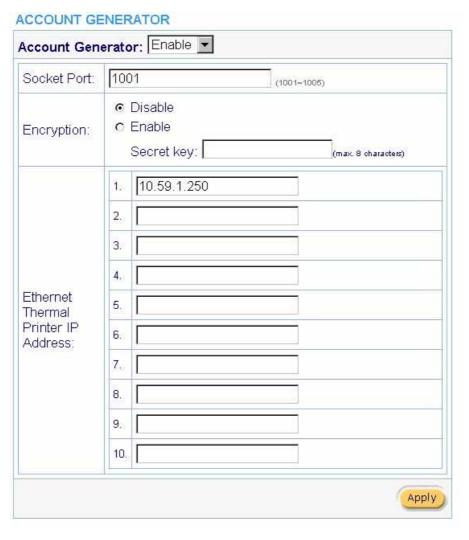


Figure 3-157 Account Generator Printer Setting Screen

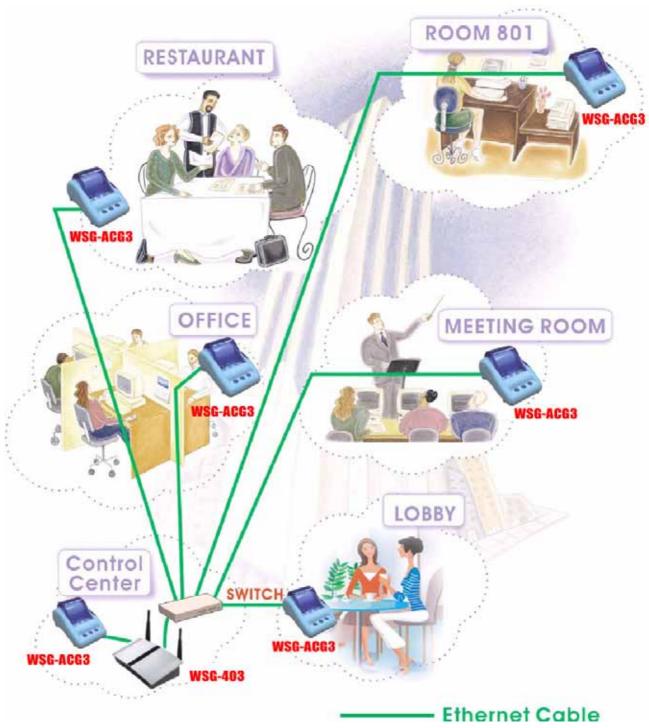


Figure 3-158 Application

3.3 System Status

Display WSG-403 system basic status, including,

- 1. System
- 2. Account List
- 3. Account Log
- 4. Current User
- 5. DHCP Clients
- 6. Session List
- 7. LAN Devices

- SYSTEM
- ACCOUNT LIST
- ACCOUNT LOG
- CURRENT USER
- DHCP CLIENTS
- SESSION LIST
- LAN DEVICES

3.3.1 System

The System Information Menu displays current system basic information including the service connection message, host name, LAN, WAN, DHCP Configuration, DNS, E-mail Redirection, SSL Certificate, network traffic Information and the system firmware version number.

EM			
the detailed system	m information		
Service	Internet Connection	ок	
	Wireless Service	ОК	
	System Name	Richard	
	Domain Name	planet.com.tw	
	Firmware Version	1.00.03	
	Wireless Version	1.0.4	
System	Bootrom Version	1.02	
	WAN MAC Address	00:90:0E:01:11:C5	
	LAN MAC Address	00:90:0E:01:11:C4	
	System Time	2004/12/9 18:52:04	
	System Up Time	00D:02H:58M:55S	
LANID	IP Address	192.168.0.1	
LAN IP	Subnet Mask	255.255.255.0	
	WAN Port Mode	Static IP	
WAN IP	IP Address	210.66.155.89	
WANTP	Subnet Mask	255.255.255.224	
	Gateway IP address	210.66.155.94	
DNO.	Primary DNS Server	139.175.252.16	
DNS	Secondary DNS Server	168.95.1.1	
	DHCP Status	Server	
DUCD	Start IP Address	192.168.0.2	
DHCP	End IP Address:	192.168.0.254	
	Lease Time	300	
Wireless	ESSID	Wireless	
	Channel	6	
	Secure Mode	Disable	
E-Mail			

Figure 3-160 System Status Screen



Figure 3-161 System Status Screen

3.3.2 Account List

You can display a list of all the account information on this device. This table includes the username, password, usage time, time created, login time, expiration time and status.



Figure 3-162 Account List

refresh++

Click on refresh button to update the account list page.



Click the column button to sort the column in ascending/descending order.

Delete

Select the check boxes and click 'Delete' to delete the accounts.

Delete All

Delete all accounts in account list.

Note: This page will refresh automatically every 5 minutes.

3.3.3 Account Log

The account log shows the accounts' log information.

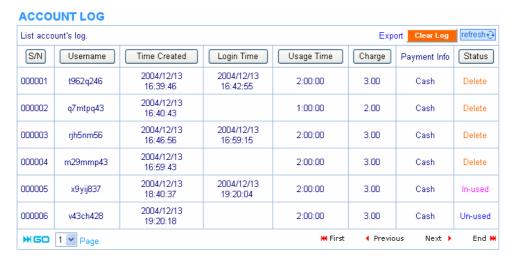


Figure 3-163 Account Log

Export


This allow you to export the account logs to a text file format. (export.log)

Clear Log

Click on Clear Log to remove all account log entries.

refresh 🕀

Click on refresh button to update the account log page.

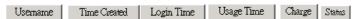

Click the column button to sort the column in ascending/descending order.

3.3.4 Current User

Display the current logged-in subscribers' status. It allow service provider to disconnect any subscribers.



Figure 3-164 Current User List



Figure 3-165 Current User List (super account)


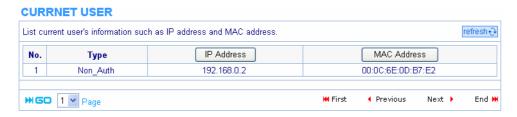


Figure 3-166 Current User List (No Authentication)

refresh⊕

Click on refresh button to update the current user list page.

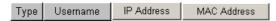

Click the column button to sort the column in ascending/descending order.

Disconnect

Select the check boxes and click 'Disconnect' to disconnect accounts.

Disconnect All

Disconnect all accounts in current user list.

3.3.5 DHCP Clients

The DHCP client table shows the current DHCP users on the LAN.

DHCP CLIENTS DHCP Client's Information, including assigned IP address and MAC address. No. MAC Address IP Address 1 00:0C:6E:0D:B7:E2 192.168.0.2 2 00:0F:EA:61:37:98 192.168.0.3

Figure 3-167 Current User Screen

3.3.6 Session List

The remote site administrator could monitor the real time usage status of WSG-403 via this page.

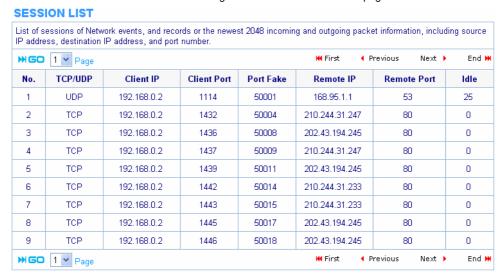


Figure 3-168 Session List Screen

3.3.7 LAN Devices

You can manage all devices by clicking on device name to access device's Web-based interface.

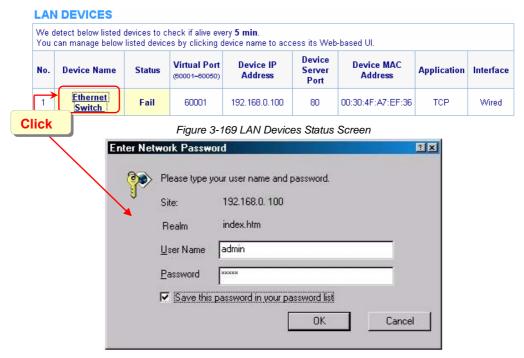


Figure 3-170 Example- Ethernet Switch Management Screen

3.4 System Tools

This allows service provider or administrator to process Firmware upgrade, change password and backup or restore configuration.

- 1. Configuration
- 2. Firmware
- 3. Boot Code
- 4. System Account
- 5. SSL Certificate
- 6. Ping Command
- 7. Restart
- 8. Logout



Figure 3-171 System Tools Item

113

3.4.1 Configuration

Use the Configuration item to save, restore or reset configuration parameters of the WSG-403.

CONFIGURATION	
This feature can backup the system configuration from this device to your PC or restore your stored system config device.	uration to this
Васкир	
Click Backup to backup the system configuration from this device to your computer or to the remote TFTP server.	
Remote TFTP Server IP Address: File Name:	Apply
Restore	
To restore your stored system configuration to this device.	
Local PC File Path: Browse	Apply
Remote TFTP Server IP Address: File Name:	Apply
Reset the system back to factory defaults	
☐ Keep subscriber profile	Apply

Figure 3-172 Configuration Setting Screen

Item	Default	Description
Backup	Click it to save the system configuration to your computer. (export.cfg)	
Remote TFTP Server IP	Empty	Enter the IP address of TFTP Server.
Address		
File Name	Empty	Enter the file name in the File Name field.
Restore	Click it to restore your system configuration.	
Local PC File Path	Empty	Enter the file pathname of the system configuration file in the
		Local PC File Path field.
Remote TFTP Server IP	Empty	Enter the IP address of TFTP Server.
Address		
File Name	Empty	Enter the file name in the File Name field.
Reset the system back	Erase all setting and back to factory setting.	
to factory defaults		
Keep subscriber profile	Disable	Click the keep subscriber profile to change all the parameters
		into factory setting but still reserve the subscriber profiles.

3.4.2 Firmware Upgrade

The Firmware Upgrade menu loads updated firmware to be permanent in flash ROM. The download file should be a binary file from factory; otherwise the agent will not accept it. After downloading the new firmware, the agent will automatically restart it.

Manual Firmware Upgrade

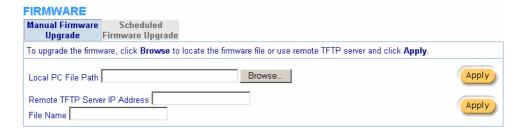


Figure 3-173 Manual Firmware Upgrade Setting Screen

Item	Default	Description
This allow administrator to upgrade the firmware via HTTP.		
Local PC File Path	Empty	Enter the file name and location in the Local PC File Path
		field.
This allows administrator use TFTP server to upgrade firmware.		
Remote TFTP Server IP	Empty	Enter the IP address of TFTP Server.
Address		
File Name	Empty	Enter the file name in the File Name field.

Note:

- 1. Before downloading the new firmware, users must save the configuration file for restore configuration parameters of the device.
- 2. Do not turn the power off during the upgrade process. This will damage the unit.

• Scheduled Firmware Upgrade

Scheduled Firmware Upgrade is a program that enables an automatic upgrade to the latest firmware version through the TFTP server.

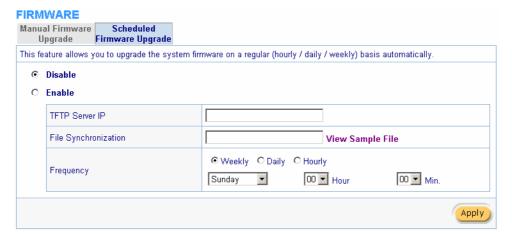


Figure 3-174 Scheduled Firmware Upgrade Setting Screen

Item	Default	Description
Disable/Enable	Disables or enables the scheduled firmware upgrade function.	
TFTP Server IP	Empty	Enter the IP address of TFTP Server.
File Synchronization	Empty	Enter the file name and location in the File
		Synchronization field.
View Sample File	Click the button to	o display synchronization file example.
Frequency	Weekly	Set the firmware upgrade time. The default value is
		"Weekly".



Figure 3-175 Synchronization File Sample Code

Note: Do not turn the power off during the upgrade process. This will damage the unit.

3.4.3 Boot Code

BOOT CODE To upgrade the Boot Code, click **Browse** to locate the file and click **Apply**Local PC file Path Apply

Figure 3-176 Boot Code Upgrade Setting Screen

3.4.4 System Account

Use the System Account screen to change the system accounts.

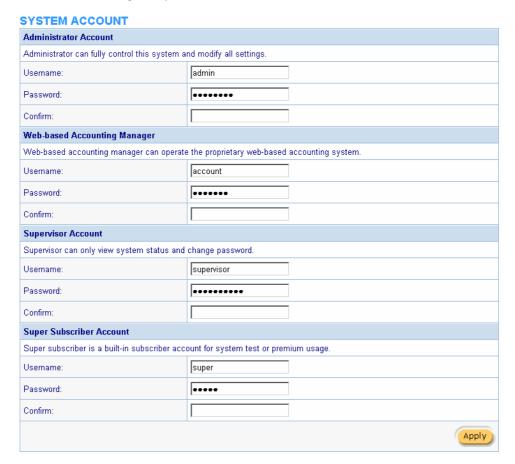


Figure 3-177 System Account Setting Screen

Item	Description
Username	The username can consist of up to 20 alphanumeric characters and is sensitive.
Password	The password can consist of up to 20 alphanumeric characters and is sensitive.
Confirm	The password for confirmation.
Super Subscriber	Disables or enables the super account function.
Idle Time Out	The user idle time out valid is 1 to 1440 minutes. If the idle time out is set as 5
	minutes, it means if the account doesn't send packet in 5 minutes, the account
	will logout automatically.

Administrator Account

Step 1: Start your Web browser and enter the factory default IP address 10.59.1.1 in your browser's location box. Press Enter.



Figure 3-178 Web Browser Location Field (Factory Default)

Step 2: The WSG-403 configuration main menu will appear. Enter **admin** (default) as the Username and **admin** (default) as the password and click **Login**. If you are first time setting the system, the wizard setup screen will appear.



Figure 3-179 Administrator Account Login Screen (First Time) Or

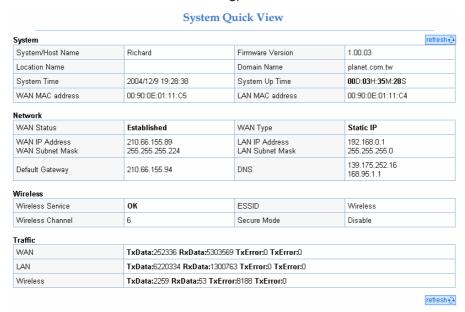


Figure 3-180 System Quick View

Web-Based Accounting Manager

Step 1: Start your Web browser and enter the factory default IP address 10.59.1.1 in your browser's location box. Press Enter.



Figure 3-181 Web Browser Location Field (Factory Default)

Step 2: The WSG-403 configuration main menu will appear. Enter **account** as the Username and **account** as the password and click **Login**

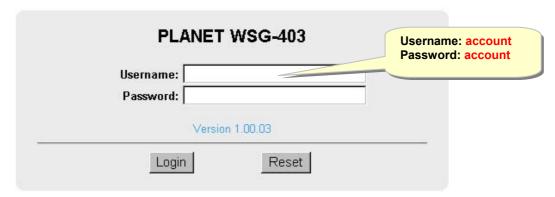


Figure 3-182 Web-Based Accounting Manager Login Screen

Step 3: After a valid user name and password have been provided, the account Generator Panel homepage will appear.



Figure 3-183 Account Generator Panel

Supervisor Account

Step 1: Start your Web browser and enter the factory default IP address 10.59.1.1 in your browser's location box. Press Enter.



Figure 3-184 Web Browser Location Field (Factory Default)

Step 2: The WSG-403 configuration main menu will appear. Enter **supervisor** as the Username and **supervisor** as the password and click **Login**.

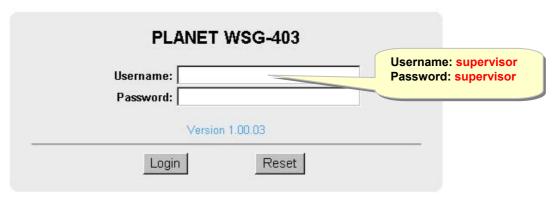


Figure 3-185 Supervisor Account Login Screen

Step 3: After a valid user name and password have been provided, the WSG-403 configuration homepage will appear.



Figure 3-186 System Status Screen

Super Subscriber Account

Start your Web Browser; a subscriber login page will appear. Enter **super** as the Username and **super** as the password and click **Enter**, you can use Internet now.



Figure 3-187 Subscriber Login Page

3.4.5 SSL Certificate

The function allows you to download the registered CA certificate into the WSG-403.



Figure 3-188 SSL Certificate Download Setting Screen

Note: The password field must the same as the CA's registered password.

3.4.6 Ping Command

The Ping function can check the WSG-403 networking connective or not.

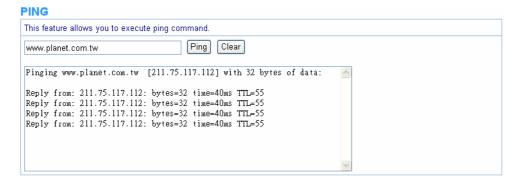


Figure 3-189 Ping Command Screen

Item	Description
IP or URL	Enter the IP address or the URL link.

3.4.7 Restart

If your WSG-403 is not operating correctly, you can choose this option to display the restart WSG-403 screen. Clicking the apply button restart the WSG-403, with all of your settings remaining intact.

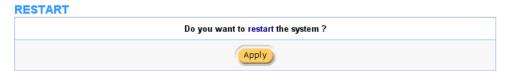


Figure 3-190 Restart Screen

3.4.8 Logout

If you would like to leave the configuration page, please click apply to exit.



Figure 3-191 Logout Screen


Appendix A Signal Connection Arrangements

RJ-45 Ethernet Port

The WSG-403 RJ-45 Ethernet port can connect to any networking devices that use a standard LAN interface, such as a Hub/Switch Hub or Router. Use unshielded twisted-pair (UTP) or shield twisted-pair (STP) cable to connect the networking device to the RJ-45 Ethernet port.

Depending on the type of connection, 10Mbps or 100Mbps, use the following Ethernet cable, as prescribed.

10Mbps: Use EIA/TIA-568-100-Category 3, 4 or 5 cable.

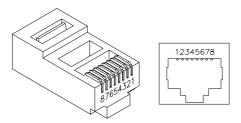

100Mbps: Use EIA/TIA-568-100-Category 5 cable.

Figure A-1 RJ-45 Connector and Cable Pins

Note: To prevent loss of signal, make sure that the length of any twisted-pair connection does not exceed 100 meters.

Appendix B Regulations/EMI Compliance

FCC Regulatory Statement

Part 15-Class B compliant device

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including that which may cause undesired operation.

This equipment has been test and found to comply with the limits for a computing device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1. Reorient or relocate the receiving antenna.
- 2. Increase the separation between the equipment and receiver.
- 3. The equipment and the receiver should be connected the outlets on separate circuits.
- 4. Consult the dealer or an experienced radio/television technician for help.

Changes or modification not expressly approved be the party responsible for compliance could void the user's authority to operate the equipment.

LIMITED WARRANTY

WSG-403

What the warranty covers:

We warrant its products to be free from defects in material and workmanship during the warranty period. If a product proves to be defective in material or workmanship during the warranty period, we will at its sole option repair or replace the product with a like product with a like product. Replacement product or parts may include remanufactured or refurbished parts or components.

How long the warranty is effective:

The Easy Hotspot Kit is warranted for one year for all parts and one year for all labor from the date of the first consumer purchase.

Who the warranty protects:

This warranty is valid only for the first consumer purchaser.

What the warranty does not cover:

- 1. Any product, on which the serial number has been defaced, modified or removed.
- 2. Damage, deterioration or malfunction resulting from:
 - a. Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification, or failure to follow instructions supplied with the product.
 - b. Repair or attempted repair by anyone not authorized by us.
 - c. Any damage of the product due to shipment.
 - d. Removal or installation of the product.
 - e. Causes external to the product, such as electric power fluctuations or failure.
 - f. Use of supplies or parts not meeting our specifications.
 - g. Normal wears and tear.
 - h. Any other cause that does not relate to a product defect.
- 3. Removal, installation, and set-up service charges.

How to get service:

- 1. For information about receiving service under warranty, contact our Customer Support.
- 2. To obtain warranted service, you will be required to provide (a) the original dated sales slip, (b) your name, (c) your address (d) a description of the problem and (e) the serial number of the product.
- 3. Take or ship the product prepaid in the original container to your dealer, and our service center.
- 4. For additional information, contact your dealer or our Customer Service Center.

Limitation of implied warranties:

THERE ARE NOWARRANTIED, EXPRESSED OR IMPLIED, WHICH EXTEND BEYOND THE DESCRIPTION CONTAINED HEREIN INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Exclusion of damages:

Our LIABILITY IS LIMITED TO THE COST OF REPAIR OR REPLACEMENT OF THE PRODUCT. We SHALL NOT BE LIABLE FOR:

- 1. DAMAGE TO OTHER PROPERTY CAUSED BY ANY DEFECTS IN THE PRODUCT, DAMAGES BASED UPON INCONVENCE, LOSS OF USE OF THE PRODUCT, LOSS OF TIME, LOSS OF PROFITS, LOSS OF BUSINESS OPPORTUNITY, LOSS OF GOODWILL, INTERFERENCE WITH BUSINESS RELATIONSHIPS, OR OTHER COMMERCIAL LOSS, EVEN IF ADVISED OF THE POSSIBLITY OF SUCH DAMAGES.
- 2. ANY OTHER DAMAGES, WHETHER INCIDENTAL, CONSEQUENTIAL OR OTHERWISE.
- 3. ANY CLAIM AGAINST THE CUSOMER BY ANY OTHER PARTY.