

VIP-158 to VIP-158 connection via IP address:

Assuming there are two VIP-158 in the network the IP address are 192.168.0.1 and 192.168.0.2

VIP-158-A
LAN IP address
(192.168.0.1)



VIP-158-B
LAN IP address
(192.168.0.2)




STEP 1:

Pick up telephone handset of VIP-158-A and dial "**192.168.0.2#**". Then the phone of VIP-158-B should ring. You can do the same thing to the VIP-158-B.

Hint

- If the IP address of the remote calling party is known, you may directly make calls by preset number via its IP address and end with "#".
- If the Telephone Adapter is installed behind a NAT/firewall/ IP sharing device, please make sure the NAT device support SIP applications before making calls.

How to register your VIP-158 to PLANET IP PBX System

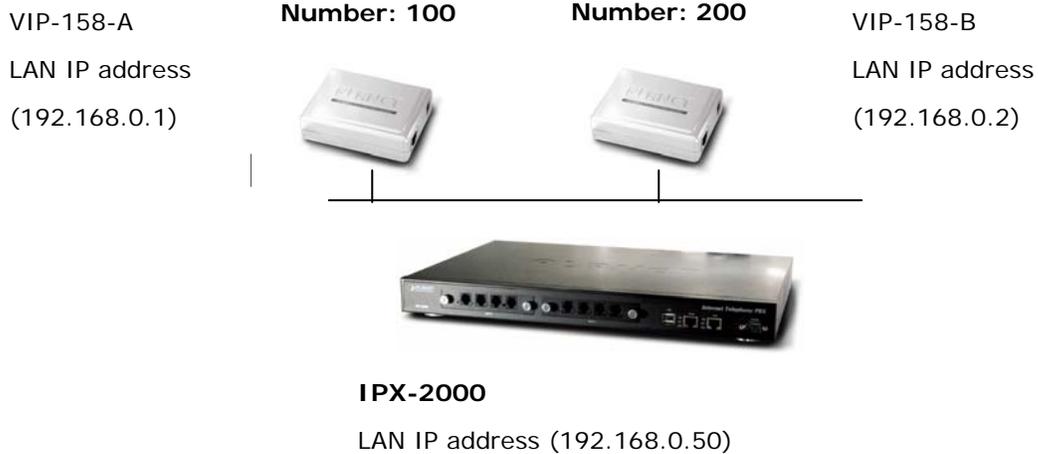

STEP 1:

Log in IPX-2000 and create two testing accounts/password: **100 / 123** (for VIP-158-A), and 200 / 123 (for VIP-158-B) for the voice calls.

STEP 2:

Please log in VIP-158-A via web browser, find to the **SIP** item. In the setting page, please insert the account/password information obtained from your service provider (in this sample, we're using PLANET IPX-2000 as the IP PBX server for SIP account, call authentications), and then the sample configuration screen is shown below:

SIP	
Server	192.168.0.50
Server Port	5060
SIP Port	5060
SIP Name	100
Username	100
Password	●●●
Register Expires	1800
Register Alive	0
Registrar	100
STUN Enable	Disable <input type="button" value="v"/>
STUN Server	
Register Status	OK
Phone Status	IDLE



PLANET Technology Corporation

11F, No. 96, Min Chuan Road, Hsin Tien, Taipei, Taiwan, R.O.C.
Tel: 886-2-2219-9518 Fax: 886-2-2219-9528
Email: sales@planet.com.tw Web site: <http://www.planet.com.tw>
VoIP Gateway: vip.planet.com.tw

*Planet reserves the right to change specifications without prior notice.
All brand names and trademarks are property of their respective owners.
Copyright (c) 2006 PLANET Technology Corp. All rights reserved*

STEP 3:

Repeat the same configuration steps on VIP-158-B, and check the machine registration status, make sure the registrations are completed.

STEP 4:

To verify the VoIP communication, please pick up the telephone. Dial the destination number to make call between SIP clients. For example, VIP-158-A (with number 100) with keypad number 200 to VIP-158-B, or reversely makes calls from SIP client (VIP-158-B) to the number 100 (VIP-158-A).

**PLANET Technology Corporation**

11F, No. 96, Min Chuan Road, Hsin Tien, Taipei, Taiwan, R.O.C.

Tel: 886-2-2219-9518 Fax: 886-2-2219-9528

Email: sales@planet.com.tw Web site: <http://www.planet.com.tw>

VoIP Gateway: vip.planet.com.tw

*Planet reserves the right to change specifications without prior notice.
All brand names and trademarks are property of their respective owners.
Copyright (c) 2006 PLANET Technology Corp. All rights reserved*