

802.11 b/g Smart Wi-Fi Phone


VIP - 191 FWD SIP Server Install Procedure



Scenarios explain: SIP Proxy Mode


We're using the free SIP proxy server <http://www.pulver.com/fwd> to perform the calling party.

Please refer to the following descriptions and insert proper SIP registration information into the VIP-191 for establish the voice communications.

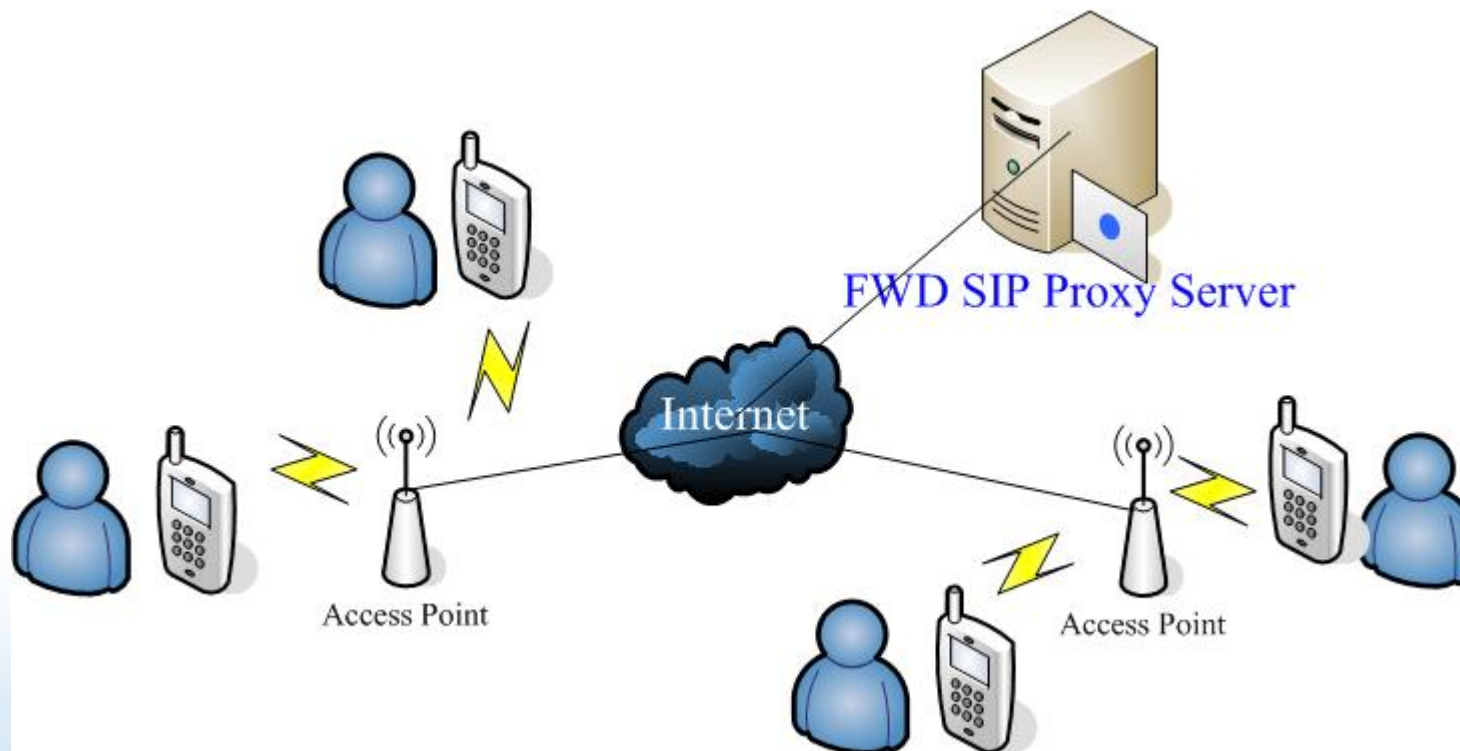

From the Main Screen, press the Left Button (**Menu**) and select **1. AP Connection**.

1

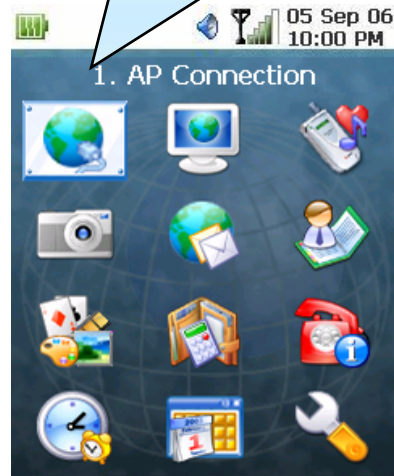


OK

Cancel


Once an AP is highlighted, press the Right (**Select**) key and the following screen of the AP settings will appear:

2

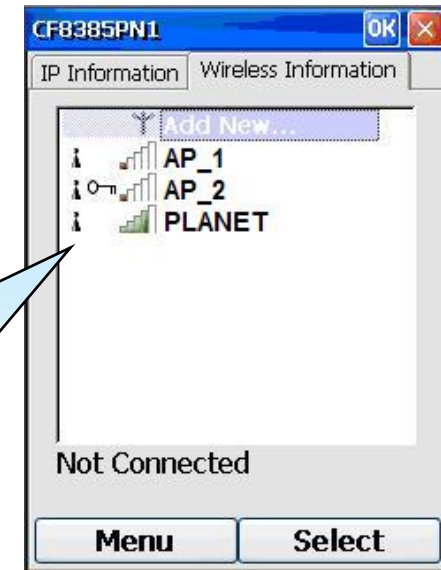

Note:

- 1) Please be reminded: if the VIP-191 is located behind Firewall device, please be sure to check if the Firewall device supports SIP application, please perform the necessary configurations on the device to enable the SIP traffic.
- 2) A SIP server is usually located at another network. In other words, if there is a router between the phone and the SIP server, you need to enable the **uPnP** feature in the router.

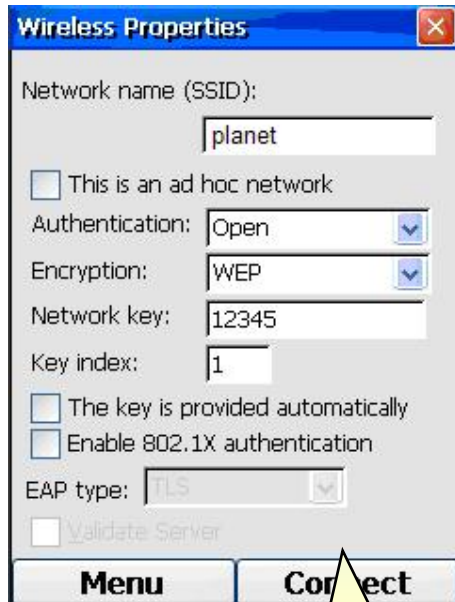



3

Pressing on the Right (**Connect**) key will have the phone tried to connect to the selected AP.

Make sure the **VIP-191** is connected to an AP.

4

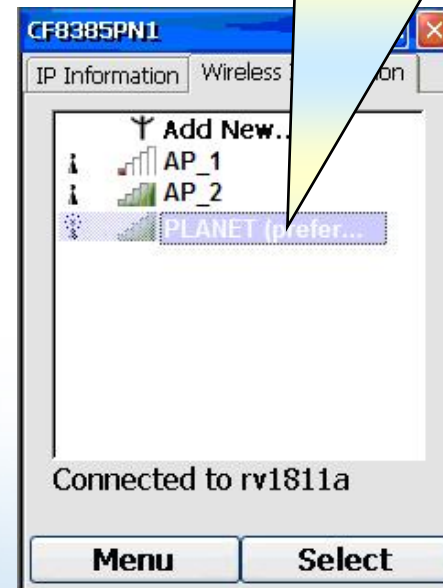

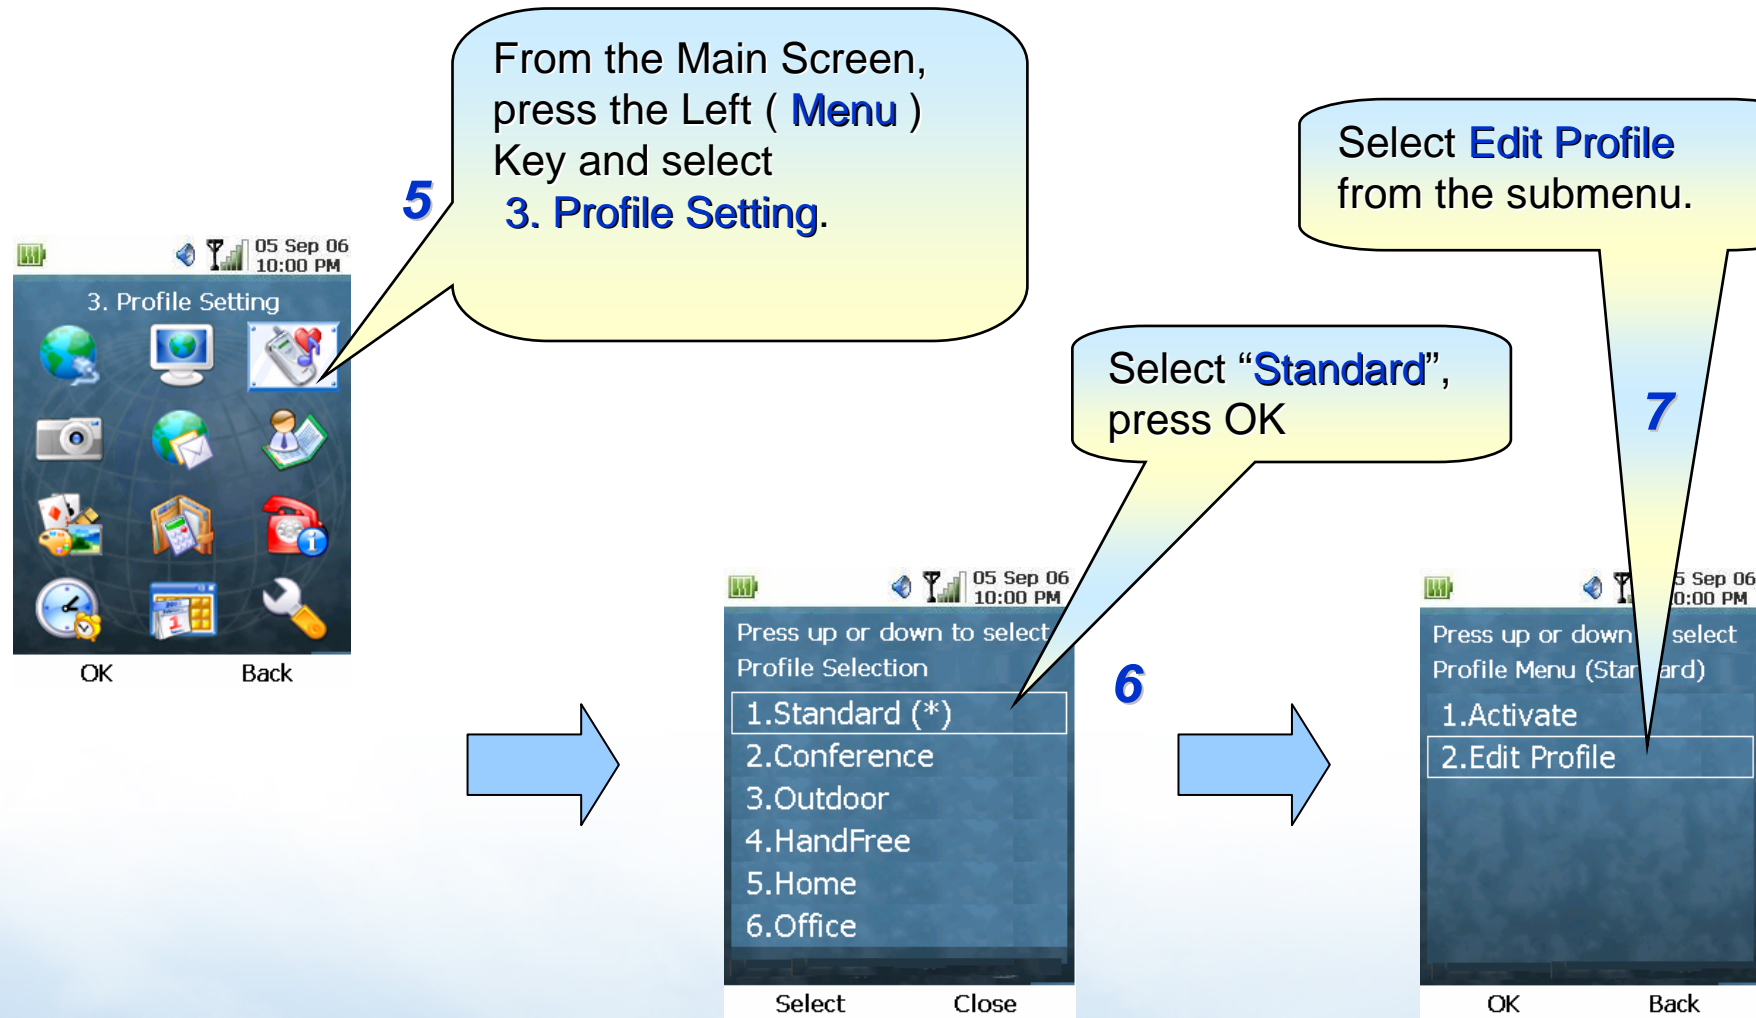

When filling in the Account Password the character will display on the top left corner of screen.

After select **SIP Account**, press **OK** and fill in the corresponding information. Usually the fields that need to be filled are:

My Phone Number: **882@fwdnat.pulver.com**

SIP Server : **fwdnat.pulver.com**

(i.e. domain name or IP address of SIP server)

Account Name : **882**

Account Password : **12345**

At any point during filling out this information, pressing the Right Key (**Next**) will display the next page screen.



05 Sep 06
10:00 PM

k

Account Password: Items 7-8

Account Password:


SIP Transport:
UDP

Mode:
Manual

Input Method Menu

Note:

- 1) The SIP standard requires you to include the "@" sign and the SIP server domain in the My Phone Number field.
- 2) In the "SIP Transport: (UDP)" & "Mode: (Manual)" filed is not able to change the default settings for connect to a SIP server.

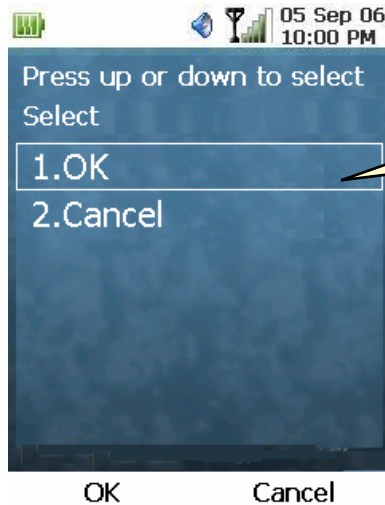


9

Press the Left (**OK**) key to save the information.

Selecting **Activate** and pressing the (**Left Key**) will attempt to connect to the specified SIP server.

10

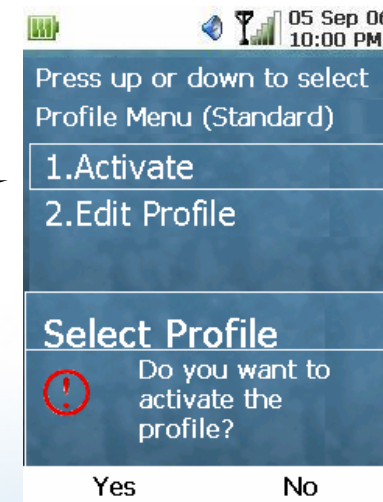

If connection is successful, the number returned from the SIP server will be displayed on the Main Screen (replacing the words "Windows CE")

11



Note 1:

When Registered success, you can try dial **613**, connect to **FWD ECHO TEST**, to test the SIP communication.

Step 1. Press the telephone keypad, input **613**

Step 2. You can hear around three times back tone.

Step 3. Then you'll hear the echo test voice.

Note 2:

The mentioned parameters and network settings in this sample should be carefully modified to meet the real-world applications.

ACTIVATING IP POWER

