


VIP-154T to VIP-154T connection via IP address:

Assume there are two VIP-154T's in the network the IP address are 192.168.0.1, 192.168.0.2

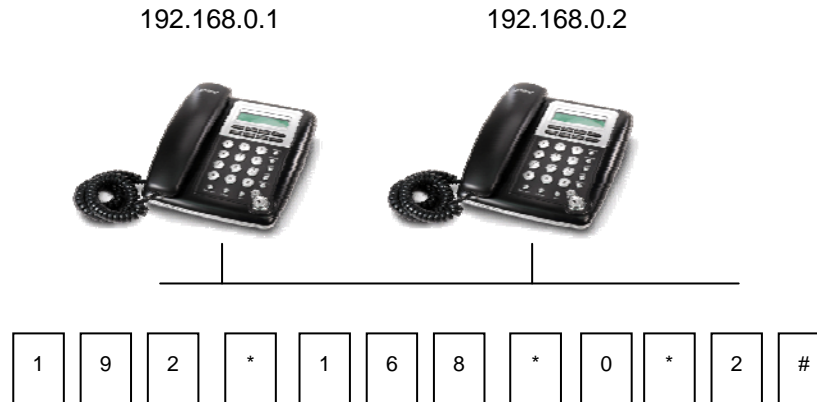

Operation steps:

Pick up the VIP-154T A, you should be able to hear the dial tone, press the keypad: 192*168*0*2# shall be able to connect to the VIP-154T B.

Then the phone in 192.168.0.2 should ring. Please repeat the same dialing steps on VIP-154T B to establish the first voice communication from the second VIP-154T

Hint

- If the IP address of the remote calling party is known, you may directly make calls via its IP address and end with an "#".
- If the IP phones are installed behind a NAT/firewall/ IP sharing device, please make sure the NAT device support SIP applications before making calls