

# How to use wired (Wireless) Phone to make external SIP calls via SIP Trunk

In the following samples, we'll introduce VIP-154T and VIP-192 makes SIP Proxy calls via SIP Trunk applications.



### Installation example with VIP-480FO

### > Machine Configuration:

### STEP 1:

Please refer to the first sample and let VIP-154T and VIP-192 register to IP PBX.

### STEP 2:

Browse to "IP PBX Setup → Trunk Management → SIP Trunk" configuration menu. Add a new Service Provider account for registering to FWD SIP Proxy.



• Ser	ver Provider	s Setting				
Add	New Service Prov	viders Add				
Pro	viders List	Service Provider I				
	Caller Id	UserName	Password	Ргоху	Port	Action
_	25003000	25003000	123	fwd.pulver.com	5060	Advance Delete

Figure D-21. Add a Service Provider account

### STEP 3:

Browse to "IP PBX Setup → Trunk Management → Trunk Group" configuration menu. Add a Trunk Group for making external SIP Proxy calls.

•	Tru	ink Group	o Setting							
	Add	New Grop N	ame 🌔	Add						
	Gro	oup Name	EList T	runk Grouj	o Max is 10					
		Group Name		Group Number		Number		Action		
		FWD		9		proxy250	03000		Edit Del	ete

Add Trunk Group number

### STEP 4:

After the SIP Trunk has registered to FWD SIP Proxy successfully, the **Service Provider Status** page will show the registration status:

• Serv	Service Provider Status								
	$\bigcirc$	Registe	r 0K! 🔰	Regis	ter Unknown!				
		Num	Status	Num	Status	Num	Status		
	25003	3000							

Service Provider status page



PLANET Technology Corporation 11F, No. 96, Min Chuan Road, Hsin Tien, Taipei, Taiwan, R.O.C. Tel: 886-2-2219-9518 Fax: 886-2-2219-9528 Email: <u>sales@planet.com.tw</u> Web site: <u>http://www.planet.com.tw</u> VoIP Gateway: vip.planet.com.tw

Planet reserves the right to change specifications without prior notice. All brand names and trademarks are property of their respective owners. Copyright (c) 2006 PLANET Technology Corp. All rights reserved

## > Test the Scenario:

- 1. VIP-154T pick up the telephone
- 2. Dial the number: **9** will hear the dial tone, and dial the number: 25003999. This call shall be able connect to the User B.
- 3. Then the softphone of User B will ringing, User B can answer the call and talk with VIP-154T.
- 4. Both VIP-154T and User B hang up the calls.
- 5. User B pick up and dial the number: 25003000 should be able to connect to the Auto Attendant System of IP PBX.
- 6. The User B will hear the prompts, and dial the extension number: 100 shall be able connect to the VIP-192.
- 7. Then the VIP-192 should ringing, and it to pick up the call then talk with User B.



PLANET Technology Corporation 11F, No. 96, Min Chuan Road, Hsin Tien, Taipei, Taiwan, R.O.C. Tel: 886-2-2219-9518 Fax: 886-2-2219-9528 Email: sales@planet.com.tw VoIP Gateway: vip.planet.com.tw

Planet reserves the right to change specifications without prior notice. All brand names and trademarks are property of their respective owners. Copyright (c) 2006 PLANET Technology Corp. All rights reserved