



ACTIVATING IP POWER

H.323/ SIP Internet Telephony Gateway

**VIP-2/4/8/16/24 port Series
Quick Configuration**



www.planet.com.tw




This installation guide introduces VoIP gateway configuration examples of the VIP-480FO and co-work the VIP-155PT for establish the voice communications.


- The IP phone want to make a PSTN phone call, press the “100 ~ 400” key to switch to PSTN mode.
- This hunting group will skip all busy lines and absent lines and find only the idle line to the PBX.
- The outgoing dialing plan setting when PSTN call to IP phone used.
- Also, user can set up “hotline” to dial the phone number automatically.



VoIP Gateway Quick Configuration

This picture illustrates basic installation topology of gateway and IP phone for P2P mode.

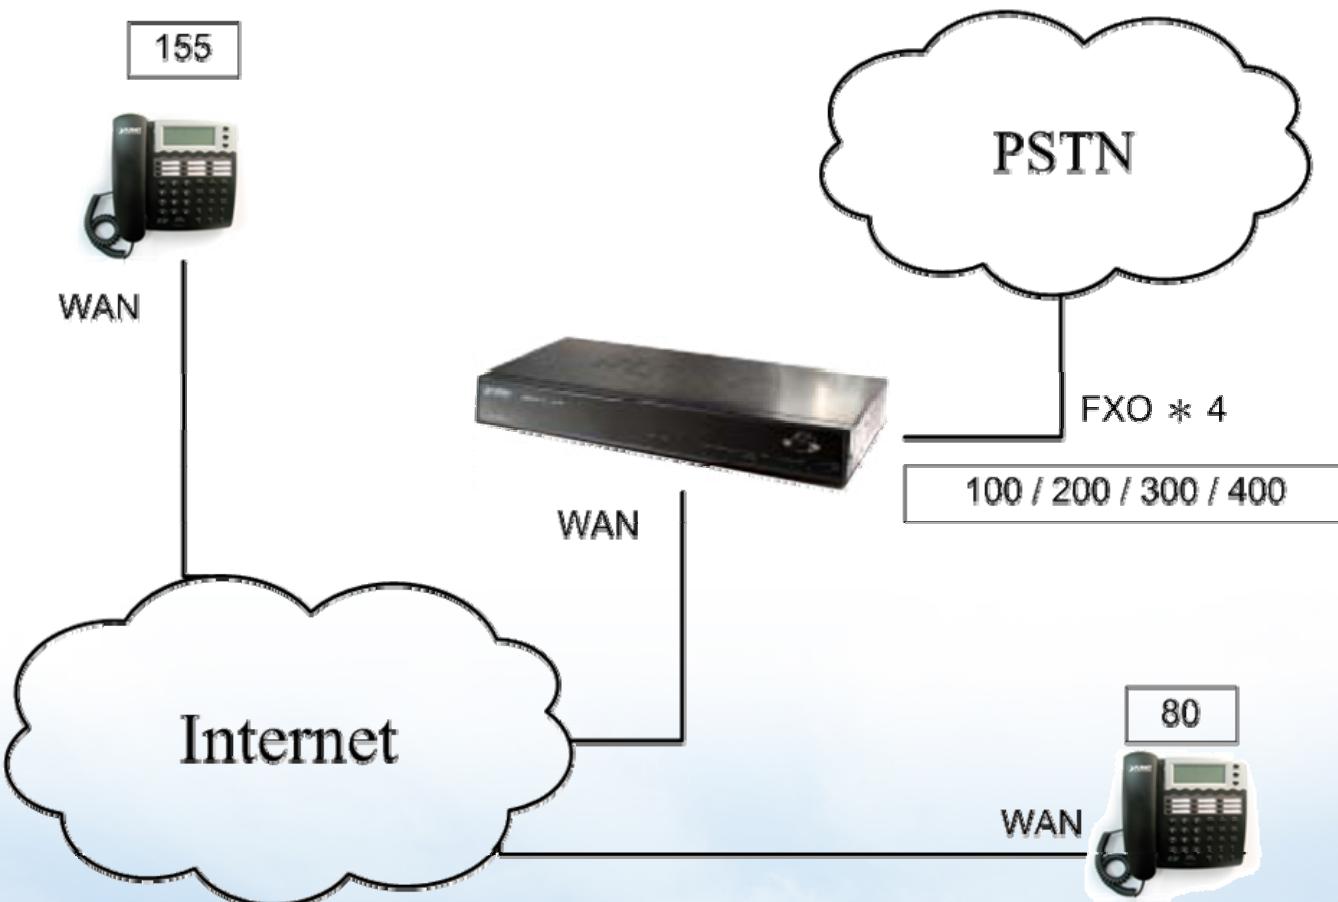

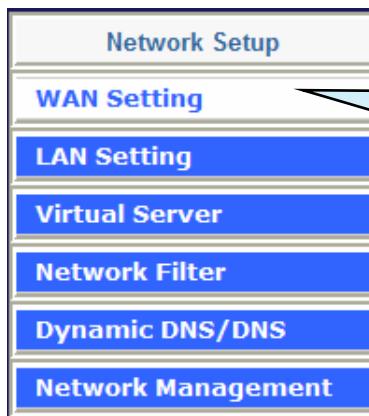

1

Select the [Advance>WAN Setting] of **Gateway** to set up the WAN interface for the gateway.

WAN Port Type Configuration:


WAN Type Setting	
IP Address	210.66.155.79
Subnet Mask	255.255.255.0
Default Router	210.66.155.94

2

Setup the WAN interface of **VIP-480FO** follow the information of IP that provides by ISP
WAN Type Setting : **Static IP**
IP Address : **210.66.155.79**
Subnet Mask : **255.255.255.0**
Default Router : **210.66.155.94**

VoIP Gateway Quick Configuration

ACTIVATING IP POWER

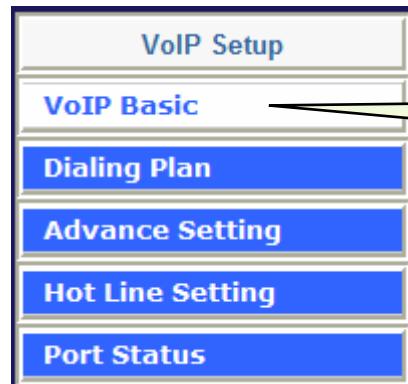

3

Select the [Advance->VoIP Basic] of **Gateway** to set up the Port Number

VoIP Basic Configuration

4

VoIP Protocol Setting SIP Select

Port Number / Password Setting(MAX 20 digit) :

No.	Number	Account	Password
1	100		
2	200		
3	300		
4	400		

SIP Hunting Table :

No.	Hunting Member	
1	<input checked="" type="checkbox"/> Port 1 <input checked="" type="checkbox"/> Port 2 <input checked="" type="checkbox"/> Port 3 <input checked="" type="checkbox"/> Port 4	5
2	<input checked="" type="checkbox"/> Port 1 <input checked="" type="checkbox"/> Port 2 <input checked="" type="checkbox"/> Port 3 <input checked="" type="checkbox"/> Port 4	
3	<input checked="" type="checkbox"/> Port 1 <input checked="" type="checkbox"/> Port 2 <input checked="" type="checkbox"/> Port 3 <input checked="" type="checkbox"/> Port 4	
4	<input checked="" type="checkbox"/> Port 1 <input checked="" type="checkbox"/> Port 2 <input checked="" type="checkbox"/> Port 3 <input checked="" type="checkbox"/> Port 4	

Check Hunting Member

Port 1 – Port 4

(When this Port1 is busy, the Gateway will find a free port connected to other)

Main Menu Reboot **Save Configuration** Logout


6

Click the [Save Configuration] button to save configuration



7

Select the [Network->WAN Config] of IP Phone to set up WAN interface of the IP Phone.

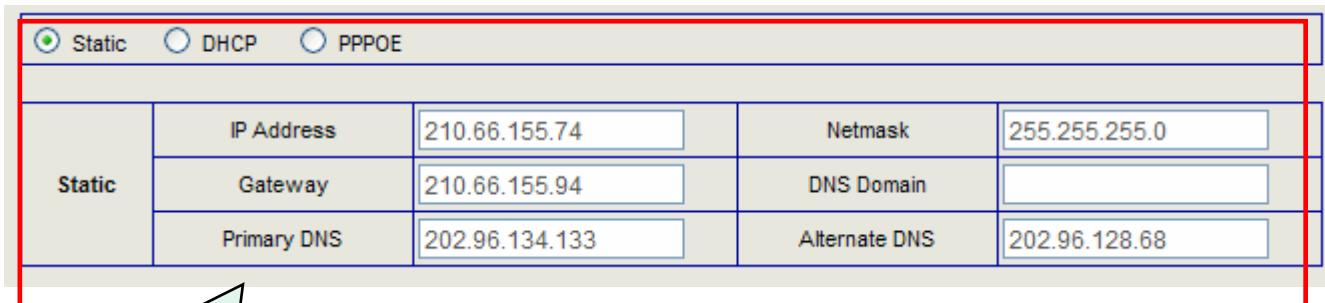

	Static	DHCP	PPPOE	
Static	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	
	IP Address	210.66.155.74	Netmask	255.255.255.0
	Gateway	210.66.155.94	DNS Domain	
	Primary DNS	202.96.134.133	Alternate DNS	202.96.128.68

8

Setup the WAN interface of **VIP-155** follow the information of IP that provides by ISP

Check Static

IP Address : **210.66.155.74**

Subnet Mask : **255.255.255.0**

Default Router : **210.66.155.94**

VoIP Gateway Quick Configuration

ACTIVATING IP POWER

- Current State
- Network
- VoIP
- Advance
- Dial-peer
- Config Manage
- Update
- System Manage

Select the [Dial-peer] of **IP Phone** to create the IP Phone dial plan.

9

Number	Destination	Port	Alias	Suffix	Del length
100	210.66.155.79	5060	no alias	no suffix	0
200	210.66.155.79	5060	no alias	no suffix	0
300	210.66.155.79	5060	no alias	no suffix	0

Enter the VIP-480 port number
into the dial-peer page
Phone Number : 100 ~ 400
Destination : 210.66.155.79
Port : 5060

Add Delete Modify 100 ▾


10

Phone Number	<input type="text" value="400"/>
Destination (optional)	<input type="text" value="210.66.155.79"/>
Port(optional)	<input type="text" value="5060"/>
Alias(optional)	<input type="text"/>
Suffix(optional)	<input type="text"/>
Delete Length (optional)	<input type="text"/>

Return Submit

VoIP Gateway Quick Configuration

ACTIVATING IP POWER

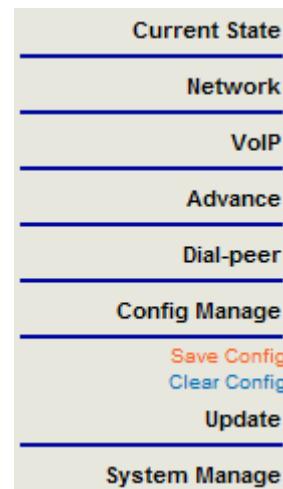

11

Select the [Config Manage > Save Config] of **IP Phone** to save configuration.


IP Phone

Save Configuration

12

Click the [Save] button to save configuration.

Save

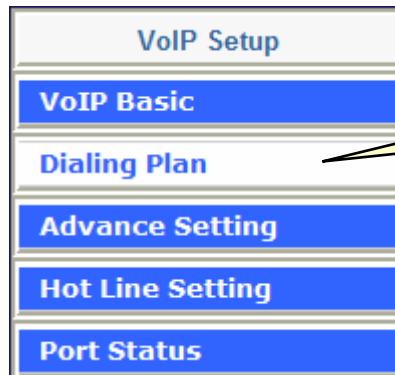

13

Select the [Advance->Dialing Plan] of **Gateway** to add the outgoing dial plan for gateway call to ip phone used.

14

Outgoing no: **155** (or other)
 Length of Number: **3 ~ 3**
 (The Number max/min allowed length you can dial)
 Destination IP/DNS: **210.66.155.74** (phone ip address)
 Destination Port : **5060**


Outgoing Dial Plan: (maximum 50 entries, maximum length of number is 20 digit, maximum length of number is 20 digit)

Item	Outgoing no.	Length of Number	Delete Length	Prefix	Destination IP/DNS	Destination Port	Operation
1	155	3 ~ 3	0	None	210.66.155.74	5060	<input type="button" value="DELETE"/>
	80	2 ~ 2			210.66.155.76	5060	<input type="button" value="ADD"/>

DELETE Outbound Dial Plan From To

VoIP Gateway Quick Configuration

ACTIVATING IP POWER

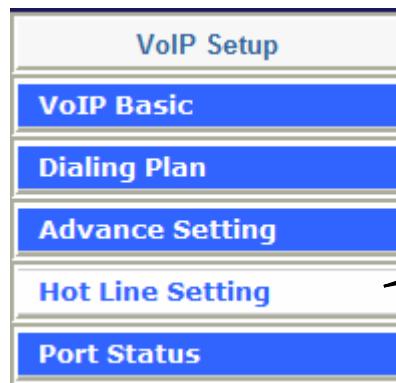

15

Select the [Advance->Hot Line Setting] of **Gateway** to set up the hot line number.

Hot Line Number Setting (Hotline Setting)

16

Hotline Delay	<input checked="" type="radio"/> Disable <input type="radio"/> Enable
Hotline Delay Time(Max. 20 sec)	3 <input type="text"/> sec

Hot Line Number Setting:

Port 1 number : 80

Port 4 number : 155

When the call come from PSTN to FXO, FXO start the hot line dialing to setting number.

Port 1 number	80
Port 2 number	None
Port 3 number	None
Port 4 number	155

Apply

Click the [Save Configuration] button to save configuration and [Reboot] System.

17

Main Menu [Reboot](#) [Save Configuration](#) [Logout](#)



ACTIVATING IP POWER



www.planet.com.tw

