

H.323/ SIP Internet Telephony Gateway


**VIP-2/4/8/16/24 port Series
Peer-to-Peer Configuration**



Scenarios explain: Peer-to-Peer Mode

We're using two VIP-480 to perform the calling party.

Please refer to the following descriptions and insert proper parameters configurations into the each device for establish the voice communications.

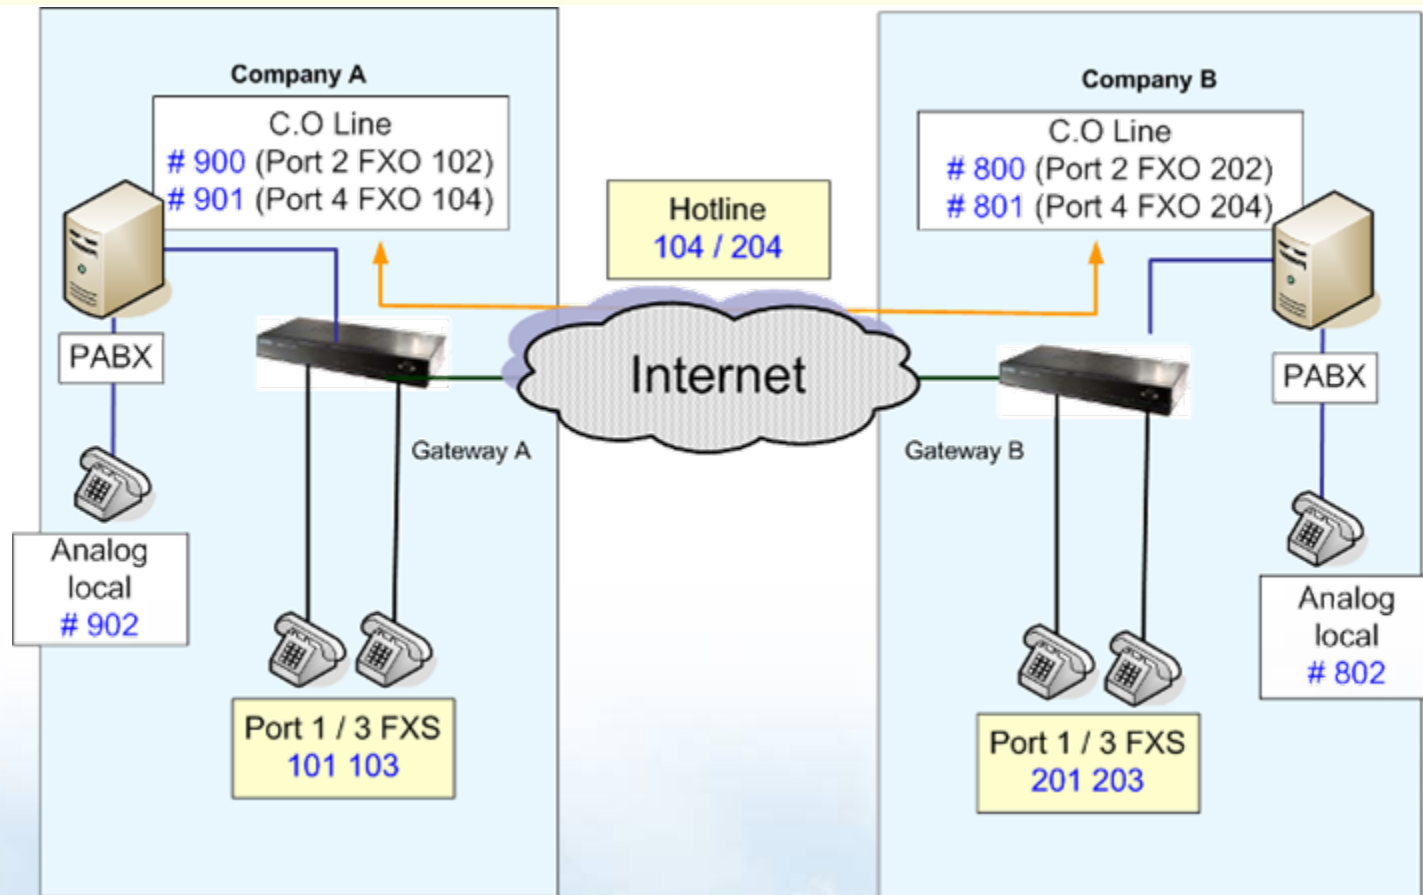

1

- Network Setup
- WAN Setting**
- LAN Setting
- Virtual Server
- Network Filter
- Dynamic DNS/DNS
- Network Management

Select the [**Advance>WAN Setting**] of **Gateway** to set up the WAN interface for the gateway.

2 **Gateway A**

WAN Port Type Configuration:

WAN Type Setting	Static IP <input type="button" value="Select"/>
IP Address	<input type="text" value="210.66.155.79"/>
Subnet Mask	<input type="text" value="255.255.255.0"/>
Default Router	<input type="text" value="210.66.155.94"/>

Setup the WAN interface of **VIP-480** follow the information of IP that provides by ISP
WAN Type Setting : **Static IP**
IP Address : **210.66.155.79**
Subnet Mask : **255.255.255.0**
Default Router : **210.66.155.94**

VoIP Setup

- VoIP Basic
- Dialing Plan**
- Advance Setting
- Hot Line Setting
- Port Status

3

Select the [Advance->VoIP Basic] of Gateway to set up the Port Number

Settings port number
 Port 1 **100** Port 3 **103**
 Port 2 **102** Port 4 **104**

VoIP Basic Configuration

4

VoIP Protocol Setting SIP

Port Number / Password Setting(MAX 20 digit) :

No.	Number	Account	Password
1	101		
2	102	<i>Gateway A</i>	
3	103		
4	104		

VoIP Setup
VoIP Basic
Dialing Plan
Advance Setting
Hot Line Setting
Port Status

5

Select the [Advance->Dialing Plan] of Gateway to add the outgoing dial plan for gateway call to ip phone used.

6

Outgoing no: **20**
 Length of Number: **3 ~ 3**
 (The Number max/min allowed length you can dial)
 Destination IP/DNS: **210.66.155.91** (remote gateway address)
 Destination Port : **5060**

Outgoing Dial Plan: (maximun 50 entries, maximun length of prefix digits is 16 digit, maximun length of number is 20 digit)

Item	Outgoing no.	Length of Number	Delete Length	Prefix no.	Destination IP/DNS	Destination Port	Operation
1	20	3 ~ 3	0	None	210.66.155.91	5060	
	<input type="text"/>	<input type="text"/> ~ <input type="text"/>	<input type="text"/>	<i>Gateway A</i>	<input type="text"/>	<input type="text"/>	ADD

DELETE

Outbound Dial Plan

From To

VoIP Setup
VoIP Basic
Dialing Plan
Advance Setting
Hot Line Setting
Port Status

7

Select the [**Advance->Hot Line Setting**] of **Gateway** to set up the hot line number.

Hot Line Number Setting (Hotline Setting)

8

Gateway A

Hotline Delay	<input checked="" type="radio"/> Disable <input type="radio"/> Enable
Hotline Delay Time(Max. 20 sec)	<input type="text" value="3"/> sec

Port 1 number	<input type="text" value="None"/>
Port 2 number	<input type="text" value="None"/>
Port 3 number	<input type="text" value="None"/>
Port 4 number	<input type="text" value="204"/>

Apply

Hot Line Number Setting:

Port 1 number : **201**

Port 4 number : **203**

To dial 204 automatically to connection remote tradition PBX when calls income for port 4.

Click the [**Save Configuration**] button to save configuration and [**Reboot**] System.

9

[Main Menu](#) [Reboot](#) [Save Configuration](#) [Logout](#)

- Network Setup
- WAN Setting**
- LAN Setting
- Virtual Server
- Network Filter
- Dynamic DNS/DNS
- Network Management

10

Select the [**Advance>WAN Setting**] of **Gateway** to set up the WAN interface for the gateway.

WAN Port Type Configuration:

WAN Type Setting	Static IP <input type="button" value="Select"/>
IP Address	210.66.155.91
Subnet Mask	255.255.255.0
Default Router	210.66.155.94

11

Gateway B

Setup the WAN interface of **VIP-480** follow the information of IP that provides by ISP
WAN Type Setting : **Static IP**
IP Address : **210.66.155.91**
Subnet Mask : **255.255.255.0**
Default Router : **210.66.155.94**

VoIP Setup
VoIP Basic
Dialing Plan
Advance Setting
Hot Line Setting
Port Status

12

Select the [Advance->VoIP Basic] of Gateway to set up the Port Number

VoIP Basic Configuration

13

VoIP Protocol Setting SIP

Port Number / Password Setting(MAX 20 digit) :

No.	Number	Account	Password
1	201		
2	202	<i>Gateway B</i>	
3	203		
4	204		

Settings port number
Port 1 **201**
Port 2 **202**
Port 3 **203**
Port 4 **204**

VoIP Setup
VoIP Basic
Dialing Plan
Advance Setting
Hot Line Setting
Port Status

14

Select the [Advance->Dialing Plan] of Gateway to add the outgoing dial plan for gateway call to ip phone used.

15

Outgoing no: 10
 Length of Number: 3 ~ 3
 (The Number max/min allowed length you can dial)
 Destination IP/DNS: 210.66.155.79 (remote gateway address)
 Destination Port : 5060

Outgoing Dial Plan: (maximum 50 entries, maximum length of prefix digits is 16 digit, maximum length of number is 20 digit)

Item	Outgoing no.	Length of Number	Delete Length	Prefix no.	Destination IP/DNS	Destination Port	Operation
1	10	3 ~ 3	0	None	210.66.155.79	5060	
		<input type="text"/> ~ <input type="text"/>	<input type="text"/>	<input type="text"/>	<i>Gateway B</i>	<input type="text"/>	

DELETE Outbound Dial Plan From To

VoIP Setup
VoIP Basic
Dialing Plan
Advance Setting
Hot Line Setting
Port Status

16

Select the [**Advance->Hot Line Setting**] of **Gateway** to set up the hot line number.

Hot Line Number Setting (Hotline Setting)

Hotline Delay Disable Enable

Hotline Delay Time(Max. 20 sec) sec

Port 1 number

Port 2 number

Port 3 number

Port 4 number

Gateway B

Apply

17

Hot Line Number Setting:
Port 4 number : **104**

To dial 104 automatically to connection remote tradition PBX when calls income for port 4.

Click the [**Save Configuration**] button to save configuration and [**Reboot**] System.

18

[Main Menu](#) [Reboot](#) [Save Configuration](#) [Logout](#)

For example:

1. From tradition PABX-A ext. make call to remote gateway-B

Step 1. To using for tradition PBX ext.902 telephone to input number **900** (PABX number).

Step 2. You will be get a dial-tone from gateway-A.

Step 3. Please input a number **201** or **203**

Step 4. And then the other side analog telephone should be ringing at this time.

Step 5. it begin establish voice communication after pick up the handset.

2. From gateway-B make call to PABX-A ext.

Step 1. To using for gateway-B telephone to input number **102** .

Step 2. You will be get a dial-tone from tradition PABX.

Step 3. And then input you want of ext. number for tradition PABX.

Step 4. Wait the other side pick up the handset to establish voice communication begin.

For example:

3. From tradition PABX-B ext.802 make call to remote PABX-A ext.902

Step 1. To using for tradition PBX ext.802 telephone to input number **901** (PABX number).

Step 2. You will be get a dial-tone from gateway-B. (hotline is complete)

Step 3. And then input ext. number **902** for tradition PABX and will listen to the ring-tone.

Step 4. Wait the other side pick up the handset to establish voice communication begin.

4. From gateway-B make call to gateway-A extension

Step 1. To using for gateway-B telephone to input number **101** or **103**.

Step 2. And then the other side analog telephone should be ringing at this time.

Step 3. it begin establish voice communication after pick up the handset.

NOTE:

The mentioned parameters and network settings in this sample be carefully modified to meet the real-world applications.

ACTIVATING IP POWER

