

User's Manual

VIP-256PT

Enterprise PoE IP Phone



Copyright

Copyright (C) 2011 PLANET Technology Corp. All rights reserved.

The products and programs described in this User's Manual are licensed products of PLANET Technology, This User's Manual contains proprietary information protected by copyright, and this User's Manual and all accompanying hardware, software, and documentation are copyrighted.

No part of this User's Manual may be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form by any means by electronic or mechanical. Including photocopying, recording, or information storage and retrieval systems, for any purpose other than the purchaser's personal use, and without the prior express written permission of PLANET Technology.

Disclaimer

PLANET Technology does not warrant that the hardware will work properly in all environments and applications, and makes no warranty and representation, either implied or expressed, with respect to the quality, performance, merchantability, or fitness for a particular purpose.

PLANET has made every effort to ensure that this User's Manual is accurate; PLANET disclaims liability for any inaccuracies or omissions that may have occurred.

Information in this User's Manual is subject to change without notice and does not represent a commitment on the part of PLANET. PLANET assumes no responsibility for any inaccuracies that may be contained in this User's Manual. PLANET makes no commitment to update or keep current the information in this User's Manual, and reserves the right to make improvements to this User's Manual and/or to the products described in this User's Manual, at any time without notice.

If you find information in this manual that is incorrect, misleading, or incomplete, we would appreciate your comments and suggestions.

CE mark Warning

The is a class B device, In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

Energy Saving Note of the Device

This power required device does not support Stand by mode operation.

For energy saving, please remove the DC-plug or push the hardware Power Switch to OFF position to disconnect the device from the power circuit.

Without remove the DC-plug or switch off the device, the device wills still consuming power from the power circuit. In the view of Saving the Energy and reduce the unnecessary power consuming, it is strongly suggested to switch off or remove the DC-plug for the device if this device is not intended to be active.

WEEE Warning



To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, end users of electrical and electronic equipment should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of WEEE as unsorted municipal waste and have to collect such WEEE separately.

Trademarks

The PLANET logo is a trademark of PLANET Technology. This documentation may refer to numerous hardware and software products by their trade names. In most, if not all cases, their respective companies claim these designations as trademarks or registered trademarks.

Revision

User's Manual for PLANET SIP PoE IP Phone:

Model: VIP-256PT

Rev: 1.0 (2011, August)

Part No. EM-VIP-256PT_v1.0

Table of Contents

| | |
|---|-----------|
| Chapter 1 Introduction | 6 |
| Overview | 6 |
| Package Content..... | 7 |
| Physical Details..... | 7 |
| Front View and Keypad function | 7 |
| Rear View..... | 8 |
| Phone Screen Features | 10 |
| Chapter 2 Preparations & Installation | 11 |
| Physical Installation..... | 11 |
| Administration Interface..... | 13 |
| Web configuration access..... | 13 |
| Chapter 3 Network Service Configurations..... | 14 |
| Configuring and monitoring your IP Phone from web browser..... | 14 |
| Manipulation of IP Phone via web browser | 14 |
| Chapter 4 VoIP IP Phone Status | 15 |
| Status | 15 |
| Basic..... | 15 |
| DHCP | 17 |
| Syslog..... | 17 |
| Chapter 5 SIP Account Setting | 18 |
| SIP Account..... | 18 |
| SIP setting | 18 |
| NAT setting | 19 |
| Line settings..... | 20 |
| Basic..... | 20 |
| Audio Configuration | 21 |
| Supplementary Services Subscription..... | 22 |
| Advanced | 22 |
| Chapter 6 Network Setting..... | 24 |
| Basic | 24 |
| Internet Port (WAN)..... | 25 |
| PC Port(LAN) | 27 |
| Network Address Server Settings (DHCP) | 28 |
| MAC Address Clone | 29 |
| VPN | 30 |
| DMZ | 31 |
| QoS | 32 |
| Chapter 7 Phone Configurations..... | 33 |
| Performance | 33 |

| | |
|--|-----------|
| Volume | 33 |
| Regional | 34 |
| Call Forward | 35 |
| Miscellaneous | 35 |
| Multi-Functional Key | 36 |
| Dial Plan..... | 38 |
| Phonebook | 42 |
| Phonebook..... | 42 |
| Black List..... | 43 |
| Call Log | 44 |
| Chapter 8 VoIP IP Phone Administration | 45 |
| Management | 45 |
| Time/Date..... | 45 |
| Password Reset | 47 |
| Web Access | 48 |
| System Log Setting..... | 48 |
| Factory Defaults..... | 50 |
| Update Firmware | 50 |
| Security | 50 |
| Provision | 52 |
| SNMP | 54 |
| TR 069 | 55 |
| Appendix A Frequently Asked Questions List..... | 56 |
| Appendix V Specifications..... | 58 |

Chapter 1

Introduction



Overview

Combining the cutting edge of Voice over IP and Internet telephony manufacturing experience, PLANET IP phones make your employee's jobs easier while combining your company's voice and data systems and making it simple to expand as you add new employees or locations. PLANET IP phone systems save money on long distance charges, allow call transferring to anyone at any location, and remote workers are dialed in through a Unified Communications system of voice and IP communications products and applications enables organizations to communicate more effectively-enabling them to streamline business processes.

Cost-Effective and High Performance

For a cost-effective and high performance VoIP communications today, PLANET now introduces the latest member of low cost- high performance IP phone: the VIP-256PT, a 2-line professional PoE IP Phone.

Full-Featured Enhanced Business IP phone

The Planet IP Phone VIP-256PT is a full-featured enhanced business IP phone that addresses the communication needs of the transaction worker. It provides 2 voice lines, dual 10/100 switched Ethernet ports and integrated IEEE 802.3af Power over Ethernet circuitry which offers benefit of reducing cabling expenses and cord clutter. To give users most flexibility, the VIP-256PT contains a 128x32 Graphic LCD with white back light, 2 Line keys and 4 soft keys, 10 Multi-functional key with dual-color LED.

Support all the SIP Protocol

SIP V2 (RFC 3261,3262,3263,3264), Backward Compatible with RFC2543, Session Timer (RFC4028), SDP (RFC2327), RTP/RTCP (RFC1889 and RFC1890), NAPTR for SIP URI Lookup (RFC2915), STUN (RFC 3489), ARP/RARP (RFC 826/903), SNTP (RFC 2030), DHCP, HTTP Server for Web Management, TFTP/HTTP/HTTPS for Auto Provisioning, Message Waiting Indicator (RFC3842), DNS/DNS SRV (RFC1706 and RFC 2782), IEEE802.1Q VLAN/802.1p and IP TOS.

Professional Application and Feature

For VIP-256PT we do support all kinds of SIP base phone feature, like Call Waiting, Auto Answer, Music on hold, Caller ID and call waiting ID, 3-way Conference, Call Hold, Call Forwarding, Black List, Hotline, DTMF Relay:

In-band, Out-band (RFC2833) and SIP INFO....., Besides for office use, the VIP-256PT is the ideal solution for VoIP service offered by Internet Telephony Service Provider (ITSP). It is a perfect delivery platform of IP voice services for business class communication services.

➤ **PRODUCT FEATURES**

- IEEE 802.3af (Power over Ethernet) compliant
- Full-duplex Speakerphone
- 128x64 Graphic LCD with white back light
- Efficient installation deployment of IP PBX solution
- Reversible base stand and wall mount installation options
- 2 lines Registration
- SMS Functions
- Support BLF(Busy Lamp Field)
- Black List
- TR069
- DNS Srv


Package Content

- SIP IP Phone unit
- Power Adapter
- Quick Installation Guide
- CD-ROM containing the on-line manual.
- RJ-45 cable x1

Physical Details

The following figure illustrates the front/rear panel of IP Phone.


Front View and Keypad function

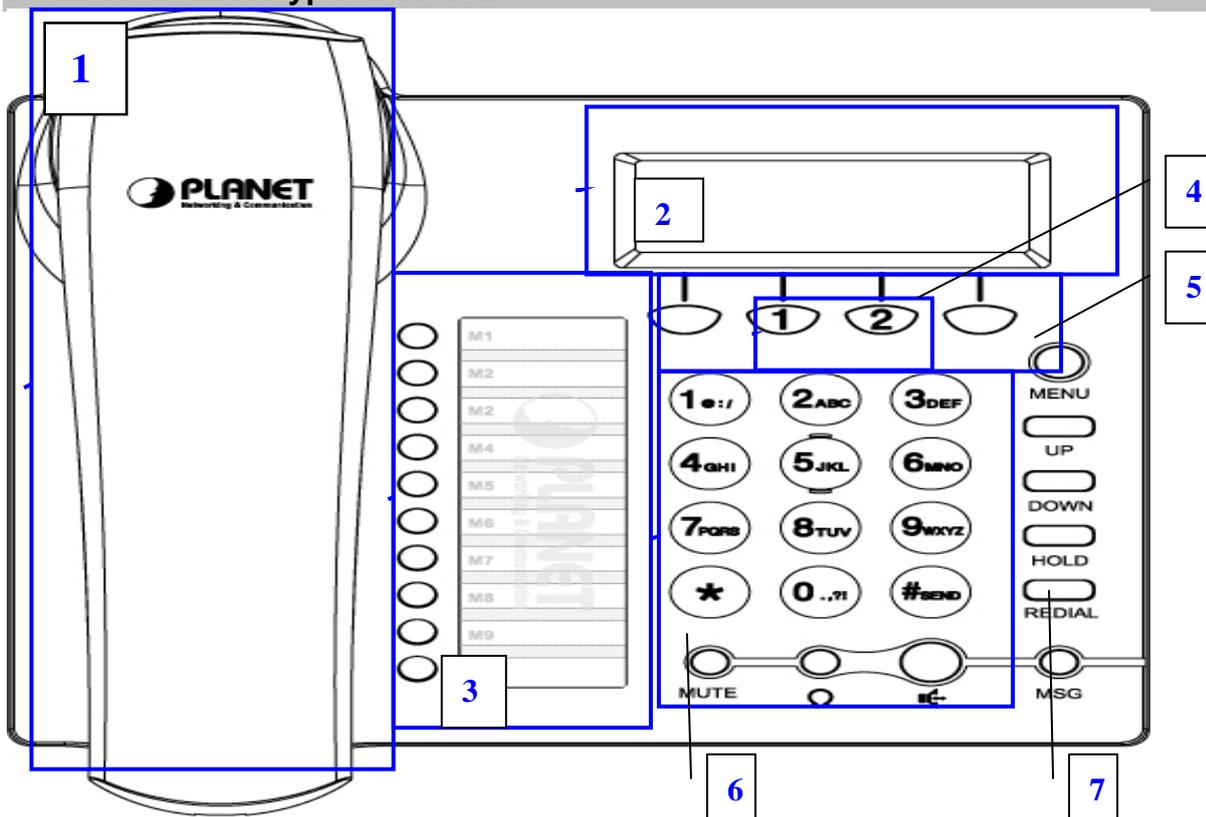


Keypad Description

| | | |
|----------|--------------------------------|--|
| | Handset top cradle | For the placement of handset (Receiver end) |
| | Hook switch | For hang-up and hang-off of handset |
| | Cradle latch | To prevent the handset from dropping when it is wall-mounted. |
| 1 | Handset bottom cradle | For the placement of handset (Transmitter end) |
| | Handset cord port | RJ-11 jack on the left side of the IP phone |
| | Headset wire port | RJ-11 jack on the bottom of the handset |
| | Headset | To mount mouthpiece and earpiece on the single handle. |
| 2 | LCD screen | The LCD screen is for displaying your settings, such as phone number, line status and so on. |
| 3 | Multi-Functional Key | These keys can be used as speed dial, BLF, shortcut key, pick up and call park. |
| 4 | Line Keys | In standby: These keys are used as line keys; you can press the line button to select the corresponding line, and then user can make call or do other functions. The LED under the keys used to display the status of each extension. |
| 5 | Soft keys | These keys are used as soft keys. These can be used for item selection or control on the LCD screen. The Soft key function depends on their corresponding content displayed on the LCD at that time. |
| 6 | Numeric Keypad | Enters numeric digits for initiating a call or for entering configuration information. |
| 7 | Other Function and numeric key | Include MENU, UP, DOWN, REDIAL, and numeric keys |

Rear View

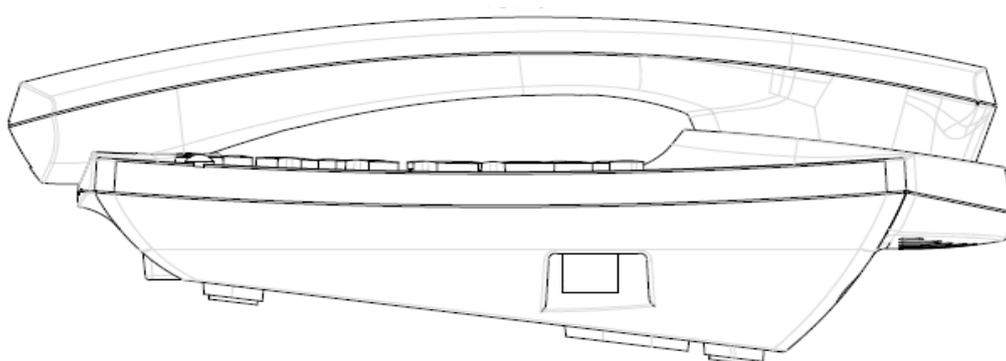

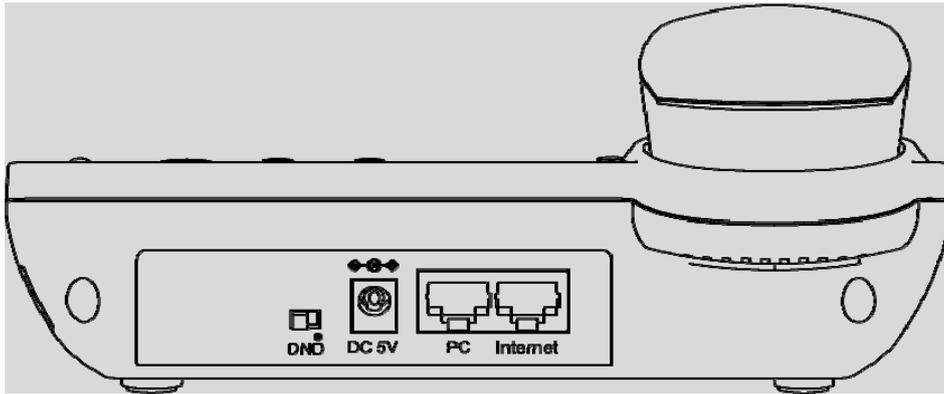

Keypad Description


| | | |
|---|------------|---|
| 1 | Headset | Headset console, connect to headset |
| 2 | DND Switch | The Switch is used to turn on or turn off DND. Under the character DND is a dot. When the switch near the dot, DND is on, otherwise DND is off. Taking the left picture for example, DND is on. |
| 3 | DC 5V | Power port |
| 4 | PC | Connects to a PC. |
| 5 | Internet | Connects to the Ethernet switch, router or Internet. |

Note

Please don't connect PoE injector and AC adapter to VIP-256PT at the same time, this may make the effect of current pulse and then cause device damage. Be noted to power the SIP IP phone either from 802.3af PoE or AC adapter.

Phone Screen Features

This is what your main phone screen might look like with an active call.

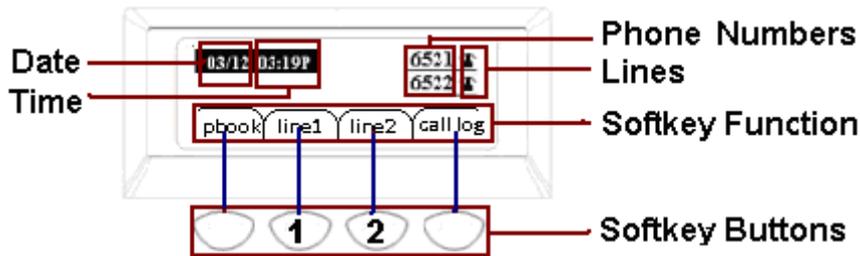

Graphic Icon Description

| | | |
|---|-------------------------|--|
| 1 | Date | To display the current date. Date format is mm/dd |
| 2 | Time | To display the current time. Time format is mm:ss (A or P) |
| 3 | Phone Numbers | To display the phone number of lines. |
| 4 | Lines | To display the status of lines. The icon  means unregistered. The icon  mean registered. |
| 5 | Softkey Function | To display the current softkey function. |
| 6 | Softkey Buttons | User can use the softkey button to highlight the item displayed on the LCD screen and then configuration. One button directs to one softkey function, the blue line in the left picture displays the corresponding relationship. |

Chapter 2


Preparations & Installation

Physical Installation

VIP-256PT: Enterprise PoE SIP IP Phone (2 x RJ-45, 1 x PoE for Internet interface)


Step 1. Handset Connection

Plug Handset Cord with Handset and Handset Jack

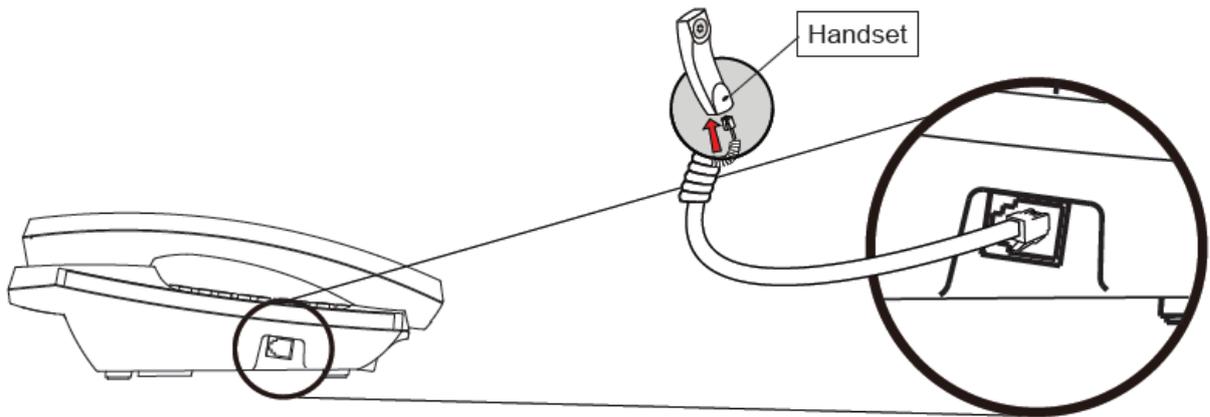


Step 2a. Connecting Power Adapter and Network Power adapter

Power adapter

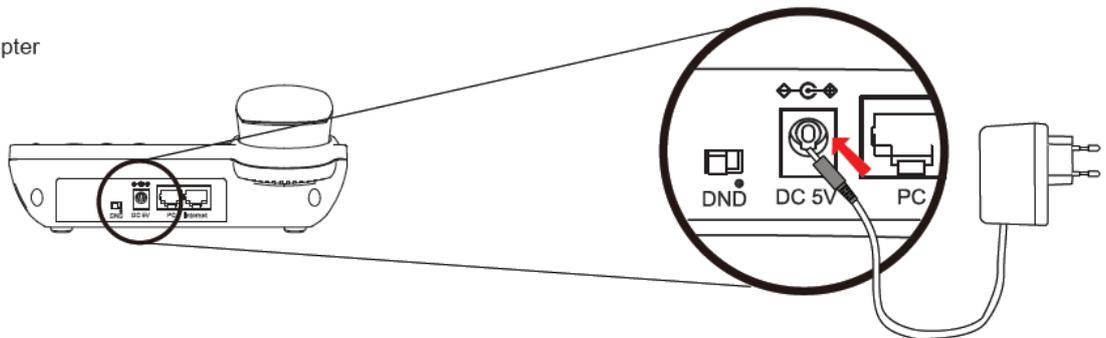

Network

Network

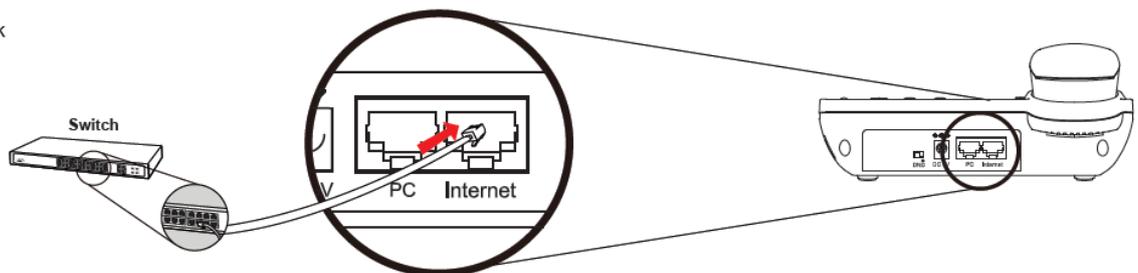


NOTE: Use only the power adapter shipped with the unit to ensure correct functionality

Step 2b. Connecting Power via PoE interface and Network

In the VIP-256PT can be configured without external power, if connecting to an IEEE802.3af PSE devices such as 802.3af POE injector/hub or 802.3af POE Switch.


Note: Only internet port of the VIP-256PT support 802.3af power injection, use of any non-standard POE injector could damage the device

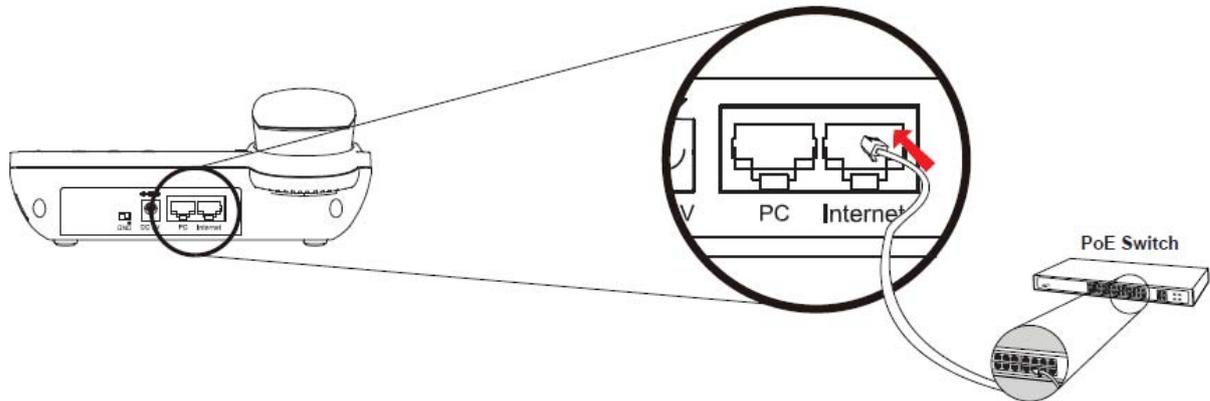

NOTE: only WAN support POE.

Step 3. Computer Network Setup

Set your computer's IP address to 192.168.0.x, where x is a number between 2 to 254 (except 1 where is being used for the IP Phone by default). If you don't know how to do this, please ask your network administrator.

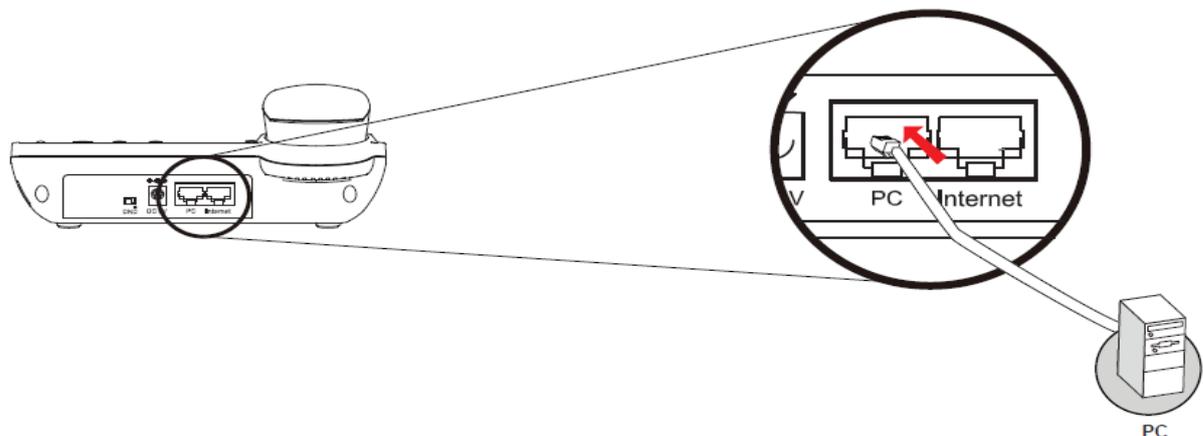

Step 4. Login Prompt

Use web browser (Internet Explorer 6.0 or above) to connect to 192.168.0.1 (type this address in the address bar of web browser).

You'll be prompted to input user name and password: **admin** / 123

Administration Interface

The IP Phone provides GUI (Web based, Graphical User Interface) for machine management and administration. Key pad administration also available for simple configuration.

Web configuration access

To start IP Phone web configuration, you must have one of these web browsers installed on computer for management

- Microsoft Internet Explorer 6.0.0 or higher with Java support

Default IP address of IP Phone is **192.168.0.1**. You may now open your web browser, and insert ***http://192.168.0.1*** in the address bar of your web browser to logon IP Phone web configuration page. IP Phone will prompt for logon username/password, please enter: ***admin / 123*** to continue machine administration.

Note

In order to connect machine for administration, please locate your PC in the same network segment (192.168.0.x) of IP Phone. If you're not familiar with TCP/IP, please refer to related chapter on user's manual CD or consult your network administrator for proper network configurations.

Network Service Configurations

Configuring and monitoring your IP Phone from web browser

The IP Phone integrates a web-based graphical user interface that can cover most configurations and machine status monitoring. Via standard, web browser, you can configure and check machine status from anywhere around the world.

Manipulation of IP Phone via web browser

Log on IP Phone via web browser

After TCP/IP configurations on your PC, you may now open your web browser, and input <http://192.168.0.1> to logon IP Phone web configuration page.

IP Phone will prompt for logon username/password: **admin / 123**



When users login the web page, users can see the IP Phone system information like firmware version, company...etc in this main page.

Chapter 4

VoIP IP Phone Status



Status

You can check the basic phone status to find out more information about the phone. They include three parts Basic, DHCP and Syslog.

Basic

In this page include Product Information, Line Status, Network Status, and System Status.

The screenshot displays the 'Status' page of a VoIP IP phone. The navigation menu includes 'Status', 'SIP Account', 'Network', 'Phone', and 'Administration'. The 'Basic' sub-menu is active, containing 'Basic', 'DHCP', and 'Syslog'. The main content area is divided into two sections: 'Product Information' and 'Line Status'. The 'Product Information' section lists details such as Product Name (VIP-256PT), MAC addresses, and versions. The 'Line Status' section shows the status of two lines: Line 1 is 'Fail(Timeout)' and Line 2 is 'Disable'. A 'Help' sidebar on the right provides descriptions for 'Product Information', 'Line Status', 'Network Status', and 'System Status'. The top right corner shows 'Admin Mode' and a 'Logout' link.

| Product Information | |
|----------------------------|----------------------|
| Product Name: | VIP-256PT |
| Internet(WAN) MAC Address: | 00:30:4F:44:55:66 |
| PC(LAN) MAC Address: | 00:30:4F:44:77:66 |
| Hardware Version: | 1.0.1 |
| Firmware Version: | 1.3.5 (Hy0830010656) |
| DSP Version: | D2.63 |

| Line Status | |
|----------------|-----------------|
| Line 1 Status: | Fail(Timeout) |
| Line 2 Status: | Disable |

Network Status

Internet Port Status

| | |
|--------------------|---------------|
| Connection Status: | Connected |
| Connection Type: | Static IP |
| IP Address: | 10.1.1.200 |
| Subnet Mask: | 255.255.255.0 |
| Default Gateway: | 10.1.1.254 |
| Primary DNS: | 168.95.1.1 |
| Secondary DNS: | 168.95.1.2 |

VPN Status

| | |
|---------------------|---------|
| VPN Type: | Disable |
| Virtual IP Address: | 0.0.0.0 |

PC Port Status

| | |
|--------------------|---------------|
| Connection Status: | Failed |
| Connection Type: | Bridge |
| IP Address: | 192.168.252.1 |
| Subnet Mask: | 255.255.255.0 |

System Status

System Status

| | |
|---------------|----------------------|
| Current Time: | Aug 15 12:26:40 2011 |
| Elapsed Time: | 5 D/1 H/30 M |

Refresh

| Item | Descriptions |
|----------------------------|--|
| Product Information | It shows the basic information of the product. |
| Line Status | It shows the registration state of each line. |
| Network Status | It shows the information of Internet port, VPN and PC port. |
| System Status | It shows the current time and the running time of the product. |
| Refresh | Click Refresh button to refresh status of phone. |

DHCP

This page displays the status about DHCP server enable/disable, start IP address, end IP address and client lease time. Click **Refresh** button to refresh status of DHCP server.

Status | SIP Account | Network | Phone | Administration

Basic | **DHCP** | Syslog

Dynamic Host Configuration Protocol

DHCP Status

| | |
|--------------------|---------------|
| DHCP Server: | Enable |
| Start IP Address: | 192.168.1.2 |
| End IP Address: | 192.168.1.254 |
| Client Lease Time: | 48 Hr. |

| Item | Descriptions |
|-------------|--|
| DHCP Status | It shows the information of the DHCP Server. |

Syslog

It shows all the log information of system.

Status | SIP Account | Network | Phone | Administration

Basic | DHCP | **Syslog**

Syslog

```
<01/01 00:00:04>***system booting***
<01/01 00:00:07>ip conflict
<01/01 00:00:08>Start Register Client ...
<01/01 00:00:04>***system booting***
<01/01 00:00:10>Start Register Client ...
<01/01 00:00:04>***system booting***
<01/01 00:00:07>ip conflict
<01/01 00:00:08>Start Register Client ...
<02/09 16:48:44>ip conflict
<02/09 16:49:14>ip conflict
<02/09 16:49:44>ip conflict
<02/09 16:50:14>ip conflict
<02/09 16:50:44>ip conflict
<02/09 16:51:15>ip conflict
<01/01 00:00:04>***system booting***
<01/01 00:00:09>Start Register Client ...
<01/01 00:00:04>***system booting***
```

Chapter 5

SIP Account Setting

SIP Account

SIP is a request-response protocol, dealing with requests from clients and responses from servers. Participants are identified by SIP URLs. Requests can be sent through any transport protocol. SIP establishes call parameters at either end of the communication, and handles call transfer and termination.

SIP setting

Set your SIP server in the following interface. These parameters are related to registration and call.

| Status | SIP Account | Network | Phone | Administration |
|--------------------------------------|--|---------|-----------------------|--|
| SIP Settings Line 1 Line 2 | | | | |
| SIP Parameters | | | | |
| SIP Parameters | | | | |
| SIP T1: | <input type="text" value="500"/> | MS | Max Forward: | <input type="text" value="70"/> |
| SIP Reg User Agent Name: | <input type="text"/> | | Max Auth: | <input type="text" value="2"/> |
| Mark All AVT Packets: | <input type="button" value="Enable"/> | | RFC 2543 Call Hold: | <input type="button" value="Enable"/> |
| SRTP: | <input type="button" value="Disable"/> | | SRTP Prefer Encrypto: | <input type="button" value="AES_CM"/> |
| NAT Traversal | | | | |
| NAT Traversal | | | | |
| NAT Traversal: | <input type="button" value="Disable"/> | | STUN Server Address: | <input type="text" value="stun.fwdnet.net"/> |
| NAT Refresh Interval(sec): | <input type="text" value="60"/> | | STUN Server Port: | <input type="text" value="3478"/> |

| Item | Descriptions |
|--------------------|---|
| SIP T1 | RFC 3261 T1 value (RTT estimate), which can range from 0 to 64 second. Defaults to .5 seconds |
| Max forward | SIP Max Forward value, which can range from 1 to 255. Defaults to 70. |

| | |
|--------------------------------|--|
| SIP Reg User Agent Name | User-Agent name to be used in a REGISTER request. If this is not specified, the <SIP User Agent Name> is also used for the REGISTER request. Defaults to blank |
| Max Auth | Maximum number of times (from 0 to 255) a request may be challenged. Default is 2. |
| Make ALL AVT Package | For second dial tone, enable this item package Mark position is 1, disable this item will be 0. |
| RFC 254.3 Call Hold | If set to yes, unit will include c=0.0.0.0 syntax in SDP when sending a SIP re-INVITE to the peer to hold the call. If set to no, unit will not include the c=0.0.0.0 syntax in the SDP. The unit will always include a=sendonly syntax in the SDP in either case. Defaults to yes |
| SRTP | Enable/Disable SRTP(Secure Real-time Transport Protocol) |
| SRTP Prefer Encrypto | SRTP encryption type. |

NAT setting

Set your NAT Traversal parameters in the following interface. It is helpful for the device behind NAT

NAT Traversal

NAT Traversal

NAT Traversal: STUN Server IP:

NAT Refresh Interval(sec): Port:

| Item | Descriptions |
|-----------------------------------|--|
| NAT Traversal | Enable/Disable NAT. VIP-256PT supports STUN traversal, choose "STUN" in the "NAT Traversal Mode" if you want traverse NAT/Firewall. |
| STUN Server IP | STUN server IP address, default is stun.fwdnet.net |
| NAT Refresh Interval (sec) | the interval to refresh |
| Port | STUN port |

Line settings

In this webpage, users can configuration the information about SIP account1, including the following 4 parts: Basic, Audio Configuration, User and Advanced, user can program all the SIP parameters. For VIP-256PT it can support 2 lines registered.

Basic

Set the basic information provided by your VOIP Service Provider, such as Phone Number, Account, password, SIP Proxy and so on.

| Basic | | | |
|-------------------------------|--|----------------|--------------------------------------|
| Basic Setup | | | |
| Line Enable: | <input type="text" value="Enable"/> | Peer To Peer: | <input type="text" value="Disable"/> |
| Proxy DNS Type: | <input type="text" value="A Type"/> | VPN: | <input type="text" value="Disable"/> |
| Proxy and Registration | | | |
| Domain Name: | <input type="text"/> | SIP Port: | <input type="text" value="5060"/> |
| SIP Server: | <input type="text" value="192.168.100.100"/> | Outbound Port: | <input type="text" value="5060"/> |
| Outbound Proxy: | <input type="text"/> | | |
| Subscriber Information | | | |
| Display Name: | <input type="text" value="6588"/> | Phone Number: | <input type="text" value="6588"/> |
| Account: | <input type="text" value="6588"/> | Password: | <input type="text" value="••••"/> |

| Item | Descriptions |
|-----------------------|--|
| Line Enable | Enable/Disable SIP Line |
| Peer to Peer | Enable/Disable PEER to PEER If enable, SIP line will not send register request to SIP server; In System Status, SIP line Status is Registered; SIP-1 can make call out, but others can not call SIP line. |
| Proxy DNS Type | Choose DNS type from A Type and DNS SRV. |
| Use VPN | Enable/Disable VPN |
| Domain Name | The domain of SIP Server |
| SIP Server | The IP address of SIP Server |
| SIP Port | The port which SIP Server supports for VOIP service, default is 5060 |
| Outbound Proxy | Outbound Proxy IP or domain name |
| Outbound Port | Outbound Proxy's Service port |
| Display Name | The number will display in callee |
| Phone Number | Number of telephone provided by SIP Proxy |
| Account | SIP account provided by SIP Proxy |
| Password | SIP password provided by SIP Proxy |

Audio Configuration

Select the audio Codec you want to use...

Audio Configuration

Codec Setup

| | | | |
|----------------------|--------------------------------------|---------------------|---------------------------------------|
| Audio Codec Type 1: | <input type="text" value="G.711U"/> | Audio Codec Type 2: | <input type="text" value="G.711A"/> |
| Audio Codec Type 3: | <input type="text" value="G.729"/> | Audio Codec Type 4: | <input type="text" value="G.722"/> |
| Audio Codec Type 5: | <input type="text" value="G.723"/> | G.723 Coding Speed: | <input type="text" value="5.3k bps"/> |
| Packet Cycle(ms): | <input type="text" value="20ms"/> | Echo Cancel: | <input type="text" value="Enable"/> |
| Silence Supp Enable: | <input type="text" value="Disable"/> | | |

| Item | Descriptions |
|---------------------------|--|
| Audio Codec Type1 | Choose the audio codec type from G.711U, G.711A, G.722, G.729, G.723 |
| Audio Codec Type2 | Choose the audio codec type from G.711U, G.711A, G.722, G.729, G.723 |
| Audio Codec Type3 | Choose the audio codec type from G.711U, G.711A, G.722, G.729, G.723 |
| Audio Codec Type4 | Choose the audio codec type from G.711U, G.711A, G.722, G.729, G.723 |
| Audio Codec Type5 | Choose the audio codec type from G.711U, G.711A, G.722, G.729, G.723 |
| G.723 Coding Speed | Choose the speed of G.723 from 5.3kbps and 6.3kbps |
| Packet Cycle | The RTP packet cycle time |

Supplementary Services Subscription

Call Waiting - This call feature allows your phone to accept other incoming calls during the conversation.

Supplementary Service Subscription

Supplementary Services

| | | | |
|---------------|--------------------------------------|------------------------|----------------------|
| Call Waiting: | <input type="text" value="Enable"/> | Delayed Hot Line: | <input type="text"/> |
| Dial Prefix: | <input type="text"/> | Voice Mailbox Numbers: | <input type="text"/> |
| MWI Enable: | <input type="text" value="Disable"/> | | |

| Item | Descriptions |
|------------------------------|---|
| Call Waiting | Enable / Disable Call waiting. |
| Call Pickup | Enable / Disable Call Pickup. |
| Delayed Hot Line | Fill in the hotline number. Pickup handset or press speaker/headset button, VIP-256PT will dial out the hotline number automatically. Ex: xxxT4 will delay 4 seconds, then transfer to xxx (set to T0 will not delay.) |
| MWI Enable | Enable / Disable MWI (message waiting indicate). |
| Voice Mailbox Numbers | Fill in the voice mailbox phone number |

Advanced

IP phone make calls based on SIP accounts, IP phone can support 4 independent SIP account, and each account can be configured to different SIP server.

Advanced

Advanced Setup

| | | | |
|------------------------------|--|---------------------------------|--------------------------------------|
| Domain Name Type: | <input type="text" value="Disable"/> | Carry Port Information: | <input type="text" value="Disable"/> |
| Signal Port: | <input type="text" value="5060"/> | DTMF Type: | <input type="text" value="RFC2833"/> |
| RFC2833 Payload(>=96): | <input type="text" value="101"/> | Register Refresh Interval(sec): | <input type="text" value="3600"/> |
| RTP Port: | <input type="text" value="0"/> (=0 auto select) | Cancel Message Enable: | <input type="text" value="Disable"/> |
| Prack Enable: | <input type="text" value="Disable"/> | SIP Ping Enable: | <input type="text" value="Disable"/> |
| Keep-alive Interval(10-60s): | <input type="text" value="15"/> | | |

| Item | Descriptions |
|-------------------------------------|---|
| Domain name Mode | If or not use domain name in the SIP URI |
| Carry Port Information | If or not carry Port information in the SIP URI. |
| Signal Port | The local port of SIP protocol, default is 5060 |
| DTMF Type | Choose the DTMF type from IN_band, RFC2833 and SIP INFO. |
| RFC2833 Payload (>=96) | User can use the default setting |
| Register Refresh Interval | The interval between two normal Register messages. You can use the default setting. |
| RTP Port | Set the port to send RTP. IP Phone will select one idle port for RTP if you set "0", otherwise use the value user set. |
| Cancel Message Enable | When you set enable, an unregistered message will be sent before registration, while you set disable, unregistered message will not be sent before registration. You should set the option for different Proxy. |
| Prack Enable | Enable / Disable prack. |
| SIP Ping Enable | If this option enable, IP Phone will send SIP-PING to Server periodically instead of sending hello packet. The send interval is Keep-alive interval. |
| Keep-alive interval (10-60s) | The interval that IP Phone will send an empty packet to Proxy. |

Chapter 6

Network Setting

Basic

In this item you can program all the Network parameters.

| Status | SIP Account | Network | Phone | Administration |
|--------|-------------------|---------|-------|----------------|
| Basic | MAC Address Clone | VPN | DMZ | QoS |

Internet Port (WAN)

Internet Port (WAN)

| | |
|--------------------------|--------------------------------|
| Internet Connection Type | Automatic Configuration - DHCP |
| DNS Type | Manual |
| Primary DNS | 168 . 95 . 1 . 1 |
| Second DNS | 168 . 95 . 1 . 2 |

PC Port(LAN)

PC Port(LAN)

| | |
|-------------------------|-------------------|
| PC Port Connection Type | NAT |
| Local IP Address: | 192 . 168 . 1 . 1 |
| Subnet Mask: | 255.255.255.0 |

Network Address Server Settings (DHCP)

| | |
|-------------------|-------------------------|
| Local DHCP Server | Enable |
| Start IP Address | 192 . 168 . 1 . 2 |
| Number of Address | 253 |
| Client Lease Time | 48 Hr(0 means one day). |
| Primary DNS | 219 . 141 . 136 . 10 |
| Second DNS | 219 . 141 . 140 . 10 |

Internet Port (WAN)

Internet Port WAN (Static IP)

Internet Port (WAN)

Internet Connection Type:

IP Address: . . .

Subnet Mask: . . .

Default Gateway: . . .

Primary DNS: . . .

Second DNS: . . .

| Item | Descriptions |
|---------------------------------|---------------------------------------|
| Internet Connection Type | Choose Static IP. |
| IP Address | The IP address of Internet port |
| Subnet Mask | The subnet mask of Internet port. |
| Default Gateway | The default gateway of Internet port. |
| Primary DNS | The primary DNS of Internet port. |
| Second DNS | The second DNS of Internet port. |
| Internet Connection Type | Choose Static IP. |

Internet Port WAN (DHCP)

Internet Port (WAN)

Internet Connection Type:

DNS Type:

Primary DNS: . . .

Second DNS: . . .

| Item | Descriptions |
|---------------------------------|---|
| Internet Connection Type | Choose Automatic Configuration-DHCP. |
| DNS type | Choose DNS type from Manual and Automatic 1. In Manual: user should set the Primary DNS and Second DNS manually. |

2. In Automatic: IP Phone will get the Primary DNS and Second DNS from DHCP Server automatically.

Internet Port WAN (PPPoE)

Internet Port (WAN)

Internet Port (WAN)

Internet Connection Type:

PPPoE Account:

PPPoE Password:

MTU:

MRU:

PPPoE Auto Dial:

DNS Type:

Primary DNS: . . .

Second DNS: . . .

| Item | Descriptions |
|---------------------------------|--|
| Internet Connection Type | Choose PPPoE. |
| PPPoE Account | Fill in the PPPoE account which get from Internet Service Provider |
| PPPoE Password | Fill in the PPPoE account get from Internet Service Provider |
| PPPoE Auto-Dial | Enable / Disable PPPoE Auto-Dial. |
| DNS Type | Choose DNS type from Manual and Automatic 1. In Manual: user should set the Primary DNS and Second DNS manually. 2. In Automatic: IP Phone will get the Primary DNS and Second DNS from DHCP Server automatically. |
| Primary DNS | The primary DNS of Internet port. |
| Second DNS | The second DNS of Internet port. |

PC Port(LAN)

Support Three mode disable,NAT, Bridge mode

PC Port(LAN)

PC Port(LAN)

PC Port Connection Type:

Local IP Address: . . .

Subnet Mask:

| Item | Descriptions |
|--------------------------------|--|
| PC Port Connection Type | Choose the PC port connection type from disable, NAT and Bridge. <i>NAT</i> - The product will be same as a router. <i>Bridge</i> - The LAN port is same as the WAN port <i>Disable</i> - PC port switch to NAT mode, but Internet port and PC port can't communication to each other.(The device behind the PC port still can connect to each other) |
| Local IP Address | Set the IP address of PC port. Efficient when user choose NAT. |
| Subnet Mask | Set the subnet mask of PC port. Efficient when user choose NAT. |

Network Address Server Settings (DHCP)

Support Three mode disables, NAT, Bridge mode,

DHCP Server - It will assign the IP Addressed set here to devices that connect to the LAN port.

Number of Address - You may limit the number of addresses your router hands out.

Network Address Server Settings (DHCP)

| | |
|-------------------|--|
| Local DHCP Server | <input type="button" value="Enable"/> |
| Start IP Address | <input type="text" value="192"/> . <input type="text" value="168"/> . <input type="text" value="252"/> . <input type="text" value="2"/> |
| Number of Address | <input type="text" value="253"/> |
| Client Lease Time | <input type="text" value="48"/> Hr(0 means one day). |
| Primary DNS | <input type="text" value="219"/> . <input type="text" value="141"/> . <input type="text" value="136"/> . <input type="text" value="10"/> |
| Second DNS | <input type="text" value="219"/> . <input type="text" value="141"/> . <input type="text" value="140"/> . <input type="text" value="10"/> |

| Item | Descriptions |
|--------------------------|--|
| Local DHCP Server | Enable / Disable DHCP Server. If PC port is not in NAT mode, user can not enable DHCP server. |
| Start IP Address | The starting IP address which IP phone will attribute to clients. Note: The Network Sect of DHCP Server Start Address should be the same with the one that VIP-256PT's PC port. Generally speaking, you can use the default setting. |
| Number of Address | Number of IP address will distribute to clients. |
| Client Lease Time | The interval of DHCP will send request to continue in period of validity. Unit is hour. |
| Primary DNS | Primary DNS that DHCP Server will distribute. You can use the default setting. |
| Secondary DNS | Secondary DNS that DHCP Server will distribute. You can use the default setting. |
| Local DHCP Server | Enable / Disable DHCP Server. If PC port is not in NAT mode, user can not enable DHCP server. |

MAC Address Clone

MAC Address Clone: Some ISPs will require you to register your MAC address. If you do not wish to re-register your MAC address, you can have the router clone the MAC address that is registered with your ISP.

MAC Address Clone

MAC Clone

Clone WAN MAC: : : : : :

| Item | Descriptions |
|-----------------------|--|
| MAC Clone | <p>MAC is the hardware address of network equipment. Sometimes, network providers may bind network account with the network equipment's MAC address. So you may not pass the provider's authentication when you use a new VIP-256PT. In this case, you can use MAC Clone to copy your PC's MAC address to VIP-256PT's Internet port.</p> <p>MAC is an important parameter for network equipments, so you should make sure that the MAC is right, in order to prevent to make VIP-256PT unusable.</p> <p>You can login VIP-256PT's Web via PC port if you are incautious to make it wrong. And then cloning the right MAC or resume the default settings.</p> |
| MAC Clone Step | <p>Step 1 Press <input type="button" value="Get Current PC MAC Address"/> button to get the PC's MAC address</p> <p>Step 2 Press <input type="button" value="Save Settings"/> to save the changes</p> <p>Step 3. Press <input type="button" value="Clear"/> to cancel MAC address clone.</p> <p>Step 4. Press Reboot to reboot VIP-256PT.</p> |

VPN

A Virtual Private Network (VPN) is the extension of a private network that encompasses links across shared or public networks like the Internet. In short, by VPN technology, you can send data between two computers across a shared or public network in a manner that emulates the properties of a point-to-point private link.

VPN Settings

Administration

| | |
|-----------------------|--------------------------------------|
| VPN Enable: | <input type="text" value="PPTP"/> |
| Initial Service IP: | <input type="text" value="0.0.0.0"/> |
| Initial Service Port: | <input type="text" value="80"/> |
| User Name: | <input type="text" value="d1"/> |
| Password: | <input type="text" value="d1"/> |
| Route Strategy: | <input type="text" value="All"/> |

| Item | Descriptions |
|-----------------------------|---|
| VPN Enable | Enable / Disable VPN. And user can choose the VPN mode from PPTP and L2TP. |
| Initial Service IP | VPN server IP address. |
| Initial Service Port | VPN server port. |
| User Name | The user name for authentication. |
| Password | Password for authentication. |
| Route Strategy | Choose route mode from All or SIP. |

DMZ

Enabling this option will expose the specified host to the Internet. All ports between the DMZ Start Port and the DMZ End Port will be accessible from the Internet.

| | | | | |
|--------|-------------------|---------|------------|----------------|
| Status | SIP Account | Network | Phone | Administration |
| Basic | MAC Address Clone | VPN | DMZ | QoS |

Demilitarized Zone (DMZ)

DMZ

| | |
|---------------------|-----------------------------------|
| Use DMZ | Disable ▾ |
| DMZ Host IP Address | <input type="text"/> |
| DMZ Start Port | <input type="text" value="1024"/> |
| DMZ End Port | <input type="text" value="2024"/> |

| Item | Descriptions |
|----------------------------|--------------------------------|
| Use DMZ | Enable / Disable DMZ |
| DMZ Host IP Address | set the IP address of DMZ host |
| DMZ Start Port | set the start port of DMZ host |
| DMZ End Port | set the end port of DMZ host |

DMZ Example:

For example, the DMZ computer's IP is "192.168.1.2", "DMZ start port" and "DMZ end port" is 20 and 1023. The DMZ function is that DMZ computer can get the requests from the ports (20 to 1023) of VIP-256PT's Internet port.

QoS

Layer 3 QoS: Set the IP TOS value of SIP and RTP Packets.

Layer 2 QoS: Set the value of 802.1Q and 802.1p priority

| | | | | |
|--------|-------------------|---------|-------|----------------|
| Status | SIP Account | Network | Phone | Administration |
| Basic | MAC Address Clone | VPN | DMZ | QoS |

QoS Settings

Layer 3 QoS

| | |
|----------|--------------------------------|
| SIP QoS | <input type="text" value="0"/> |
| RTP QoS | <input type="text" value="0"/> |
| Data QoS | <input type="text" value="0"/> |

Layer 2 QoS

| | |
|----------------|--------------------------------|
| 802.1Q/VLAN ID | <input type="text" value="0"/> |
| 802.1p PRI | <input type="text" value="0"/> |

| Item | Descriptions |
|------|---|
| | Some ISP supply QoS services. The QoS services can make the best of improving the quality of Voice application. You can get the settings from the ISP if they supply QoS services. Please connect with them if you need it. |

Chapter 7 7

Phone Configurations

Performance

User can configuration the value of ring volume, speakerphone volume, handset volume and so on.

Volume

Volume Settings - Adjust the input gain or the volume of handset/speaker/ring

Preference

Volume Settings

| | | | |
|---------------------|-----|--------------------------|-----|
| Handset Input Gain: | 5 ▼ | Speakerphone Input Gain: | 5 ▼ |
| Handset Volume: | 5 ▼ | Speaker Volume: | 5 ▼ |
| Ringer Volume: | 5 ▼ | | |

| Items | Description |
|--------------------------------|---|
| Handset Input Gain | Adjust the handset input gain from 0-7 |
| Handset Volume Gain | Adjust the output gain from 0-7 |
| Speakerphone Input Gain | Adjust the speakerphone input gain from 0-7 |
| Speaker Volume | Adjust the speaker volume form 0-7 |
| Ringer Volume | Adjust the ringer volume form 0-7. |

Regional

Modification the Tone type and tone parameters.

Regional

| | | |
|-----------------------|-----|--------------------------|
| Tone Type: | USA | |
| Dial Tone | | |
| Busy Tone | | |
| Off Hook Warning Tone | | |
| Ring Back Tone | | |
| Call Waiting Tone | | |
| Min Jitter Delay(ms): | 0 | Max Jitter Delay(ms): 80 |
| Ringing Time(Sec): | 60 | |

| Items | Description |
|---------------------------------|---|
| Tone Type | Choose tone type form China, US, Hong Kong and KR.....Beside Custom item the other tone type already defin in the system. |
| Min Jitter Delay (ms) | The Min value of VIP-256PT's jitter delay, VIP-256PT's jitter is an adaptive jitter mechanism. |
| Max Jitter Delay (ms) | The Max value of VIP-256PT's jitter delay, VIP-256PT's jitter is an adaptive jitter mechanism. |
| Hook-On Tone Delay (sec) | How long VIP-256PT will delay to sound hook-on tone when call party end call. |
| Ringing Time(Sec) | How long VIP-256PT will ring |
| Busy Tone Delay(Sec) | Before the busy tone VIP-256PT will send the delay tone (like di,di.), this parameter defin how long the delay tone is. |

Call Forward

Call Forward - This feature allows you to forward an incoming call to another phone number.

Call Forward

| | | | |
|--------------------|----------------------|--------------------|---------------------------------|
| All Forward: | <input type="text"/> | Busy Forward: | <input type="text"/> |
| No Answer Forward: | <input type="text"/> | No Answer Timeout: | <input type="text" value="20"/> |

| Items | Description |
|--------------------------|---|
| All Forward | The phone number which will be forwarded to. IP Phone will forward all calls to the phone number immediately when there is an incoming call. |
| Busy Forward | The phone number which will be forwarded to when line is busy. |
| No Answer Forward | The phone number which will be forwarded to when there's no answer at your phone. |
| No Answer Timeout | The seconds to delay forwarding calls, if there is no answer at your phone. |

Miscellaneous

Auto Answer - All the incoming calls will be put through automatically.

Miscellaneous

| | | | |
|----------------|--------------------------------------|-----------------------|--|
| Auto Answer: | <input type="text" value="Disable"/> | Call Immediately Key: | <input type="text" value="#"/> |
| Dial Time Out: | <input type="text"/> | Handsfree Key Mode: | <input type="text" value="Handsfree"/> |
| ICMP Ping: | <input type="text" value="Disable"/> | | |

| Items | Description |
|-----------------------------|---|
| Auto Answer | Enable / Disable auto answer. If enable, VIP-256PT will auto answer all incoming call immediately. |
| Dial Time Out | How long VIP-256PT to sound dial out tone when VIP-256PT dialing number. |
| Call Immediately Key | Choose call immediately key form * or #. |
| ICMP Ping | Enable / Disable ICMP Ping. If enable this option, VIP-256PT will ping the SIP Server every interval time, otherwise, It will send "hello" empty packet to the SIP Server. |
| Handsfree Key Mode | Choose the hands free key mode from hands free and headset. |

Multi-Functional Key

In here user can program the Multi-Function Key like Speed dial , BLF, Shortcut Key, Call Pick up

| Key | Type | Mode | Line | Expansion | Pickup Code |
|------------|---------|-----------|--------|-----------|-------------|
| Exp Key 1 | Disable | Phonebook | Line 1 | | |
| Exp Key 2 | Disable | Phonebook | Line 1 | | |
| Exp Key 3 | Disable | Phonebook | Line 1 | | |
| Exp Key 4 | Disable | Phonebook | Line 1 | | |
| Exp Key 5 | Disable | Phonebook | Line 1 | | |
| Exp Key 6 | Disable | Phonebook | Line 1 | | |
| Exp Key 7 | Disable | Phonebook | Line 1 | | |
| Exp Key 8 | Disable | Phonebook | Line 1 | | |
| Exp Key 9 | Disable | Phonebook | Line 1 | | |
| Exp Key 10 | Disable | Phonebook | Line 1 | | |

| Items | Description |
|---------------------------|---|
| Program Step: | <p>Step 1. Choose one current key board to configuration from Basic Board, Expansion Board 1, Expansion Board 2, Expansion Board 3, Expansion Board 4, Expansion Board 5 and Expansion Board 6.</p> <p>Step 2. Choose one Exp Key from Exp Key 1 to Exp Key 20.</p> <p>Step 3. Choose one function type from speed dial, BLF, shortcut key, call pickup and call park.</p> <p>Step 4. Set the other corresponding parameters.</p> <p>Step 5. Press Save Settings button to save changes, press Cancel Changes button to cancel changes.</p> |
| Adding speed dial: | <p>Speed Dial: You can configure the key as simplified speed dial key. This key function allows you to easily access the most frequently dialed numbers.</p> <ol style="list-style-type: none"> 1. Choose one Exp Key to configuration 2. Select the speed dial from the drop down list 3. Choose the Line from auto (the first line registered), line1, line2, line3, line 4 and line 5 |

4. Fill the phone number in Expansion
5. Press  to save changes and you can see the status of corresponding LED is solid green.
6. Press  button to make changes effective.

If set properly, press the corresponding key to make call immediately, and the status of LED is solid red.

Adding BLF:

BLF: The button can be configured Busy Line Field function with specified account. This feature must be supported by the sip server.

- 1) Choose one Exp Key to configuration
- 2) Select the BLF from the drop down list
- 3) Choose the Line from line1, line2, line3, line 4 and line 5.
- 4) Fill the monitored phone number in Expansion
- 5) Fill the pickup code in Pickup Code if user wants to pickup the call when there is a new call coming in monitored phone.
- 6) Press  to save changes and you can see the status of corresponding LED is solid green.
- 7) Press  button to make changes effective.

Adding shortcut key:

Shortcut Keys: Shortcut Keys are predefined shortcuts to phone and call functions.

1. Choose one Exp Key to configuration
2. Select the shortcut key from the drop down list
3. Select the mode from the phonebook, call history, text message, volume+, volume- and login/logout in the drop down list.
4. Press  to save changes and you can see the status of corresponding LED is solid green.
5. Press  button to make changes effective.
6. If set properly, press the corresponding button to access to phonebook, call history, text message, volume+, volume- and login/logout menu directly.

Adding call park:

1. Choose one Exp Key to configuration
2. Select the Call Park from the drop down list in type
3. Choose the Line from line1, line2, line3, line 4 and line 5.
4. Fill the pickup extension code in Expansion
5. Press **Save Settings** to save changes and you can see the status of corresponding LED is solid green.
6. Press **Reboot** button to make changes effective.

Dial Plan

Dial Plan

General

Dial Plan

| No. | Line | Digit Map | Action | Move Up | Move Down | |
|-----|-------------------------------------|----------------------|-----------------------------------|---------|-----------|--|
| | <input type="text" value="Line 1"/> | <input type="text"/> | <input type="text" value="Deny"/> | | | |

Line

Digit Map

Action

| Items | Description |
|------------------|---|
| Dial Plan | Enable / Disable dial rule. |
| Line | Choose the call mode from line1, line2, line3, line4 and line5. |
| Digit Map | Fill in the sequence used to match input number |
| | The syntactic, please refer to the following Dial Plan Syntactic |
| Action | Choose the dial plan mode from Deny and Dial Out. Deny means VIP-256PT will reject the matched number, while Dial Out means VIP-256PT allow dial out the matched number. |
| Move Up | Press it to move up. |

Dial Plan

General

Dial Plan

| No. | Line | Digit Map | Action | Move Up | Move Down | <input type="checkbox"/> |
|-----|-------|--------------------|----------|---------|-----------|--------------------------|
| 1 | Line1 | <9:010>2010110 | Dial Out | | | <input type="checkbox"/> |
| 2 | Line2 | <5,:><:241333>8101 | Dial Out | | | <input type="checkbox"/> |
| 3 | Line3 | <[4-6]:>22x<:333> | Dial Out | | | <input type="checkbox"/> |
| 4 | Line4 | <9,8,:>711 | Dial Out | | | <input type="checkbox"/> |
| 5 | Line5 | <[2-5],:5>622. | Deny | | | <input type="checkbox"/> |

Line

Digit Map

Action

| Items | Description |
|--------------------------------|--|
| Adding one dial plan: | <p>Step 1. Enable Dial Plan</p> <p>Step 2. Click Add button, and the configuration table</p> <p>Step 3. Fill in the value of parameters.</p> <p>Step 4. Press OK button to end configuration.</p> <p>Step 5. Press Save Settings button to save changes.</p> |
| Editing one dial plan: | <p>Step 1. Enable Dial plan</p> <p>Step 2. Choose one dial plan</p> <p>Step 3. Click Edit button, and the configuration table</p> <p>Step 4. Change the value of parameters.</p> <p>Step 5. Press OK button to end configuration.</p> <p>Step 6. Press Save Settings button to save changes.</p> |
| Deleting one dial plan: | <p>Step 1. Enable Dial plan</p> <p>Step 2. Choose one dial plan</p> |

Step 3. Click Delete button to delete the dial plan

Dial Plan Syntactic

| Items | Description |
|-------------------------------------|---|
| 0 1 2 3 4 5 6 7 8 9 * # | Legal characters |
| X | Lowercase letter x stands for one legal character |
| [sequence] | To match one character form sequence. For example: 1.[0-9]: match one digit form 0 to 9 2.[23-5*]: match one character from 2 or 3 or 4 or 5 or * |
| x. | Match to $x^0, x^1, x^2, x^3, \dots, x^n$ For example: "01.": can match "0", "01", "011", "0111",, "01111..." |
| <dialled: substituted> | Replace dialed with substituted. For example : <8:1650>123456 : input is "85551212", output is"16505551212" |
| x,y | Make outside dial tone after dialing "x", stop until dialing character "y" For example : "9,1xxxxxxxx":VIP-256PT make outside dial tone after inputting "9", stop tone until inputting "1" "9,8,010x": make outside dial tone after inputting "9", stop tone until inputting "0" |
| T | Set the delayed time. For example: "<9:111>T2": VIP-256PT will dial out the matched number "111" after 2 seconds. |

Dial Plan

General
Dial Plan

| No. | Line | Digit Map | Action | Move Up | Move Down | |
|-----|-------|----------------------|----------|---------|-----------|--------------------------|
| 1 | Line1 | <:010>#12<#:;%23>2 | Dial Out | ▲ | ▼ | <input type="checkbox"/> |
| 2 | Line2 | <5,;:<:241333>8101 | Dial Out | ▲ | ▼ | <input type="checkbox"/> |
| 3 | Line3 | <[4-5]:>22xxxx<:333> | Dial Out | ▲ | ▼ | <input type="checkbox"/> |
| 4 | Line4 | <2-3,;5:>622. | Dial Out | ▲ | ▼ | <input type="checkbox"/> |
| 5 | Line5 | 777x.8 | Deny | ▲ | ▼ | <input type="checkbox"/> |

Example 1 (points to Line 1)
Example 2 (points to Line 2)
Example 3 (points to Line 3)
Example 4 (points to Line 4)
Example 5 (points to Line 5)

| Items | Description |
|------------------|--|
| Example 1 | If user dials #12#2, VIP-256PT will call 010#12%232 immediately. |
| Example 2 | If user dials 5,8101, VIP-256PT will call 2413338101 immediately, And VIP-256PT will make outside dial tone after inputting "5", stop tone until inputting "8". |
| Example 3 | If user dials 422xxxx or 522xxxx, VIP-256PT will call 22xxxx333 immediately. |
| Example 4 | If user dials 2,622 or 2,6222 or 2,62222 or 2.622222 or 3.622222 , VIP-256PT will call 5622 or 56222 or 562222 or 5622222 or 5622222 immediately. And VIP-256PT will make outside dial tone after inputting "2" or "3", stop tone until inputting "6". |
| Example 5 | If user dials 777x8 , VIP-256PT will reject the phone number out. |

Phonebook

Phonebook

The list Show all the directory entries. Please click "Save Settings" button to save this list after you edit or add an item.

Name

Number

| Items | Description |
|---------------|------------------------|
| Name | Input the name |
| Number | Input the phone number |

Phonebook

| Index | Name | Number | <input type="checkbox"/> |
|-------|-------|--------|-------------------------------------|
| 1 | amm | 111 | <input type="checkbox"/> |
| 2 | bob | 112 | <input type="checkbox"/> |
| 3 | tom | 113 | <input checked="" type="checkbox"/> |
| 4 | alice | 114 | <input type="checkbox"/> |
| 5 | lily | 115 | <input type="checkbox"/> |
| 6 | arice | 116 | <input type="checkbox"/> |
| 7 | jon | 117 | <input type="checkbox"/> |
| 8 | wic | 118 | <input type="checkbox"/> |
| 9 | wali | 119 | <input type="checkbox"/> |
| 10 | luce | 120 | <input type="checkbox"/> |

| Items | Description |
|-------|--|
| | Adding one phone book: Step 1. Click Add button, and the configuration table Step 2. Fill in the value of parameters. Step 3. Press OK button to end configuration. Step 4. Press Save Settings button to save changes. |
| | Editing one phone book: |

- Step 1. Choose one phone book
- Step 2. Click Edit button, and the configuration table
- Step 3. Change the value of parameters.
- Step 4. Press OK button to end configuration.
- Step 5. Press Save Settings button to save changes.

Deleting one phone book:

- Step 1. Choose one phone book
- Step 2. Click Delete button to delete the phone book

Move one phone book to Black list:

- Step 1. Choose one phone book
- Step 2. Click Move to blacklist button to delete the phone book

Black List

Calls from this list can not get through.

Name


Number

| Items | Description |
|---------------|------------------------|
| Name | Input the name |
| Number | Input the phone number |

| Black List | | | |
|------------|------|--------|-------------------------------------|
| Index | Name | Number | <input type="checkbox"/> |
| 1 | k | 122 | <input type="checkbox"/> |
| 2 | w | 123 | <input checked="" type="checkbox"/> |
| 3 | q | 124 | <input type="checkbox"/> |
| 4 | r | 125 | <input type="checkbox"/> |

Name

Number
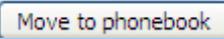
| Items | Description |
|-------|---|
| | <p>Adding one Black List:</p> <p>Step 1. Click Add button, then the configuration table.</p> <p>Step 2. Fill in the value of parameters.</p> <p>Step 3. Press OK button to end configuration.</p> <p>Step 4. Press Save Settings button to save changes.</p> |
| | <p>Editing one Black List:</p> <p>Step 1. Choose one black list</p> <p>Step 2. Click Edit button, and the configuration table</p> <p>Step 3. Change the value of parameters.</p> <p>Step 4. Press OK button to end configuration.</p> <p>Step 5. Press Save Settings button to save changes.</p> |
| | <p>Deleting one Black List:</p> <p>Step 1. Choose one black list</p> <p>Step 2. Click Delete button to delete the black list</p> |
| | <p>Moving one Black List to phonebook:</p> <p>Step 1. Choose one black list</p> <p>Step 2. Click  button to move the black list to the phonebook</p> |

Call Log

To view the call log information such as redial list (incoming call), answered call and missed call

| Status | SIP Account | Network | Phone | Administration |
|------------|----------------------|-----------|-----------|----------------|
| Preference | Multi-Functional Key | Dial Plan | Phonebook | Call Log |

| Redial List | | | | | |
|-------------|------|--------|-------------|----------|--------------------------|
| Index | Name | Number | Start Time | Duration | <input type="checkbox"/> |
| 1 | 1000 | 1000 | 09/02 17:56 | 00:00:33 | <input type="checkbox"/> |
| 2 | 1000 | 1000 | 09/02 17:54 | 00:00:00 | <input type="checkbox"/> |
| 3 | 1001 | 1001 | 09/02 17:54 | 00:00:11 | <input type="checkbox"/> |

| Answered Calls | | | | | |
|----------------|------|--------|-------------|----------|--------------------------|
| Index | Name | Number | Start Time | Duration | <input type="checkbox"/> |
| 1 | 1000 | 1000 | 09/02 17:54 | 00:00:22 | <input type="checkbox"/> |

VoIP IP Phone Administration

Management

In this page can configuration the value of Time/Date, password, web access, and system log and so on

Time/Date

| Items | Description |
|--|--|
| NTP Server | Fill in the NTP server IP address or Domain name |
| Time Zone | Choose the time zone |
| Manual Time | Adjust time by manual |
| Alarm Enable | If or not enable alarm |
| Alarm Time | Set alarm time |
| Daylight Saving Time | If or not enable daylight saving time. |
| Offset | Offset time, "-60" means advancing 60miniter, "60" means delaying 60minite |
| Start Month | Choose starting month |
| Start Day of Week | Choose starting day |
| Start Day of Week Last in Month | Choose starting week |
| Start Hour of Day | Choose starting hour |
| Stop Month | Choose stopping month |
| Stop Day of Week | Choose stopping day |
| Stop Day of Week Last in Month | Choose stopping week |
| Stop Hour of Day | Choose stopping the function hour |

Time/Date

Time/Date

| | |
|---------------------------------|---|
| NTP Server: | <input type="text" value="time.bora.net"/> |
| Time Zone: | <input type="text" value="[GMT +09:00]"/> |
| Manual Time: | <input type="text" value=""/> : <input type="text" value=""/> : <input type="text" value=""/> |
| Alarm Enable: | <input type="text" value="Disable"/> |
| Alarm Time: | <input type="text" value="17"/> : <input type="text" value="40"/> : <input type="text" value="00"/> |
| Daylight Saving Time | <input type="text" value="Enable"/> |
| Offset | <input type="text" value="60"/> Min. |
| Start Month | <input type="text" value="March"/> |
| Start Day of Week | <input type="text" value="Sunday"/> |
| Start Day of Week Last in Month | <input type="text" value="Last in Month"/> |
| Start Hour of Day | <input type="text" value="2"/> |
| Stop Month | <input type="text" value="October"/> |
| Stop Day of Week | <input type="text" value="Sunday"/> |
| Stop Day of Week Last in Month | <input type="text" value="Last in Month"/> |
| Stop Hour of Day | <input type="text" value="3"/> |

| Items | Description |
|---|-------------|
| Alarm Setting: | |
| Step 1. Enable alarm | |
| Step 2. Set alarm time | |
| Step 3. Press Save Settings button to save changes and then press Reboot button to active changes | |

| | |
|---------------|---|
| Alarm Enable: | <input type="text" value="Enable"/> |
| Alarm Time: | <input type="text" value="17"/> : <input type="text" value="40"/> : <input type="text" value="00"/> |

| Items | Description |
|---|-------------|
| Daylight Saving Time: | |
| Step 1. Enable Daylight Saving Time. | |
| Step 2. Set value of offset, | |
| Step 3: Set starting Month/Week/Day/Hour in Start Month/Start Day of Week Last in Month/Start Day of Week/Start Hour of Day, analogously set stopping Month/Week/Day/Hour in Stop Month/Stop Day of Week Last in Month/Stop Day of Week/Stop Hour of Day. | |
| Step 5. Press Saving Settings button to save and press Reboot button to active changes. | |

| | |
|---------------------------------|-----------------|
| Daylight Saving Time | Enable ▾ |
| Offset | 60 Min. |
| Start Month | March ▾ |
| Start Day of Week | Sunday ▾ |
| Start Day of Week Last in Month | Last in Month ▾ |
| Start Hour of Day | 2 |
| Stop Month | October ▾ |
| Stop Day of Week | Sunday ▾ |
| Stop Day of Week Last in Month | Last in Month ▾ |
| Stop Hour of Day | 3 |

Password Reset

| Items | Description |
|--------------------------|---|
| User Type | Choose the user type from admin and user. |
| Original Password | Input original password |
| New Password | Input the new password |
| Password Confirm | Input the new password again |

Password Reset

Password Reset

User Type: admin ▾

Original Password:

New Password:

Confirm Password:

| Items | Description |
|-----------------------------|--|
| Change the password: | <p>Step 1. Choose the admin from the drop-down list.</p> <p>Step 2. Input original password, default setting is null.</p> <p>Step 3. Input a new password twice time in New Password and Confirm</p> |

Web Access

| Items | Description |
|----------------------------|--|
| WAN Interface Login | If or not enable user login WEB via Internet port. If enable, user can access Web to administration. |
| Web Login Port | Set the port which used to login WEB via Internet port and PC port, Default is 8080, that is why URL should have 8080. |
| Web Idle Timeout | Set the web idle timeout time. The web page can be logged out after Web Idle Timeout without any operation. |

Web Access:

Web Access:

WAN Interface Login:

Web Login Port:

Web Idle Timeout: Min.

System Log Setting

| Items | Description |
|----------------------|--|
| SysLog Server | Set the SysLog Server IP address or domain name for VIP-256PE. |
| Log Level | Choose log level from None/Error/Warn/INFO/Debug. The priority changes from left to right, left is the lowest, right is the highest; the higher priority, the more information in syslog. |

System Log Setting

Syslog Server:

Log Level:

Local and remote Syslog

In local:

- Step 1. Set syslog server null and choose one kind of Log Level.
- Step 2. Press Saving Settings button to save and press Reboot button to active changes.
- Step 3. User can view syslog in Status/Syslog webpage.

In remote:

- Step 1. Fill in syslog server IP address or domain name
- Step 2. Choose one kind of Log Level.
- Step 3. Press Saving Settings button to save and press Reboot button to active changes.
- Step 4. User can view syslog in syslog server, and you can also view the syslog in Status/Syslog webpage.

System Log Setting

System Log Setting

Syslog Server:

Log Level:

The screenshot shows a web interface with a navigation bar at the top containing tabs for Status, SIP Account, Network, Phone, and Administration. Below this is a sub-menu with Basic, DHCP, and Syslog. The Syslog tab is active, displaying a list of log entries. The entries are as follows:

- <01/01 00:00:04>***system booting***
- <01/01 00:00:07>ip conflict
- <01/01 00:00:08>Start Register Client ...
- <01/01 00:00:04>***system booting***
- <01/01 00:00:10>Start Register Client ...
- <01/01 00:00:04>***system booting***
- <01/01 00:00:07>ip conflict
- <01/01 00:00:08>Start Register Client ...
- <02/09 16:48:44>ip conflict
- <02/09 16:49:14>ip conflict
- <02/09 16:49:44>ip conflict
- <02/09 16:50:14>ip conflict
- <02/09 16:50:44>ip conflict
- <02/09 16:51:15>ip conflict
- <01/01 00:00:04>***system booting***
- <01/01 00:00:09>Start Register Client ...
- <01/01 00:00:04>***system booting***

Factory Defaults

| Items | Description |
|-----------------|---|
| Factory Default | Press Factory Default button to set VIP-256PE to default. |

Factory Defaults:

Reset to Factory Default:

Factory Default

Save Settings

Cancel Changes

Reboot

Update Firmware

Click on the *Browse...* button to select the firmware file to be uploaded to the router.

Firmware Management

Firmware Upgrade

Upgrade Types:

Upgrade Software

Local Upgrade:

Browse...

Security

CA Certificate - The issuer of the certificate.

Client Certificate - user's certificate issued by CA.

Private Key - user's private key file.

| Items | Description |
|------------------------------|--|
| TR069 CA Certificate | The CA certificate file of TR069 |
| TR069 Client Certificate | The Client Certificate file of TR069 |
| TR069 Private Key | The Private Key file of TR069 |
| Provision CA Certificate | The CA certificate file of provision |
| Provision Client Certificate | The Client Certificate file of provision |
| Provision Private Key | The Private Key file of provision |

Certificate Update

Update Type:

Local Upload:

Upload TR069 and Provision

User can upload cert files for TR069 and Provision as follows:

Step 1. Choose one File Type from .

Step 2. Press to browser file.

Step 3. Press to start upgrading.

Next is the webpage which all files have well uploaded.

Certificate Management

TR069

| | Issued To | Issued By | Expiration |
|-------------------|-----------|-----------|------------|
| CA Certificat | none | none | none |
| Client Certificat | none | none | none |
| Private Key | | none | |

Provision

| | Issued To | Issued By | Expiration |
|-------------------|-----------|-----------|------------|
| CA Certificat | none | none | none |
| Client Certificat | none | none | none |
| Private Key | | none | |

Certificate Update

Update Type:

Local Upload:

Provision

Provision allow a device automatically resync to a specific configuration file on a TFTP server or a web server which use HTTP or HTTPS.

- 1) Provisioning allow VIP-256PT auto-upgrading or auto-configuring
- 2) VIP-256PT supports 3 ways to provision: TFTP, HTTP and HTTPS.
 - ◆ Before testing or using TFTP, user should have tftp server and upgrading file and configuring file.
 - ◆ Before testing or using HTTP, user should have http server and upgrading file and configuring file.
 - ◆ Before testing or using HTTPS, user should have https server and upgrading file and configuring file and CA Certificate file(should same as https server's) and Client Certificate file and Private key file
- 3) User can uploading CA Certificate file and Client Certificate file and Private Key file in Equipment Manage/Cert Manage page.

| Items | Description |
|---------------------------------------|--|
| Provision Enabled | If or not enable provision |
| Resync On Reset | If or not enable resync after VIP-256PT restart |
| Resync Random Delay | Set the maximum delay for request the synchronization file |
| Resync Periodic | Set the periodic time for resync, default is 3600s |
| Resync Error Retry Delay | If the last resync was failure, VIP-256PT will retry resync after the "Resync Error Retry Delay" time, default is 3600s |
| Forced Resync Delay | If it's time to resync, but VIP-256PT is busying now, in this case, VIP-256PT will wait for a period time, the longest is "Forced Resync Delay" , default is 14400s, when the time over, VIP-256PT will forced to resync |
| Resync After Upgrade Attempt | If or not enable firmware upgrade after resync, "yes" is enable |
| Profile Rule | URL of profile provision file |
| Phone Num1 for Config | The first phone number which used to reboot VIP-256PT in remote. |
| Phone Num2 for Config | The second phone number which used to reboot VIP-256PT in remote. |
| Auto-upgrade Enabled | If or not enable firmware upgrade. |
| Auto-upgrade Error Retry Delay | Set the time to retry upgrade, effective when the last upgrade was failure |
| Upgrade Rule | URL of upgrade file |

Provision

Configuration Profile

| | | | |
|------------------------------|---------------------------------------|---------------------|------------------------------------|
| Provision Enable | <input type="text" value="yes"/> | Resync On Reset | <input type="text" value="yes"/> |
| Resync Random Delay | <input type="text" value="40"/> | Resync Periodic | <input type="text" value="3600"/> |
| Resync Error Retry Delay | <input type="text" value="3600"/> | Forced Resync Delay | <input type="text" value="14400"/> |
| Resync After Upgrade Attempt | <input type="text" value="yes"/> | | |
| Profile Rule | <input type="text"/> | | |
| Private Key Password: | <input type="text" value="whatever"/> | | |
| Phone Num1 for Config | <input type="text"/> | | |
| Phone Num2 for Config | <input type="text"/> | | |

Firmware Upgrade

| | |
|---------------------------|-----------------------------------|
| Upgrade Enable | <input type="text" value="yes"/> |
| Upgrade Error Retry Delay | <input type="text" value="3600"/> |
| Downgrade Rev Limit | <input type="text" value="0"/> |
| Upgrade Rule | <input type="text"/> |

SNMP

Allow the device to be managed by the Manager which is set in the SNMP Manager IP.

| Items | Description |
|----------------------------|---|
| SNMP Enable | If or not enable SNMP |
| Get Community | String, as an express password between management process and the agent process |
| Set Community | String, as an express password between management process and the agent process |
| SNMP Manager IP 1-4 | The IP address of SNMP Manager |



SNMP Configuration

SNMP Configuration

| | |
|-----------------------|-------------------------------------|
| SNMP Service: | <input type="text" value="Enable"/> |
| Read Community Name: | <input type="text"/> |
| Write Community Name: | <input type="text"/> |
| SNMP Manager IP 1: | <input type="text"/> |
| SNMP Manager IP 2: | <input type="text"/> |
| SNMP Manager IP 3: | <input type="text"/> |
| SNMP Manager IP 4: | <input type="text"/> |
| SNMP Trap Server IP: | <input type="text"/> |

TR 069

Allow the device to be managed by the ACS server which is set in the ACS URL.

| Items | Description |
|---------------------------------|--|
| TR069 Enable | If or not enable TR069 |
| CWMP | If or not enable TR069 |
| ACS URL | The URL of TR069 server |
| User Name | The VIP-256PT's user name for connecting to TR069 server |
| Password | The VIP-256PT's password for connecting to TR069 server |
| Periodic Inform Enable | If or not enable periodic information |
| Periodic Inform Interval | The interval to send information to TR069 server |
| User Name | The TR069 server's user name for connecting to VIP-256PT |
| Password | The TR069 server's password for connecting to VIP-256PT |
| SSL Key | Fill in SSL key. |
| User Name | <input type="text"/> |
| Password | <input type="text"/> |
| SSL Key | <input type="text"/> |

Appendix A Frequently Asked Questions List

Q1: No Operation after Power On?

A1: Check if the power adapter is properly connected.

If applicable, check if the PoE (Power over Ethernet) switch behind the IP phone is set correctly.

Q2: No Dial Tone?

A2: Check if the handset cord is properly connected.

Q3: Can not Make a Call?

A3: Check the status of your SIP registration status or contact your administrator, supplier, or ITSP for more information or assistance.

Q4: Can not Receive Any Phone Call?

A4 : Check the status of your SIP registration status, or contact your administrator, supplier, or ITSP for more information or assistance

Q5: No Voice during an Active Call?

A5: Check if the servers support the current audio codec type, or contact your administrator, supplier, or ITSP for more information or assistance.

Q6: Can not connect to the configuration Website?

A6: Check if the Ethernet cable is properly connected.

Check if the URL is right wrote, the format of URL is: http:// the Internet port IP address

Check if your firewall/NAT settings are correct.

Check if the version of IE is IE8, or use other browser such as Firefox or Mozilla, or contact your administrator, supplier, or ITSP for more information or assistance.

Q7: Forget the Password?

A7: Default password of website and menu is null.

If user changed the password and then forgot, you can not access to the configuration website or the menu items which need password.

Solution:

Factory default: press Menu button and choose 16Factory Default, then a notice will appear, choose OK by using the corresponding softkey button.

If you choose factory default, you will return the phone to the original factory settings and will erase ALL current settings, including the directory and call logs.

Q7: How to switch to different line to dial out?

A7: Before dial out, press the correspondence line number you want to use, ex: want to use Line 4 to dial out, must press 2, to switch to line 2 then dial out.



Q7: Why my MSG light would not show any information, when I receive the message?

A7: In SIP accounts / Lines / Supplementary service

Please enable the MWI (Message Waiting Indicate) and in Voice Mailbox numbers, please also assign the Voice mail number.

Supplementary Service Subscription

Supplementary Services

| | | | |
|---------------|-------------------------------------|------------------------|-----------------------------------|
| Call Waiting: | <input type="text" value="Enable"/> | | |
| Dial Prefix: | <input type="text"/> | Hot Line: | <input type="text"/> |
| MWI Enable: | <input type="text" value="Enable"/> | Voice Mailbox Numbers: | <input type="text" value="1000"/> |

Appendix B Specifications

| | |
|------------------------|---|
| Product | 802.3af PoE SIP IP Phone (2 lines) |
| Model | VIP-256PT |
| Hardware | |
| Internet | 10/100M, Half or Full Duplex, auto-negotiation (Power over Ethernet 802.3af compliant) |
| PC | 10/100M, Half or Full Duplex, auto-negotiation |
| Display | 128x64 Graphic LCD with white back light |
| Headset Jack | RJ-9 |
| Function Keys | 2 Line keys and 4 soft keys 12 Dialing Buttons (0~9, *, #) 10 Multi-functional key with dual-color LED |
| Protocols and Standard | |
| Standard | SIP V2 (RFC 3261,3262,3263,3264) Backward Compatible with RFC2543 Session Timer (RFC4028) SDP (RFC2327) RTP/RTCP (RFC1889 and RFC1890) NAPTR for SIP URI Lookup (RFC2915) STUN (RFC 3489) ARP/RARP (RFC 826/903) SNTP (RFC 2030) DHCP HTTP Server for Web Management TFTP/HTTP/HTTPS for Auto Provisioning Message Waiting Indicator (RFC3842) DNS/DNS SRV (RFC1706 and RFC 2782) IEEE802.1Q VLAN/802.1p and IP TOS |
| VPN Network | PPTP and T2TP c encryption |
| Voice Code | G.711 (A-Law, μ -Law), G.729, G.723, G.722 |
| Voice Standard | Adaptive Jitter Buffer Management Voice Activity Detection Comfort Noise Generation Echo Cancellation |
| Security | 802.1p (QoS) User Authentication for configuration pages |
| Features | |
| Call Features | 2 lines Call Waiting Auto Answer Caller ID and call waiting ID 3-way Conference Call Mute ,Redial, Speed Dial, Pick up, Call park ,Dial Plan ,DND, Call Hold, Call Forwarding Call Transfer: blind transfer and attended transfer SMS Functions Support BLF(Busy Lamp Field) Phonebook Black List Call log: redial list, answered calls and missed calls Full-duplex Speakerphone Volume Adjustment: Handset/Headset, Speaker and Ringer |
| Application | MAC address cloning SIP proxy redundancy: dynamic via DNS SRV, A records |

| | |
|----------------------------------|--|
| | Direct IP to IP calling NAT Traversal: Traversal by STUN Built-in NAT Router QoS with Layer 2 and Layer 3 DHCP Server and Client IP conflict detection Support PoE comply with IEEE802.3af |
| Network and Configuration | |
| Internet Connection Type | Fixed IP, DHCP, PPPoE |
| Management | LCD / Keypad UI Web (HTTP) Auto Provision (TFTP/HTTP/HTTPS) |
| Dimension (W x D x H) | 191 x 205 x 75 (W x D x H) mm |
| Operating Environment | 0~50 Degree C, 10~90% humidity |
| Power Requirement | 5 V DC, PoE (IEEE 802.3af) |
| EMC/EMI | FCC, CE |