


# How to update DPC-D211S/D221/D281 (Firmware/Voice prompt /Namelist)


- After updating, initialization is generally not required;
- After updating, initialization is necessary in the following situation:
  - Update from customized products to standard products, or from standard products to customized products
  - Upgrade from an old version to a new version
- Please make a backup before you initialize it

## Steps:

1.Put the updating file into SD card

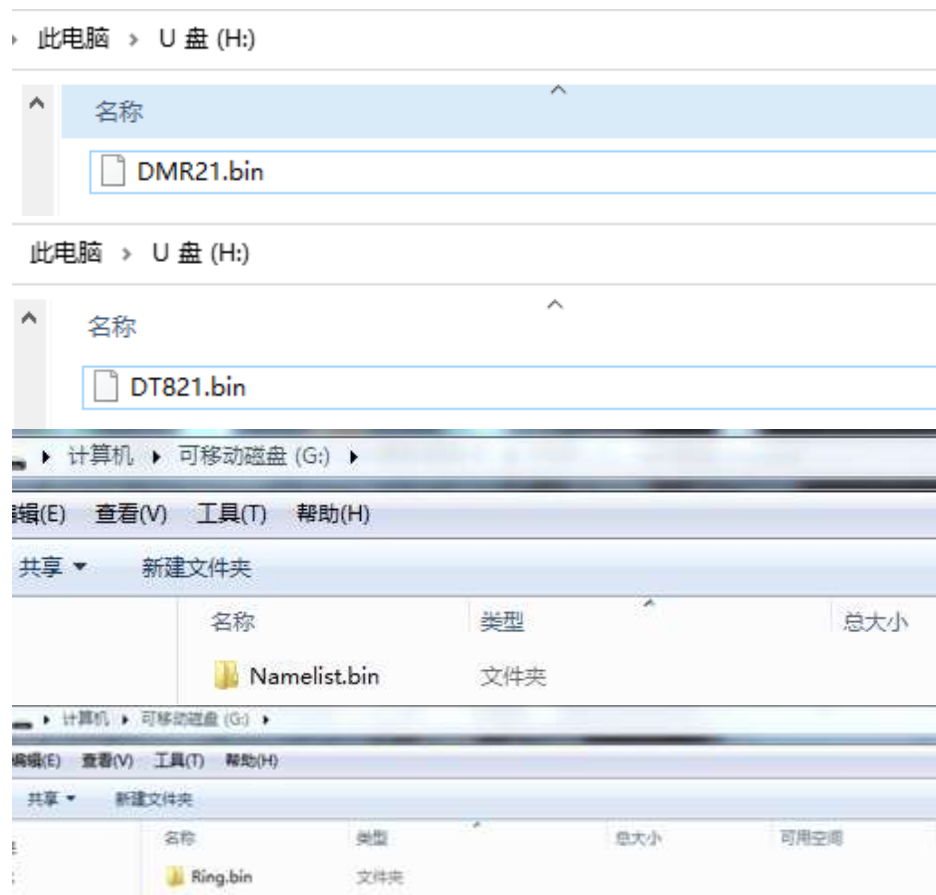

2. Power on Door Station, and set DIP6 to ON

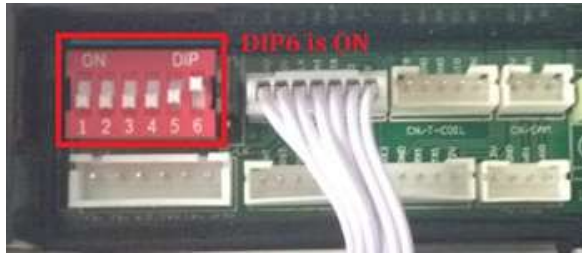

3. Insert the SD card(with updating file), Door Station will enter update state with LED tips



tips on updating progress:

state of updating progress	LED state			sounds	notes
	LED_CALL	LED_TALK	LED_UNLOCK		
tips of updating firmware	on	on	on	BeeP	LED_CALL will light on firstly, LED_TALK、LED_UNLOCK will light on 2s later
tips of updating Namelist	off	on	off	BeeP	-
tips of updating voice prompt	off	on	off	BeeP	-

4. A long Beep+ will be heard when finish updating; please set DIP6 to OFF, remove SD card

tips on finished updating:

state of finishing update	LED state			sounds	notes
	LED_CALL	LED_TALK	LED_UNLOCK		
tips when finished updating firware	off	off	off	BeeP+	Updating time: about 15s
tips when finished updating Namelist	off	off	off	BeeP+	Updating time: about 45s
tips when finished updating voice prompt	off	off	off	BeeP+	Updating time: about 2s

