


DPM-D247TW a DPM-D277TMW firmware update manual

This guide is to help you to upgrade monitor via SD card

1. Update

Please download firmware before: ("DX471_FwUpdate" whole folder)

- a. Copy whole folder "Dx471_FwUpdate" directly to the root directory of SD card. (SD card shall no more than 32G)

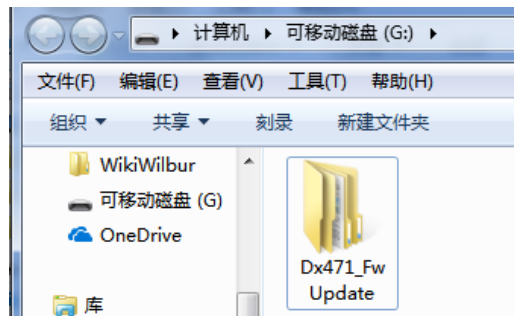

- b. Slide out and open the hatch on the rear side of the monitor, and click in the SD card as below:



- c. Power on monitor and wait the system booting, and in the menu "Settings">"General" -> "SD card", and in this page, press "Firmware Update"
- d. With long beep, state light turns to red and flash, during that please do not power off. And leave the screen as show, this will takes 2min
- e. After update, with long beep state light turns to green, and system will reboot automatically, after reboot check in "Settings" -> "About", the "S/W Ver: V1.6.0.190515XXXXXX" means monitor has the latest firmware.
- f. Initialize by "Settings" -> "General" -> "Restore to default" -> tap "Restore factory default" twice.