



USER GUIDE

How to Enable showImg.dll

Version 1.0

Copyright Notice:

Copyright © 2007 VIA Technologies Incorporated. All rights reserved. No part of this document may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise without the prior written permission of VIA Technologies Incorporated. The material in this document is for information only and is subject to change without notice. VIA Technologies Incorporated reserves the right to make changes in the product design without reservation and without notice to its users.

Trademark Notices:

All trademarks are the properties of their respective owners.

Disclaimer Notice:

No license is granted, implied or otherwise, under any patent or patent rights of VIA Technologies. VIA Technologies make no warranties, implied or otherwise, in regard to this document and to the products described in this document. The information provided by this document is believed to be accurate and reliable as of the publication date of this document. However, VIA Technologies assume no responsibility for any errors in this document. Furthermore, VIA Technologies and assume no responsibility for the use or misuse of the information in this document and for any patent infringements that may arise from the use of this document. The information and product specifications within this document are subject to change at any time, without notice and without obligation to notify any person of such change.

Office:

VIA Technologies Incorporated

Taiwan Office:

1st Floor, No. 531

Chung-Cheng Road, Hsin-Tien

Taipei, Taiwan ROC

Tel: 886-2-2218-5452

FAX: 886-2-2218-5453

Home page: <http://www.via.com.tw>

REVISION HISTORY

Version	Date	Revision
1.0	12/3/07	Updated format and fixed grammar.

TABLE OF CONTENTS

Revision History	i
Table of Contents	ii
1 Introduction	1
1.1 How to Enable showImg.dll	1
1.2 The Screen Capture for Testing Pattern:	1
2 Function Details	2
2.1 The Interface of Enable PaintPseudo Function	2

1 INTRODUCTION

This document defines the low level function interface for calling showImg.dll via Windows CE Display Driver. To access, you can use this document as a reference to develop customized application.

1.1 How to Enable showImg.dll


Add the below registry setting value in "DDRAWCLE.reg" file:

```
[HKEY_LOCAL_MACHINE\System\GDI\Drivers]
```

```
"ShowImgDLL"="ShowImg.dll"
```

Then copy the "ShowImg.dll" file to the release directory.

1.2 The Screen Capture for Testing Pattern:

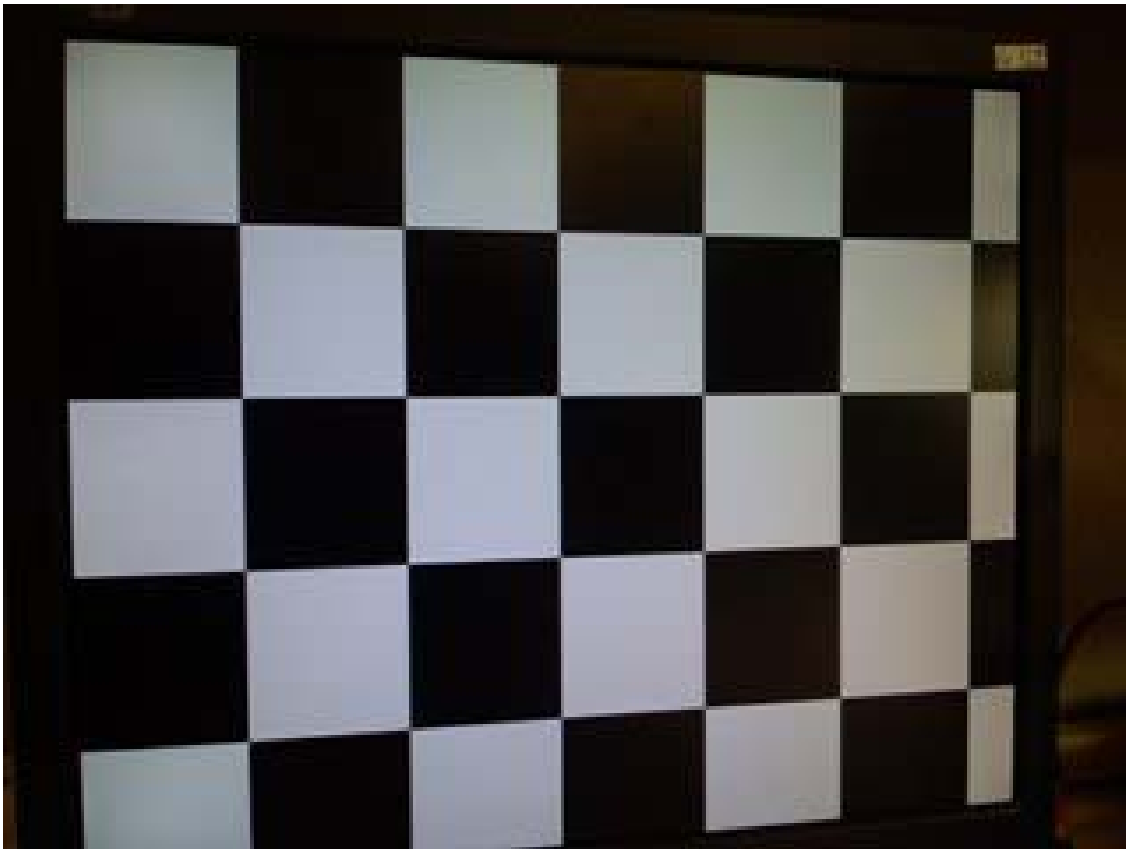

2 FUNCTION DETAILS

2.1 The Interface of Enable PaintPseudo Function

PaintPseudo

Main Function: void PaintPseudo (ULONG *pPseudo, int iWidth, int iHeight, int iBpp, int iRRate)

Input Parameters:

type	data
ULONG*	video memory starting address of test mode
INT	Width of test mode
INT	Height of test mode
INT	color depth of test mode
INT	Refresh Rate of test mode

Output Parameters:

type	data
None (NULL)	