

Wifi

(For wireless ip camera only)



【Search】: Please select Wireless Lan Settings and click Scan. Then the camera scans the WLAN nearby and lists the results. ;

【Enable】: ;


【SSID】: click the router name , Acquire a SSID;

【Encryption】: click the router name , Acquire a encryption;

【Password】: wireless password

The screenshot shows the 'Wireless Basic Settings' page of a device's configuration interface. At the top, there is a navigation bar with tabs: Advanced settings, Wireless settings, DHCP Server, Virtual server, Security settings, Routing settings, and others. The 'Wireless settings' tab is currently selected. Below the tabs, there are several configuration fields:

- SSID: "Tenda_5AC0C8"
- Security Mode: WPA - PSK (selected from a dropdown menu)
- WPA Algorithms: AES (radio button selected)
- Key: 70019508 (highlighted with a yellow box)
- Key Renewal Interval: 3600 Second
- WPS Settings: Disable (radio button selected)

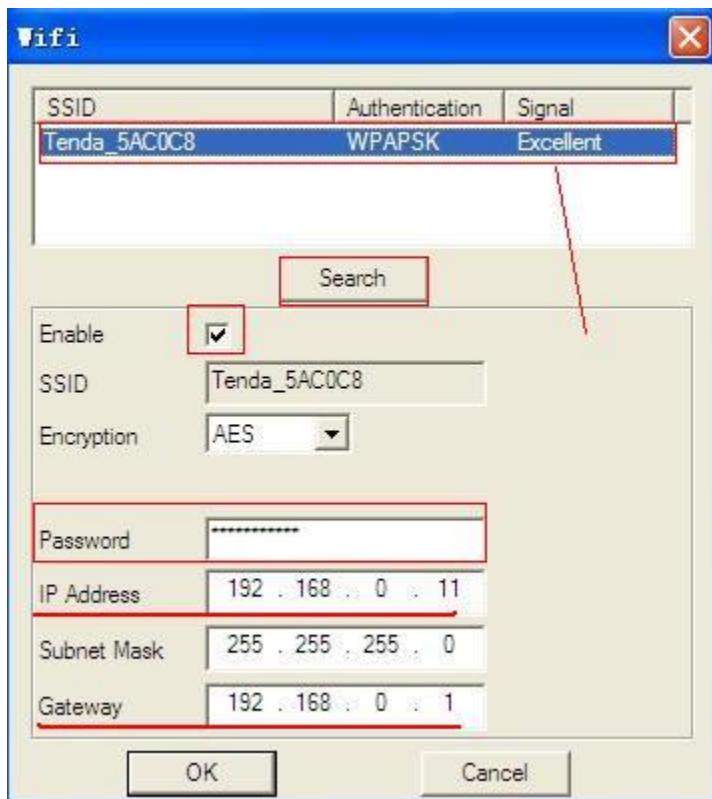

"OK" --- Save ---Save config to device successful



As it's correctly set, please pull out the network cable and the power supply.

请重新接上电源适配器

the camera will reboot.