TC-V102, TC-V102-ARM, TC-V201, TC-V300-J1800 Cloud Client Quick User Manual

Disclaimer:

The illustrations or descriptions given herein are for your information only and may be subject to change due to future version update or technology upgrade.

Some options can be different for ARM version (TC-V102-ARM) and for x86 version (TC-V102, TC-V201, TC-V300-J1800).

The latest firmware can be found on http://ftp.asm.cz/XtendLan

Index

1.	Introduction to the OS version	3
2.	Traditional Desktop	4
	2.1 Applications	4
	2.1.1 Control	4
	2.1.2 Network	5
	2.1.3 Display	9
	2.1.4 Sound	12
	2.1.5 Mouse	14
	2.1.6 Keyboard	15
	2.1.7 User Password	16
	2.1.8 Screen Lock	17
	2.1.9 Nettool	
	2.1.10 Date/Time	23
	2.1.11 CCCM Agent	25
	2.1.12 Browser	
	2.1.13 Service	27
	2.1.14 Start up	
	2.1.15 Remote Desktop	
	2.1.16 Storage Device Manager	
	2.1.17 Cloud Client	
	2.1.18 ICA Global Setting	35
	2.1.19 Security	
	2.1.20 Power Manager	
	2.1.21 Switch Desktop	40
	2.1.22 Fonts	40
	2.2 Connection Manager	41
3.	"Zero Client" Desktop	
	3.1 Startup wizard	
	3.1.1 Summary	49
	3.1.2 Language & Keyboard	49
	3.1.3 Date & Time	49
	3.1.4 Network	49
	3.1.5 Cloud Service	
	3.2 Connection & Use	50
	3.2.1 Log On	50
	3.2.2 Application Management	
	3.3 Control Center	56
	3.3.1 System Information	
	3.3.2 Cloud Service	59
	3.3.3 Network	66
	3.3.4 Audio	67

3.3.5 Date & Time	69
3.3.6 Language & Keyboard	71
3.3.7 Mouse	73
3.3.8 Display	74
3.3.9 CCCM Agent	76
3.3.10 Security	77
3.3.11 Certificate Manager	78
3.3.12 User Password	81
3.3.13 Power Manager	
3.3.14 Remote Assistance	
3.3.15 Network Diagnosis	85
3.3.16 Logs Viewer	
3.3.17 Switch Desktop	
Instruction of System Hotkeys	90
Firmware Update	90
	3.3.5 Date & Time

1. Introduction to the OS version

Running an embedded operating system, this multi-purpose cloud client supports Citrix ICA protocol, through which Citrix virtualized applications can be delivered. Moreover, it also supports RDP, VMware Horizon View.

Main features:

1. Supporting Citrix ICA/HDX, Microsoft RDP and VMware PCoIP;

2. Allowing centralized management, centralized maintenance and centralized monitoring;

3. Easy system upgrade and feature expansion;

4. Effective protection from data theft and virus intrusion;

5. Concise and human-oriented user interface to facilitate easy operations by non-professional users.

6. Contain the traditional desktop and the zero client desktop, It is convenient for user to use in different scene.

2. Traditional Desktop

2.1 Applications

2.1.1 Control

1. Use "Control Center"

The "Control Center" program provides the interface of using the configuration programs in the system

2. Run the "Control Center"

Running method:

- 1. Left click the "Control Center" icon in the quick start bar on the left bottom of the desktop;
- 2. Left click the "Control Center" item in the start menu

The interface of "Control Center" is as below:



Control Center

Run the programs in the control center
 Select the program, double click it or press enter to run it

2.1.2 Network

Trough network management, you can modify the terminal name; activate, inactivate, configure the network card; add, edit and delete the router item, set the default router and set DNS, etc.

1. Run the network management

Method

Click the "Control Center" in the quick start bar or "start" menu and double click "Network"

to run it.

The interface is as the picture below:

st Status ive 19	<u>M</u> odify IP 92.168.4.184
st Status ive 19	<u>M</u> odify IP 92.168.4.184
st Status ive 19	<u>M</u> odify IP 92.168.4.184
Status ive 19	IP 92.168.4.184
Status ive 19	IP 92.168.4.184
ive 19	2.168.4.184
rato Des	ctivate Property
	Close
	rate. Dea

Network

(1) General

This page lists the information of all the network cards. You can modify the terminal name, activate or deactivate the network card and edit the configuration information of the network card

in this page.

a) Modify the terminal name

As the picture shows below:

		N	etwork
General	Route	DNS	
Termi	nal		
Nam	e:	test	Modify
Device	List		
	21	Ter	ninal Name ×
Net	change i resource Termina	may affe e. al Name:	test
		<u>0</u> K	<u>Cancel</u> rty
			Close

Modify the terminal name

b) Activate the network card

When the network card is deactivated, click "activate" button and it would activate the selected network card.

c) Deactivate the network card

Click the "Deactivate" button and it would deactivate the selected network card.

d) Network card property

Select one network card and click "Property" button or double click the "network card

property" icon in the task bar on the right bottom of the desktop, then the network card configuration program would pop up. As the picture shows below:

2).	Network Card	×
Status: Active MAC: C4:09:38:34:0	53:9D	
 Obtain an IP addr Obtain the following 	ess automatically IP address:	
IP Address:	192.168.45.67	
Subnet Mask:	255.255.255.0	
Default Gateway:	192.168.45.1	
<u>E</u> nable 802.1X	Property	
Save	<u>Activate</u> <u>Deactivate</u> <u>R</u> estart	:

Configure the network card

(2) Router

This page lists the router information of all the network cards. You can add, edit and delete the router in this page as well as setting the default router. As the picture shows below:

	Netwo	rk	
General Route	DNS		
Default Route: Routes Table	Network Ca	ard(192.16)	8.4.1)
Destination	Gateway	Status	Network Card
Add	Edit	Delete	Save

Router Setting

(3) DNS

The setting of DNS is processed in this page. As the picture shows below:

2	Network	×
	General Route DNS	
	Obtain DNS server address automatically	
	Preferred DNS server: 192.168.1.1	
	Alternate DNS server:	
	<u>S</u> ave	ון
l		
	Close	

DNS Setting

2.1.3 Display

(1) Use "Display"

In "Display" property, you can customize the screen saver and screen resolution. The display properties include: screen saver, screen resolution, refresh rate and color depth, etc.

(2) Run the "Display" property

Operation method:

- a) Right click on the desktop and select "display";
- b) Click the "control center" icon in the quick start bar or the start menu to open the control center and select "Display" in it.

The running interface is as the picture shows below:

📧 Display	×
Settings DVI VGA	
✓ Optimum settings	
Display Mode: Duplicate 🗘	
Primary Monitor: O DVI 💿 VGA	
<u>O</u> K <u>C</u> ancel	

Display Settings

- (3) Set the display properties
 - (1) Display settings

You can choose whether to use the function that automatically detecting the optimum resolution, display mode, color depth and primary display, etc.

The "display mode" includes single display, clone, duplicate and extend;

The "color depth" includes high color and true color;

The primary display is DVI or VGA.

(2) Optimum Settings

If you check "Optimum settings", then this program would set the resolution as the optimum resolution of the monitor.

(3) DVI

If the users want to set the resolution by themselves, please do not check "Optimum settings"

in "Setting" tab, thus the output resolution of DVI can be set. As the picture shows below:

"Resolution" button: Set the resolution of the monitor.

"Refresh rate" button: Set the refresh rate of the monitor.

"Rotation" button: used for setting the clockwise rotation degree of display

"Detecting" button: used for detecting the suitable resolution of this display

	Disp	olay	×
Settings	DVI VGA		
Reso	olution: 1024 esh Rate: 60	×768 🜲	
	<u>o</u> ĸ	<u>C</u> ancel]

Set the resolution of DVI port

(4) VGA

If the users want to set the resolution by themselves, please do not check "Optimum settings"

in "Settings" tab, thus the output resolution of VGA can be set. As the picture shows below:

"Resolution" button: Set the resolution of the monitor.

"Refresh rate" button: Set the refresh rate of the monitor.

"Rotation" button: used for setting the clockwise rotation degree of display

"Detecting" button: used for detecting the suitable resolution of this display

Ĩ	Display X	
ſ	Cottings DV/ VGA	
	Settings DVI VGA	
	Recolution: Treature 1	
	1024x768 -	
	Refresh Rate: 60	
	OK Cancel	

Set the resolution of VGA port

After finishing the parameter modification, click "Apply" or "OK" button, then a dialog box would pop up and prompt that the system will apply new display settings. As the picture shows below:

E Hir	nts X
Display settings hav Save new settings graphics system? All close	e been changed. and restart the programes will be d.
ОК	<u>C</u> ancel

Hints of saving display settings

When the new display setting is applied, a dialog box would pop up and prompt whether to save the new setting. Click "ok" and the setting would be saved; click "cancel" and it would not be saved.

2.1.4 Sound

1. Use "Sound"

The "sound" program is used for adjusting the volume and microphone of the terminal system

- 2. Run the "Sound" program
 - Double click the "Sound" icon in the status bar on the right bottom of the desktop;
 - (2) Open "Control Center" and select "Sound" in it.

The operating interface is as the picture shows below:





(1)Adjust the volume

When the scroll bar of the volume is focused, you can adjust the volume by right/left click of the mouse(according to the setting of the mouse), mouse wheel, the up and down keys, Page UP, Page Down, Home and End keys; When "Mute" is checked, the volume cannot be adjusted and the system is mute. As the picture shows below:



Mute of Volume

(2)Adjust the volume of microphone

When the scroll bar of the microphone is focused, you can adjust the microphone volume by right/left click of the mouse (according to the setting of the mouse), mouse wheel, the up and down keys, Page UP, Page Down, Home and End keys; When "Mute" is checked, the volume of the microphone cannot be adjusted and the system is mute. As the picture shows below:



Mute of Microphone

2.1.5 Mouse

1. Use "Mouse"

The "Mouse" property program is used for switching the left and right button of the mouse and mouse speed

2. Run "Mouse" program

Open control center and select "Mouse".

The operating interface is as the picture shows below:

	iningui acion—			
Swite	h primary an	d secondary butt	ons S	
Select the ri on the ri functions	nis check boy ght the one y s such as sel	k to make the butt you use for primar ecting and draggi	ton y ng.	
Mouse Sp	eed			
Select a Slo	w ==	ed:)	Fast	
Double-C	ick Timeout–			-
Select a	double-click	time interval:		
Sho	rt 💷		Long	

Mouse Property

3. Set the left and right button of the mouse

In "Button Configuration", check "Swap left and right button", and you can switch the function of left and right button of the mouse. The setting has immediate effect. If the checkbox is checked, then the right button of the mouse becomes the primary button. Right click the checkbox to restore it to not-checked status, and the left button of the mouse is restored to the primary button.

4. Set the mouse speed

Drag the slider of "mouse speed" and you can set the mouse speed. The setting has immediate effect.

5. Set "double-click timeout"

Drag the slider of "double-click timeout" and you can set the double-click timeout of the mouse. The setting has immediate effect.

2.1.6 Keyboard

1. Use "Keyboard"

The keyboard property program is used for setting the keyboard language and keyboard model of the terminal as well as whether to enable NumLock key when the system boots up.

2. Run "Keyboard" property

Open control center and select "Keyboard"

The operating interface is as the picture shows below:

Keyboard Layout	Keyboard Model
U.S.English	Generic 105-key
US-International	Generic 104-key
Hebrew	Generic 103-key
Itlian	Generic 102-key
French	Generic 101-key
German	ABNT2
Norwegian	Fujitsu Trimodal
Japanese	Dell 101-key
Swedish	microsoft Internet
NumLock Key 🗹 E	Enable as Startup

Keyboard Property

3. NumLock key

If "Enable as Startup" is checked, then after starting up, the NumLock key is enabled; or NumLock key is not enabled.

2.1.7 User Password

1. Use "User Password"

Through using the "user password" program, you can set the user password which is the password for starting up/restart, screen saver and system lock.

2. Run the "user password" program

Open control center and select "Password"

The operating interface is as the picture shows below:

S s	et the user password.	
Current	Password:	
<u>U</u> se	Password	
New F	Password:	
Confir	m:	

Set user password

2.1.8 Screen Lock

1. Use "Screen Lock"

The "screen lock" program is used for locking the screen when the terminal is not used and ensures that the terminal would not be used by others.

Use the hotkey Ctrl + Alt + Del to call out the screen lock program to lock the screen.

When the screen is locked, all the applications of the terminal cannot be used and you need to input the correct unlocking password to return to the system application interface.

The operating interface is as the picture shows below:

^{2.} Run "screen lock" program

The lock	terminal is in used and has been ed.
Password:	

Unlock the screen

If the password input is wrong, a prompt dialog box would pop up and the screen would keep locked.

2.1.9 Nettool

1. Use "Nettool"

The "Nettool" program is used for checking the network status The basic function of the "Nettool" program: system information, devices information, ping operation, net status checking, trace route, scan port, lookup, and who is domain.

2. System information. As the picture shows below:

_			Netwo	rk Tools			_
Sysinfo	Devices	Ping	Netstat	Traceroute	Port Scan	Lookup	Whois
BIOS And	los						
Serial Nu	ımber: -						
BIOS Ver	sion: 2.0	2					
OS Versi	on: 2.10	0.03					
OS Build	201	3061901					
OS Kerne	el: 2.6.	34					
System							-
Model:	GM810A						
CPU:	AMD G-T40	N Processo	r				
Speed:	999 MHz						
Memory	And Disk						
	4	Available		Used		Total	
Memory:		227 M		788 M		1015	м
Disk:		1903 M		1932 M		3835	м
	lic	ne					

System information

3. Devices information. As the follow picture shows:

ucinfo [Dovicos	Ding	Notetat	Tracorouto	Port Ser		Lookup	Whoir
sysinio	Devices	Ping	Netstat	Inacerouce	Port Sca	an	соокир	whois
etwork de	vice:	e	E	thernet Interfa	ce (eth0)			0
o Informa	tion							
Protocol	IP Addres	s Netmask	: / Prefix	Broadcast S	cope			
IPv6		0		U	nknown			
IPv4	192.168.4	15.86 255.255.2	255.0					
IPv4	192.168 /	15.86 255.255.2 ion	255.0 Int	terface Stat	istics	_	_	_
IPv4 IPv4 Iterface	192.168.4 Informat	ion 14:14:4b:5a:8e	255.0 Int	terface Stat Transmitted by	istics tes: 6.6	6 MiB		
IPv4 Iterface Hardware Multicast:	192.168.4	15.86 255.255.2 ion 14:14:4b:5a:8e Enabled	255.0 Int ::6a	terface Stat Transmitted by Transmitted pa	istics tes: 6.6	6 MiB		
IPv4 IPv4 Hardware Multicast: MTU:	192.168.4 Informat	ion 14:14:4b:5a:8e Enabled 1500	255.0 Int ::6a	terface Stat Transmitted by Transmitted pa Transmission e	istics tes: 6.6 ackets: 90 rrors: 0	5 MiB 068		_
IPv4 Iterface Hardware Multicast: MTU: Link spee	192.168 / Informat address: d:	ion 14:14:4b:5a:8e Enabled 1500 1000baseT-FE	255.0 Int ::6a	terface Stat Transmitted by Transmitted pa Transmission e Received byte	istics tes: 6.6 ackets: 90 rrors: 0 s: 1.5	6 MiB 068 5 MiB		_
IPv4 Iterface I Hardware Multicast: MTU: Link spee State:	192.168 / Informat address: d:	ion 14:14:4b:5a:8e Enabled 1500 1000baseT-FC Active	255.0 Int 26a	terface Stat Transmitted by Transmitted pa Transmission e Received byte Received pack	istics rtes: 6.6 ackets: 90 rrors: 0 s: 1.5 sets: 19	6 MiB 068 5 MiB 0258		
IPv4 terface Hardware Multicast: MTU: Link spee State:	192.168 / Informat address: d:	ion 14:14:4b:5a:8e Enabled 1500 1000baseT-FI Active	In 1 255.0 2011	terface Stat Transmitted by Transmisted pa Transmission e Received byte Received pack Reception erro	istics tes: 6.6 ackets: 90 rrors: 0 s: 1.5 sets: 19 ors: 0	6 MiB)68 5 MiB)258		_

Devices information

4. Ping Operation

Ping operation can detect whether the network is unobstructed.

The operating interface is as the picture shows below:

			Net	work Tools			
Sysinfo	Devices	Pin	lg Netst	at Traceroute	Port Scan	Lookup	Whois
<u>N</u> etwork	address: 🔟	2.168.45	5.27				~
Send:	۲	Only 5	🗘 reque	sts 🔿 Unlimited	l requests		
					Net	<u>c</u> fg	Ping
Round 1	Trip Time St	atistic	s Transmi	ssion Statistic	s		
Minimu	ım: 0.26 ms		Packet	s transmitted: 5			
Averag	ge: 0.30 ms		Packet	s received: 5			
Maxim	um: 0.34 ms		Succes	sful packets: 10	0%		
Time (m	ns): (0.26	0.30	0.33	0.3	1	0.34
Seq. No	0.1	1	2	3	4		5
	22						
✓ Detail:	S						
⊽ Detail: Bytes	s Source	Seq T	ime Units				6
⊽ Detail Bytes 64 1	s Source 192.168.45.27	Seq T 1 C	ime Units 1.264 ms				
✓ Detail Bytes 64] 64]	s Source 192.168.45.27 192.168.45.27	Seq T 1 0 2 0	ime Units 1.264 ms 1.305 ms				

Ping operation

Input Network address, click "Ping" to detect whether the network is unobstructed and check

the detail information.

You also can click "Netcfg" to configure the net. The operation interface is as the picture shows below:

1	Net	work		
General Route	DNS			
Terminal				
Name:	c48cd	lec6	Mod	dify
Device List				
Name	Statu	s	IP	
Network Card	d Active	192.1	58.45.86	
	Activate	<u>D</u> eactiv	ate <u>P</u> rop	erty
1				
				Close

Configure net work

5. Netstat

Through "Netstat" program to check the network information, The operation interface is as

follow picture shows:

			Netwo	k Tools			\$
Sysinfo	Devices	s Ping	Netstat	Traceroute	Port Scan	Lookup	Whois
Display: C) Routing) Active N) Multicas	Table Informat Jetwork Servic t Information	ion es			<	Netstat
Interface	Member	Group					
lo	1	all-systems.n	ncast.net				
eth0	1	224.224.224.2	24				
	_						

Network Status

The above picture shows that we can select display to check Routing Table Information,

Active Network Services and Multicast Information. Click "Netstat" to run program.

6. Traceroute

Functions: You can display the data packets from the local machine to the target machine through all routes. you can know the information from the local machine to the destination address walking paths by "Traceroute" program; helps users understand the physical and logical network topology as well as connections for data transmission efficiency.

Usage: In the Network Address box, enter the host name or IP address, and then click the Trace button or hit the Enter key.

The operation interface is as the picture shows below:

		- Ale Al	Netwo	rk Tools			×
Sysin	fo Devices	Ping	Netstat	Traceroute	Port Scan	Lookup	Whois
Sysin	fo Devices	Ping	Netstat	Traceroute Ent Fo	Port Scan ter the netwo r example: w	Lookup ork address ww.domain.c	Whois to trace a rou om or 192.168
	la	dle					

Traceroute

7. Port Scan

Function: Display the open ports and open services of the destination network addres.

Usage: In the Network Address box, enter the address, click on the Scan button.

As the follow picture shows:

				Netwo	rk Tools			
Sysinfo	D	evices	Ping	Netstat	Traceroute	Port Scan	Lookup	Whois
<u>N</u> etwork	addre	ess:						~
								Scan
Port	State	Service						<u></u>
80	open	www						
135	open	loc-srv						
139	open	netbios	ssn					
443	open	https						=
20001	open	unknowi	ı					
20002	open	unknow	n					
20003	open	unknowi	1:					
445	open	microso	ft-ds					
902	open	unknow	n					
912	open	unknow	ı					
1494	open	unknow	1					~
		lid						

Port Scan

8. Lookup

Function: Domain Information Finder is a tool which use domain name server for querying the DNS flexible. It performs DNS search, display a reply that returns from the affected domain name server. Most DNS administrators use dig for troubleshooting DNS problems because of its flexibility, ease of use, the output clear. For example, if you are a system administrator, deployed with a dns server would be parsed after the test, it must be tested explicitly specify dns server address.

The operator interface as shown below:



Lookup

9. Whois

The "Whois" program is a transport protocol used to query Information of the domain name and owner.

Operation: Input a domain address and click "Whois".

The operator interface as shown below:



Whois

2.1.10 Date/Time

1. Use "Date/Time"

The "Date/Time" program is used for configuring the current date and time of the system.

- 2. Run Date/Time program
 - (1) Double click the time in the status bar on the right bottom of the desktop;
 - (2) Open control center and select "Date/Time"

The operating interface is as the picture shows below:





3. Configure the current date/time of the system

You can adjust the time area, year, month and date in date adjusting bar and adjust hour, minute and second in time adjusting bar. After clicking "ok", the time parameters are saved; if you click "cancel", then the parameters would not be saved.

4. Automatic time synchronization with the server.

Click button "Timesync", The operating interface is as the picture shows below:

©	Internet Time Settings	×
	Configure Internet time	
	Synchronize with an Internet time server	
	Server : Update now	
	✓ Cycle update 7 🚔 day 0 📥 hour 0 🚔 min	
	<u>O</u> K <u>C</u> ancel)

Input the server address, click "Update now" and "OK".

2.1.11 CCCM Agent

1. Use "CCCM Agent"

CCCM Agent program can set that whether the terminal can be managed by the server or specify the server which is allowed to manage.

- 2. Run CCCM Agent
 - (1) Double click "CCCM Agent" icon in the status bar on the right bottom of the desktop

0.0	
Q.O.	100 00
	0.0

(2) Open control center and select "CCCM Agent"

The operating interface is as the picture shows below:

G CCCM Agent	×
Connect	
A terminal can only be managed by one server. Please set the management type: Not specify the management server Specify the management server	
Server: 67	
Port: 8081	
<u>O</u> k <u>C</u> a	ncel

CCCM Agent

3. Configure CCCM server

Select "Only allows the specified server to manage", input the server address and port and

00	Please inpu	ut password	×
Pas	sword]	
	<u>O</u> k	<u>C</u> ancel	

click "ok". The password input window would pop up. As the picture shows below:

Password Confirmation

You can only modify the server address and port after entering the correct password (Admin123!@# by default). An error prompt window would pop up if the password input is wrong.

This password can only be modified through CCCM server.

2.1.12 Browser

- 1. The Linux has Iceweasel browser installed
- 2. Run Browser
 - (1) Run "Browser" in start menu;
 - (2) Open control center and select "Browser"

The operating interface is as the picture shows below:



Iceweasel

2.1.13 Service

1. Use "Service"

The "Service" program is used for configuring the service which needs to start or stop when

the terminal starts up or on its current status.

2. Run "Service" program

Open control center and select "Service"

The operating interface is as the picture shows below:

Ø	,	Services		×
	Startup Managemen	t		
	Storage Manager	Automati 👻	Start	Stop
	Taskbar	Automati 👻	Start	Stop
	smartcard	Automati 🖌	Start	Stop
	Apply	<u>R</u> efresh		lose



3. Start or stop the service when the terminal starts up

If you select "Automatic" in the dropping down box of a certain service, then this service would start automatically when the terminal starts up; or if you select "manual" in the dropping down box of the service, then this service would not start when the terminal starts up and after entering the terminal system, users can configure whether to start it by themselves.

Click "Apply" button and the setting would be saved and validated. Click "Refresh" button to restore the configuration information currently saved that whether to start those services when the terminal starts up.

4. Directly start or stop the service on the current status

The "Start" and "Stop" buttons after each service are used for configuring whether to "start" or "Stop" a certain service on current status.

When the corresponding "start" button of one service is gray, the "Stop" button is valid; vice versa.

If you want to start (or stop) one certain service directly under current status, you can click the corresponding "start" (or stop) button of this service and it can be validated at once.

2.1.14 Start up

1. Use "Startup"

The "startup" program is used for setting the programs which need to be started when the system starts up

2. Run "Startup" program

Open control center and select "Startup"

The operating interface is as the picture shows below:

3	Startup	×
S	startup Options:	
	Connection Manager 📃 Enable at Startup	
	Cloud Client 🗹 Enable at Startup	
		_
	Apply Close	1
		,

Start Up

Check the programs which need to be started when the system starts up and click "Apply" button, the new startup configuration can be validated. Click "Close", the program would exit and the settings would not be saved.

2.1.15 Remote Desktop

1. Use "Remote Desktop"

The remote desktop program is used for the settings of some parameters related with the remote desktop when the terminal is used as the server side of the remote desktop.

Include: Whether allow the remote monitoring, select remote check or control and some security parameter settings of the terminal when the remote host connects the terminal desktop.

2. Run "Remote Desktop" program

Open control center and select "Remote Desktop"

The operating interface is as the picture shows below:

V	Remote Desktop	×
	Preferences	
	Sharing	
	Enable the remote desktop	
	Allow other users to view your desktop	
	\bigcirc Allow other users to control your desktop	
	Security	
	When a user tries to view or control your desktop:	
	Require the user to enter this password:	
	Password:	
	Apply Close	

Configuration Interface of Remote Desktop

3. Remote Desktop client

For the terminal is used as the server side of the remote desktop, the users only need to install the client program of the remote desktop on some client machine to use this client program to connect to the terminal desktop through specifying terminal IP address.

Remark: The version of the client program needs to be 3.3.4 or higher to support the function of checking the mouse status of the terminal.

4. Sharing

Select whether to allow the remote host to monitor the terminal desktop. If it is checked, you can configure the remote monitor or control and the parameters in the security bar. Or the other configuration items would be gray. As the picture shows below:

SA (Remote Desktop >>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>>	×
Preferences		
Sharing		
✓ Enable the ren	note desktop	
 Allow other 	users to view your desktop	
Allow other	users to control your desktop	
Security		
When a user tries	to view or control your desktop:	
Require the us	ser to enter this password:	
Password:		
	<u>A</u> pply <u>C</u> lose	J

Do not allow the remote control

5. Security

If you select to allow remote monitoring, then you can set the configuration items in the security bar and can select to ask the terminal for confirmation or to require the user to enter a password when the remote host connects to the terminal desktop. If you select to need the password to login, then input the password in the password box. That is the remote host needs password authentication when logging in the terminal desktop. As the picture shows below:

V2 Remote Desktop	×
Preferences	
Sharing	
Enable the remote desktop	
 Allow other users to view your desktop 	
Allow other users to control your desktop	
Security	
When a user tries to view or control your desktop:	
Require the user to enter this password:	
Password: •••	
<u>Apply</u>	se

Click "Apply" to save the settings. Click "Close" to exit the program.

2.1.16 Storage Device Manager

1. Use "Storage Device Manager"

The "Storage Device Manager" program is used for mounting and umounting the USB disk,

mounting and ejecting the DVD

2. Run "Storage Device Manager"

Open Control Center-> Storage Device Manager

The operating interface is as the picture shows below:

plug the dev	en system notifies rice from your thir	s you that it is safe i client.	to do so
/pe Mount F	Point Label Stor	rage	
	plug the dev	plug the device from your thir	ype Mount Point Label Storage

Storage Device Manager

3. Mount USB disk or DVD

When USB disk or DVD is inserted, the system would mount them automatically. You can also open "Storage Device Manager", select the device and click "mount" to mount the device manually.

4. Umount USB disk or eject DVD

Before pulling up the USB disk, you need to un-mount it first. Select the device you want to

un-mount and click "Umount". As the picture shows below:

8	Select t click sto	Storag he device p; When sy be device	je Device Manager you want to unplug or e ystem notifies you that from your thin client	eject, and then it is safe to do so
De	vice	Туре	Umount	Label
▼	/dev/sr0 /dev/sr0 /dev/sdb	iso9660	/media/DVDROM	YLMF_XP3_YN9
	/dev/sdb	vfat	/media/USB DISK CD	USB DISK CD
<	70.01.11		Ш	
6.	.78 G Availat	ple R	Mount	E <u>x</u> it

Umount the USB disk

To eject DVD, select the device needed to be ejected and click "eject". As the picture shows

below:

ے Se cl ur	Stor elect the devic ick stop; When iplug the devic	age Device Manage e you want to unplug o system notifies you th e from your thin client.	r > or eject, and then nat it is safe to do so
Device	Туре	Umount	Label
▽ /dev/s	r0		
/de	v/sr0 iso966	0 /media/DVDROM	YLMF_XP3_YN9.
/de	v/sdb vfat	/media/USB DISK	CD USB DISK CD
С 0.00 М /	Available	111	>
E	ject 🞝	Mount	Exit

Eject DVD

5. Use of the tray icon

When inserting USB disk or DVD, a tray icon would appear in system notice area.

Use this tray icon to open "Storage Device Manager":

- (1) Use the left button of mouse and double click to open it
- (2) Right click this icon, the tag "Open Storage Device Manager" would pop up, left click it. As the picture shows below:



If you need to umount the USB disk or eject DVD, please left click on the icon and select "Umount USB Disk" or "Eject DVD". As the picture shows below:



2.1.17 Cloud Client

1. Use "Cloud Client"

Used for connecting to Citrix virtual desktop

2. Run Cloud Client

Open control center-> Cloud Client, As the picture shows below:

1	3	Cloud Client	_ ×
	Name	Address	
	Default Address	http://192.168.9.111	
	test1	https://192.168.50.62	
	test3	http://192.168.9.111	
	Login Set D	efault <u>N</u> ew <u>E</u> dit <u>D</u> elete	9

3. Create an address of Citrix server

Click the button "New" to create a new address. As the below picture shows:

3	New	×
Name:		
Address:	https://	
	K <u>C</u> ancel	

Input the name and address and click "OK" to complete creating.

4. Set an address to default

Selected an item and click "Set Default" to set the selected item to default address. And the next time power on the Terminal, the client will auto connect to the address and log into the Citrix server.

5. Edit and delete an address

Select an item, click "edit" or "delete" to edit or delete item.

6. Connect and login in

Select an item and click Login, to connect and log into the server.

2.1.18 ICA Global Setting

1. Use"ICA Global Setting"

ICA global setting is used for setting the device mapping and hotkeys of ICA connection

2. Run "ICA Global Setting" program

Open control center->"ICA Global Setting"

The operating interface is as the picture shows below:

6	ICA	Global Settings	×
Device Ma	pping Hotke	ys Options	
USB Dis	k bled		

ICA Global Settings

3. Set ICA Device Mapping

In device mapping interface, you can select whether to map USB disk and serial port. The

setting would take effect when connecting at next time.

4. Set the hotkeys:

In hotkey mapping interface, you can modify the hotkeys. The setting would take effect when connecting at next time. As the picture shows below:

Device Mapping	Hotkeys Options				
Function Key	Decorative K	Key		16	
Alt+F1	Alt+Shift	~	F1	~	
Alt+F2	Alt+Shift	~	F2	~	11
Alt+F3	Alt+Shift	~	F3	~	
Alt+F4	Alt+Shift	-	F4	~	
Alt+F5	Alt+Shift	`	F5	~	
Alt+F6	Alt+Shift	~	F6	~	
Alt+F7	Alt+Shift	~	F7	~	-

Hotkeys Setting

5. Set ICA connection options

You can enable video HDX, audio HDX by Choosing the checkbox in front of the item. And also can choose to show the connection bar in full screen mode. The operating interface is as the picture shows below:
de	G ICA Global Settings	×
	Device Mapping Hotkeys Options	
	HDX	
	✓ Enable video HDX	
	✓ Enable audio HDX	
	✓ Show the connection bar in full screen mode	
	<u>O</u> K <u>C</u> ancel	

Options Setting

2.1.19 Security

1. Use "Security"

Through the "Security" program, you can configure the program list of the control center and lock or unlock the connection manager. The password of this program can be modified.

2. Run "Security"

Right click on the desktop and select "Security".

When running the security settings, the password verification dialog box would pop up first.

As the picture shows below:

Password \	erification/	×
Password		
<u>O</u> K	<u>Cancel</u>	

Password Verification

If the verification of the password (the initial password is blank) is successful, you would enter the security setting interface, as the picture shows below:

6	Security	×
	System Modification	
	System Setting ✓ Use Password Modify Pwc	
	<u>O</u> K <u>C</u> ancel	

Security Program

If you set the security success, the next time you want to enter control center, you must input the password firstly.

2.1.20 Power Manager

1. Function

To configure a policy to manage the power of monitor and the device.

2. Run "Power Manager"

Open control center->"ICA Global Setting"

The operating interface is as the picture shows below:

and the second s		
when system idle, wait	15	minutes
🔄 Enable Shutdown Poli	су	
When system idle, wait	30	minutes
🗹 If the virtual machin	e is connected, do not execut	e the policy
✓ Between 19	A : 0 A - 6 A	: 0 🍦
Countdown	1	minutes
hedule policy ✓ Enable Every Day Sch	edule Policy	
hedule policy ✓ Enable Every Day Sch Every day 19 ♣ : 0 ✓ Allowed to cancel ✓ Enable Once Schedule Time 19 ♣ : 0 ♣	edule Policy Restart Countdown Allowed to dela Policy Restart Countdown	1 🔹 minute ay 1 🔹 minute

3. Enable close monitor policy

Click the checkbox in front of "Enable Close Monitor Policy" to enable the policy, and set a time which close the monitor after.

4. Enable Shutdown Policy

To configure a policy to shutdown the device.

- 1) Select "Enable Shutdown Policy"
- 2) Set the time the device wait to shutdown when the system is idle.
- 3) Set the exception of policy, if the virtual machine is connected, do not execute the

policy.

- 4) Set when the policy to execute.
- 5) Set the tips how long to constant.
- 5. Setting power schedule policy

Set the policy that the device restart or shutdown everyday or once.

2.1.21 Switch Desktop

1. Function

To Switch the traditional desktop to "Zero Client" Desktop.

2. Run "Switch Desktop"

Double click "Switch Desktop" in control center.



A dialog box will be shown. Click "OK" to switch to "Zero client" Desktop.

۵.	Switch D	esktop	×
Are y	ou sure to switch t	o zero client desktop	0?
	OK	<u>C</u> ancel	

2.1.22 Fonts

1. Function

To set the fonts of the browser shows.

2. Run "Fonts"

Double click "Fonts" in control center. As the picture shows below:



Configure Fonts

2.2 Connection Manager

1. Use "Connection Manager"

Through connection manager, you can add, edit and delete the connection clauses.

2. Run "Connection Manager"

Click the "Settings" in the login interface to enter the "settings" panel and double click

"Connection Manager" icon to run it.

The operating interface is as the picture shows below:

Å		Connec	tion Manager)	- 🗆 X
	Session Name	Туре	Status	Server	
	192.168.50.62	XenApp		192.168.50.62	
	192.168.12.61	VMWARE		192.168.12.61	
	192.168.4.125	RDP		192.168.4.125	
	<u>C</u> onnect	Disconnect	Edit	Add	elete

Connection Manager

- 3. Manage the connection item
 - 1) Add a connection item

Click the button "Add" to create a new connection item. As the picture shows below:

*	Ne	w Session	×
	Connection Typ	e:	
		(a) <u>R</u> DP	
	8	○ Xen <u>A</u> pp	
	₽	○ <u>V</u> Mware View	
	Next	<u>C</u> ancel	

Note: you can create 3 kinds of item, contains RDP, XenApp, and VMware View.

Select the RDP, or XenApp, or VMware View to create, the detail description is follow.

2) Edit a connection item

Select an item and click "Edit" to edit.

3) Delete a connection item

Select an item and click "Delete" to delete the item.

4) Connect

Select an item and click "Connect", you will connect the corresponding server.

5) Disconnect

Select an item which has connected, and click "disconnect" to disconnect it.

4. Create a RDP item

1)To configure session name and server address.

1		New RDP	Session		×
<u>G</u> eneral -Networ Session Server	Progr <u>a</u> ms k Name: [address: [Device <u>M</u> apping	<u>D</u> isplay	Ad <u>v</u> ance Optior	15
-Login So Auto User Na Passwo Domain	cripts b <u>Login</u> ame: prd:				
	<u>o</u> k			<u>C</u> ancel	

2)To configure which device for mapping

As the picture shows below:

General Programs Device Display Advance Options Storage Device
Storage Device Enabled Audio Do not play
Audio Do not play
Do not play
<u>O</u> K <u>C</u> ancel

3)To configure display of the RDP session.

2		New RDP	Session	ı	>
<u>G</u> eneral Colors	Progr <u>a</u> ms	Device <u>M</u> apping	<u>D</u> isplay	Ad <u>v</u> ance Options	
Window	Settings of Size	remote compute	r might re	place the current se	tting.
✓ Eul ✓ Show	l Screen the connec	Percentage: 75	reen mod	e	
	<u>O</u> K			<u>C</u> ancel	

4)Advance configuration

As the picture shows below:

4		New RDP	Session			×
<u>G</u> eneral	Progr <u>a</u> ms	Device <u>M</u> apping	<u>D</u> isplay	Ad <u>v</u> ance	Options	
Perform	ance					
Allow	the followin	g:				
	esktop bac	kground				
	how window	v contents while o	dragging			
	lenu and Wi	ndow animation				
	itman cachi	ng				
Keyboa	rd					
Keybo	ard Layout:	en-us	•			
	OK			Can	icel	

5)Optional configuration

		New RDF	Session	1		5
<u>G</u> eneral	Progr <u>a</u> ms	Device <u>M</u> apping	<u>D</u> isplay	Ad <u>v</u> ance	O <u>p</u> tions	
Connect	ing Mode	'				
<u>ه N</u> ori	nal 🔿 <u>Q</u> uic	k				
Clipboa	rd					
Ena	bled					
_ Enab ✔ Enab	le auto <u>r</u> eco le compres	onnect when netv sion	vork statu	s abnorma	I	
Atta	h to consol	e				
	ОК			Can	cel]	

5. Create a XenApp item

1)To configure the session name, server address, default desktop and the account to log in automatically. As the picture shows below:

😵 New XenApp Session 🗙
<u>G</u> eneral Op <u>t</u> ions
Session Name:
Server <u>A</u> ddress:
Default Desktop:
Auto Login
User Name:
Password:
Domai <u>n</u> :
<u>O</u> k <u>C</u> ancel

6. Create a VMware View item

1) To configure the session name, server address, default desktop, protocol and the account to log in automatically. As the picture shows below:

A New View Session	×
General Device Mapping Display Advance Options	
Session Name:	J
Server Address:	J
Default Desktop:	J
Protocol: PCoIP 🖨	
Auto Login	
User Name:	
Password:	
Domain:	
<u>O</u> K <u>C</u> ancel	

2) Device Mapping

•		New Vi	ew Sessi	on		×
<u>G</u> eneral	Device <u>Mapping</u>	<u>D</u> isplay	Ad <u>v</u> ance	Options		
	lash Disk nabled					
Audio	o not play		\$]		
	<u>O</u> K				<u>C</u> ancel	

3) Display

As the picture shows below:

2	5	New View Session	×
	<u>G</u> eneral	Device <u>Mapping</u> Display Advance Opti	ons
	Colors-		
	16 b	pits	¥
	Note:	: Settings of remote computer might repla	ce the current setting.
	(<u>O</u> K	Cancel

4) Advance

*	New View Session	×
<u>G</u> eneral	Device Mapping Display Advance Options	
Perform Allow	mance v the following: Desktop background Show window contents while dragging Menu and Window animation Themes Bitmap caching	
-Keyboa Keyb	ard- ooard Layout: en-us	
	<u>O</u> K <u>C</u> ancel]

5) Options

As the picture shows below:

		New Vi	ew Sessi	on		×
<u>G</u> eneral	Device <u>M</u> apping	<u>D</u> isplay	Ad <u>v</u> ance	Options		
Clipboa Ena Ena Atta Enak	rd bled le compression ch to console l e KIOSK		·	,		
(<u>0</u> K				<u>C</u> ancel	

3. "Zero Client" Desktop

3.1 Startup wizard

The first time you enter the system, there will be a startup wizard. By default, the first "Language & Keyboard" page will be displayed.

Welcome!		
Language & Keyboard	Language & Keyboard	
Vetwork	Display language U.S. English	v
🕒 Date & Time	Keyboard layout United States (English)	T
🔶 Summary	Keyboard model Generic 105-key	•
	Typing Settings	
	Key repeat ON	
	Repeat delay Short 🗨 💿	Long
	Repeat speed Slow 🥌 💿	Fast

1. Click "Forward" button to proceed with subsequent configurations. After you have completed all configurations, click "OK" button to enter the main system interface.

3.1.1 Summary

"Summary" mainly shows the current system language and configurations of keyboard, network, and cloud service.

3.1.2 Language & Keyboard

It allows you to configure system language and keyboard settings. For details, please refer to "3.3.6 Language & Keyboard".

3.1.3 Date & Time

It allows you to configure system date & time. For details, please refer to "3.3.5 Date & Time".

3.1.4 Network

It allows you to configure system network. For details, please refer to "3.3.3 Network".

3.1.5 Cloud Service

It allows you to configure Citrix Receiver. For details, please refer to "3.3.2 Cloud Service".

3.2 Connection & Use

3.2.1 Log On

After the client is turned on, it will by default enter the system homepage, as shown below:



1. Function

To log on cloud server.

2. Log on cloud server (the default connection type at system startup is Citrix Xen, with connection mode being PNAgent)

A. Enter the corresponding user name, password and domain into the input boxes of "User Name", "Password" and "Domain" respectively.

test
•••
test.com.cn

B. Click "Log On" button.

3. Log on cloud server (connection type being Citrix Xen and connection mode being Web

Interface)

- A. Configure the URL of cloud server and click "Save" button in the bottom-left corner of the screen.
- B. After exiting the control center, the system homepage will appear as below:

Centerm VDBOX	User name: Password: Log On	

- C. Enter the corresponding user name and password into the input boxes of "User Name" and "Password" respectively.
- D. Click "Log On" button.
- 4. Log on cloud server (connecting type being RDP)
 - A. Configure the URL of cloud server and click "Save" button in the bottom-left corner of the screen.
 - B. After exiting the control center, the system homepage will appear as below:



C. Enter the corresponding user name, password and domain into the input boxes of "User Name", "Password" and "Domain" respectively.



- D. Click "Log On" button.
- 5. Log on cloud server (connecting type being VMware Horizon View)
 - A. Configure the URL of cloud server and click "Save" button in the bottom-left corner of the screen.
 - B. After exiting the control center, the system homepage will appear as below:



C. Enter the corresponding user name, password and domain into the input boxes of "User Name", "Password" and "Domain" respectively.

User Name]
Password	
Domain]

D. Click "Log On" button.

3.2.2 Application Management

1. The appearance of "HOME" interface when connection type is set as "Citrix Xen" and

connection mode is set as "PNAgent" for the cloud server:



A. Add App

Click "Apps" to expand the Apps list. Select the app to be added from the list and click to add. For example, if you have selected "XenDesktop", you will have this app added to "HOME".



B. Delete App

Click "Apps" to expand the Apps list. Click the app which have been added to "HOME" to instantly delete this app from "HOME".

C. Open App

T XerDesktop

After adding app to "HOME", click the desired app to open this app. After openning this app, it will appear on the transparent taskbar at the bottom of the screen.

D. Click "Log Off" in the top right corner of the screen to log off the current account.

▶ 天后龍・记事本

Skype

2. The appearance of "HOME" interface when connection type is set as "Citrix Xen" and connection mode is set as "Web Interface" for the cloud server:

😂 Windows Media Player 🛛 😒 C.1 - WinRAR

Centerm VDBO>	¢		
🏶 Settings 🔒 Log Off 🕶			
CloudDesktop (1)	CloudDesktop (2)		

- A. Click the cloud desktop on the log-on screen to log on the server.
- B. Click "Settings" Settings in the top left corner of the screen and configure respective settings in the pop-up "Settings" window.

		•	Settings	🔒 Log Off 🔻
Settings				Save Cancel
General				
Configure settings that are applied across the whole Web site	Language:	English	\$	
Client for accessing virtual desktops and applications	The Native Client is currently selecte Run Client Detection	·d.		
Password				
Change password	Change Password			
User Experience				
Use these settings to optimize performance	Connection speed:	Custom	\$ 🛛	
	Color Quality:	No preference	\$	
	Sound:	High - high definition audio	\$	
	√ Enable printer mapping			
Virtual desktop or application window size	Window size:	Seamless	\$ 2	
		Custom size (px):	024 × 768	
		Percentage of screen:	D 96	
Keyboard	Windows key combination:	In full screen mode only	A 0	

C. Click the drop-down button next to "Log Off" to disconnect or reconnect:



3. The appearance of "HOME" interface when the connection type is set as "VMware Horizon View" for the cloud server:



- D. Click the cloud desktop on the log-on screen to log on the server.
- E. Click "Log Off" Log Off in the top right corner of the screen to log off the current account.
- F. After you have connected to the server, the connected entry will appear on the transparent taskbar at the bottom of the screen.

3.3 Control Center

1. Function

DT-PO

The Control Center allows the user to access respective configuration programs of the system.

2. How to use



\$

icon in the bottom left corner of system homepage.

The configuration interface is shown below:

Control Center		
 System Information Audio 	System Informatio	on
🕥 Date & Time	Device name	c3742cca9
🚤 Language & Keyboard	Product name	Cloud Terminal
🦢 Mouse	Terminal Type	C10V2
🔦 User Password	System version	5.53 (Build 2014101101)
Rower Manager	CCCM Agent	5.0.553.200.28125
i Network Diagnosis	Citrix Receiver	13.0.4.281908
	VMware Horizon View	2.2.0
	RDP	7.0

3. Run the programs in the Control Center

Select the desired program from the Control Center and click the icon.

4. Administrator mode

In the control center, there are some general programs which the user can open and configure them, and there is an Administrator mode, click "Administrator Mode" in left bottom, it will enter the interface of administrator mode. As the picture shows below:

Control Center		
5ystem Information		
	System Informati	lon
Petwork	Device name	cbf1c6bba
🔞)) Audio	Product name	Centerm Cloud Terminal
🕥 Date & Time	Terminal Type	E1945-3
🕰 Language & Keyboard	System version	5.30 (Build 2014010303)
🥭 Mouse	CCCM Agent	5.0.530.100.24273
Display	Citrix Receiver	12.1.6.231670
CCCM Agent	CT Vision	5.20
	VMware Horizon View	2.0.0
Security		
Certificate Manager	Flash Player	
Printer Manager	IP address	192.168.45.94
Power Manager	MAC address	00:1A:A9:25:69:84
Ve Remote Assistance	Copyright	© 2013 Centerm Information Co., Ltd. All Rights Reserved.
Network Diagnosis		
Des Viewer	Patch List	

3.3.1 System Information

1. Function

To edit device name and view system information.

2. How to use

After entering Control Center, click the "System Information" icon:



The configuration interface is shown below:

System Informati	on
Device name	cbf20dcc6
Product name	Centerm Cloud Terminal
Terminal Type	C35A
System version	5.30 (Build 2014010303)
CCCM Agent	5.0.530.100.24273
Citrix Receiver	12.1.6.231670
CT Vision	5.20
VMware Horizon View	2.0.0
RDP	7.0
Flash Player	11.1
IP address	192.168.45.94
MAC address	14:14:4B:E4:4F:EC
Copyright	© 2013 Centerm Information Co., Ltd. All Rights Reserved
Patch List	

- 3. Edit device name
 - Click the text box next to "Device name" and change the name in the text box into a new device name.

cbf20dcc6

(2) Click "Save" button in the bottom left corner of the screen.

3.3.2 Cloud Service

1. Function

To configure cloud server connection type and relevant setting.

2. How to use

After entering the the administrator mode of Control Center, click the "Cloud Service" icon:



The configuration interface is shown below:

Cloud Service	
Connection type	Citrix Xen
Citrix Receiver	
	and the second
Connection mode	PNAgent 🔻
Server address	192.168.12.42
Device Mapping	
Disk Mapping	OFF
Enable Sound	
Enable SmartCard	
Enable Printer	
Enable USB Redirect	
Options	
Show the connection bar in full scree	mode OFF
Enable video HDX	
Enable audio HDX	
Enable Flash HDX	OFF
Enable WebCam HDX	OFF
Login Scripts	
Automatic Login	OFF
User Name	

3. Modify settings

- (1) Citrix Xen
 - A. Click the drop-down list next to "Connection type" and select "Citrix Xen", as shown



B. Modify the settings of "Citrix Receiver". Click the drop-down list next to "Connection mode" and select "PNAgent" or "Web Interface", as shown below:

PNAgent	•
PNAgent	
Web Interface	

C. Enter the IP address of server:

Server address	192.168.12.42
Server audress	192.100.12.42

 Modify the settings of "Device Mapping". You can click the toggle buttons to enable or disable the devices to be mapped, as shown below:

Device Mapping	
Serial Ports	OFF
Disk Mapping	OFF
Enable Sound	ON
Enable SmartCard	ON
Enable Printer	ON
Enable USB Redirect	ON

E. Modify the settings of "Options". You can click the toggle buttons to enable or disable relevant features, as shown below:

Options	
Show the connection bar in full screen mode	OFF
Enable video HDX	ON
Enable audio HDX	ON
Enable Flash HDX	OFF
Enable WebCam HDX	OFF

F. When the connection type is set as "PNAgent", you can determine to enable or disable

automatic login. Click the toggle button of "Automatic Login" to enable or disable this feature. In the meantime, you will need to enter the user name, password and domain, as shown below:

Login Scripts	
Automatic Login	ON
User Name	test
Password	
Domain	test.com.cn

- G. Click "Save" button in the bottom left corner of the screen.
- (2) RDP
- A. Click the drop-down list next to "Connection mode" and select "RDP", as shown below:

RDP	•
Citrix Xen RDP	
VMware Horizon View	

- B. Configure the IP address of server.
- C. Modify the settings of "Display". You can set color depth as shown below:

8 bit	
16 bit	
24 bit	
32 bit	
24 bit	•

Click the toggle button of "Display the connection bar" to enable or disable displaying the connection bar.

D. Modify the settings of "Device Mapping". Click the drop-down list next to "Audio" and select the audio playback mode; click the toggle buttons to select devices to be redirected, as shown below:

Device Mapping		
Audio	Do not play	▼
Storage	ON	
Smart card	ON	
Clipboard	ON	

- E. Modify the settings of "Programs". Click the toggle button of "Start the following program on connection" to enable this feature, and then enter the path, filename and folder of the program to be started.
- F. Modify the settings of "Experience". Click the toggle buttons to select the different experiences to be applied during RDP connection:



G. Modify the settings of "Advanced". Click the drop-down list of "Keyboard layout" to select from different keyboard layouts. Click the toggle buttons to enable or disable console mode and compression, as shown below:

en-us	•
en-us	
es-mx	
et	
fi	
fo	

- H. Modify the settings of "Login Scripts". Click the toggle button of "Automatic Login" to enable automatic login.
- I. Click "Save" button in the bottom left corner of the screen.
- (3) VMware Horizon View
- A. Click the drop-down list next to "Connection type" and select "VMware Horizon View", as shown below:

VMware Horizon View	•
Citrix Xen	
RDP	
VMware Horizon View	

B. Modify the settings of "VMware Horizon View". Enter the IP address of server and modify security and protocol settings. Configure to enable or disable KIOSK mode. You can also configure to enable or disable security authentication from the security drop-down list.



C. You can select different protocols from the protocol drop-down list.

Default		
Default		
RDP		
PCoIP		

D. Modify the settings of "Display". You can select the desired color depth from the color

depth list.

E. Modify the settings of "Device Redirections". You can select the devices to be redirected to the server.

Device Redirections	
Audio	Do not play 🔻
Clipboard	OFF
Storage	OFF
Smart card	OFF
Serial1	OFF
Serial2	OFF
Serial3	OFF
Serial4	OFF
Parallel	OFF

F. Modify the settings of "Experience". Click the toggle buttons to enable the features allowed during server connection.

Experience	
Allow the following:	
Desktop background	OFF
Show window contents while dragging	OFF
Menu and window animation	OFF
Theme	ON
Persistent bitmap caching	ON

G. Modify the settings of "Advanced". Select the keyboard layout from the drop-down list and enable or disable console mode and compression. Click the drop-down list next to keyboard layout and select the desired keyboard layout. Click the toggle button of "Console mode" to enable console mode; click the toggle button of "Compression" to enable compression.

- H. Modify the settings of "Login Scripts". You can enable automatic login. After enabling this feature, the system will automatically log on the server every time the client is turned on.
- I. Click "Save" button in the bottom left corner of the screen.

3.3.3 Network

1. Function

To configure IP address and DNS.

2. How to use

After entering the administrator mode of Control Center, click the "Network" icon:

- Cloud Service

The configuration interface is shown below:

Network		
	والساعط فالتركي	
Network Card	Network Adapter 1	
MAC	00:1A:A9:25:69:84	
State	ON	
Lise The Following ID Address		
Obtain the IP address automatically	OFF	
IP address	192.168.45.94	
Subnet mask	255.255.255.0	
Default gateway	192.168.45.1	
Use The Following DNS Server	s	
Obtain the DNS servers automatically	OFF	
Preferred DNS server	192.168.13.31	
Alternate DNS server		

- 3. Configure network settings
 - (1) Obtain the IP address automatically

Click the toggle button of "Obtain the IP address automatically" to enable this feature.

(2) Obtain the DNS servers automatically

Click the toggle button of "Obtain the DNS servers automatically" to enable this feature.

- (3) Configure IP address manually
- A、 Click the toggle button of "Obtain the IP address automatically" to disable this feature.
- B. Enter the corresponding values into the input boxes of "IP address", "Subnet mask" and "Default gateway" respectively.

192.168.45.94
255.255.255.0
192.168.45.1

- $C_{\mathbb{N}}$ Click "Save" button in the bottom left corner of the screen.
- (4) Configure DNS server manually
- A. Click the toggle button of "Obtain the DNS servers automatically" to disable this feature.
- B. Enter the corresponding values into the input boxes of "Preferred DNS server" and "Alternate DNS server" respectively.



C. Click "Save" button in the bottom left corner of the screen.

3.3.4 Audio

1. Function

To configure the volume for speakers and microphone.

2. How to use

After entering the Control Center, click the "Audio" icon:



The configuration interface is shown below:

Audio						
Speakers	el si			•	80	
Sheemens						
Microphone	Ŷ	<u> </u>		•	80	

- 3. Modify settings
 - (1) Adjust the volume for speakers
 - A. To mute the speakers, click the

icon next to "Speakers".

- B. After muting the speakers, to restore the sound, click the icon next to "Speakers" to restore to the formerly set volume.
- C. To adjust volume: click somewhere on the volume bar on the right side of "Speakers":



- A. To mute the microphone, click the **set of the microphone**.
- B. After muting the microphone, to restore the sound, click the icon next to

"Microphone" to restore to the formerly set volume.

- C. To adjust volume: click somewhere on the volume bar on the right side of "Microphone", or drag the volume slider to the left/right.
- D. Click "Save" button in the bottom left corner of the screen.

3.3.5 Date & Time

1. Function

To configure system data and time.

2. How to use

After entering the Control Center, click the "Date & Time" icon:



The configuration interface is shown below:



- 3. Configure date and time
 - (1) Automatic synchronization

- A. Click the toggle button of "Auto-sync from server" to enable this feature.
- B. Enter the correct IP address of time server into the input box next to "Time server".



- C. Click the "Sync Now" button.
- (2) Periodic synchronization
- A. After completing A and B in the first step, do not click "Sync Now" button.
- B. Click the toggle button of "Open Auto Cycle Sync" to enable this feature.
- C. Enter the interval to be set in the input boxes on the right side of "Cycle Sync Interval".
- D. Click "Save" button in the bottom left corner of the screen.
- (3) Manual configuration
- A. Click the toggle button of "Auto-sync from server" to disable this feature.
- B. Click "+" or "-" buttons for date and time to set the system date and time:



C. You can also click the edit box of date or time to manually enter the numerical values:



D. Click the drop-up list as shown below to select the desired time zone:

(UTC+05:00) Tashkent
(UTC+05:30) Chennai,Kolkata,Mumbai,New Delhi
(UTC+05:30) Sri Jayawardenepura
(UTC+05:45) Kathmandu
(UTC+06:00) Astana
(UTC+06:00) Dhaka
(UTC+06:00) Ekaterinburg
(UTC+06:30) Yangon(Rangoon)
(UTC+07:00) Bangkok,Hanoi,Jakarta
(UTC+07:00) Novosibirsk
(UTC+08:00) Beijing,Chongqing,Hong Kong,Uru…
(UTC+08:00) Beijing,Chongqing,Hong Kong,Urumqi▼

E. Click "Save" button in the bottom left corner of the screen.

3.3.6 Language & Keyboard

1. Function

To configure language and keyboard.

2. How to use

After entering the Control Center, click the "Language & Keyboard" icon:

🚤 Language & Keyboard The configuration interface is shown below: Language & Keyboard Display language U.S. English United States (English) Keyboard layout Keyboard model Generic 105-key V **Typing Settings** Key repeat ON Repeat delay Short • Long Repeat speed Slow Fast

- 3. Configure language & keyboard
 - (1) Display language
 - A. Click the drop-down menu next to "Display language" and select the desired language:

Display language	U.S. English	•
Keyboard layout	U.S. English 中文(简体) ^(English)	V

- B. Click "Save" button in the bottom left corner of the screen.
- C. After configuring the "Display language", you must reboot the device for the changes to take effect:



- (2) Keyboard layout
- A. Click the drop-down menu next to "Keyboard layout" and select the desired keyboard

layout:

Keyboard layout	United States (English) 🔹
Keyboard model	United States (English) Belgium (Français Belgique) Brazil (Português do Brasil)
Typing Setting	Bulgaria (Български) Canada (Français Canadien)
Key repeat	Croatia (Hrvatski) Czech Republic (Český) Czech Republic (Český),qwerty

- B. Click "Save" button in the bottom left corner of the screen.
- (3) Keyboard model
- A. Click the drop-down menu next to "Keyboard model" and select the desired keyboard model:

Keyboard mod	el	Generic 105-key		
		Generic 105-key	1	
Typing Setting		Generic 104-key		
		Generic 103-key	ł	
	_	Generic 102-key		
Key repeat		Generic 101-key		
Repeat delay	Sho	ABNT2		
	5.1.5	Fujitsu Trimodal	ľ	
Repeat speed	Slov	Dell 101-key		

- B. Click "Save" button in the bottom left corner of the screen.
- (4) Key repeat
- A. After enabling "Key repeat", you will need to adjust repeat delay and repeat speed. Click
somewhere on the scroll bar to complete the configuration, or drag the scroll bar slider to the left/right.

B. Click "Save" button in the bottom left corner of the screen.

3.3.7 Mouse

1. Function

To configure mouse settings.

2. How to use

After entering the Control Center, click the "Mouse" icon:



Mouse					
Primary Button	L				
Mouse Speed	Slow 🧲	•	_	_	🕨 Fast

- 3. Configure mouse
 - (1) Primary button
 - A. Click the toggle button of "Primary Button" to make the right-button as the primary button. In such a case, click with the left mouse button will receive no response, and you will need to click with the right mouse button to proceed with normal operations.
 - B. Right-click "Save" button in the bottom left corner of the screen.

- (2) Mouse speed
- A. To adjust the mouse speed: click somewhere on the speed bar, or drag the speed bar slider to the left/right.
- B. Click "Save" button in the bottom left corner of the screen.

3.3.8 Display

1. Function

To configure screen resolution.

2. How to use

After entering the administrator mode of Control Center, click the "Display" icon:



The configuration interface is shown below:

Display		
Auto-detect optimum settings	ON	
	Single	v
	VGA	•
	800x600	•
	1280x1024	V
Screen Saver		
Screen Saver	None	•
	Preview	
Wait	15 ⁺ minutes	

3. Modify resolution

(1) Automatic detection of optimum settings

Click the toggle button of "Auto-detect optimum settings" to enable this feature.

- (2) Configure resolution manually
- A. Click the toggle button of "Auto-detect optimum settings" to disable this feature.
- B. Click the drop-down menu next to "VGA resolution" and select the desired resolution:

VGA resolution	1280x1024 🔻
	800x600
	1024x768
	1280x1024
Screen Saver	1440x900
	1680x1050

C. Click "Save" button in the bottom left corner of the screen and the following prompt

message will pop up:



- (3) Configure screen saver
- A. Click the drop-down menu next to "Screen Saver" and select the desired screen saver:

Screen Saver	None	
	None	
	anemone	
	blaster	
Wait	compass	

- B. Click "Preview" button to see how the screen saver will appear on your screen.
- C. In the input box next to "Wait", enter the desired waiting time.
- D. Click "Save" button in the bottom left corner of the screen.

3.3.9 CCCM Agent

1. Function

To configure CCCM Agent.

2. How to use

After entering the administrator mode of Control Center, click the "CCCM Agent" icon:



The configuration interface is shown below:

CCCM Agent	
Automatically managed by a server	ON
Managed By The Following S	Server
Port	8081 +

- 3. Configure CCCM Agent
 - (1) Automatic management by server
 - A. Click the toggle button of "Automatically managed by a server" to enable this feature.
 - B. Click "Save" button in the bottom left corner of the screen.
 - (2) Configure server manually
 - A. Click the toggle button of "Automatically managed by a server" to disable this feature.
 - B. Enter the corresponding values into the input boxes of "Server" and "Port" respectively:

Server address	192.168.13.84
Port	8081 +

C. Click "Save" button in the bottom left corner of the screen.

D. By this time, the dialog box for entering CCCM password will pop up. Enter the correct password and click "OK" to save the changes.



3.3.10 Security

1. Function

To configure security settings.

2. How to use

After entering the administrator mode of Control Center, click the "Security" icon:



Security			
Use Password	OFF		
New Password			

- 3. Modify settings
 - (1) Configure system access security
 - A. Click the toggle button of "Use Password" to enable this feature.
 - B. Configure new password:



- C. Click "Save" button in the bottom left corner of the screen.
- D. When you click the "Control Center" icon to enter the Control Center again, you will be prompted to enter the security password:



- (2) Disable system access security setting
- A. Click the toggle button of "Use Password" to disable this feature.
- B. Enter the password configured previously:



- C. Click "Save" button in the bottom left corner of the screen.
- D. When you enter the Control Center again, you won't need to enter the password.

3.3.11 Certificate Manager

1. Function

To configure Certificate Manager.

2. How to use

After entering the administrator mode of Control Center, click the "Certificate Manager"

icon:



Certificate Manager

Issued to Issued by Expire Date Baltimore CyberTrust Root Baltimore CyberTrust Root 2025-05-12 🙁 GTE CyberTrust Global Root GTE CyberTrust Global Root 2018-08-13 VeriSign, Inc. VeriSign, Inc. 2028-08-01 VeriSign, Inc. VeriSign, Inc. 2028-08-01 VeriSign, Inc. VeriSign, Inc. 2028-08-01 **Certificate Import** Certificate Location Local Import • /storage

- 3. Modify settings
 - (1) Delete certificate
 - A. Click the Delete icon on the right side of certificate list to delete the corresponding certificate.
 - (2) Import local certificate
 - A. Click the drop-down list next to "Certificate Location" and select "Local", as shown below:

Local	•
Local	
Ftp	

B. Insert the flash drive which carries the certificate and select the certificate to be imported from the list box at the bottom of the Certificate Manager interface.



Click "Import" button.

- C. Click "Save" button in the bottom left corner of the screen.
- (3) Import certificate from FTP server
- A. Click the drop-down list next to "Certificate Location" and select "FTP".
- B. Enter the IP address of FTP server, port number, user name, password and the absolute path to the certificate:

Certificate Location	Ftp v Import
Server Address	192.168.12.109
Port	21 +
User Name	lindl
Password	
Location	/tmp/xxx.crt

Click "Import" button.

C. Click "Save" button in the bottom left corner of the screen.

3.3.12 User Password

1. Function

To configure User Password. Through using the "user password" program, you can set the user password which is the password for starting up/restart, screen saver and system lock.

2. How to use

After entering the Control Center, click the "User Password" icon:



User Password	
Use Password	OFF
Confirm Password	

- 3. Modify settings
 - (1) Configure User Password
 - A. Click the toggle button of "Use Password" to enable this feature.
 - B. Configure new password:



- C. Click "Save" button in the bottom left corner of the screen.
- D. When you restart the device, you will be prompted to enter the user password.
- (2) Disable system access security setting
- A. Click the toggle button of "Use Password" to disable this feature.
- B. Enter the password configured previously:



C. Click "Save" button in the bottom left corner of the screen.

3.3.13 Power Manager

4. Function

To configure Power Manager.

5. How to use

After entering the Control Center, click the "Power Manager" icon:



Power Manager	
Enable Dower Manager	OFF
Lhable Fower Manager	
Idle Policy	
	OFF
	15 + Minutes Close Monitor V
Schedule Shutdown	
	OFF
Time(h:m)	22 + 30 +
Perform Daily	ON
Message	
Enable Message	
Allow Cancel Shutdown In	1 Minutes

- 6. Configure Power Manager
 - (1) Enable Power Manager

- A. Click the toggle button of "Enable Power Manager" to enable this feature.
- B. After enabling Power Manager, you can then configure respective settings.
- (2) Configure idle policy
- A. Click the toggle button of "Enable Idle Policy" to enable this feature.
- B. Configure the action to be taken by the system when it's idle. In the input box next to "When System Idle, Wait", manually enter the time or click "+" or "-" button to adjust the time.



Click the drop-down list on the right side of the idle time to specify the system action when the idle time runs out:



- C. Click "Save" button in the bottom left corner of the screen.
- (3) Scheduled shutdown
- A. Click the toggle button of "Enable Schedule Shutdown" to enable this feature.
- B. Set the scheduled time to shut down the system:



Click the toggle button of "Perform Daily" to specify whether or not to perform scheduled shutdown every day.

Perform Daily ON

- C. Click "Save" button in the bottom left corner of the screen.
- (4) Message
- A. Click the toggle button of "Enable Message" to enable this feature.
- B. Set the time allowed to cancel shutdown:



C. Click "Save" button in the bottom left corner of the screen.

3.3.14 Remote Assistance

1. Function

To configure remote assistance.

2. How to use

After entering the administrator mode of Control Center, click the "Remote Assistance" icon:



The configuration interface is shown below:

Remote Assistance				
Enable the Remote Assistance	ON			
Preferences	Allow other users to view your desktop	•		
When A User Tries To View Or Control Your Desktop				
Require the user to enter this password	OFF			
Password				

- 3. Modify settings
 - (1) Remote Assistance
 - A. Click the toggle button of "Enable the Remote Assistance" to enable this feature.
 - B. Click the drop-down list on the right side of "Perferences" and select the operation you allow other users to carry out:



- C. Click "Save" button in the bottom left corner of the screen.
- (2) Configure access password
- A. Click the toggle button of "Require the user to enter this password" to enable this feature.
- B. Enter the password to be set:



C. Click "Save" button in the bottom left corner of the screen.

D. In such a case, other users need to enter the preset password in order to access the local computer.

3.3.15 Network Diagnosis

- 1. Function
 - (1) Use "Ping" feature to test network connection;
 - (2) Use "Traceroute" to show the route your traffic takes from the local computer to the target server.
- 2. How to use

After entering the Control Center, click the "Network Diagnosis" icon:



Network	Network Diagnosis				
Diagnostic 1	Tools Ping	•			
Ping					
Network ad	dress	P	ling		
Send	5 +	requests			
Round Trip	Time Statistics	Transmission Statistics			
Minimum:	0.00ms	Packets transmitted:	0		
Average:	0.00ms	Packets received:	0		
Maximum:	0.00ms	Successful packets:	0%		
Bytes	Network address	Seq Time	Units		

- 3. Diagnosis configuration
 - (1) Ping
 - A. Click the drop-down list next to "Diagnostic Tools" and select "Ping", as shown below:



B. Enter the IP address and the number of requests to be sent, and then click "Ping" button to run diagnosis, as shown below:

Network address	192.168.9.111	Ping
Send	5 <mark>+</mark> requests	

C. The diagnostic information will be printed in the following list:

Round Trip	Time Statistics	Transm	ission Statistics	
Minimum:	0.36ms	Packets	transmitted:	5
Average:	0.38ms	Packets	received:	5
Maximum:	0.42ms	Success	ful packets:	100%
Bytes	Network address	Seq	Time	Units
64	192.168.9.111	1	0.416	ms
64	192.168.9.111	2	0.364	ms
64	192.168.9.111	3	0.369	ms
64	192.168.9.111	4	0.368	ms
64	192.168.9.111	5	0.367	ms

(2) TraceRoute

A. Click the drop-down list next to "Diagnostic Tools" and select "TraceRoute", as shown below:



- B. Enter the IP address and then click "Trace" button to run diagnosis:
- C. The diagnostic information will be printed in the following list:

Нор	Hostname	Network address	Time
1	nettec.star-net.cn	192.168.9.111	0.138ms
1	192.168.45.1	192.168.45.1	1.140ms
1	192.168.45.1	192.168.45.1	1.517ms
2	10.10.120.1	10.10.120.1	1.540ms
3	10.10.40.2	10.10.40.2	1.387ms
4	10.10.27.1	10.10.27.1	2.129ms
5	10.10.15.1	10.10.15.1	2.200ms
5	10.10.15.1	10.10.15.1	103.644ms

3.3.16 Logs Viewer

1. Function

To view system logs.

2. How to use

After entering the administrator mode of Control Center, click the "Logs Viewer" icon:



Logs Viewer				
Logs System				
Endo alarente endo endo ante				
System				
0.1d 0. PCT INT A -> GST 23 (level low) -> TRO 23				
[1.742379] uhci hcd 000:00:1d 0; setting latency timer to 64				
[1.742385] uhci hcd 0000:00:1d.0: UHCI Host Controller				
1.7423981 uhci hcd 0000:00:1d.0: new USB bus registered, assigned bus number 2				
[1.742437] uhci hcd 0000:00:1d.0: irg 23, io base 0x0000f0a0				
[1.742805] hub 2-0:1.0: USB hub found				
[1.742814] hub 2-0:1.0: 2 ports detected				
[1.742969] uhci_hcd 0000:00:1d.1: PCI INT B -> GSI 19 (level, low) -> IRQ 19				
[1.742982] uhci_hcd 0000:00:1d.1: setting latency timer to 64				
[1.742988] uhci_hcd 0000:00:1d.1: UHCI Host Controller				
[1.743001] uhci_hcd 0000:00:1d.1: new USB bus registered, assigned bus number 3				
[1.743054] uhci_hcd 0000:00:1d.1: irq 19, io base 0x0000f080				
[1.743403] hub 3-0:1.0: USB hub found				
[1.743412] hub 3-0:1.0: 2 ports detected				
[1.743564] uhci_hcd 0000:00:1d.2: PCI INT C -> GSI 18 (level, low) -> IRQ 18				
[1.74357] unclined 0000:001:1d.2: setting latency timer to 64				
[1.745363] uncl_nca 0000.001.10.2. Uncl_nest Controller				
[1.74507] unc_ncu toto.tot.tu.z. nq no, to base oxoootioto				
[1744016] hub 4-0:10: 2 ports detected				
[1.744162] uhci hcd 0000:00:1d.3: PCI INT D -> GSI 16 (level, low) -> IRO 16				
[1.744174] uhci hcd 0000:00:1d.3: setting latency timer to 64				
[1.744174] the new books tables setting latency time to 04				
[1.744196] uhci_hcd 0000:00:1d.3: new USB bus registered, assigned bus number 5				
[1.744249] uhci_hcd 0000:00:1d.3: irq 16, io base 0x0000f040				
[1.744594] hub 5-0:1.0: USB hub found				
[1.744603] hub 5-0:1.0: 2 ports detected				
[1.745005] i8042: PNP: PS/2 Controller [PNP0303:PS2K,PNP0f03:PS2M] at 0x60,0x64 irq 1,12				
[1.745540] serio: i8042 KBD port at 0x60,0x64 irq 1				

- 3. Modify settings
 - (1) View system logs
 - A. Click the drop-down list next to Logs" and select "System", as shown below:

System	•
System	
UsbDevList	
Xorg	

- (2) View Xorg logs
- A. Click the drop-down list next to "Logs" and select "Xorg".
- (3) View USB device list
- A. Click the drop-down list next to "Logs" and select "UsbDevList".
- 4. Export logs

Insert the USB flash drive and select the type of logs to be exported, and then click "Export

Log to Usb Disk" button.

3.3.17 Switch Desktop

1. Function

To switch "Zero Client" desktop to traditional desktop.

2. How to use

After entering the administrator mode of Control Center, click the "Switch Desktop" icon:



The configuration interface is shown below:

WITCH DESKLOP	
t will switch to tradi	tional desktop.

Click the button "Switch Desktop", you will be prompted to confirm that whether to switch to traditional desktop:



Click the button "OK" to switch to traditional desktop.

4. Instruction of System Hotkeys

The system provides hotkeys for some applications and functions.

Hotkey	Function
Ctrl+Alt+S	Restore the default configuration of the display parameters
Ctrl+Alt+Del	Lock the screen
Ctrl+Tab (or Alt+Tab)	Switch the windows on the desktop
Ctrl+Alt+C	Call out the control center

5. Firmware Update

This section includes 3 parts:

BIOS update, system update and patch update.

Part 1 BIOS Update

1. Set up TCPUP server

(1) Run TCPUP.exe in windows OS, as below picture shows:

🥺 Terminal upgrade see	ver		2	u 😒 🤣 🕄 🛛
Update Information-				
Remote Address	Module	Rate(KB)	P T	'he r
_				
🚝 ****For TCP update	VDP load be u	sing E: \LG Bi	os/uBIOS_I	71945_D20111: ᡐ

(2) Click the **I** button on the top right and you will enter the file selecting

interface, as the picture shows below:

(Note: it allows only one kind of update file to be selected here at the same time, you can only select the "System File", or only select the "BIOS File", or only select the "Patch File".)

Select Update File	1 1 1 1	x
_Select Update File		
1. System File Select Delect		
Don't select System upgrade file!		
2. BIOS File Select Delect Don't select BIOS upgrade file!		
3. Patch File Select Delect Don't select Patch upgrade file!		
OK		

(3) Click the "Select" button in "BIOS File" line, and select the correct bios file, as below picture shows:

Select BIOS upgrade file			×
🔾 🗸 🖓 🖉 Volume	(E:) 🕨 LG Bios 👻 🍫	Search LG Bios	٩
Organize 🔻 New folder			
Downloads	Vame	Date modified	Туре
Recent Places	uBIOS_FI945_D20111226_V24006.DAT	1/17/2012 7:11 PM	DAT File
 □ Libraries □ Documents □ Music □ Pictures □ Videos □ Computer △ Local Disk (C:) □ Local Disk (D:) □ New Volume (E:) □ System Reserved 			
File name	"" uBIOS_FI945_D20111226_V24006.DAT ▼	BIOS file (bios.bin)	•
		Open	Cancel

(4) Select the bios file and Click "Open", then you'll come back to below interface:

Select Update File	X
_Select Update File	
1. System File Select Delect	
Don't select System upgrade file!	
2. BIOS File Select Delect E:\LG Bios\uBIOS_FI945_D20111226_V24006.DAT	
3. Patch File Select Delect Don't select Patch upgrade file!	
OK	

(5) Click "OK", and the TCPUP server side is successfully set up.

2. Update bios for the terminal

(1) Power on the terminal and at the same time, keep pressing "ctrl" key. Then you'll enter below update interface:



Select "Update System" and press Enter

(2) Then it would ask "Do you want to specify client IP address?", as below picture



(3) Enter "y" and specify the client IP address:



(4) Then press Enter and input the TCPUP server address:



(5) Then press Enter, and it would ask "Download file for updating system images?", as the picture shows below:

Find Ethernet Adapter RTL8168(IRQ=8x808b, IOBASE=8x2888)
Specify HBT IP Address: IP Address = 192.168.1.110 Subnet Mask = 255.255.255.0 Default Gateway = 192.168.1.1
Server IP: 192.168.1.189
Download file for updating system images?(y/n)

(6) Enter "n" and it would prompt in red letters: "Press space key to restart..."

Find Ethernet Adapter RTL8168(IRQ=8x888b,IOBASE=8x2888)
Specify HBT IP Address: IP Address = 192.168.1.110 Subnet Mask = 255.255.255.0 Default Gateway = 192.168.1.1
Server IP: 192.168.1.100
Download file for updating system images?(y/m)
Press space key to restart

Just ignore this and press Ctrl+B

(7) Then you'll enter below interface asking "Do you want to update BIOS?", as the picture shows below:



(8) Input "y" and it would start downloading bios file and update bios, as the picture shows below:



(9) After the BIOS update finishes, it would prompt in red letters: "All done, Press space key to restart ..."

Press space key and the terminal would restart.

Part 2 System Update

1. Set up TCPUP server

(1) Run TCPUP.exe in windows OS, as below picture shows:



(2) Click the button on the top right and you will enter the file selecting interface, as the picture shows below:

📮 Select Update File	X
_Select Update File	
1. System File Select Delect	
Don't select System upgrade file!	
2. BIOS File Select Delect E:\LG Bios\uBIOS_FI945_D20111226_V24006.DAT	
3. Patch File Select Delect Don't select Patch upgrade file!	
ОК	

(3) Click the "Delete" button in "Bios File" line to delete the selected BIOS file :

Select Update File
-Select Update File-
1. System File Select Delect
Don't select System upgrade file!
2. BIOS File Select Delect
Don't select BIOS upgrade file!
3. Patch File Select Delect Don't select Patch upgrade file!
OK

(4) Click the "Select" button in "System File" line to select the correct system file, as below picture shows:



(5) Select the bios file and Click "Open", then you'll come back to below interface:

Select Update File
Select Update File
1. System File Select Delect
E:\LG Linux\u4.03.01-2012-03-22-01_LG.dat
2. BIOS File Select Delect
Don't select BIOS upgrade file!
3. Patch File Select Delect
Don't select Patch upgrade file!
OK
[]

(6) Click "OK", and the TCPUP server side is successfully set up.

2. Update system for the terminal

OPTION A

(1) Power on the terminal and after enter the system, press Ctrl+Alt+U, then

the patch update interface would pop up, as the picture shows below:

O FTP	Update Type O PATCH O VERSION	Name	Туре	Version	Progress	Status
Update						
Server IP: 192 168	1.110 Port: 21					
User Name:						
Password:						
Version Dir:						
Patch Dir:						
Update	Exit					

(2) Enter the TCPUP server ip and mark **VERSION** (**not PATCH**) and click the "Update" button, then it would start update the system. After the system update finishes, it would automatically restart.

(3) After the download finishes, it would start install the system:



(4) After the system installation finishes, it would automatically restart and enter the system.

OPTION B

 Power on the terminal and at the same time, keep pressing "ctrl" key. Then you'll enter below update interface:



Select "Update System" and press Enter

(2) Then it would ask "Do you want to specify client IP address?", as below picture shows:



(3) Enter "y" and specify the client IP address:



(4) Then press Enter and input the TCPUP server address:



(5) Then press Enter, and it would ask "Download file for updating system images?", as the picture shows below:

Find Ethernet Adapter RTL8168(IRQ=8x800b, IOBASE=8x2000)
Specify WBT IP Address: IP Address = 192.168.1.110 Subnet Mask = 255.255.255.0 Default Gateway = 192.168.1.1
Server IP: 192.168.1.189
Download file for updating system images?(y/n)

(7) Input "y" and it would start downloading the system:



(8) After the download finishes, it would start install the system:



(9) After the system installation finishes, it would automatically restart and enter the system.

Part 3 Patch Update

3 Set up TCPUP server

(1) Run TCPUP.exe in windows OS, as below picture shows:



(2) Click the **b**utton on the top right and you will enter the file selecting interface, as the picture shows below:

Select Update File	
Select Update File	1
1. System File Select Delect	
Don't select System upgrade file!	
2. BIOS File Select Delect Don't select BIOS upgrade file!	
3. Patch File Select Delect Don't select Patch upgrade file!	
ОК	

(3) Click the "Select" button in "Patch File" line to select the correct patch file, as below picture shows:

Select Patch upgrade file.				×
OO- 🖟 « New	Volume (E:) 🕨 LG Patch	▼ 47	Search LG Patch	٩
Organize 🔻 New	folder			
🔶 Favorites	^ Name	^	Date modified	Туре
💻 Desktop 🕕 Downloads	upatch.dat		2/14/2012 6:22 PM	DAT File
🕮 Recent Places	-			
詞 Libraries	=			
Documents				
J Music				
Videos				
🖳 Computer				
🚢 Local Disk (C:)				
👝 Local Disk (D:)		III		F
F	ile name: u*.dat	•	Patch upgrade file (u*.d	at) 🔻
			Open 🔻	Cancel

(4) Select the patch file and Click "Open", then you'll come back to below interface:

Select Update File	Card I	×
Select Update File		
1. System File Select Delect		
Don't select System upgrade file!		
2. BIOS File Select Delect Delect		
3. Patch File Select Delect E:\LG Patch\upatch. dat		
OK		

(5) Click "OK", and the TCPUP server side is successfully set up.

4 Update patch for the terminal

(2) Power on the terminal and after enter the system, press Ctrl+Alt+U, then the patch update interface would pop up, as the picture shows below:

Update Mode	Name	Туре	Version	Progress	Status
Update					
Server IP 1921681110 Port: 21					
User Name:					
Password					
Version Dir.					
Patch Dir.					
Update Exit					

(2) Enter the TCPUP server ip and click the "Update" button, then it would start update the patch to the system. After the patch update finishes, it would automatically restart.