

EoC XL-PB350C Slave

User manual

1. Indicators description



The indicators are as the following from left to right:

PWR: Be ON when power supply works normally

ACT: Be ON when master is connected with slave successfully

SYS1: Be Flash when data is being transmitted normally

SYS2: Equipment work frequency

(1) SYS2 is ON, work frequency 7.5~30MHz, SYS2 is OFF, work frequency 7.5~67.5MHz (Pib version 7.1.1)

(2) SYS2 is ON, work frequency 7.5~67.5MHz, SYS2 is OFF, work frequency 7.5~30MHz (Pib version 7.1.3)

SYS2: Reserved indicator light


LINK 1: Be ON when Eth1 is connected

LINK 2: Be ON when Eth2 is connected

LINK3: Be ON when Eth3 is connected

LINK4: Be ON when Eth4 is connected

2. The sketch map of installation

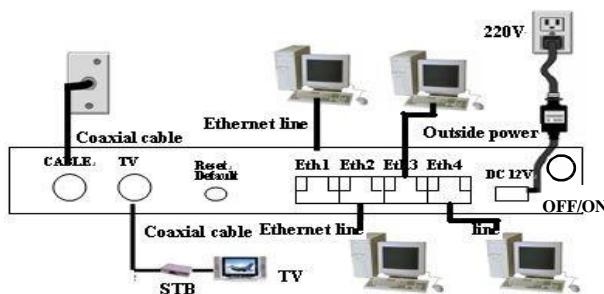

3. Notice

- 1) Please try to use the device in a ventilative, non-radiative, non-magic power places.
 - 2) please cut off the cable connector and power supply when it is thunderstorm. 3)
- Do not use reset button in casual.
- 4) For its plastic outside, please do not press or drop from high place.
 - 5) please use the power supply **12V 500mA--1250mA** as the manufacturer's requirement.

4. Fault and reason

Fault	reasons
PWR is off	<ol style="list-style-type: none">1. No power input;2. Power adapter is invalid;
LINK is off	<ol style="list-style-type: none">1. Ethernet interface is non-connected with PC;2. The net cable is invalid;3. The network interface is invalid;
LINK is on But Ping is ineffective.	<ol style="list-style-type: none">1. Check whether the net cable is ineffective;2. Please check the configuration of network card on PC;3. With Reset Default pressed, the internal data is cleared;4. The net connection or the device is broken.
ACT is off	<ol style="list-style-type: none">1. CABLE is disconnected;2. ACT or the device is broken;3. It is disconnected with the Master server, please contact your supplier.
ACT flashes but the device does not work	<ol style="list-style-type: none">1. Power supply is not stable, please power on again or change power supply;2. Reconnect the cable;3. The signal is weak and please contacts your supplier.