


User's Manual



8/16-Channel Network Video Recorder with HDMI

▶ NVR-820 / NVR-1620

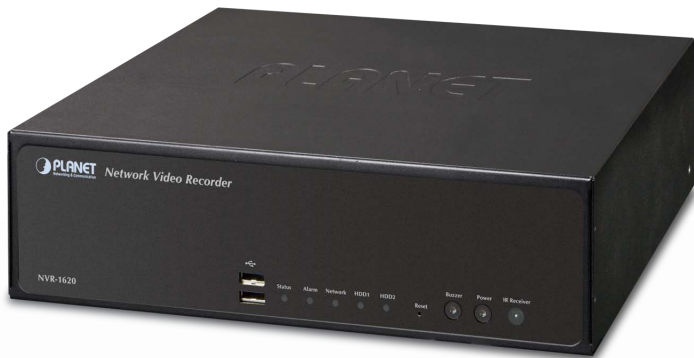

Copyright

Copyright © 2014 by PLANET Technology Corp. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of PLANET.

PLANET makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability or fitness for any particular purpose. Any software described in this manual is sold or licensed "as is". Should the programs prove defective following their purchase, the buyer (and not PLANET, its distributor, or its dealer) assumes the entire cost of all necessary servicing, repair, and any incidental or consequential damages resulting from any defect in the software. Further, PLANET reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation to notify any person of such revision or changes.

All brand and product names mentioned in this manual are trademarks and/or registered trademarks of their respective holders.

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio technician for help.

FCC Caution

To assure continued compliance, for example, use only shielded interface cables when connecting to computer or peripheral devices. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Federal Communication Commission (FCC) Radiation Exposure Statement

This equipment complies with FCC radiation exposure set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antenna shall not be less than 20 cm (8 inches) during normal operation.

Safety

This equipment is designed with the utmost care for the safety of those who install and use it. However, special attention must be paid to the dangers of electric shock and static electricity when working with electrical equipment. All guidelines of this and of the computer manufacture must therefore be allowed at all times to ensure the safe use of the equipment.

CE Mark Warning

This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

WEEE Regulation



To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, end users of electrical and electronic equipment should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of WEEE as unsorted municipal waste; they should be collected separately.

Revision

User's Manual for PLANET Network Video Recorder with HDMI
Model: NVR-820 / NVR-1620
Rev: 1.0 (January 2014)
Part No. EM- NVR-820 / NVR-1620

Table of Contents

Chapter 1.	Product Introduction.....	7
1.1	Package Contents.....	7
1.2	Overview.....	7
1.3	Features.....	8
1.4	Product Specifications.....	8
Chapter 2.	Hardware Interface.....	11
2.1	Physical Descriptions.....	11
2.2	Hardware Installation.....	12
2.2.1	Installing Hard Disk.....	12
Chapter 3.	Connecting to the NVR.....	15
3.1	Using Device Search Utility.....	15
3.2	Accessing NVR with its default IP address.....	18
Chapter 4.	Web-based Management.....	20
4.1	Main / Live Viewing.....	20
4.1.1	Date and Time Display.....	20
4.1.2	User's Configuration.....	21
4.1.3	Hardware Event Notification.....	21
4.1.4	Channel Status.....	21
4.2	Video Frame.....	21
4.3	List Viewing.....	24
4.3.1	Pattern View.....	25
4.3.2	Sequence Viewing.....	25
4.3.3	Save Viewing.....	25
4.4	Saved Viewing.....	26
4.5	Setting Up Password.....	26
4.6	Camera Installation.....	27
4.6.1	Adding a Camera -- Automatic Search.....	27
4.6.2	Adding a Camera Manually.....	29
4.7	Live Viewing through iPhone Safari Browser.....	29
4.8	Live Viewing through Blackberry Phones.....	31
Chapter 5.	Playback Viewing.....	34
5.1	Certain Functions of Playback Video.....	34
5.2	The Main Layout for Playback.....	35
5.3	Playing Exported Playback Videos with NVR Media Player.....	38
Chapter 6.	Event Viewing.....	40
6.1	Opening Event Snapshot Images with NVR Media Player.....	41
Chapter 7.	NVR Setup – System Configurations.....	42
7.1	Network Setup.....	42
7.1.1	Network Settings.....	42
7.1.2	DHCP Server.....	43
7.1.3	DDNS Service.....	44
7.2	Time and Date.....	49
7.3	User Account.....	50
7.3.1	Adding a New User.....	51
7.3.2	Changing the Password of the “Admin” Account.....	52
7.4	Group Privilege.....	52
7.5	Disk Setup.....	54
Chapter 8.	NVR Setup -- Channel Configurations.....	55

8.1	Adding a Camera	55
8.1.1	Automatic Search	55
8.1.2	Adding a Camera Manually	59
8.2	OSD Settings	59
8.3	PTZ Setting	61
8.3.1	PTZ Preset Settings	61
8.3.2	PTZ Preset Sequence	62
8.4	E-Map Setting	63
8.4.1	Local E-Map Setting	63
8.4.2	Google Map Setting	65
Chapter 9.	NVR Setup -- Event Configurations	67
9.1	Event Configuration	67
9.1.1	General Settings	67
9.2	I / O Settings	68
9.3	Event Servers	69
9.3.1	Configuring an FTP Server	69
9.3.2	Configuring an SMTP Server	70
9.4	Event Triggers	71
Chapter 10.	NVR Setup -- Recording Configurations	73
10.1	General Settings	73
10.2	Schedule Recording	76
Chapter 11.	NVR Setup -- System Options	78
11.1	Device Information	78
11.2	Logs and Reports	78
11.3	Maintenance	79
11.3.1	Firmware Upgrade	79
11.3.2	Through the Web Interface	80
11.3.3	Upgrading through USB Thumb Drive	81
11.3.4	Resetting the NVR to Factory Default	82
11.4	Disk Status	82
11.5	USB Backup	83
11.5.1	Things to Pay Attention to the USB Backup Function	84
11.5.2	Playing the Backup File with the NVR Media Player	85
Chapter 12.	NVR Local Interface	89
12.1	System Configuration	89
12.1.1	Service	89
12.1.2	Display	89
12.1.3	Network	90
12.1.4	User Account -- User setting	92
12.1.5	User Account -- User Group Setting	93
12.1.6	Disk	94
12.1.7	Channel Configurations -- Adding a Camera (Automatic Search)	95
12.1.8	Channel Configurations -- Adding a Camera (Add manually)	98
12.1.9	E-Map	100
12.1.10	Recording	103
12.1.11	Event Setting	106
12.1.12	System Log	113
12.1.13	Maintenance	114
12.1.14	USB Backup	116
Appendix A:	Ping IP Address	118


Appendix B: Planet DDNS Application.....	119
Appendix C: Configuring Port Forwarding Manually.....	120

Chapter 1. Product Introduction

1.1 Package Contents

The package should contain the following items:

- NVR unit x 1
- User's Manual CD x 1
- Quick Installation Guide x 1
- RJ-45 Cable x 1
- Power Cord x 1
- HDD Screw Packet x 1
- Mouse x 1

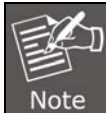

1. If any of the above items are missing, please contact your dealer immediately.
2. Using the power supply that is not the one included in the NVR packet will cause damage and void the warranty for this product.

1.2 Overview

SMB Surveillance Solution

This NVR is suitable for introducing high-definition IP surveillance solution, and for upgrading your CCTV system to IP system without re-cabling. The NVR-1620 and NVR-820 is the 16 / 8-channel Linux embedded NVR with HDMI local display from PLANET, bringing stable and efficient system operation under a wide range of recording/network management/system settings. This latest NVR could be used as a control center to control and monitor up to 16 / 8 network cameras (ONVIF supported) connected to this NVR locally or remotely, and also supports image storage for evidentiary recording and data backup up to 2 hard disks, perfectly designed for intelligent IP surveillance system. Users can just turn on the cameras and the NVR to easily protect their life and properties under the IP networks. The recorded video files can be saved in the NVR without the need for an additional PC for files storage, thus bringing users a secure surveillance system at a lower total cost. It is fully compatible with iOS, Android and Internet Explorer on Windows operating system for multi-platform remote access.

High Resolution Local Display

The NVR-1620 provides an HDMI and VGA video output interface for dual local display, which can be connected to HDMI monitor or TV for doing monitoring in the full HD (1920 x 1080) resolution, and check NVR system status on VGA monitor at the same time, eliminating the need for a separate PC to view video from the unit. It also can be operated with the USB keyboard / mouse and bundled remote control* to configure and monitor all the systems easily.

Performing Real-time Remote Monitoring

Up to 16 IP cameras can be connected to the NVR-1620 via a connected IP network. With the NVR-1620, it delivers high performance to ensure stable recordings and smooth playbacks of multiple megapixel cameras. Users can view remote surveillance in real time and play back recorded videos via the web browser or the bundled CMS software.

Easy Configuration and Management

The NVR-1620 features smart setup wizard program to help users easily complete the device installation. It supports web-based management interface for the administrators to remotely manage the device via web browser without any concern. Furthermore, the NVR-1620 can

automatically search and find the available cameras in the network so it greatly reduces user's effort when setting up the system. This state-of-the-art and powerful software / hardware in one design is considerable to fit in various network environments.

1.3 Features

- **Hardware**
 - Linux-embedded, highly reliable standalone NVR
 - Supports Gigabit Ethernet port
 - Supports VGA / HDMI dual local display
 - Supports 3.5" SATA x 2 HDD
- **Video / Audio**
 - Supports M-JPEG / MPEG-4 / H.264 compressions
 - Auto configuration for PLANET IP camera
 - Video resolution up to 5 mega-pixel (2560 x 1920)
 - Supports up to 120fps @ 1080P (H.264)
 - 2-way audio support with enhanced audio quality
- **Video Recording / Backup**
 - Simultaneous recording and live video streams
 - Manual or schedule recording of 16 IP cameras
 - Video recycle function makes the video recording in 24/7
 - Exports record video file to AVI format to USB device or local storage
 - Instant Event Notification and recording
- **Network Service**
 - Easy access with PLANET Dynamic DNS and Built-in NTP Server
 - Supports DHCP Server/client (Auto detection)
 - Convenient Data Access (SMB/CIFS /HTTP /FTP)
- **Easy Installation & Management**
 - ONVIF compliant for interoperability
 - Supports Multiple Languages
 - Auto discovered by management software
 - E-Map interface in web and utility configuration
 - Web-based and management utility for easy configuration
 - Up to 16 NVR, max. 256 channels with the central management software
 - Supports USB keyboard, mouse, and joystick, IR remote control and Joystick(PTZ)*
 - Supports mobile phone remote view with WinCE 6.1, Android, Symbian S60, iPhone, and Blackberry 4.6

1.4 Product Specifications

Product	NVR-820	NVR-1620
Hardware		
Ethernet	1 x RJ-45, 10/100/1000Base-T	
USB Interface	1 x USB 2.0 for backup device and firmware upgrade	
Video Interface	VGA / HDMI video interface	
Audio Interface	Mic-in, line-in and line-out	
Storage Device	2 x 3.5" SATA II hard disk connectors	
LED	Power, Alarm, Status, HDD	
Button	Power, Reset, Buzzer stop	

IR Receiver	Built-in IR receiver	
Camera		
Max. Channels	8-channel IP Cameras	16-channel IP Cameras
Add camera	Manual / Smart Camera Search / Auto setup	
Video		
Compression	H.264 / MPEG-4 / M-JPEG	
Resolution	5MP / 3MP / 1080P / 2MP / SXGA / 720P / FD1 / VGA / CIF / QCIF	
Max. live video frame rate (Local Display)	240fps@720P30 120fps@1080P30 80fps@3MP Max. 5MP/channel	480fps@D1 30 360fps@720P30 120fps@1080P30 Max. 5MP/channel
	*1: Supports Full HD1080P60 *2: NVR-1620 local display limit to 2 channel 1600 x 1200 (2MP) resolution IP camera	
Max. recording frame rate (Local Display)	240fps@1080P30, 4Mbps/channel, total 8-channel 120fps@3MP, 6Mbps/channel, total 8-channel	480fps@1080P, 3Mbps/channel, total 16-chaneel
	* Real performance may vary in different environments.	
Audio		
Audio Type	Two-way	
Audio format	G.711, G.726 (Camera dependent)	
Live Viewing		
Display Mode	Live View / Playback / Full / Screen / Sequence view / Saved views	
Split Screen	1 / 4 / 9	1 / 4 / 9 / 16
Full Screen	1 / 4 / 9	1 / 4 / 9 / 16
Sequence Mode	Sequence All / Manually Selected cameras in 1/4 split view with configurable timer	
Snapshot	Video snapshot in JPEG format	
PTZ Support	Digital PTZ / Auto Pan / Preset Point / Preset point Sequence view	
Playback		
Split Screen	1 / 4	
Play Method	Play / Pause / Stop / Forward / Reverse / Speed Adjust / Frame by Frame Search by time or event only	
Bookmark	Intuitive timeline interface with bookmark function for easy file export	
Monitor		
Dual Monitor	Main UI + Full screen live view / sequence view	
Monitor Resolutions	1920x1080, 1280x1024, 1280x720, 1024x768	
Network and Configuration		
Network Service	TCP / UDP / HTTP / DHCP / DNS / ARP / ICMP / NTP / UPnP / FTP	
Streaming Protocols	Depending on the supported cameras	

Triggers and Event	
Event type	System Events – <ul style="list-style-type: none"> ● System Start / Shutdown ● System Settings modified ● Camera Settings Modified ● Start Recycle ● Disk Full Camera Events – <ul style="list-style-type: none"> ● Motion/Sensor Detection
Event Action	<ul style="list-style-type: none"> ● Display red window on video of event channel ● Buzzer alarm ● Disable / enable event action ● Duration of event action ● Recording ● Mail / FTP notification ● E-Map notification
Management	
Number of Groups	7 (Administrator / Guest / User Define * 5)
Privileges	Live View / Playback / System Configurations / Camera Configurations / Recording Configuration / Event Configuration / Maintenance
User Interface	<ul style="list-style-type: none"> ● Graphic local user interface (Operated by mouse, keyboard, IR remote controller or USB joystick)* ● Web Browser (Internet explorer 7 or above) ● CMS Utility
Log Type	Alert / Event / User Access
Software Utility	Search utility / media player for recording export
Environment	
Power	100~240V AC, 1.4A / Max. 50/60Hz
Consumption	90W
Operating Temperature	5~40 degrees C
Storage Temperature	-40~70 degrees C
Humidity	10~90% (non-condensing)
Weight	4.6 kg
Dimensions (W x D x H)	220 x 215 x 81 mm

Chapter 2. Hardware Interface

2.1 Physical Descriptions

Front Panel

NVR-1620



NVR-820



LEDs	Status	Definitions
HDD x 2	Green	Solid green when the HDD is mounted
	Red	Solid red for disk fail
	Amber	Solid amber when recording is in process Blinking when recycling
Network	Green	Solid green for activity on a 10 / 100Mbps network
	Amber	Solid amber for activity on a 1Gbps network
Status	Green	Solid green for normal operation Blinking green when firmware upgrade is done
	Red	Blinking red for failed firmware upgrade through USB disk
	Amber	Blinking amber during firmware upgrade
Power	Green	Solid green - Normal operation Blinking in green after pressing and holding the reset button for 5 seconds indicating the device will enter the restore default process. Other LEDs remain unchanged during this state.
	Red	System off (power cord remains plugged in)
	Amber	Fast blinking - During system initializing/starting. Continuous blinking - When system is unable to start properly (All other LEDs should be off when this LED is blinking in amber) Slow blinking - The system is shutting down. Other LEDs go off according to the stages of the process.
Alarm	Red	Blinking in red when a system/camera event occurs. Blinking should last 10 seconds for each event
	None	Goes off if reaches the 10-second duration, or when buzzer stop button is pressed (if buzzer is triggered)
Buttons	Status	Definitions

Power	ON	Press and hold for 2 seconds
	OFF	Press and hold for 2 seconds
Reset	Restore default	Press and hold for 5 seconds
	Restart	Press and hold for 2 seconds
Buzzer Stop	STOP	Press and release to stop buzzer right away
Buzzer	Status	Definitions
Beep	Complete start	Beep once (indicating the system is fully started)
	Initiating restart	Beep once (Indicating the restart process has begun)
	Initiating shutdown	Beep once (Indicating users to release the Power button as the shutdown process has begun)

Real Panel



Connector	Description
Ethernet	10 / 100 / 1000Mbps network.
USB	Connect your USB flash disk for firmware upgrade and backup.
Video	VGA / HDMI
Audio	Line in / Line out / Mic
Power Supply	100~240V AC, 1.4A / Max. 50 / 60Hz

2.2 Hardware Installation

2.2.1 Installing Hard Disk

1. Remove the screws on both sides (1 on each side) and remove the top case by pulling it toward you.



2. Place the HDD in the tray on the left. Slide it in until it is securely connected with the SATA connector.



3. Secure the HDD with the tool-less screw on the right side and the other screw on the left side, which can be found in the accessory box.





4. Place the top case and secure it with the screws on both sides.

Chapter 3. Connecting to the NVR

There are various ways you can connect to the NVR and below are the suggested methods for different network setups:

The NVR is placed in a network with a DHCP server: Connect to the NVR by using “Device Search” Utility.


The NVR is placed in a network without DHCP server (or you are connecting to it directly): Access NVR with its default IP (192.168.0.20).

3.1 Using Device Search Utility

If the NVR is placed in a corporate network or a local area network where a DHCP server is already presented, please install the “Device Search” utility from the bundled CD disk.


1.

Network gateway as the DHCP server

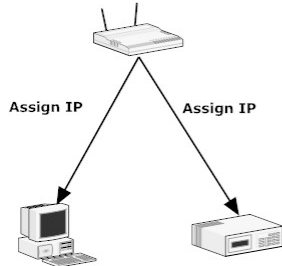


2.


A separate DHCP server in the network

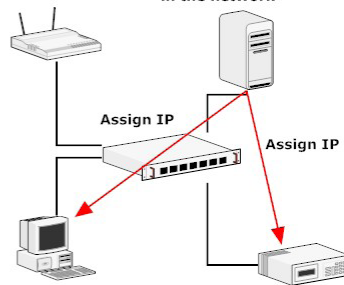


To begin, launch the “Device Search” utility from the CD and proceed with the installation.

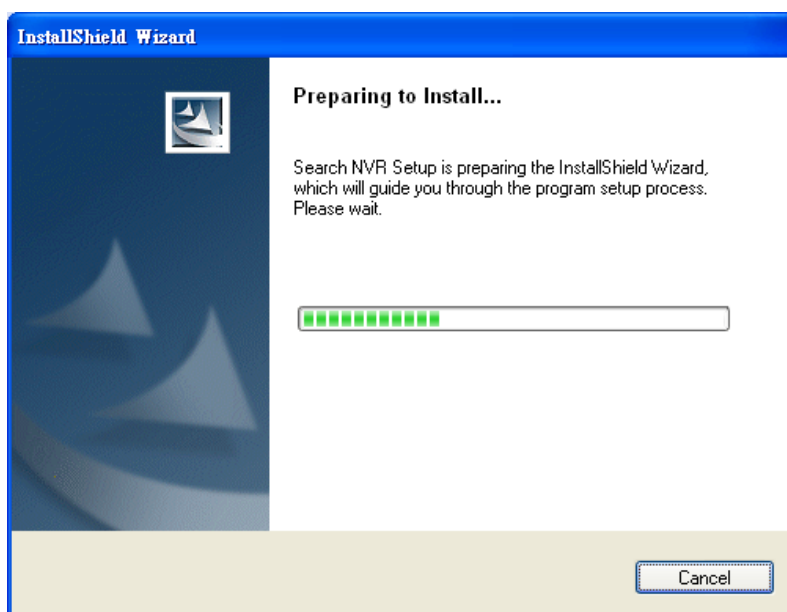


Please click “Next” to continue.

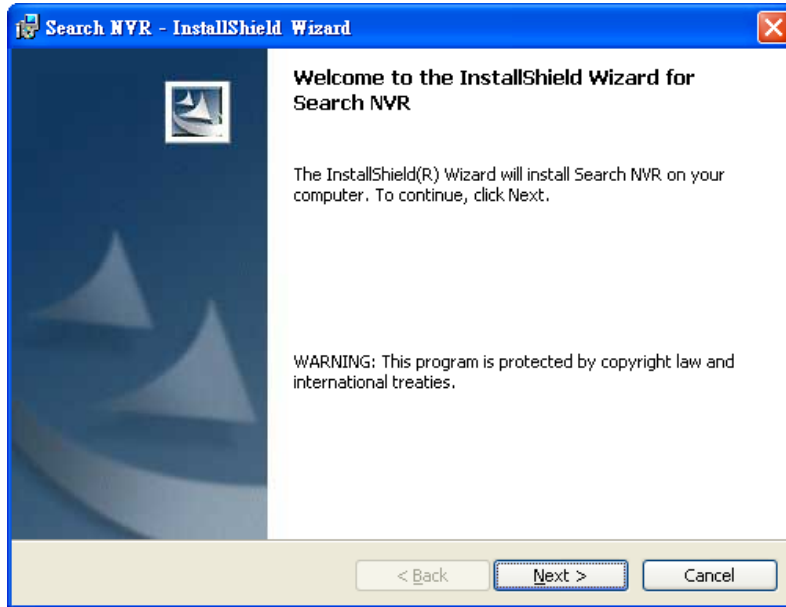

Please click “Install” to start the installation.

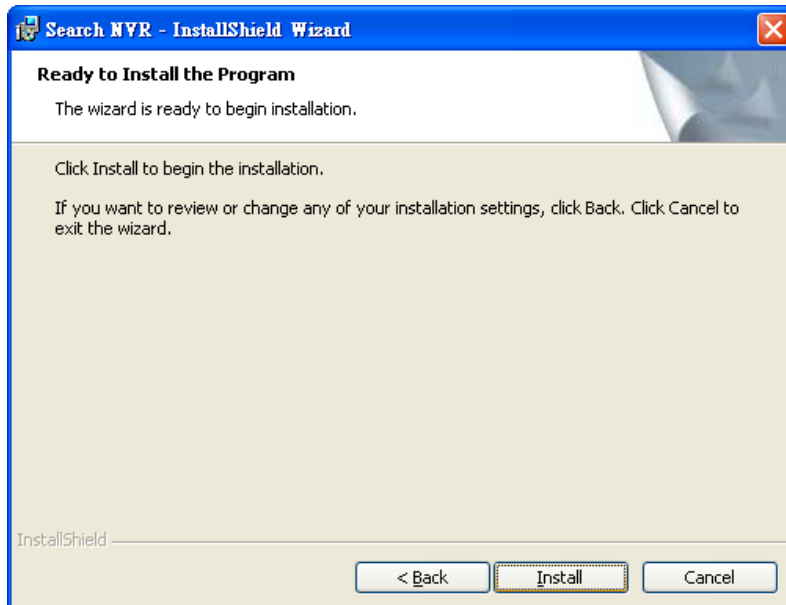


Once the installation is complete, please check the “Finish”.

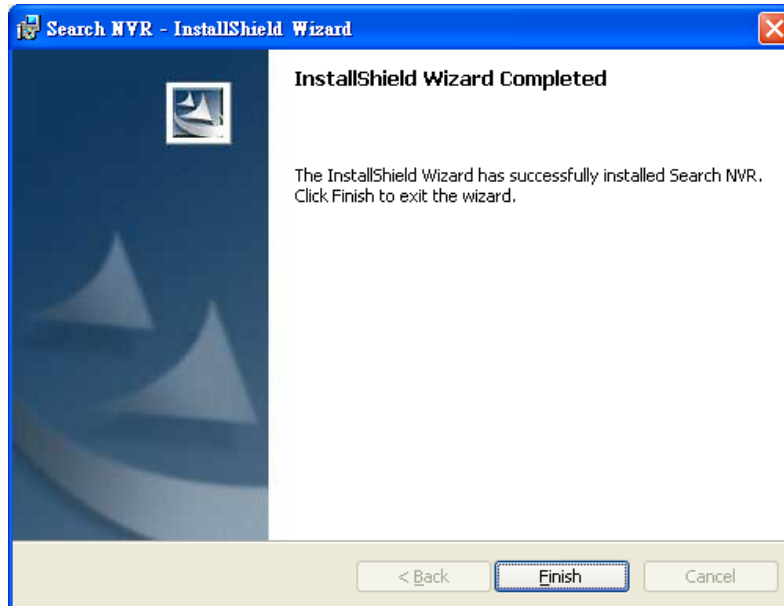

Please go to Start => Programs => NVR => Search NVR to run the search tool. Then you will see the utility start searching the network.




The NVR should be located and its IP address should be displayed: Double-click on it and the program should automatically access the NVR’s web administration page from your default browser.

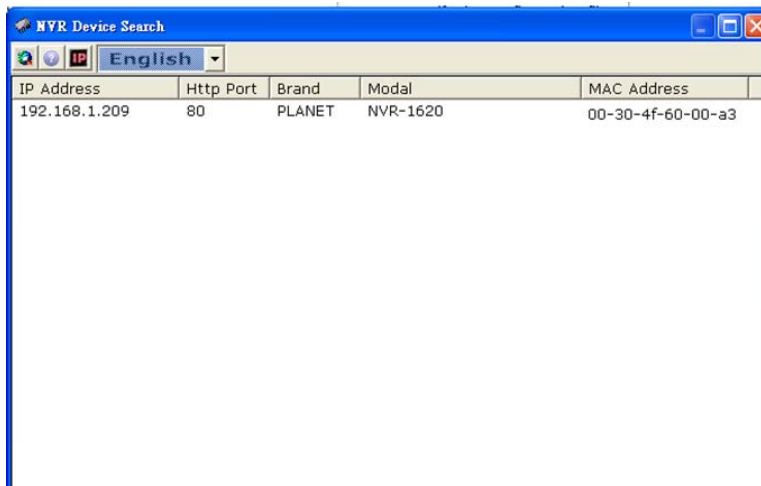

You may change NVR’s IP address by clicking on the button highlighted below.




You will be prompted for the NVR’s login information before proceeding to change device’s IP address.

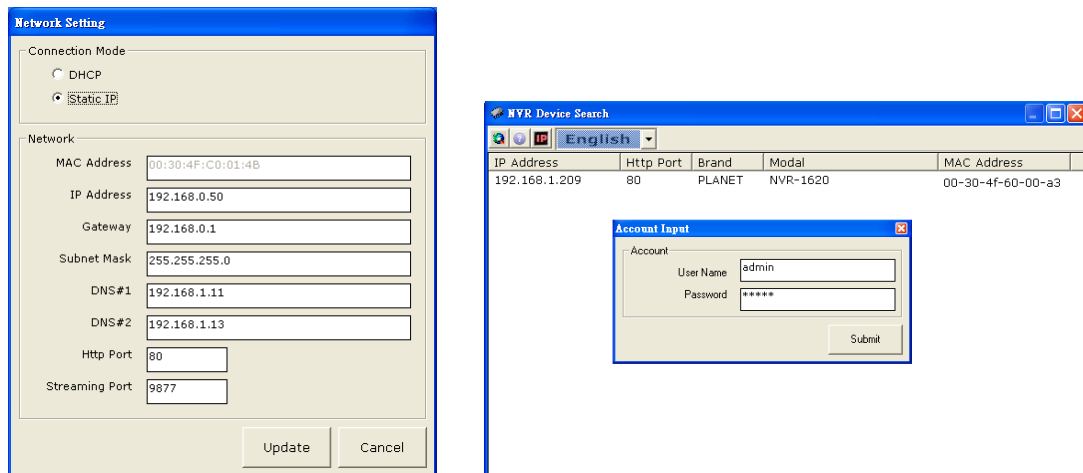

You may click on the button highlighted below to perform search again. Or double-click on any of the search results to access NVR's web administration page.


3.2 Accessing NVR with its default IP address

The NVR comes with a pre-configured static IP address "192.168.0.20". However, it is only used when there is no DHCP server presented in the network. Connect the NVR and PC to your switch or hub, or connect the PC directly to the NVR using a crossover CAT5 Ethernet cable.


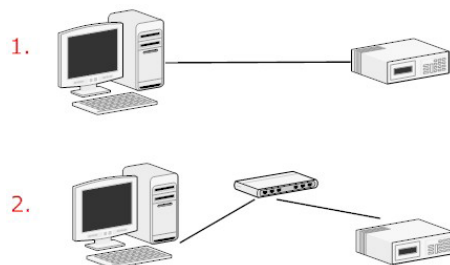


You can select utility or type the IP address to connect with NVR directly. After login window appears, you should be prompted for the NVR's username and password. Enter its **default username "admin" and password "admin"** and then click "OK" to enter the system.



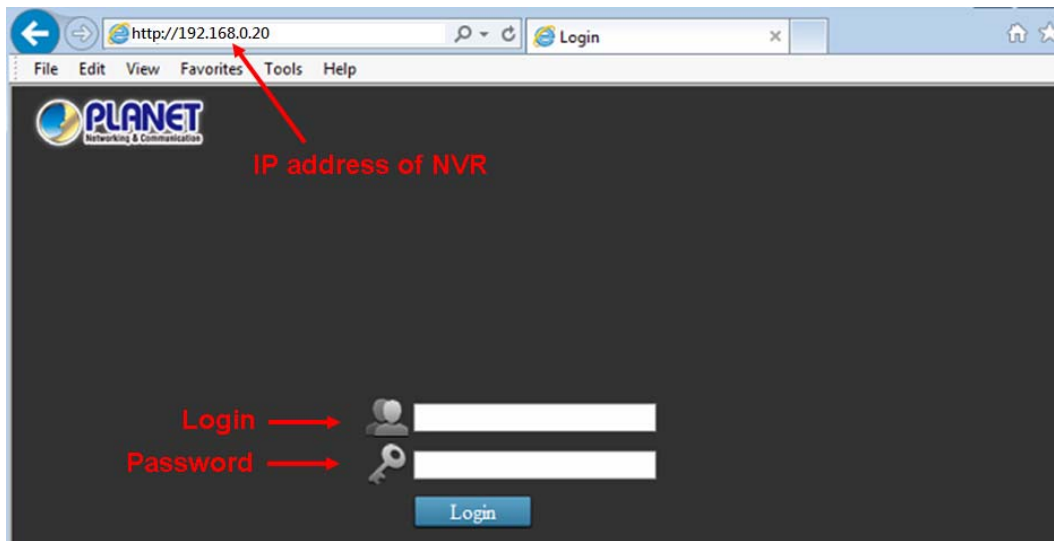

- Please make sure you are using Internet Explorer 7 or above.
- If you are running Windows Vista or 7, please make sure you are running Internet Explorer with the “administrator” privilege.

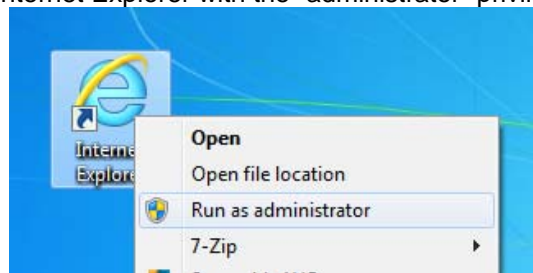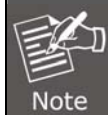

Chapter 4. Web-based Management

This chapter provides setup details of the Internet Camera's Web-based Interface.

4.1 Main / Live Viewing



The main/live view is the first interface displayed once you access to the NVR through the internet browser.

It displays the live video of all the cameras added to the NVR and following the pattern chosen by the user. The interface has many functions explained below.

The "Live View" page provides the following functions:

- **Retrieve camera's video stream**
- **Retrieve camera's status**
- **Perform Live Sequence Viewing**
- **PTZ Control (Click directly on the video)**
- **Perform PTZ Preset Sequence viewing**
- **Perform manual recording**
- **Take snapshot** - as soon as a snapshot selection is made, the snapshots are automatically saved to x:\SnapshotFolder ("x" represents the partition where Windows is installed, e.g: C:\)
- **Receive audio of a video stream**
- **Send audio**
- **Control "Buzzer"**
- **Change web UI display language**

The UI's 5 main functions:



The bar displays the 5 main functions of the Web User Interface (UI).


The Live view is the main view. The other 4 views will be explained in each chapter.

4.1.1 Date and Time Display

Aug 2, 2013 13:43:40

The Date and the Time are defined by the user in the settings section of the NVR.

4.1.2 User's Configuration

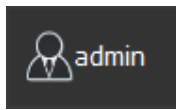

It displays the name of the current user.

If you click on the name of the user, the context menu offers the functions below:

- Language settings
- User setting
- Locking the screen
- Logout function

4.1.3 Hardware Event Notification



In this section, you will receive notifications if a warning sound is triggered or if the hard drive of the NVR fails in recording data.

4.1.4 Channel Status




If you click on the icon, page tab will display the current status of the channels added to the NVR.

									Aug 1, 2013 14:47:09	admin
Channel	Name	IP Address	HTTP Port	Continuous Recording	Schedule Recording	Event Recording	Manual Recording	Stream1	Stream2	
1	First Floor	192.168.100.43	80	V				jpeg@640x480 9fps, 1495kbps	--	
2	Second Floor	192.168.100.121	80	V				jpeg@4CIF 8fps, 782kbps	--	
3	Window	192.168.102.56	80	V				jpeg@1920x1080 IIS 4fps, 3798kbps	--	
4	Entrance	192.168.100.32	80	V				jpeg@640x480 8fps, 2488kbps	--	


It can also display the current configuration used for the event recording or the configuration settled for the scheduled and manual recording. The channels status page is updated as long as the NVR's main user interface is open.

4.2 Video Frame

All the camera's videos are displayed in this frame. If the cursor is pointing at one of the cameras, it will show a bar at the top. The bar displays the channel's number and some functions as shown on the snapshot below.

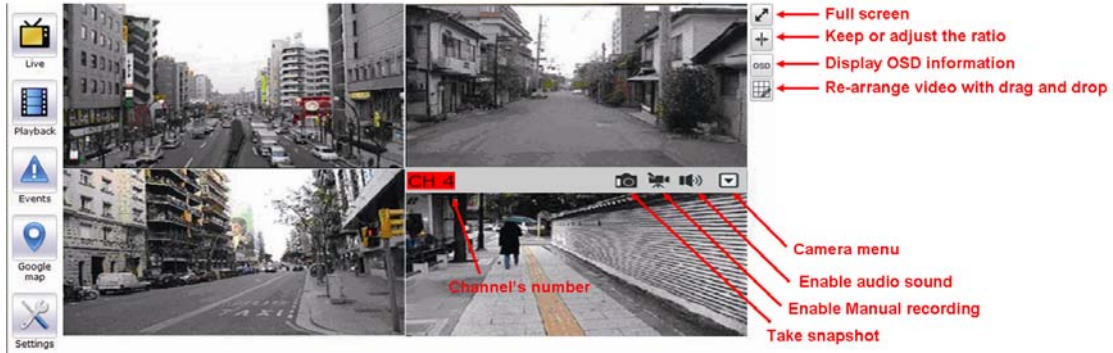

If you click on the name of the user, the menu will display as shown below:

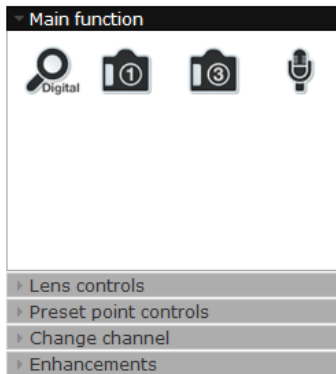

The camera menu offers the functions below:

- **Digital Zoom**


After clicking the digital zoom button, hold the mouse left button and draw a square on the video to specify the zoom in area



Once the image is digitally zoomed in, use the mouse scroll button to further zoom on or zoom out the image. Hold and left-click on the image and move the mouse to move the zoomed in video.

- **Take Snapshot 1 / 3**

User can select 1 or 3 continuous snapshots. As soon as a snapshot selection is made, the snapshots are automatically saved to x:\SnapshotFolder ("x" represents the partition where Windows is installed, e.g: C:\)

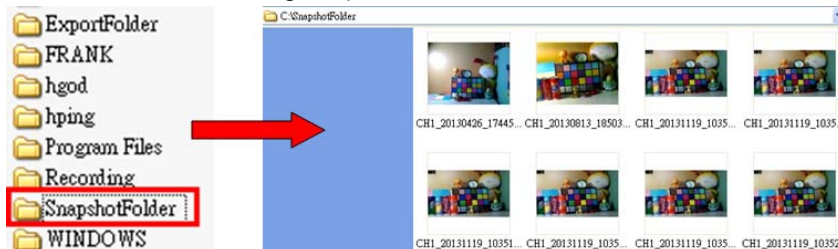

If the "3 continuous snapshots" option is chosen, the new window will display snapshots and let you view them individually by using the "Prev", "Next" buttons as shown above.




- Audio in

Turn on/off audio of a live video.


- Lens Control


If this camera could control focus and Iris, the button of the selection could be active, otherwise it will be highlighted. There are three selections of focus and iris as shown below.

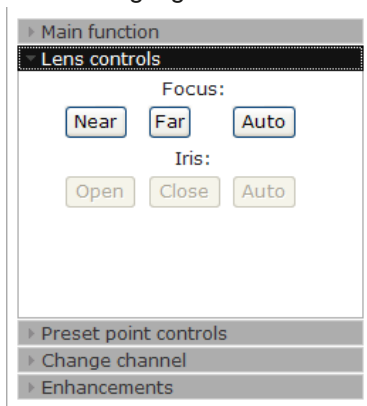

- Preset Point Controls


This page focuses on just PTZ camera, and here are some definitions below:

- **Add current position:** Click this button and currently position will be added in the preset point selection.
- **Go to preset point:** Select the preset point and the PTZ camera will move to this position.
- **Preset points sequence:** Click  the preset page will display, user can adjust the preset point on this page; the other settings will be explained in each chapter.
- **Auto pan controls:** User can use "right", "stop", "left", "360 degree" button to control the PTZ auto pan function.

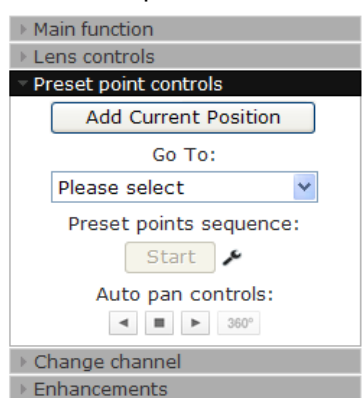


- Changing Channel

User can select to change the view to other channels or disconnect the current channel camera view.

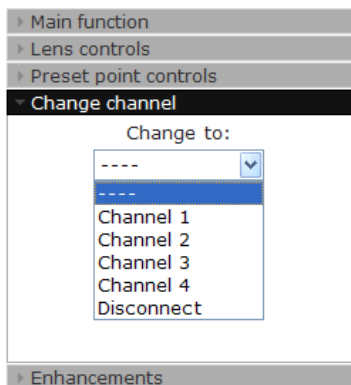


- Enhancing Contrast


You are able to adjust brightness and contrast of the live video from the camera menu. The default values of two parameters are 50%. User can adjust those values for 0% - 100%. The layout of this bar is 10%.

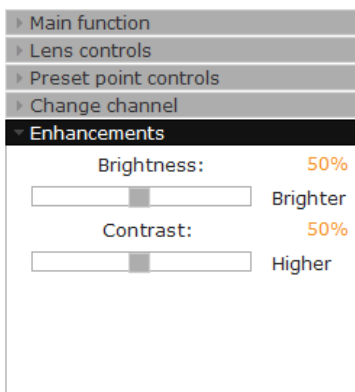

4.3 List Viewing

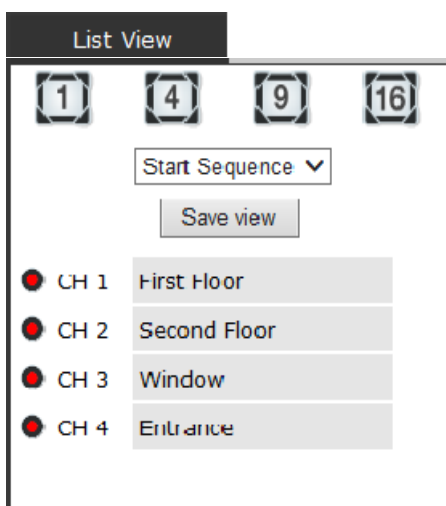

It displays the list of channels added to the NVR. Each channel represents a camera with its name, the channel number and its current status.

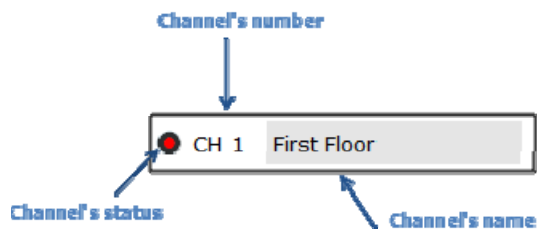


The channel status is defined by 3 colors:

- **Red**: The channel is recording and the live view is available
- **Blue**: The channel is connected and the live view is available
- **Grey**: The camera is disconnected

4.3.1 Pattern View




Different patterns of live view can be displayed on the video frame. You can display 1, 4, 9, or 16 cameras at once. Every time you click on an “n” pattern icon, the live video of the next “n” cameras will be displayed.




The channel split of NVR-820 is 1, 4, and 8.

4.3.2 Sequence Viewing

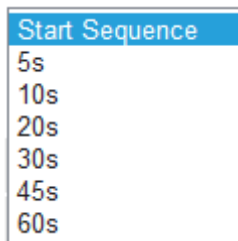


The sequence mode will automatically switch between a single and group of cameras every a certain period of time. You can define this period to 1 second to 60 seconds

4.3.3 Save Viewing

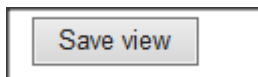

Click on the save view button and you will able to name the current view and save it. This will help to quickly display your configured views when needed.

4.4 Saved Viewing

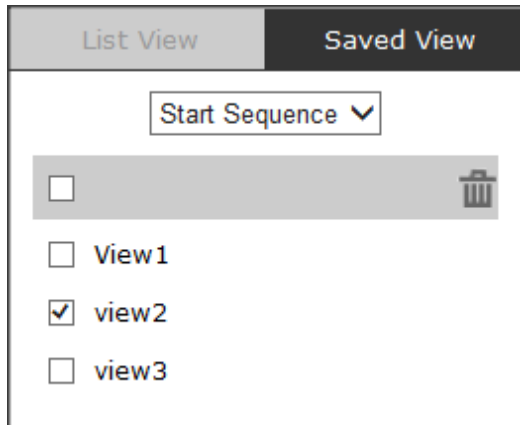

This section can display the views that you have already saved. You can choose the views from the list you have created. You are also able to switch between saved views every certain period of time by clicking on the “start sequence function”. If you check the box beside the name of the view, you can edit or delete the view.


4.5 Setting Up Password




The default login username and password are admin and admin. To change the password of the admin account, go to “Setup” --> “System Configurations” --> “User Account”, click on the “admin” account in the account list and then press the “edit” button to change its password. Finally, click “Apply” to save the change.

4.6 Camera Installation

4.6.1 Adding a Camera -- Automatic Search

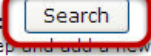Click Search to Add:  * You may skip this step and add a new camera by manually entering camera's settings in the "Camera Information" section


Brand	Model	IP Address	HTTP Port
AVTech	FIX	192.168.101.25	80
Panasonic	BB-HCM515A	192.168.101.23	80
Axis	215 PTZ	192.168.101.21	80
Axis	212 PTZ	192.168.101.24	80
Axis	Q7401	192.168.101.28	80
Axis	207W	192.168.101.20	80
SONY	SNC-RX550N	192.168.101.27	80
SONY	SNC-RZ25N	192.168.101.26	80

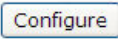 *select a camera from the search result and click configure to "Configure" setting below.

In "Settings" >> "Channel Configuration", click the "Search" button to perform the camera search.



You should be prompted to install Active Control component in order for the search to function properly. Go ahead and click "Install"

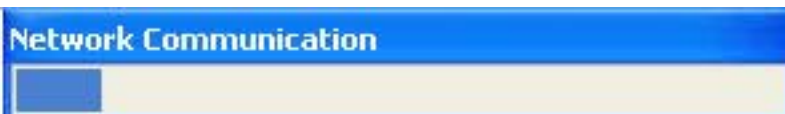

After that, the search should begin and its status should be displayed:

Click Search to Add:

* You may skip this step and add a new camera by manually entering camera's settings in the "Camera Information" section

Brand	Model	IP Address	HTTP Port
AVTech	FIX	192.168.101.25	80
Panasonic	BB-HCM515A	192.168.101.23	80
Axis	215 PTZ	192.168.101.21	80
Axis	212 PTZ	192.168.101.24	80
Axis	Q7401	192.168.101.28	80
Axis	207W	192.168.101.20	80
SONY	SNC-RX550N	192.168.101.27	80
SONY	SNC-RZ25N	192.168.101.26	80

Cameras found should be listed and simply select a camera from the list and press "Configure"

Add New Channel:

Channel ID:

Channel Name:

IP Address:

User Name:

Password:

HTTP Port:

Its corresponding information should be displayed in the "Camera Information" section. Enter its username and password and select the channel ID and name the camera.

Click on "Detect" to retrieve camera settings

Additional Camera Information

Audio Port:

Video Port:

Live video Format:

Live Video Frame Rate:

Live Video Resolution:

Live Video Quality:

Click on "Detect" to establish connection between the recorder and the camera. If connection establishes successfully, camera's detailed information should be polled and displayed as shown below. Adjust its video format, frame rate, resolution or bitrate, etc. if you wish and then click "Add" to finish adding the camera

4.6.2 Adding a Camera Manually

Add New Channel:

Channel ID:

Channel Name:

IP Address:

User Name:

Password:

HTTP Port:

Simply follow the instruction described above but instead of using the “Search” function, enter the camera’s IP address and credential in the “Camera Information” manually.


4.7 Live Viewing through iPhone Safari Browser



You can use iPhone and perform single channel live view to the NVR by using its Safari browser. To be able to view the live video through the Safari browser, make sure “JavaScript” is on under “Settings” >> “Safari” >> “JavaScript”



Once JavaScript is enabled, click the “Home” button on the iPhone to go back to the home screen and open the Safari browser

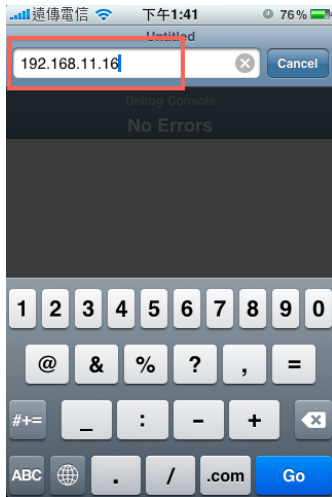

Type in the IP address of the NVR in the address bar




You should be prompted to enter the user name and password to access the NVR




Upon successful login, you should see the live view video of the first channel



Click on the “Channel” drop-down menu to select other cameras

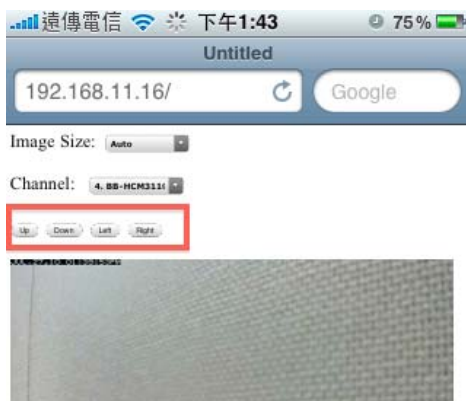

If a PTZ camera is selected, the corresponding control buttons will display (control PT only)

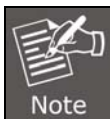


This function is camera dependent and is not available to all cameras. Certain cameras do not allow you to adjust image size and the selection “Auto” will be used.


4.8 Live Viewing through Blackberry Phones




You can use Blackberry and perform single channel live view to the NVR by using its Safari browser. To be able to view the live video through its browser, make sure “JavaScript” is enabled under “Browser” >> “Menu button” >> “Options” >> “Browser Configuration”

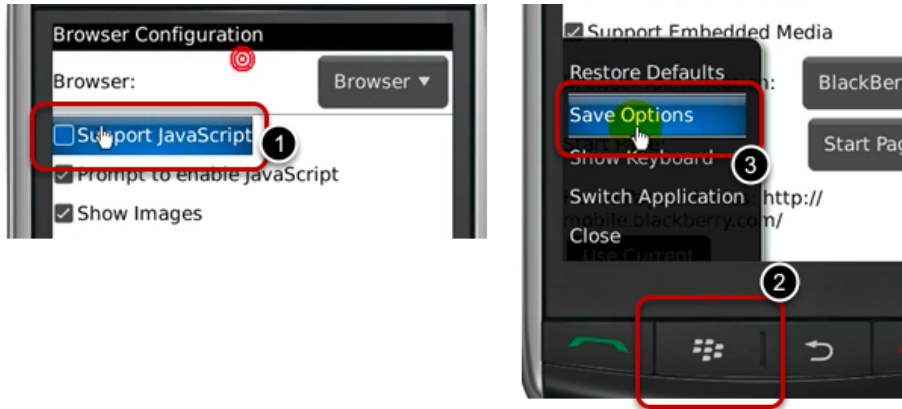

Enable the “Support JavaScript” option, click the menu button and click “Save Options”

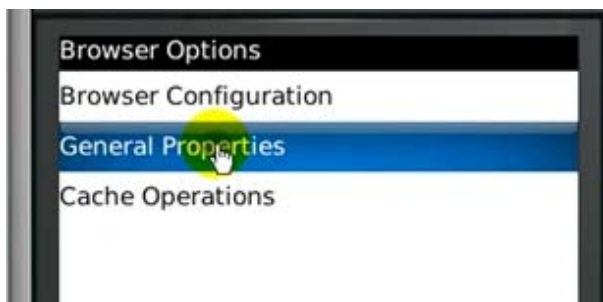

Go to “General Properties”

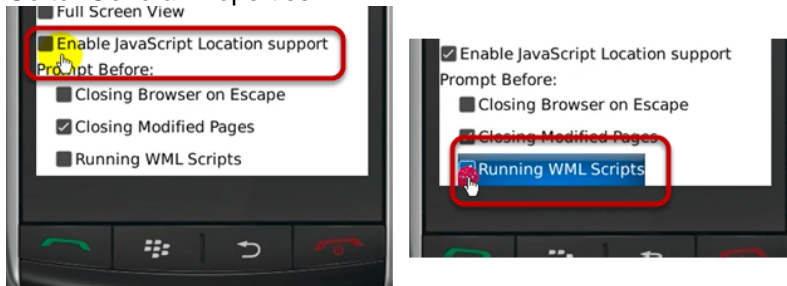


Make sure two options illustrated above are enabled




Press the menu button and click the “Save Options” to save settings



Press the button highlighted above to go back to the browser

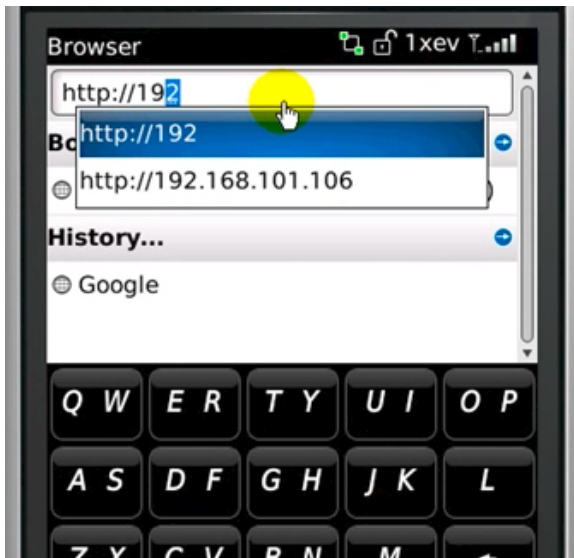

Type in the IP address of the NVR in the address bar

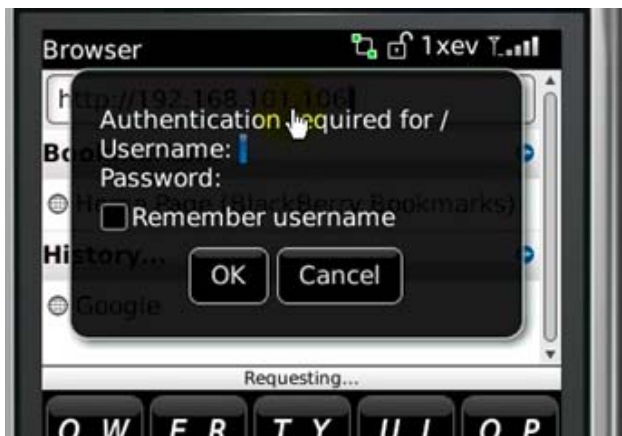

You should be prompted to enter its username and password for access


Chapter 5. Playback Viewing

Playback is a function that allows you to play one or more videos that were previously recorded by a chosen recording method or due to an event trigger. The NVR offers synchronized playback from up to 4 channels and various types of search methods are provided to help you find the footage you need quickly. You can turn on or off the audio of a recorded video at your choice if audio was also recorded during the recording of the video. Playback video can be viewed in full screen and snapshots can be taken and saved during a video playback.



5.1 Certain Functions of Playback Video

You can do the following by clicking camera menu on the playback video. It's similar with live view. User can refer the previous description.

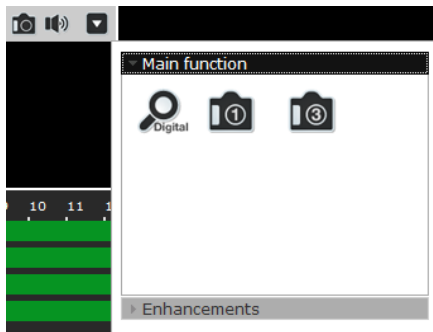


- **Snapshot**
Take snapshot - as soon as a snapshot selection is made, the snapshots are automatically saved to x:\SnapshotFolder ("x" represents the partition where Windows is installed, e.g: C:\)
- **Play Audio**
Turn on/off audio of a playback video.
- **Digital zoom**
After clicking the digital zoom button, hold the mouse left button and draw a square on the video to specify the zoom in area



Once the image is digitally zoomed in, use the mouse scroll button to further zoom in or zoom out the image. Hold and left-click on the image and move the mouse to move the zoomed in video.

- **Take Snapshot 1 / 3**

User can select 1 or 3 continuous snapshots. As soon as a snapshot selection is made, the snapshots are automatically saved to x:\SnapshotFolder ("x" represents the partition where Windows is installed, e.g: C:\)

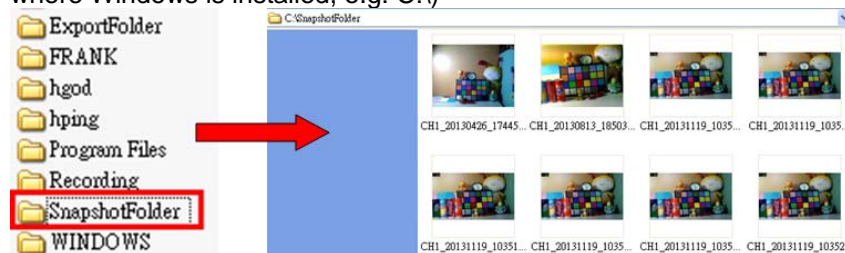


If the "3 continuous snapshots" option is chosen, the new window will display snapshots and let you view them individually by using the "Prev", "Next" buttons as shown above.



- **Adjust Brightness / Contrast**

You are able to adjust brightness and contrast of the live video from the camera menu. The default values of two parameters are 50%. User can adjust those values for 0% - 100%. The layout of this bar is 10%.

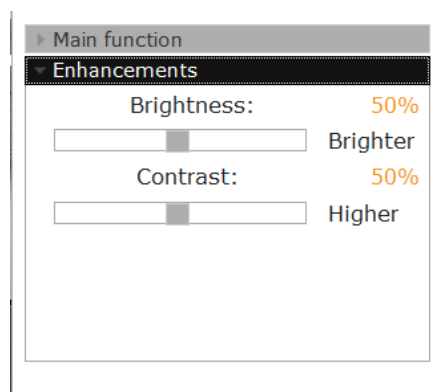


5.2 The Main Layout for Playback

Here is some explanation of other parts of playback page as shown below:

- **Zooming on a range of time**


If you click on the icon you can zoom on range of the time and get more details on the playback bar. The “Display current playback time” button will display while the NVR plays the recording. It can help user to find current playback time easily.

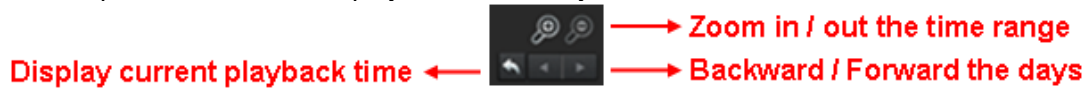

- Minimizing the Bar of the Playback



If you click on the icon, you can minimize the playback range to get more space for the videos.

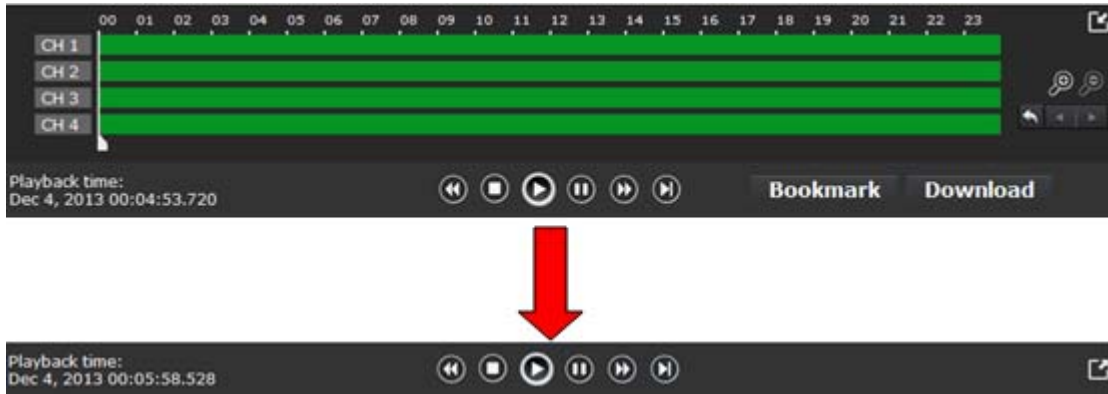


- Exporting Playback Videos to AVI Files


User can export the recorded playback videos stored on NVR to a local computer and save them in AVI file format. The files can then be played on the PC by a 3rd party media player such as VLC player or Windows Media player.


Once you locate the recorded videos with steps described in the previous section, move the time bar to the specific start time which you want to export and then click “Bookmark” button. This specific time will be marked by a blue line. Move the time bar to the end time and click the “Bookmark” button again. You can find that this button will be changed to “Clear” button.




Click the “Download” button and a new dialog will pop up and allows you to specify the time frame (or length) of the video you wish to export.

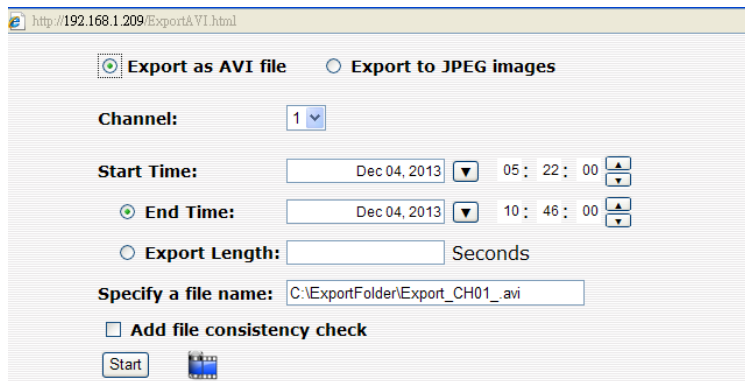


Click the  button to pull down the calendar to help you specify the month, date and the year

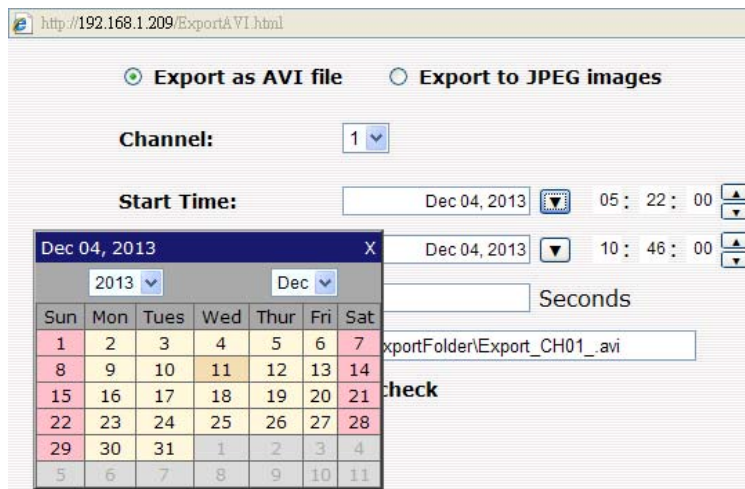


Specify the starting and ending hours of the video by entering numbers in the text boxes.

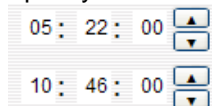

Hit the “Start” button to start exporting. The file will be automatically named and saved under the C:\ partition.

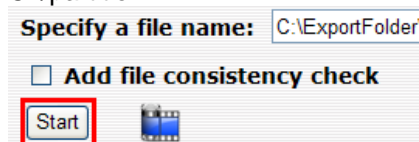

You will be notified once the process is completed successfully

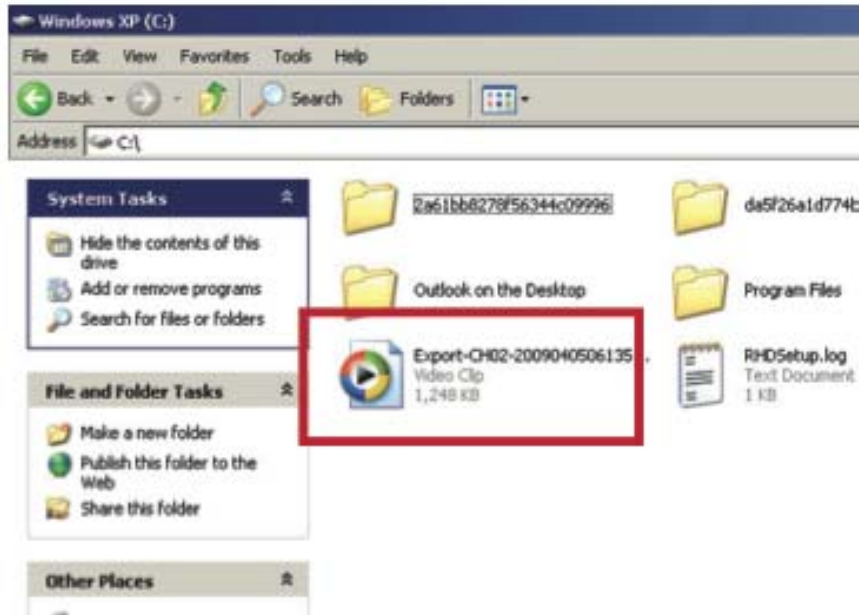


The exported AVI file will be saved under the C partition (or the partition where Windows is installed)




ffdshow is required in order to play the exported AVI file with Windows Media Player. You can get it at "<http://sourceforge.net/projects/ffdshow/>"

5.3 Playing Exported Playback Videos with NVR Media Player

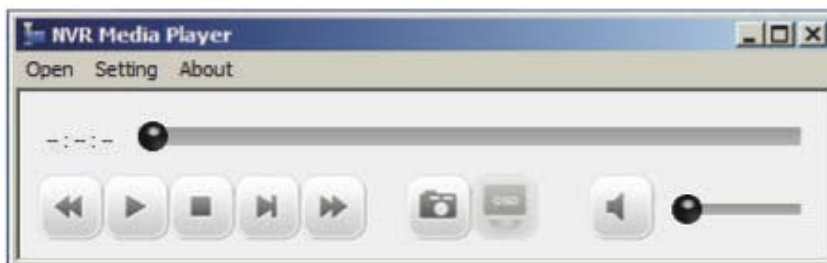


You can also use the NVR Media Player to play the exported AVI files. This can save you the trouble of installing third-party media player or codecs when playing the exported AVI videos.


The NVR Media Player will be automatically installed after the CMS software is installed. You can find it in the Windows Start menu. You also can click this  icon to download this software on the playback page.



Click "Open" >> "AVI File"

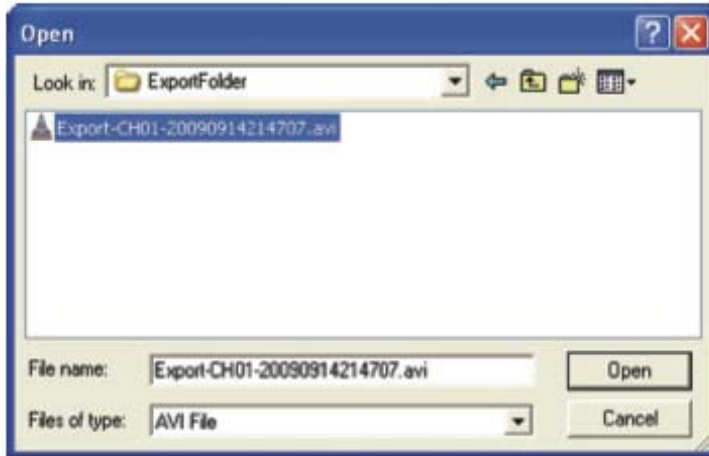


Locate the exported AVI file, and click “open”. (Normally under “C:\ExportFolder”)

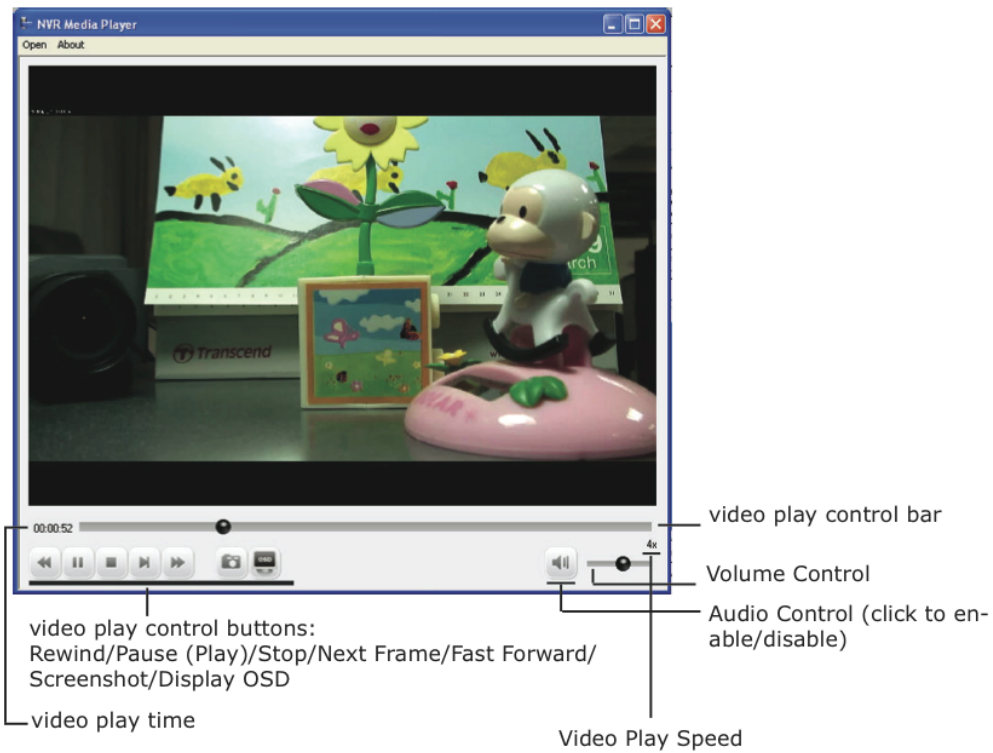


Chapter 6. Event Viewing

This section displays the last events recorded by the NVR.

The events can only be detected and displayed if you have configured it on the NVR's settings. You can display the event of all the channels at once or by each channel.

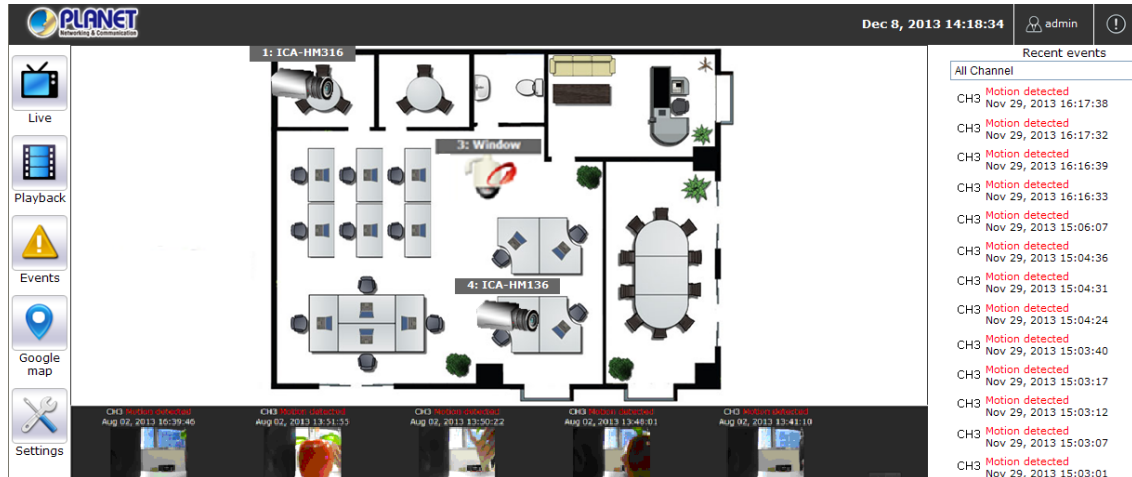


You can click on one of the pictures on the bottom of the UI to display the event related to it. The event can also be displayed if you choose them from the list on the right side of the UI.

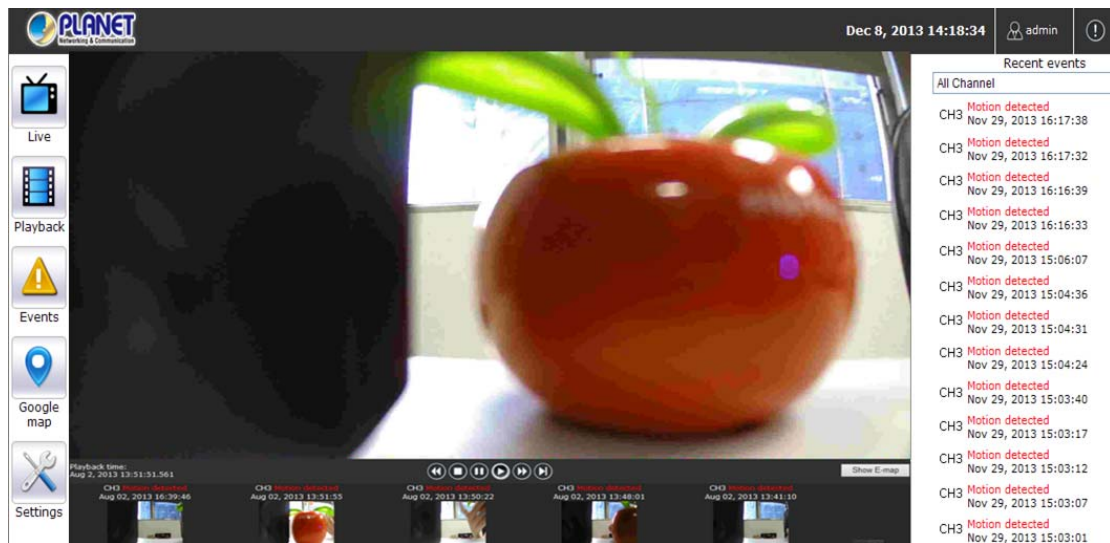

The video will then start playing

6.1 Opening Event Snapshot Images with NVR Media Player

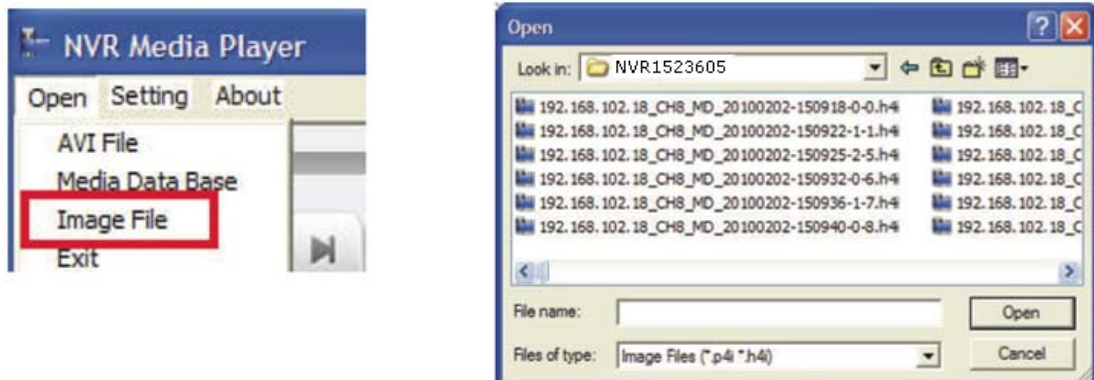

The NVR sends snapshots that are taken when an event occurs to a destined FTP server or mail recipient. These types of snapshot images are saved in a proprietary image file format, h4i or p4i, and can only be opened by the NVR media player.

To do so, Select "Open" from the top menu and then select "Image File". A new dialog should be displayed which lets you locate the image file.

Chapter 7. NVR Setup – System Configurations

7.1 Network Setup

The “System Configurations” page provides users with options to set up the device quickly and properly. After properly configuring all settings in all the sub-pages, users should expect a fully working network video recorder that is ready to manage cameras on the network. We will start by configuring its network settings to make sure it works correctly in your network. Next, we will help you adjust the system time so videos will be recorded with correct timestamp. To better secure the system for unwanted disturbance, we will guide you on setting up user’s account and privileges to prevent settings from getting altered by users other than the system administrator. Lastly, we will tell you what you should expect after installing a hard disk and how to prepare the hard disk for the video recording.

7.1.1 Network Settings

NVR Setup

- [-] System Configuration
 - [-] Network Setup
 - Device Network Setting
 - DHCP Server
 - DDNS Service
 - Time and Date
 - Users Account
 - Group Privilege
 - Disk Setup
 - [+] Channel Configuration
 - [+] Event Configuration
 - [+] Recording Configuration
 - [+] System Options

Network Setting

Connection Type: DHCP Client

Status: IP obtained from DHCP Server

IP Address: 192.168.102.62

Subnet Mask: 255.255.248.0

Gateway: 192.168.101.1

DNS 1: 192.168.101.1

DNS 2: 192.168.101.11

HTTP Port: 80

Streaming Port: 9877

UPnP Port Forwarding: External Port: 6000 Test

Optional Setting

Device Name:

Apply

You need to adjust settings on this page for the device to work properly in your network. It is critical that settings here are configured correctly based on your network configurations so that the recorder can be administered through the local area network and cameras can be connected from it.

By default, the recorder is set to "Auto Mode" which if there's a DHCP server in the same local network, the NVR can obtain IP address from DHCP server, and you can locate the NVR by using the NVR search utility.

If there's no DHCP server in the network, and the NVR is set to "Auto Mode", it will use its own default static IP 192.168.101.50.

Network Setting

Connection Type: **DHCP Client** ▼
 Status: **Auto Mode**
 IP Address: **DHCP Client**
Static IP

The NVR supports three connection types that can be configured depending on how the network is set up.

Network Setting

Connection Type: **Static IP**

IP Address: 192 . 168 . 101 . 143
 Subnet Mask: 255 . 255 . 252 . 0
 Gateway: 192 . 168 . 101 . 1
 DNS1: 192 . 168 . 11 . 11
 DNS2: 192 . 168 . 11 . 13

HTTP Port: 80
 Streaming Port: 9877

UPnP Port Forwarding: External Port: 6000 **Test** **Force Change**

Optional Setting

Device Name: **tst**

If you wish to set the recorder to a static IP address in your local area network,

1. Choose "Static IP" from the "Connection Type" drop-down menu
2. Enter the IP address, subnet mask, default gateway address and DNS server address for the recorder

* The recorder can detect the presence of a DHCP server upon startup. It sets itself to static IP address if there is no DHCP server currently presented in the network. Its DHCP server function is also turned on at the same time to assign IP addresses to cameras that are later connected to the network or you can manually turn off the DHCP server function from "System Configurations">>"Network Setup">>"DHCP Server" if you wish to use a separate DHCP server.

7.1.2 DHCP Server

NVR Setup

- System Configuration
 - Network Setup
 - Device Network Setting
 - DHCP Server**
 - DDNS Service
 - Time and Date
 - Users Account
 - Group Privilege

DHCP Server

DHCP Server: ON OFF
 Max. DHCP Client: 30 (Max. 30 clients)
Apply


The built-in DHCP Server function is NOT always configurable and is greatly dependant to the connection type that is set to "Device Network Setting":

1. If the connection type is "Auto Mode", the DHCP server function is NOT configurable. It will be ON if the NVR doesn't obtain an IP from a DHCP server in the local network and uses its own default static IP 192.168.101.50
2. If the connection type is "Auto Mode", the DHCP server function is NOT configurable. It will be OFF if the NVR obtains an IP from a DHCP server in the local network.
3. If the connection type is "DHCP Client", the DHCP server function is NOT configurable. It will be OFF if the NVR obtains an IP from a DHCP server in the local network.
4. If the connection type is "DHCP Client", the DHCP server function is NOT configurable. It will be ON if the NVR doesn't obtain an IP from a DHCP server in the local network and uses its own default static IP 192.168.101.50
5. If the connection type is "Static IP", the DHCP server function is configurable and can be turned on/off manually.

7.1.3 DDNS Service

Dynamic DNS Service

Enable DDNS Service

Server Address: 

Domain Name:

User Name:


Password:

Connection Status: **Disconnected**

DDNS, which stands for "Dynamic DNS", is a method, protocol, or network service that provides the capability for a networked device, such as a router or computer system (in this case, the NVR) using the Internet Protocol Suite, to notify a domain name server to change, in real time, the active DNS configuration of its configured host names, addresses or other information stored in DNS.

A popular application of dynamic DNS is to provide a residential user's Internet gateway that has a variable, often changing, IP address with a well-known host name resolvable through standard DNS queries.

This is useful if the NVR is placed on the Internet with a dynamic public IP, which once the DDNS is properly set up, users can access the NVR remotely with the DDNS domain name without worrying if the IP has changed or not.




**Please make sure a valid DNS server has been configured under the “Network Setting” page in order for this function to work properly.*

**The NVR currently only works with free DDNS service provided by “DynDNS”. For more information, please go to www.dyndns.com*

**If the NVR is placed behind a router or Internet gateway, please make sure port forwarding for port 80 is configured on the router or the gateway in order for the DDNS function to properly register with the service. It's often suggested to use the DDNS function in the router/ gateway for such case instead.*

**Once you have the DDNS function successfully up and running, please DO NOT forget to configure port forwarding for the NVR web port (default 80) and the streaming port (default 9877) in the router/gateway for remote viewing. You can then type in <http://yourddnsdomain> in the browser to access the NVR remotely for live viewing.*

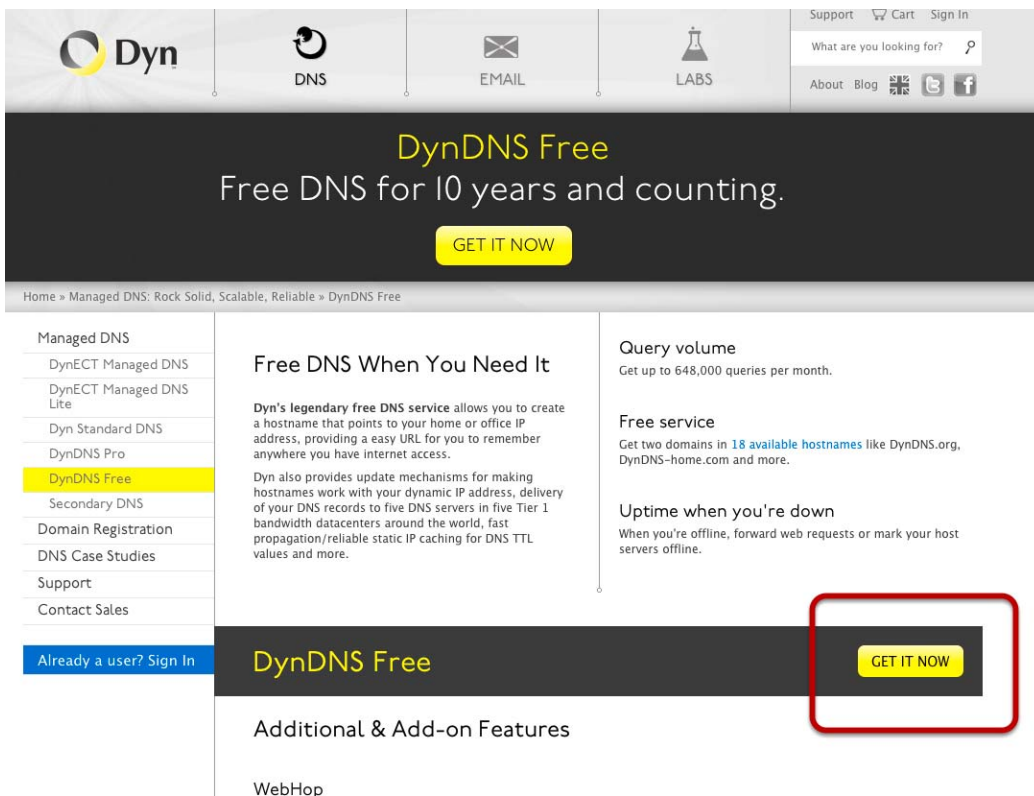

The screenshot shows the DynDNS Free website. At the top, there is a navigation bar with the Dyn logo, icons for DNS, EMAIL, and LABS, and a search bar. Below the navigation bar, a large banner reads "DynDNS Free Free DNS for 10 years and counting." with a yellow "GET IT NOW" button. A breadcrumb trail below the banner reads "Home » Managed DNS: Rock Solid, Scalable, Reliable » DynDNS Free".

The main content area is divided into three columns:

- Managed DNS:** A list of services including DynECT Managed DNS, DynECT Managed DNS Lite, Dyn Standard DNS, DynDNS Pro, DynDNS Free (highlighted), Secondary DNS, Domain Registration, DNS Case Studies, Support, and Contact Sales. A blue button at the bottom of this column says "Already a user? Sign In".
- Free DNS When You Need It:** A section describing Dyn's legendary free DNS service, which allows users to create a hostname that points to their home or office IP address. It also mentions update mechanisms for dynamic IP addresses and delivery to five Tier 1 bandwidth datacenters.
- Query volume:** A section stating "Get up to 648,000 queries per month."
- Free service:** A section stating "Get two domains in 18 available hostnames like DynDNS.org, DynDNS-home.com and more."
- Uptime when you're down:** A section stating "When you're offline, forward web requests or mark your host servers offline."

At the bottom of the page, there is a dark grey bar with the text "DynDNS Free" and a yellow "GET IT NOW" button, which is highlighted with a red rectangular box.

In order to properly configure the DDNS service function, please register a free DDNS domain name and account from DynDNS first. Go to <http://dyn.com/dns/dyndns-free/> from the browser to do so.

Add New Hostname Host Services

Note: You currently don't have any active [Dynamic DNS Pro](#) in your account. You cannot use some of our Host Service features. Paying for an Dynamic DNS Pro will make this form fully functional and will add several other features.

Hostname: . dyndns.org

Wildcard Status: Disabled [\[Want Wildcard support?\]](#)

Service Type: Host with IP address [\[?\]](#)
 WebHop Redirect [\[?\]](#)
 Offline Hostname [\[?\]](#)

IP Address:
Your current location's IP address is 60.250.139.170
TTL value is 60 seconds. [Edit TTL.](#)

Mail Routing: Yes, let me configure Email routing. [\[?\]](#)

What do you want to use this host for?
 Select services and devices you would like to use with this hostname.

Work From Home Office or VPN:

vpn
remote file access
remote desktop
mail server
web server
chat server
ftp backup
ssh
database
voip

Hosting and Design For Web Sites and Blogs:

blog
gallery
wiki
portfolio
ecommerce
web page

Remote Access For Devices:

dvr
webcam
data storage
cctv
printer
alarm and security
thermostat
weather station
game server
home automation

Add To Cart

Enter a desired hostname here

Select a desired sub-domain from the drop-down menu

Click here to automatically fill in the current public IP in the "IP Address field"

Pick one or more options here (any is fine)

Click to go to the next step

Fill in the necessary fields as illustrated above

Hostname: . dyndns.org

This hostname already exists. It may be in use by another customer.

The page will check whether or not another user has used the host name you entered as soon as you click the "Add to Cart" button. If you see the message below, simply enter a different one and click "Add to Cart" again.

Shopping Cart

Host see.dyndns.org added to cart. **Finish FREE checkout to activate.**

Your cart contains **free services only**. You will not be asked for credit card information.

Upgrade Options

Free accounts allow only five Dynamic DNS hosts.

- To add more and enjoy [additional benefits](#) for only \$15.00 per year, [purchase Dynamic DNS Pro](#).
- To get Dynamic DNS for **your own domain**, use [Custom DNS](#).

Dynamic DNS Hosts			
see.dyndns.org	-	<input type="button" value="remove"/>	\$0.00
Have a coupon? Log in.			Sub-Total:
			\$0.00
			Order Total:
			\$0.00

Create account or log in to continue

Create an username and a password here. This will be used in the NVR's configuration. Enter a valid email address as well.

Username:

Password:


Confirm password:

Email:

Confirm email:

Subscribe to: DynDNS.com newsletter (1 or 2 per month)
 Dyn Inc. press releases
 Remove HTML formatting from email

Security Image:



Enter the numbers from the above image:


I agree with the [acceptable use policy \(AUP\)](#) and [privacy policy](#).

Already Registered?

Username

Password

[Forgot your password?](#)



Once you get to the next page, fill in the necessary fields as illustrated above

Dynamic DNS Service

Enable DDNS Service

Server Address:


Domain Name:

User Name:

Password:

Connection Status: Disconnected


Go back to the NVR's DDNS service configuration page under "Setup" >> "System Configuration" >> "DDNS Service". Fill in the domain name you picked during the registration in the "Domain Name" field and the username/password you created in the "User ID" and "Password" field and click "Apply" to finish

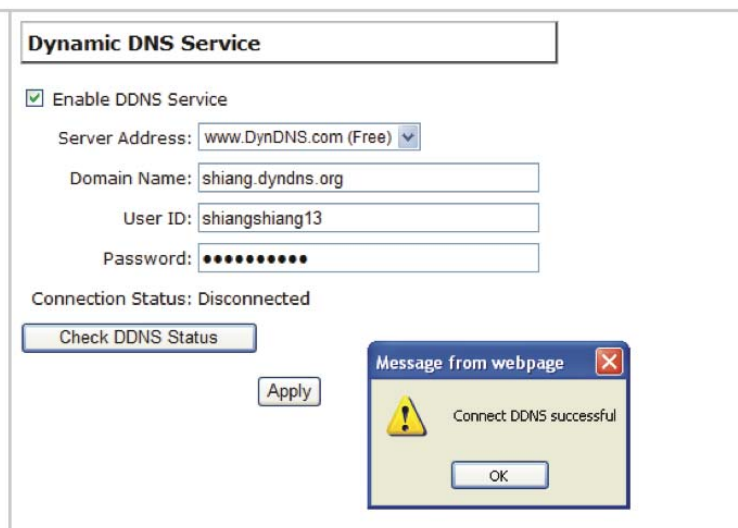

The screenshot shows the "Dynamic DNS Service" configuration page. The "Enable DDNS Service" checkbox is checked. The "Server Address" is set to "www.DynDNS.com (Free)". The "Domain Name" is "shiang.dyndns.org", the "User ID" is "shiangshiang13", and the "Password" is masked with asterisks. The "Connection Status" is "Disconnected". A "Check DDNS Status" button is visible. An "Apply" button is also present. A "Message from webpage" dialog box is overlaid on the page, displaying a yellow warning icon and the text "Connect DDNS successful" with an "OK" button.

You can click the "Check DDNS Status" button to check the DynDNS service status. If you are getting a "Disconnected" message, it means that DDNS service server is down or the NVR is not connected to the Internet. If everything is ok normally, you should be prompted with a success message

7.2 Time and Date

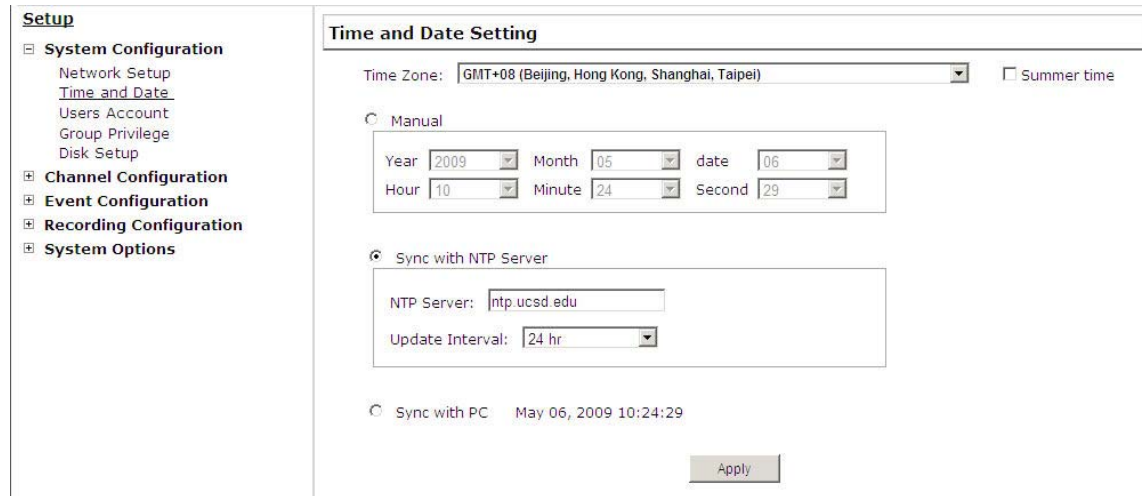

Set the time and date by selecting the time zone according to your location. It is imperative that you set the recorder's time correctly to avoid the following errors:

- Incorrect display time for playback videos
 - Inconsistent display time of event logs and when they actually occur
- After selecting the time zone, choose an option below to set the recorder time.
- **Manual** – Use the drop-down list and configure the time manually.
 - **Sync with NTP server** – enter the host name or IP address of a valid NTP server and set how often the recorder should synchronize the time with it by using the “Update interval” drop-down menu.
 - **Sync with PC** – Check this option to synchronize the recorder time with the PC that you are currently using to access the recorder.

7.3 User Account

Setup

- [-] System Configuration
 - Network Setup
 - Time and Date
 - Users Account
 - Group Privilege
 - Disk Setup
- [+] Channel Configuration
- [+] Event Configuration
- [+] Recording Configuration
- [+] System Options

User Account Setting

User Name	Group	Description
admin	admin	
guest	guest	sc
joser	supervisor	eng

Add User

User Name: Only A-Z, a-z, 0-9 and _.@ are allowed

Password:

Confirm Password:

Company: (Optional)

Department: (Optional)

Telephone: (Optional)

Mobile: (Optional)

E-Mail: (Optional)

Group:

Language:

Description: (Optional)

Multiple users can access the recorder simultaneously. You can add, remove, and edit users by using options provided on this page to keep user information organized. Each recorder comes with a built-in “admin” account with password “admin”. It’s highly recommended to change the password upon your initial login.

7.3.1 Adding a New User

Add User

User Name: Only **1** a-z, 0-9 and _.@ are allowed

Password:

Confirm Password:

Company: (Optional)

Department: (Optional)

Telephone: (Optional)

Mobile: (Optional)

E-Mail: (Optional)

Group: **2**


Language: (Optional)

Description: (Optional)

3

- Enter a user name and password in “User Account Information”. All other fields are optional for your own reference.
- Select a group from the “Group” drop-down menu to assign the new user to a particular group • Enter a short description for the account if you wish.
- Click “Add” to finish configuration.

7.3.2 Changing the Password of the “Admin” Account

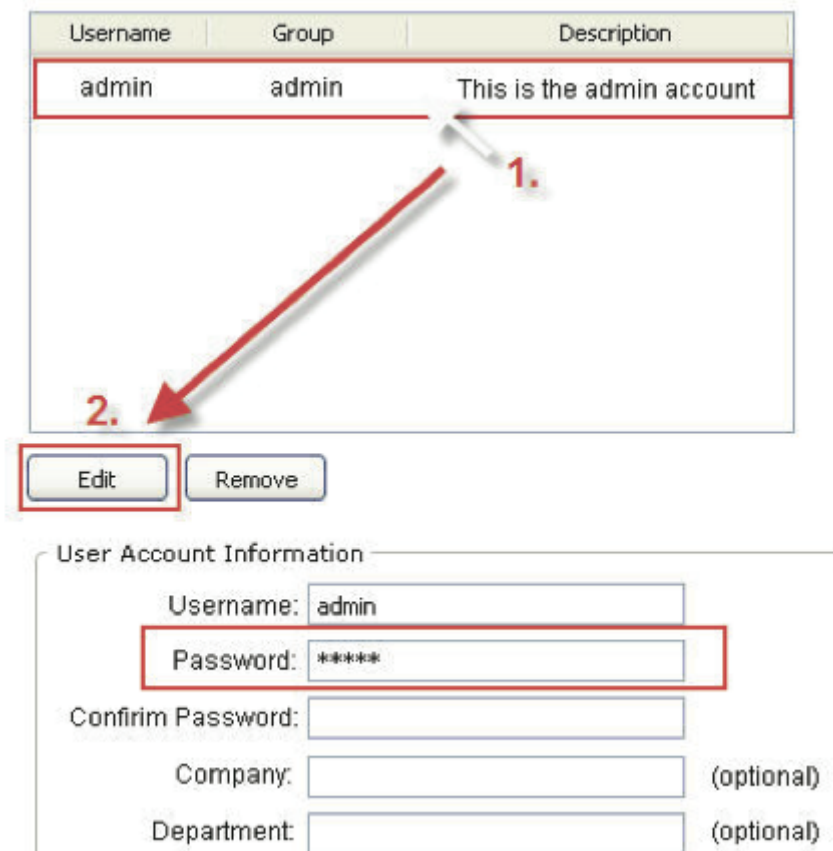

The screenshot shows a table of user accounts with columns for Username, Group, and Description. The 'admin' account is highlighted, and a red arrow points to the 'Edit' button below it. Below the table, the 'User Account Information' form is shown, with the 'Password' field highlighted in red.

Username	Group	Description
admin	admin	This is the admin account

Buttons: Edit, Remove

User Account Information

Username: admin

Password: *****


Confirm Password: []

Company: [] (optional)

Department: [] (optional)

1. Click and highlight the “admin” account in the account list and click “Edit”.
2. Its information should be displayed in “User Account Information”.
3. Enter a new password in the “Password” field and enter it again in “Confirm Password”.

7.4 Group Privilege

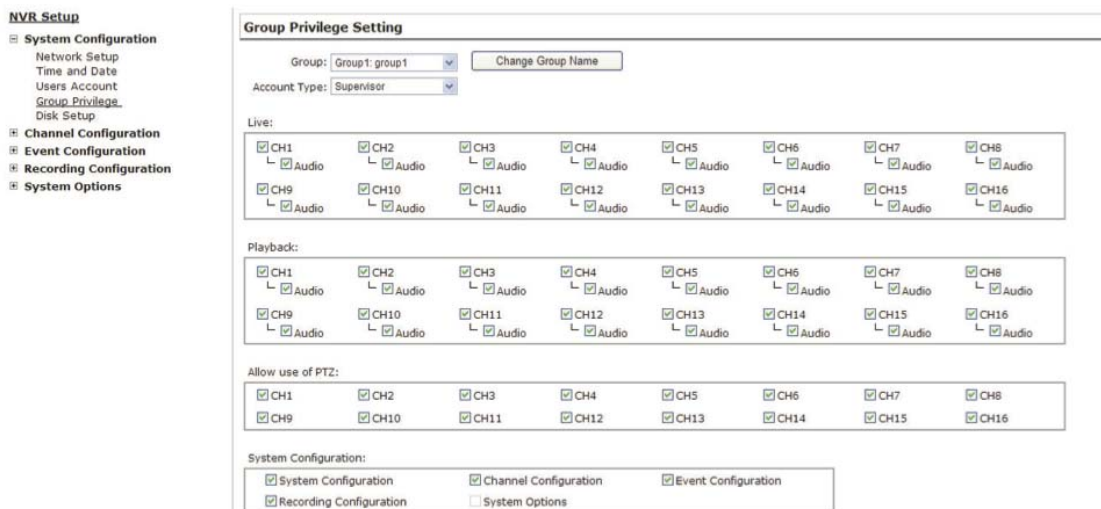

The screenshot shows the 'Group Privilege Setting' configuration page. It includes a sidebar with navigation options and a main configuration area with various checkboxes for Live, Playback, PTZ, and System Configuration.

NVR Setup

- System Configuration
 - Network Setup
 - Time and Date
 - Users Account
 - Group Privilege
 - Disk Setup
- Channel Configuration
- Event Configuration
- Recording Configuration
- System Options

Group Privilege Setting

Group: Group1: group1

Account Type: Supervisor

Live:

<input checked="" type="checkbox"/> CH1	<input checked="" type="checkbox"/> CH2	<input checked="" type="checkbox"/> CH3	<input checked="" type="checkbox"/> CH4	<input checked="" type="checkbox"/> CH5	<input checked="" type="checkbox"/> CH6	<input checked="" type="checkbox"/> CH7	<input checked="" type="checkbox"/> CH8
<input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> Audio
<input checked="" type="checkbox"/> CH9	<input checked="" type="checkbox"/> CH10	<input checked="" type="checkbox"/> CH11	<input checked="" type="checkbox"/> CH12	<input checked="" type="checkbox"/> CH13	<input checked="" type="checkbox"/> CH14	<input checked="" type="checkbox"/> CH15	<input checked="" type="checkbox"/> CH16
<input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> Audio

Playback:

<input checked="" type="checkbox"/> CH1	<input checked="" type="checkbox"/> CH2	<input checked="" type="checkbox"/> CH3	<input checked="" type="checkbox"/> CH4	<input checked="" type="checkbox"/> CH5	<input checked="" type="checkbox"/> CH6	<input checked="" type="checkbox"/> CH7	<input checked="" type="checkbox"/> CH8
<input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> Audio
<input checked="" type="checkbox"/> CH9	<input checked="" type="checkbox"/> CH10	<input checked="" type="checkbox"/> CH11	<input checked="" type="checkbox"/> CH12	<input checked="" type="checkbox"/> CH13	<input checked="" type="checkbox"/> CH14	<input checked="" type="checkbox"/> CH15	<input checked="" type="checkbox"/> CH16
<input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> Audio

Allow use of PTZ:


<input checked="" type="checkbox"/> CH1	<input checked="" type="checkbox"/> CH2	<input checked="" type="checkbox"/> CH3	<input checked="" type="checkbox"/> CH4	<input checked="" type="checkbox"/> CH5	<input checked="" type="checkbox"/> CH6	<input checked="" type="checkbox"/> CH7	<input checked="" type="checkbox"/> CH8
<input checked="" type="checkbox"/> CH9	<input checked="" type="checkbox"/> CH10	<input checked="" type="checkbox"/> CH11	<input checked="" type="checkbox"/> CH12	<input checked="" type="checkbox"/> CH13	<input checked="" type="checkbox"/> CH14	<input checked="" type="checkbox"/> CH15	<input checked="" type="checkbox"/> CH16

System Configuration:

<input checked="" type="checkbox"/> System Configuration	<input checked="" type="checkbox"/> Channel Configuration	<input checked="" type="checkbox"/> Event Configuration
<input checked="" type="checkbox"/> Recording Configuration	<input type="checkbox"/> System Options	

Group Privilege is where you can create multiple customized access policies for situations if you need the recorder to be accessed by users other than the administrator. You can do so by creating a group, and then remove access privileges for certain configuration pages or cameras. Users that are created and assigned to this group will have limited access instead of full administration rights.


The recorder comes with seven built-in groups and five built-in privilege profiles, except the “admin” and the “guest” accounts; the other five groups are fully customizable or you can simply assign a group with one of the default privilege profiles. You can, however, assign more than one users to the “admin” account if you wish to do so. The guest account comes with a “view-only” privilege on the “Live View” page, and users in this group do not have the power to make any changes on the “Live View” page or have access to pages other than the “Live View” page.

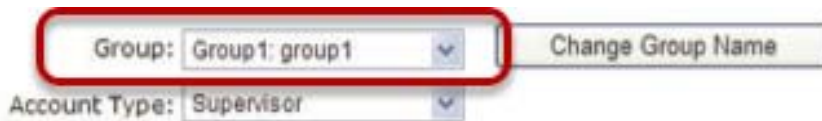


To create a group, select a group from the “Group” drop-down



You can change the group name by clicking the “Change Group Name” button. A text box will be displayed for you to enter the new group.

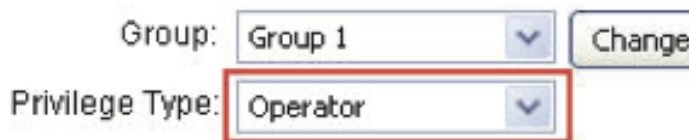

Choose what type of privilege you would like this group to have from the “Privilege Type” drop-down menu.

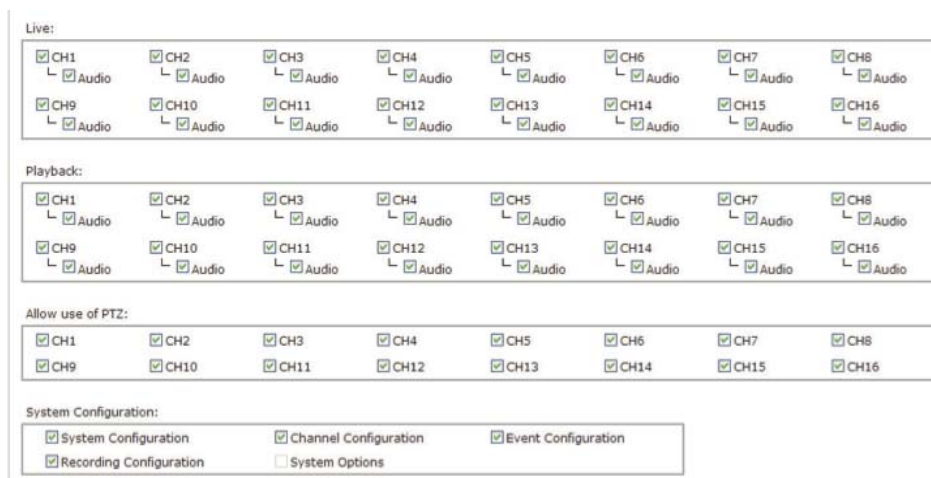

Its access privilege will then be displayed. You can alter its settings by allowing or denying access to other cameras using the checkboxes instead of accepting the defaults

7.5 Disk Setup

NVR Setup


- ▣ System Configuration
 - ▣ Network Setup
 - DDNS Service
 - Time and Date
 - Users Account
 - Group Privilege
 - Disk Setup
 - ▣ Channel Configuration
 - ▣ Event Configuration
 - ▣ Recording Configuration
 - ▣ System Options

Hard Disk Setting

Disk ID	Type	Capacity	Status	
1	Internal	1878GB	Normal	<input type="button" value="Format"/>
2	Internal	1878GB	Normal	<input type="button" value="Format"/>

Once you install a hard disk to the recorder, you would need to initialize it so that it can be ready for recording. You can obtain basic information about the disk you installed on this page.

To initialize it, simply click the "Format" button.



Note

**Due to the chipset limitation, "Hotswap" is NOT supported for SATA HDD. Please make sure to power on the SATA external HDD and plug it in to the NVR before the NVR is turned on.*

**The USB HDDs will only be listed on the "USB Backup" and "Hard Disk Status" pages in "System Options". The USB HDDs have to be formatted in advance in FAT16/FAT32 or EXT3 file system. (FAT32 is recommended)*

** Please plug in the USB HDD only after the NVR is fully started. The internal HDDs will NOT be properly detected if the NVR is powered on with USB HDD plugged in.*

Chapter 8. NVR Setup -- Channel Configurations

8.1 Adding a Camera

Add New Channel:

Channel ID:

Channel Name:

IP Address:

User Name:

Password:

HTTP Port:

The NVR provides two options for adding a new camera. Users have the option to let the recorder automatically find the cameras or it is possible to enter camera's information and add it manually.

8.1.1 Automatic Search

Click here to search camera

* You may skip this step and add a new camera manually by entering camera's setting in the "Camera Information" section

Add New Channel:

Channel ID:

Channel Name:

IP Address:

User Name:


Password:

HTTP Port:

Click the "Search" button to perform the camera search.



You should be prompted to install Active Control component the first time you visit the page in order for the search to function properly. Go ahead and click "Install".

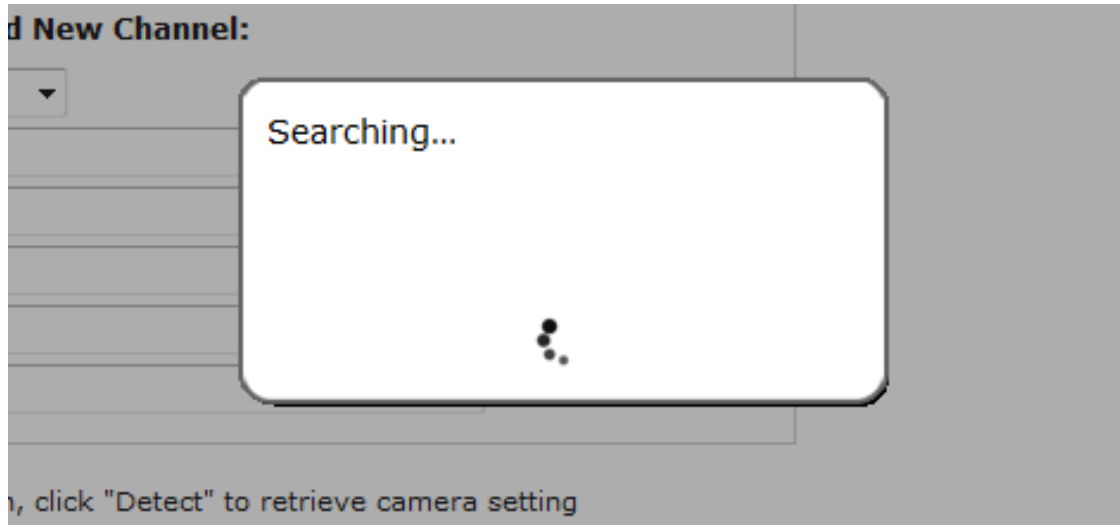

Once you have the ActiveX component installed, the search status should be displayed after clicking "Search"

AXIS	P3301	192.168.101.86	80
------	-------	----------------	----

*Select a camera from search result and click "Configure" to configure setting below.

Cameras found should be listed and simply select a camera from the list and press "Configure"

Add New Channel:

Channel ID:

Channel Name:

IP Address:

User Name:

Password:

HTTP Port:

Its corresponding information should be displayed in the "Camera Information" section. Enter its user name and password and select the channel ID and name the camera.

Additional Camera Information

Video Port:

Format:


Resolution:

Frame Rate:

Bitrate:

Record: Continuous

Record Audio: Record audio




Click on "Detect" to establish connection between the recorder and the camera. If connection establishes successfully, camera's detailed information should be polled and displayed as below.

Adjust its video format, frame rate, resolution or bitrate, etc. if you wish. You can also click on the "Preview" to preview the live video of the camera.


Click "Add" to finish adding the camera

I a new camera by manually entering camera's setting in the "Came

	IP Address	HTTP Port	Installed
	192.168.101.40	80	
	192.168.101.42	80	
	192.168.101.41	80	
	192.168.101.47	80	
	192.168.101.43	80	
	192.168.101.23	80	*
	192.168.101.46	80	

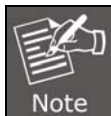


**If cameras are marked with "*" in the search result, it means those cameras are already configured and connected to the NVR*

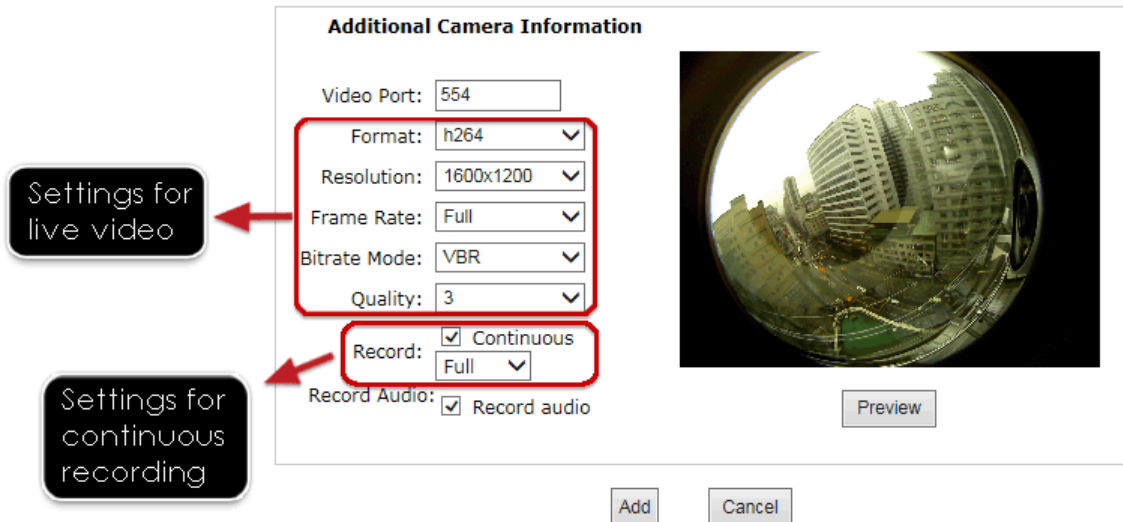

Once the camera's settings are polled and displayed, you can also enable "continuous" recording and adjust its recording quality settings before adding the camera.

Some cameras are capable of multiple streaming profiles, in which different video codecs are used for different purposes.

You will be able to use a different video format for continuous recording if it's a multi-stream capable camera.

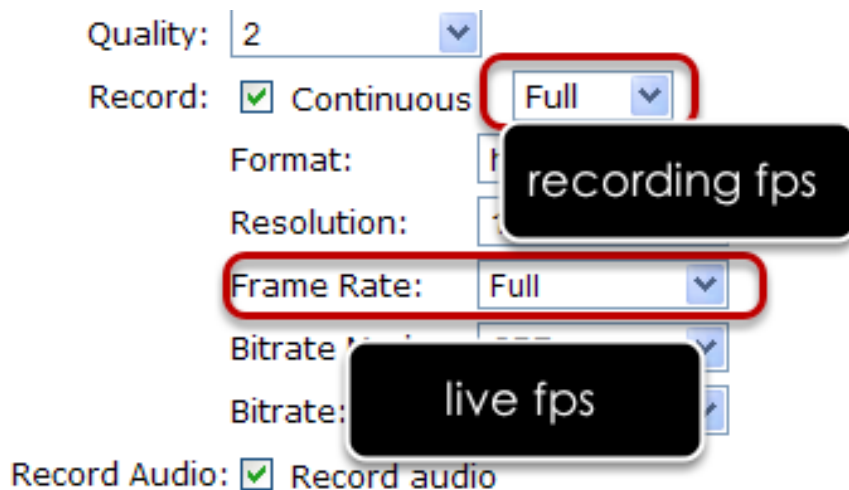

There are two types of fps settings here, one is the fps that NVR sets back to the camera, and this is the fps NVR will be receiving from the camera. The other is recording fps, which will be limited by the live fps. (e.g.. if the live fps is set to 10, choose "Full" in the recording fps meaning it will only record at a maximum of 10fps.

For MPEG/H.264, only i frame or full (i+p frame) can be selected for recording fps.

Detect Once you change the camera's IP, User Name, Password or HTTP Port, click "Detect" to retrieve the camera's settings

Additional Camera Information

Video Port:

Format:

Resolution:

Frame Rate:

Quality:

Record: Continuous

Record Audio: Record audio

For single stream camera, only the recording fps can be adjusted.

8.1.2 Adding a Camera Manually

Add New Channel:

Channel ID:

Channel Name: **1. enter manually**

IP Address:

User Name:

Password:

2. click "Detect" HTTP Port:

Detect Once you fill out above information, click "Detect" to retrieve camera setting

Simply follow the instruction described above but instead of using the "Search" function, enter the camera's IP address and credential in the "Camera Information" manually.

8.2 OSD Settings

The OSD (On Screen Display) allows users to add informational text message and embed it onto the video. By default, this function is turned off. To add texts to one or more videos, select a camera you would like to add text to and choose "Display OSD"

OSD Settings

Camera:

Do Not Display OSD

Display OSD

Text Display Options

- Show Time
- Show FPS
- Show Text (Max. 32 char.)

Choose one or more display options if you would also like the recorder to automatically embed the system time or the frame rate for you. Or simply choose to display a custom message of your own.

OSD Position

- Use relative position X: % Y: %
- Display at

Next, define where the text will be displayed by either entering an X/Y value based on percentage or use the system pre-defined position from the drop-down menu.



* Click this button to see a preview of your OSD settings

Click on the "Preview" button to see the preview of your setting and click "Apply" to save the configuration.


Customize OSD text & background

- Text Size: Auto Customized
- Text Color:
- Font:
- Text Background Color: Transparent Customized

The texts can be further adjusted with changes to a different size, color or font so they can be more visible on the video.

8.3 PTZ Setting

8.3.1 PTZ Preset Settings

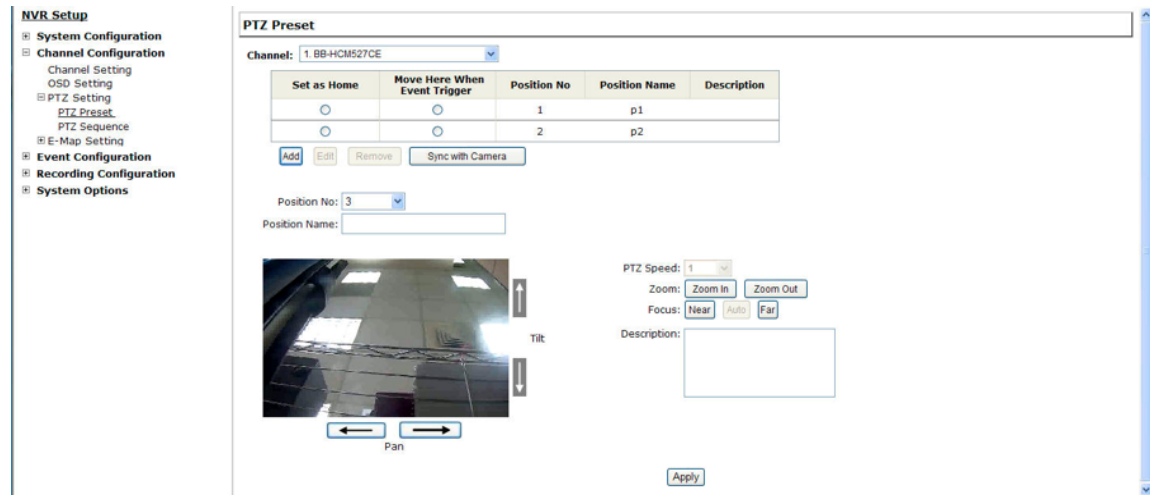

NVR Setup

- System Configuration
- Channel Configuration
 - Channel Setting
 - OSD Setting
 - PTZ Setting
 - PTZ Preset**
 - PTZ Sequence
 - E-Map Setting
- Event Configuration
- Recording Configuration
- System Options

PTZ Preset

Channel: 1. BB-HCM527CE

Set as Home	Move Here When Event Trigger	Position No	Position Name	Description
<input type="radio"/>	<input type="radio"/>	1	p1	
<input type="radio"/>	<input type="radio"/>	2	p2	


Buttons: Add, Edit, Remove, Sync with Camera

Position No: 3
Position Name:

PTZ Speed: 1
Zoom: Zoom In, Zoom Out
Focus: Near, Auto, Far
Description:

Apply

The recorder supports PTZ cameras and can set multiple preset points or retrieve and manage preset points that are set in the camera. This is helpful if you need to monitor multiple spots in one area from a particular camera.

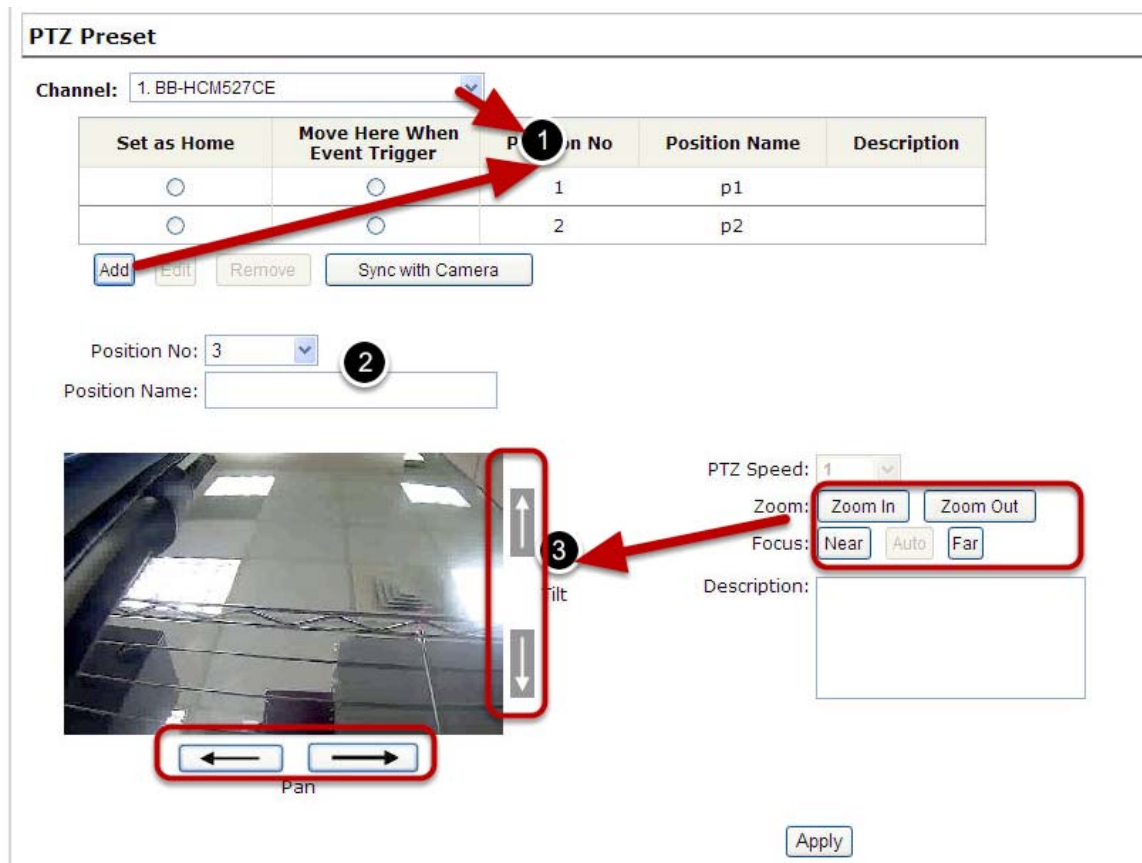

PTZ Preset

Channel: 1. BB-HCM527CE

Set as Home	Move Here When Event Trigger	Position No	Position Name	Description
<input type="radio"/>	<input type="radio"/>	1	p1	
<input type="radio"/>	<input type="radio"/>	2	p2	

Buttons: Add, Edit, Remove, Sync with Camera

Position No: 3
Position Name:

PTZ Speed: 1
Zoom: Zoom In, Zoom Out
Focus: Near, Auto, Far
Description:

Apply

To set up PTZ preset points,


1. Select a camera from the "Camera" drop-down menu and click "Add".
2. Select a position number for the preset point from the "Position Number" drop-down menu

and fill in a name in the “Position Name” field for easier identification.

3. Use the PTZ control provided on the configuration page to set the preset point




Ultimately, you can choose to make this preset point a “Home” point among all other preset points, as well as making the camera to move to this particular point when an event is triggered.



** “Move Here when Event Trigger”: In order for this function to work properly, please also complete configuration in “Event Configuration” >> “Event Trigger”*

8.3.2 PTZ Preset Sequence

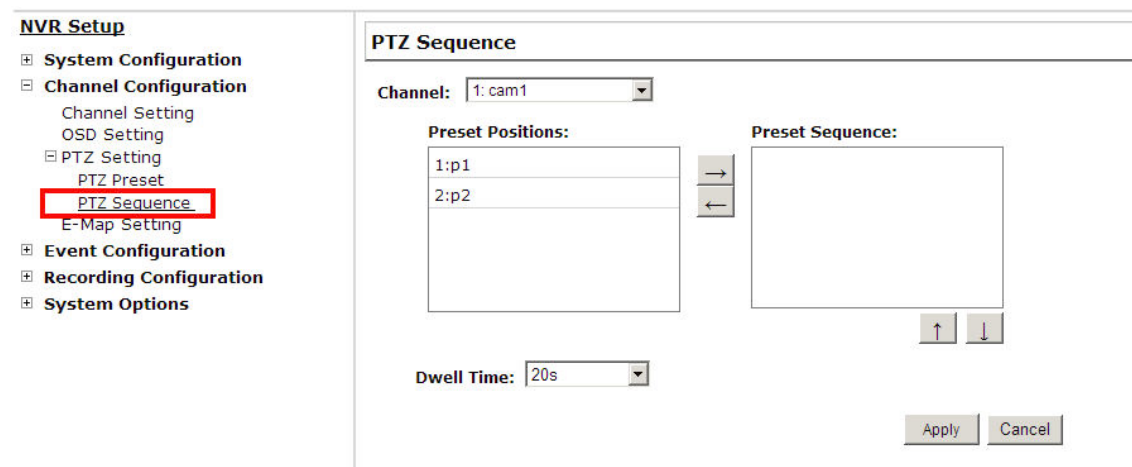

Once you have multiple preset points defined for a camera, it is convenient for monitoring to set up the sequencing viewing among those preset point and let the recorder automatically switch between them for you.

Channel: **1**

Preset Positions:

1:p1
2:p2

2

Preset Sequence:

--

3

Dwell Time: **4**

To configure preset sequence for a camera,

1. Select a channel from the “Channel” drop-down menu. The available preset points should be listed in the “Camera Presets” section.

2. Pick the ones you like for sequence viewing and press the “->” button to move them to the “Preset Sequence” section, then

3. Use the Up and Down buttons to adjust their sequencing positions.


4. Finally, select a dwell time from the drop-down menu and click “Apply” to save the configuration

8.4 E-Map Setting

8.4.1 Local E-Map Setting

NVR Setup

- System Configuration
- Channel Configuration
 - Channel Setting
 - OSD Setting
 - PTZ Setting
 - E-Map Setting
 - Local Map Setting
 - Google Map Setting
- Event Configuration
- Recording Configuration
- System Options



Upload Image: (File size limit: 500KB)

Select cameras to place them onto the map:

<input checked="" type="checkbox"/> CH 1	<input checked="" type="checkbox"/> CH 2	<input checked="" type="checkbox"/> CH 3	<input checked="" type="checkbox"/> CH 4	<input checked="" type="checkbox"/> CH 5	<input type="checkbox"/> CH 6	<input type="checkbox"/> CH 7	<input type="checkbox"/> CH 8
<input type="checkbox"/> CH 9	<input type="checkbox"/> CH 10	<input type="checkbox"/> CH 11	<input type="checkbox"/> CH 12	<input type="checkbox"/> CH 13	<input type="checkbox"/> CH 14	<input type="checkbox"/> CH 15	<input type="checkbox"/> CH 16

E-Map monitoring is a function that alerts users whenever there is an event triggered (e.g. motion detected) from a camera with a geographical perspective. With this function, users can quickly identify which camera has detected an unusual event and where this event is happening. This function works by incorporating the event detection function as well as the recording function, which, as a result, helps users take all the necessary actions when an


unusual event occurs.

NVR Setup

- System Configuration
- Channel Configuration
 - Channel Setting
 - OSD Setting
 - PTZ Setting
 - E-Map Setting
 - Local Map Setting
 - Google Map Setting
- Event Configuration
- Recording Configuration
- System Options

To replace the map, click the “Browse” button to locate the new map image file from the local PC and then click “Upload”.

** Only JPG, PNG, and GIF file formats are supported with file size under 100KB.*

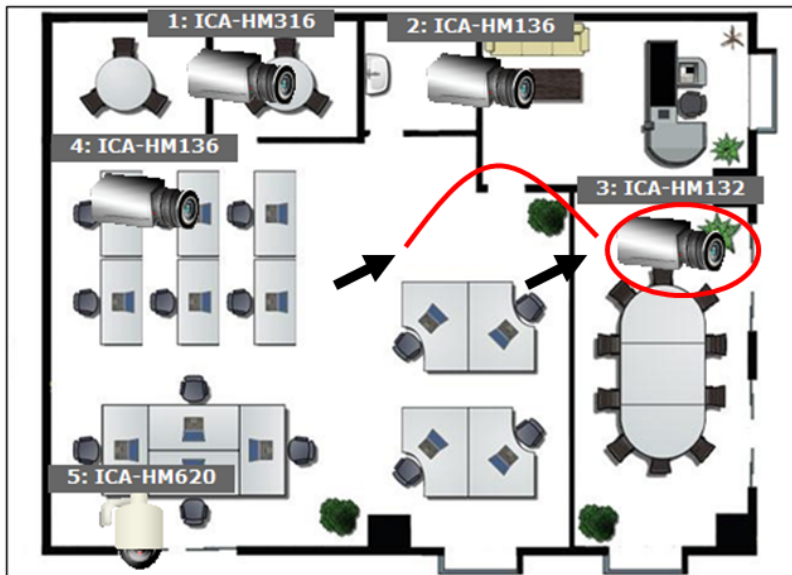


Then click and drag the camera icon to move the camera to define its location.



Events

Access the event monitoring page from the upper-right hand corner menu.

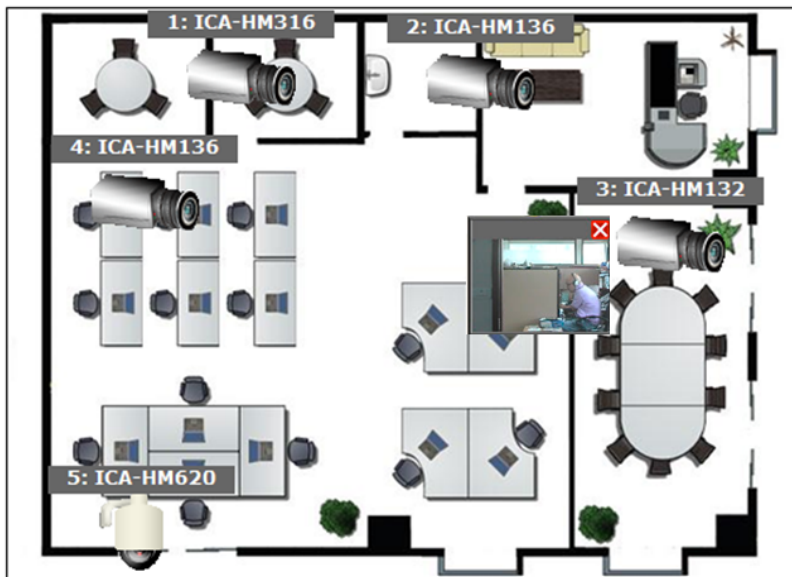

When the NVR receives an event triggered from any of the cameras, their videos will be displayed on the E-Map and you can double-click on the video to enlarge it.

8.4.2 Google Map Setting




The Google Map monitor is a similar function to the aforementioned E-Map monitor. It is useful if you are managing multiple cameras from different locations.




To configure locations of each camera, first determine the location you'd like to place the camera to on the map. You can do so by:


1. Zoom in to a smaller area by using the zoom control bar on the map
2. Zoom in to a smaller area by using the mouse scroll button

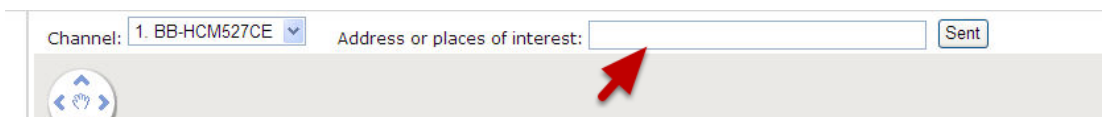

You can also go to a specific place on the map by entering its address or the name of the place in the "Address or places of interest" field

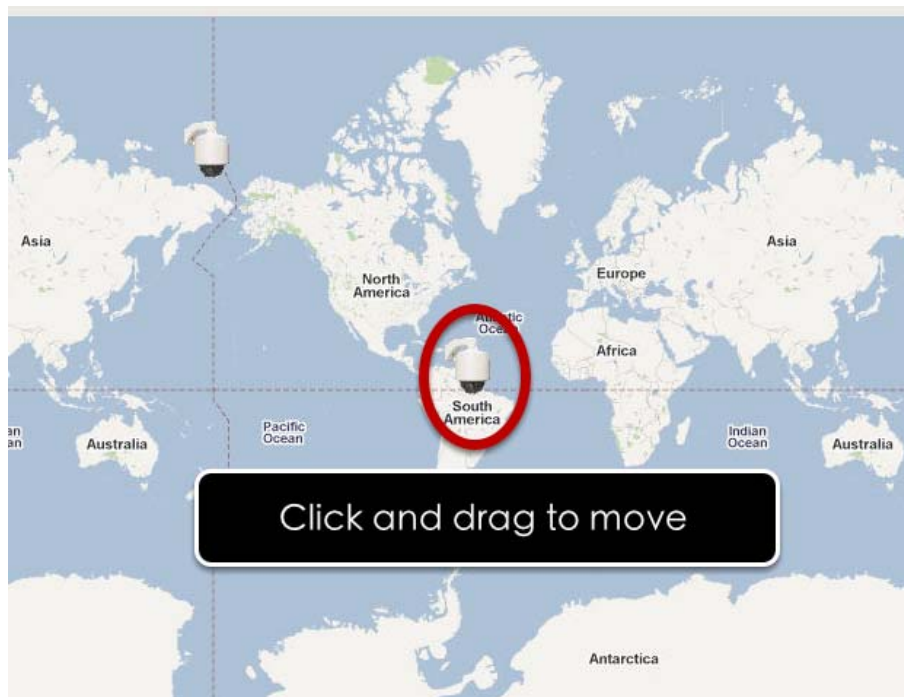

Once the location has been determined, click and drag the camera icon to move it to the desired location

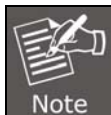


* The Google Map Monitor requires active Internet connection and cannot be used in conjunction with the regular E-Map monitoring function.

Chapter 9. NVR Setup -- Event Configurations

9.1 Event Configuration

The “Event Configurations” section allows users to define conditions that constitute an event, its corresponding trigger action and when it will be triggered. Such setting can reduce the management overhead and notify the administrator only when it’s necessary.

9.1.1 General Settings

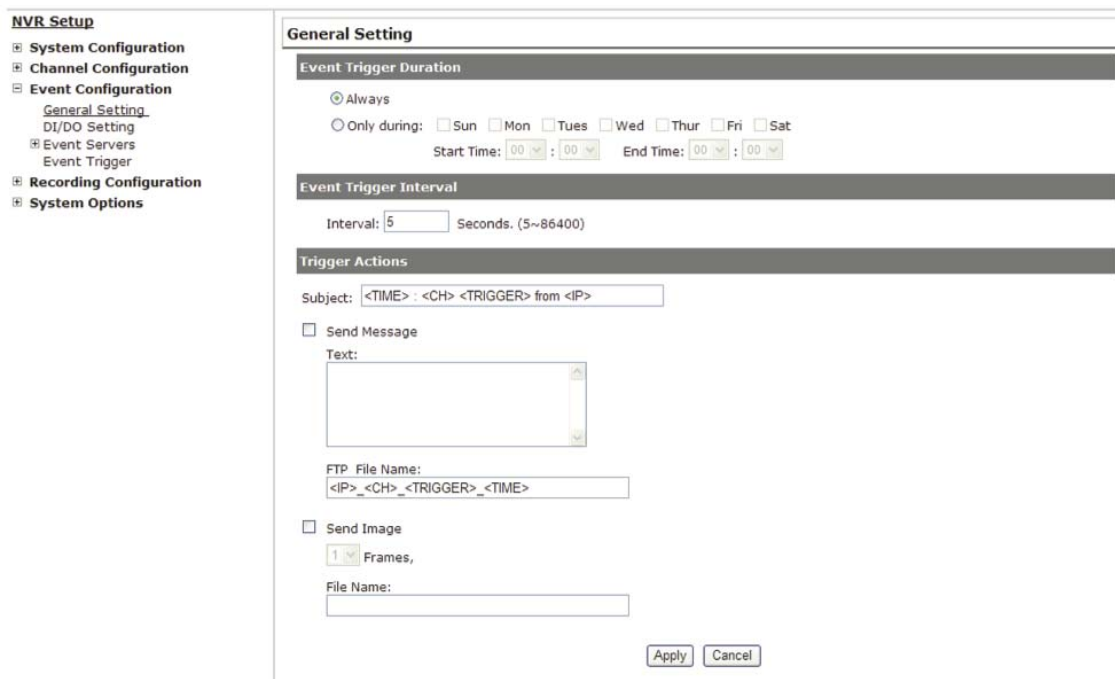

The general settings section can help you quickly configure when an event is triggered, how often events are triggered and the corresponding actions when events are triggered.

Start the event configuration by defining the general settings:

Define when an event will be triggered

- Choose “Always” or “Only during...” under “Event Trigger Duration”
- For the “Only during...” option, choose the days by using the check-box and then define the time range in those days in the “Start Time” and “End Time” fields that you would like the event trigger function to be enabled.

How often an event is triggered

- Set a time interval under “Event Trigger Interval” to define how often events are triggered

Trigger action

Now that you have the event trigger duration and interval defined, choose what action to be taken during an event trigger:

- You can choose to have the recorder sent out the first few frames of the video recorder upon an event is triggered.
- You can also choose to have the recorder sent out a warning message in e-mail or in txt file format and upload it to a destined FTP server.

9.2 I / O Settings

This function allows users to manage camera's digital input and output ports right from the recorder. You can set up the recorder to receive triggers from a particular camera's input port and trigger a device, such as an alarm that is connected to the recorder or camera's output port. Cameras that do not have a built-in digital input/output port can also be configured to pair with the recorder's DI/DO ports.


NVR Setup

- ⊕ System Configuration
- ⊕ Channel Configuration
- ⊖ Event Configuration
 - General Setting
 - DI Setting
 - ⊕ Event Servers
 - Event Trigger
- ⊕ Recording Configuration
- ⊕ System Options

DI Setting

	Trigger Event When	
	IP Camera	
	Port	Condition
CH 1	<input type="text" value=""/>	<input type="text" value=""/>
CH 2	<input type="text" value=""/>	-----
CH 3	<input type="text" value=""/>	-----
CH 4	<input type="text" value=""/>	<input type="text" value=""/>
CH 5	<input type="text" value=""/>	<input type="text" value=""/>
CH 6	-----	-----
CH 7	-----	-----
CH 8	<input type="text" value=""/>	<input type="text" value=""/>
CH 9	<input type="text" value=""/>	<input type="text" value=""/>

1. For cameras that come with physical digital input ports, their ports will be listed in the far left drop-down menu.
2. Pick the desired channel for I/O mapping, and then select the camera's input port from the drop-down menu.
3. Select the trigger condition from the "Condition" drop-down menu.



Note

**The recorder does not control camera's input or output ports in a way to let you pair recorder itself with a camera's input or output port for event receiving or triggering.*

**The recorder only acts as a medium for pairing up input/output ports between cameras and the recorder.*

**Only connected cameras will be displayed in the list.*

**Some cameras only allow one trigger source to be configured at a time, e.g., If the camera has the motion detection function turned on, its digital input will be disabled and vice versa. Under such circumstance, if you set to use camera's digital input port as the event trigger source, you will not be able to select motion detection as the trigger source for this camera under "Event Configurations" >> "Event Trigger" setup page.*

- The image(s) that are uploaded to the destined FTP server or emailed to a destined mail recipient are in their own proprietary image file format (.h4i or .p4i), which can only be opened by the NVR media player.*

.h4i if event was recorded in H.264, .p4i if event was recorded in MPEG4. .jpg if event was recorded in MJPEG.

9.3 Event Servers

9.3.1 Configuring an FTP Server

NVR Setup

- ⊕ System Configuration
- ⊕ Channel Configuration
- ⊕ Event Configuration
 - General Setting
 - DI/DO Setting
 - ⊕ Event Servers
 - FTP Servers
 - SMTP Servers
 - Event Trigger
- ⊕ Recording Configuration
- ⊕ System Options

FTP Servers Setting

Name	Network Address	Port	Passive Mode	Enabled
<input type="button" value="Edit"/>	<input type="button" value="Remove"/>			

FTP Server

Name:

Network Address: *Enter host name or IP address

Port:

Login Information

User Name:

Password:

Passive Mode

Use Passive Mode

Test

*Click "Test" to test the connection to the FTP server:

Event servers are to be used with event trigger actions. In case of unusual motion detected by the camera or a disk failure, the recorder can send notification with the acceptable format (image/txt) to a destined event server according to the configuration.

NVR Setup

- ⊕ System Configuration
- ⊕ Channel Configuration
- ⊕ Event Configuration
 - General Setting
 - DI/DO Setting
 - ⊕ Event Servers
 - FTP Servers
 - SMTP Servers
 - Event Trigger
- ⊕ Recording Configuration
- ⊕ System Options

FTP Servers Setting

Name	Network Address	Port	Passive Mode	Enabled
<input type="button" value="Edit"/>	<input type="button" value="Remove"/>			

FTP Server

Name: 1

Network Address: 2 *Enter host name or IP address

Port: 3

Login Information

User Name: 4

Password:

Passive Mode

Use Passive Mode 5

Test

6 *Click "Test" to test the connection to the FTP server:

7

To add an FTP server,

1. Start by giving a name to the server that you are adding to the recorder.
2. Enter the host name or the IP address of the FTP server.
3. Enter the communication port of the FTP server (usually port 21).
4. Enter the user name and password of the FTP server if it's required.
5. Check "Use Passive Mode" if it's required or leave it unchecked to use active mode.

- Click "Test" to verify if all information is entered correctly and the connection to the FTP server can be established successfully.
- Click "Add" for the settings to take effect.

9.3.2 Configuring an SMTP Server

SMTP Servers Setting

SMTP Server 1

Network Address: *Enter domain name or IP address

Port:

Sender's Name:

Sender's E-mail:

Enable Authentication:

User Name:

Password:

Test

Send Test Email To:

SMTP Server 2

Network Address: *Enter host name or IP address

Port:

Sender's Name:

Sender's E-mail:

Enable Authentication:

User Name:

Password:

Test

Send Test Email To:

- Enter the host name or the IP address of the SMTP server
- Enter the port of the SMTP server
- Specify the sender's name in the "Sender's name" field
- Enter the sender's e-mail address
- Check "Enable Authentication" and enter the user name and password of the SMTP server if it requires authentication.
- Click "Apply" to save the configuration

- The NVR supports SMTP servers that use base64 or MD5 authentication methods.
- 3rd party free E-mail services such as Gmail, Hotmail, or Yahoo mail are not supported.

9.4 Event Triggers

When Channel is triggered by

Reminder:

*Please make sure you have properly enabled and configured motion detection region in the camera's web configuration UI before enabling motion detection in the NVR. The NVR only supports single region detection, and only the first region will be used even if you set multiple motion detection regions in the camera.

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
I/O Input	<input type="checkbox"/>	<input type="checkbox"/>														
Motion Detection	<input type="checkbox"/>	<input type="checkbox"/>														
Custom Event	<input type="checkbox"/>	<input type="checkbox"/>														

When NVR is triggered by

- Disk fail
 Recycled
 When NVR start up
 When NVR system configuration changed
 When channel's configuration changed
 When camera connection status changed
 When remaining HDD space is lower than GB (min. 2GB when HDD recycle function is disabled)
 When system temperature is too high

Trigger Actions

- E-Mail:** E-Mail Addresses: *use "," to separate e-mails
 FTP: Upload Path:
 Warning Sound
 Move to particular preset points

Apply

We have finished defining how an event will be triggered and which servers will be receiving notifications in the previous two sections, now we can finish up the event configuration by setting:

- Which channels will have event trigger function enabled
- What is considered to be an event.
- Where the warnings will be sent to and how they will be sent


Event Handling Setting

When Channel is triggered by

*Please make sure you have properly enabled and configured motion detection region in the camera's web configuration UI before enabling motion detection in the NVR. The NVR only supports single region detection, and only the first region will be used even if you set multiple motion detection regions in the camera.

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
I/O Input	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>								
Motion Detection	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>								
Custom Event	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>								

Use the checkbox to enable event trigger on the desired channels.



Note

*Once motion detection is enabled on this page, please configure the motion area and enable motion detection in the corresponding channels (cameras) from camera's own web UI. The NVR only detects the first motion area set in the camera. The NVR recognizes the first motion area by its ID number set in the camera.

* Enabling the "custom event" option allows the NVR to receive events from the CMS software and start recording; events such as the intelligent video detection in the CMS.

When NVR is triggered by

- Disk fail
- Recycled
- When NVR start up
- When NVR system configuration changed
- When channel's configuration changed
- When camera connection status changed
- When remaining HDD space is lower than GB (min. 2GB when HDD recycle function is disabled)
- When system temperature is too high


Define which system events should trigger the recorder to send out notifications.

Trigger Actions

- E-Mail:** E-Mail Addresses: *use "," to separate e-mails
- FTP:** Upload Path:
- Warning Sound**
- Move to particular preset points**

Apply

Define how the notifications will be sent and where they will be sent.

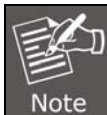

Event trigger may not work for cameras that are placed outside of your local network or on the Internet until the "UPnP Port Forwarding" is enabled in both the NVR and the router.

Chapter 10. NVR Setup -- Recording Configurations

10.1 General Settings

The “recording configurations” gives users the overall control of how and when a recording is performed and the quality of different types of recordings performed on each channels. It can help the recorder to operate with sufficient system resource by performing recording only when it’s necessary with adjustable recording frame rate.

Recording General Settings

Recording Buffer

Pre-Alarm Buffer: Seconds (0~10)

Post-Alarm Buffer: Seconds (5~60)

Recording Frame Rate

Channel:

	1	2	3	4	5	6	7	8
Format	Same as Live	Same as Live	Same as Live	Same as Live	Same as Live	Same as Live	Same as Live	Same as Live
Continuous	Full	Full	Full	Full	Full	Full	Full	Full
Schedule	Full	Full	Full	Full	Full	Full	Full	Full
Event	Full	Full	Full	Full	Full	Full	Full	Full
Manual	Full	Full	Full	Full	Full	Full	Full	Full

Recycle HDD space

Enable Recycle (When enabled, recycle automatically starts when remaining HDD space reaches 20GB. The system recycles HDD space 32GB at a time)

Keep Video

Keep the previous days of recorded videos

Camera Recording Setting

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Continuous	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Schedule	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Event	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

Record Audio

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Record audio	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

You can define the following in “General Settings”:


- Pre-Alarm/Post-Alarm recording length
- Recording frame rate
- Define to always keep a number of days of previously recorded data
- Enable/disable different recording types on different cameras
- Enable/disable audio recording

Recording Buffer

Pre-Alarm Buffer: Seconds (0~10)

Post-Alarm Buffer: Seconds (5~60)

The “recording buffer” allows user to define “pre-alarm” and “post- alarm” time for event recordings. The “pre-alarm” time sets the NVR to record in advance when an event is triggered. The “post-alarm” time sets the NVR to continue recording for a period of time after an event trigger is finished.

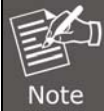

The "Pre-alarm" function only works when the "Continuous" recording is also activated.


Recording Frame Rate

Channel: Channel 1~8 ▾

	1	2	3	4
Format	Same as Live ▾	Same as Live ▾	Same as Live ▾	Same as Live ▾
Continuous	Full ▾	Full ▾	Full ▾	Full ▾
Schedule	Full ▾	Full ▾	Full ▾	Full ▾
Event	Full ▾	Full ▾	Full ▾	Full ▾
Manual	Full ▾	Full ▾	Full ▾	Full ▾

Keep Video

Recording frame rate allows you to set different frame rates for different types of recording instead of recording at one frame rate only. Use the drop-down menu and select one of the pre-defined frame rates for a particular recording type

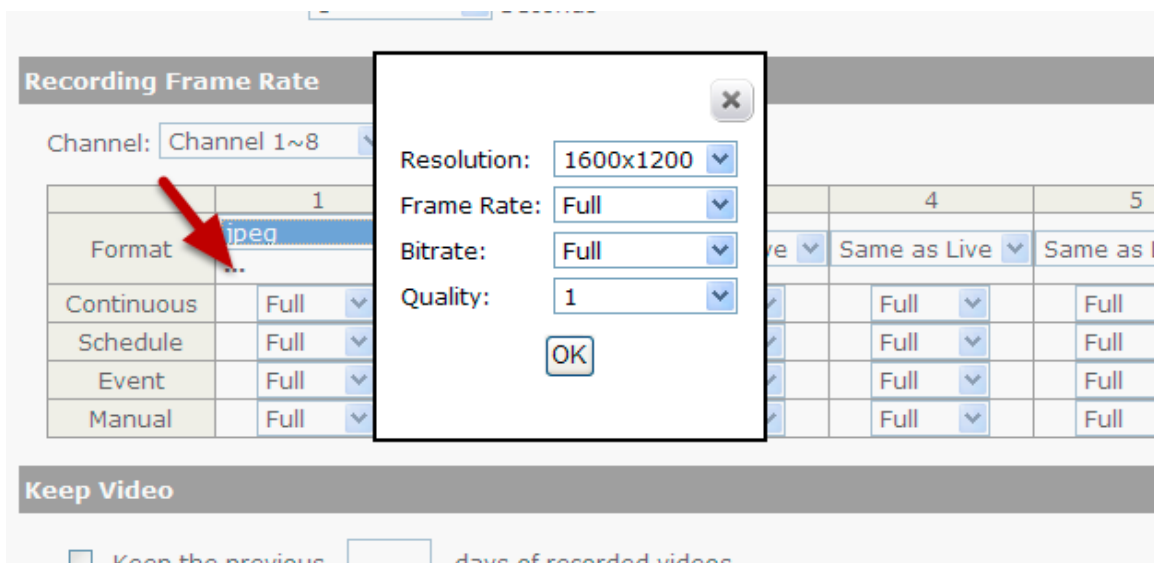

The screenshot shows the 'Recording Frame Rate' configuration page. A dialog box is open, allowing for detailed configuration of a video format. The dialog includes the following settings:

- Resolution: 1600x1200 ▾
- Frame Rate: Full ▾
- Bitrate: Full ▾
- Quality: 1 ▾
- Buttons: OK, X

In the background, the 'Recording Frame Rate' table is visible. A red arrow points to the '...' option in the 'Format' dropdown menu of the first column (Channel 1).

You are able to use the same video format for recordings or you can choose other formats for different recording purposes if it's a multi-stream capable camera.

If you chose to use a different video format for recording, you are able to adjust its detailed settings by clicking on the "...".

A new dialog will pop out for further detailed configurations. Noticing the "Frame rate" in this dialog represents the live fps that will be set back to the camera for this particular video format. You can configure the recording fps for different types of recordings individually.

Keep Video

Keep the previous days of recorded videos

Camera Recording Setting

Users can also set to keep a previous number of days of recording data by enabling the option below. This is quite often used in application such as banking in which certain countries require to always keep a minimum previous number of days of recording data.



** If this option is enabled, once the hard drive is full, the recycle function will then start but it will ensure that the number of days of recording data defined here will stay in hard drive instead of wiping out 20GB of data at a time.
* If the hard drive is not full, the NVR re-calculates twice a day (each at 2:30am and 2:30pm) to keep the defined number of days of recording data from these two particular points of time backward.*

Camera Recording Setting

	1	2	3	4	5	6	7	8	9	10	11
Continuous	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Schedule	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Event	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

Record Audio

	1	2	3	4	5	6	7	8	9	10
Record audio	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

The section at the bottom of the page allows you to disable audio recording (record video only) of particular channels.

10.2 Schedule Recording

Schedule Recording Settings

Channel: 1. 215 PTZ ▼

Schedule Table																								
	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23
Sunday																								
Monday																								
Tuesday																								
Wednesday																								
Thursday																								
Friday																								
Saturday																								

Clear

Quick Configuration

Days:

Sun Mon Tues Wed Thur Fri Sat All

Duration:

All day

During Start Time: 00 : 00 End Time: 00 : 00 Add

Copy Schedule To Channel: ▼

Copy Schedule To All Channels
Apply
Cancel

You can define the time range of the schedule recording for all channels on this page.

To configure a schedule recording

Schedule Recording Settings

Channel: ▼

Use the "Channel" drop-down menu and select a camera first.

Schedule Table																								
	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23
Sunday																								
Monday																								
Tuesday																								
Wednesday																								
Thursday																								
Friday																								
Saturday																								

Clear

You can use the schedule table to set the time range. Click the cell boxes and then move horizontally to let you set what hours to perform recording during a day. Click and move vertically to let you set what days to perform recording at a specific time.

Note

** Each cell box represents 15 minutes of time. Click one or more boxes to omit consecutive recording.*

Quick Configuration
Days:
 Sun Mon Tues Wed Thur Fri Sat All
Duration:
 All day
 During Start Time: : End Time: :

You can also use the “Quick Configuration” to define recording time range instead of clicking cell boxes one by one on the timetable. Simply check what days you would like to perform recording and specify the recording duration by either choosing “All Day” or enter a start and end time for specific recording duration.

Copy Schedule To Channel:

Select the “Copy Schedule to Channel:” option if you would like to set the same recording schedule to another camera.

Copy Schedule To Channel:

Alternatively, you can click on “Copy Schedule to All Channels” and apply schedule setting to all channels at once.

Chapter 11. NVR Setup -- System Options

11.1 Device Information

System Options gives users a glance of the overall system status and allows users to perform maintenance tasks such as upgrading firmware, restore/backup device settings or reboot device, etc.

NVR Setup

- System Configuration
- Channel Configuration
- Event Configuration
- Recording Configuration
- System Options
 - Device Information
 - System Logs
 - Maintenance
 - Disk Status
 - USB Backup

General Information	
Device Name:	
Model Name:	NVR-1620
Firmware Version:	1.0.0.66079
Device Up Since:	Dec 05, 2013 17:44:06
Network Information	
Network Type:	Static IP
Device IP:	192.168.1.209
HTTP Port:	80
Streaming Port:	9877
MAC Address:	00:30:4F:E1:00:04
DHCP Server:	Disabled
UPnP Port Forwarding:	Disabled

The “Device Information” provides the general information of the device such as firmware version and system time. It also provides information of the current network settings and status.

11.2 Logs and Reports

System Logs

ID	Time	Type	Sub-type	CH	AP	IP	User
1	July 19, 2011 10:15:07	User	User login		Web		admin
2	July 19, 2011 09:47:20	User	User login		Web		admin
3	July 19, 2011 08:56:19	Recording	Stop recycling HDD space				
4	July 19, 2011 08:55:23	Recording	Start recycling HDD space				
5	July 18, 2011 20:21:40	User	User logout		TestClient	192.168.102.21	admin
6	July 18, 2011 20:20:38	User	User logout		TestClient	192.168.101.178	admin
7	July 18, 2011 19:54:46	User	User login		Web		admin
8	July 18, 2011 19:50:35	User	User login		Web		admin
9	July 18, 2011 19:45:14	Linux	Format hard disk				
10	July 18, 2011 19:44:55	Linux	Format hard disk				
11	July 18, 2011 19:44:33	Linux	Format hard disk				
12	July 18, 2011 19:44:15	Linux	Format hard disk				
13	July 18, 2011 19:43:59	Linux	Format hard disk				
14	July 18, 2011 19:43:38	Linux	Format hard disk				
15	July 18, 2011 19:41:06	Channel	Camera connected	17			
16	July 18, 2011 19:41:06	Channel	Camera connected	16			
17	July 18, 2011 19:41:05	Channel	Camera connected	15			
18	July 18, 2011 19:41:05	Channel	Camera connected	13			
19	July 18, 2011 19:41:05	Channel	Camera connected	14			
20	July 18, 2011 19:41:05	Channel	Camera connected	12			

“Logs and Reports” keeps a record of what’s been happening to the device and provides basic information for troubleshooting.

11.3 Maintenance

NVR Setup

- System Configuration
- Channel Configuration
- Event Configuration
- Recording Configuration
- System Options
 - Device Information
 - System Logs
 - Maintenance
 - Disk Status
 - USB Backup

Maintenance

Restart NVR

Click "Restart" button to restart NVR

Restart Camera

Select a camera below to perform a restart

Upgrade NVR Firmware

Locate the new firmware and perform the upgrade (**Current Firmware Version: 1.0.0.66079**)

Specify the firmware file: and click

***** Note ***:** Please DO NOT power off the system during the firmware upgrade process. You will be notified once the upgrade process is complete

Backup NVR's Setting

Backup the configuration to a local hard disk

Restore NVR's Setting

Restore configuration from a previously saved configuration file

Specify the configuration file: and click

***** Note ***:** Please DO NOT power off the system during the restore process. You will be notified once the process is completed.

Reset NVR to Factory Default

This will restore all configurations to their factory default values

When the DHCP server function is disabled, the default IP of the system is:192.168.0.20

***** Note ***:** Please DO NOT power off the system during the reset process. You will be notified once the process is complete.

Replace NVR Web UI Logo

Locate the new logo and perform the updates:


Specify the logo file: and click (File size limit: 500KB)

"Maintenance" provides functions for users to:

- Reboot the NVR when necessary
- Reboot cameras directly from the NVR
- Perform Firmware Upgrade
- Back up the NVR's settings to a local hard drive
- Restore the NVR's settings from a previously saved configuration file
- Reset the NVR's settings to their factory default values


11.3.1 Firmware Upgrade

The firmware can be upgraded through web UI or USB. Before upgrading firmware, please back up configuration in advance.

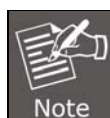


**** The firmware file comes with a ".tar.gz" file extension, please use the file as it is, DO NOT unzip it. It's normal that you may only see ".tar" as the file extension in Windows as the OS hides the known file extension by default.**


11.3.2 Through the Web Interface

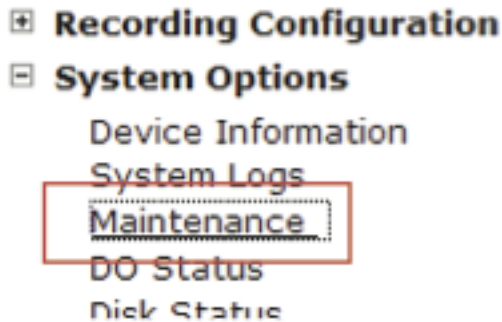


Login into NVR's web management UI, and go to "NVR Setup" >> "System Options"->"Maintenance"

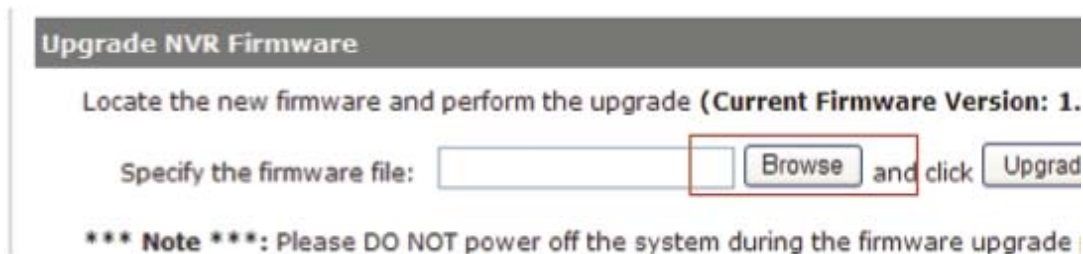

In the "Upgrade NVR's Firmware" section, click "Browse" and select new firmware file

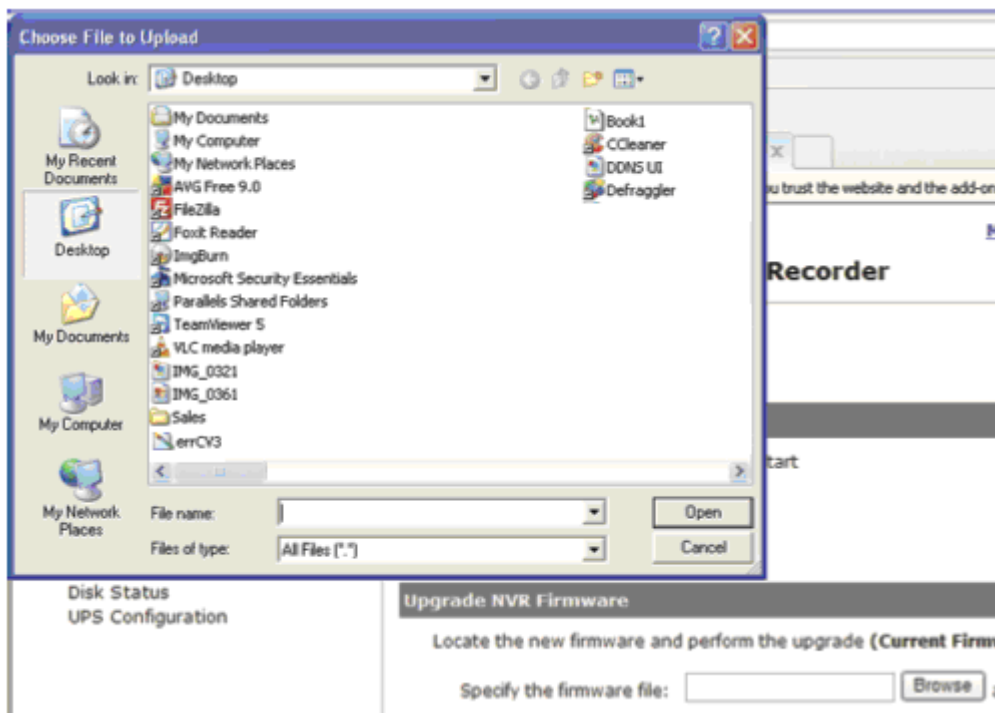


A new dialog should display and let you choose the location of the firmware file.

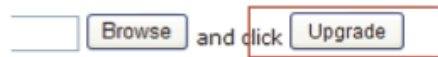

system during the firmware upgrade process:

When done, click “Upgrade”.

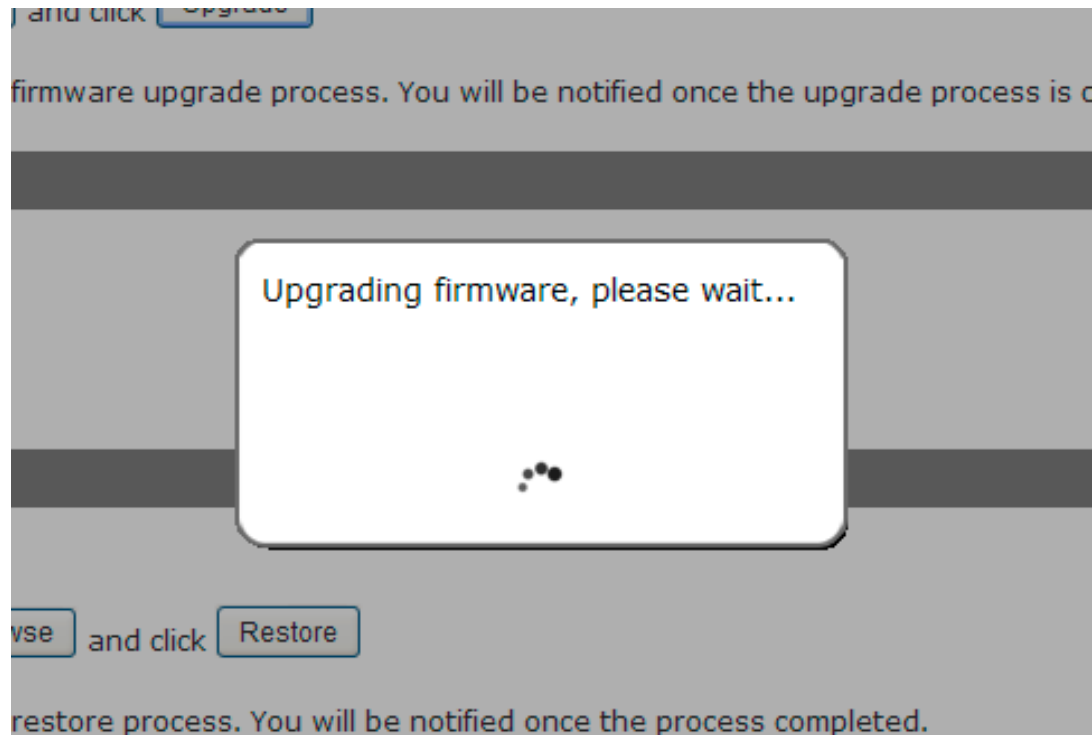

Follow the on screen instruction and wait for the process to finish (After upgrade, the system will reboot automatically, it's part of the process)

11.3.3 Upgrading through USB Thumb Drive

1. Prepare a USB flash disk and format with FAT or FAT32 format
2. Place the firmware in the USB flash disk and make sure it's placed at the top-level directory. Please do not place the file in a folder. **(Make sure to change the firmware file name to “firmware” and leave its file extension “.tar.gz” as it is before placing the file to the USB disk)**
3. Plug USB flash disk into USB port on the NVR.
4. The System LED on the NVR will start to flash in amber. This indicates firmware upgrade is in process.
5. ***** Warning ***** Please wait until upgrade process finishes. Interrupting the upgrade process may cause system not to work anymore.
6. Wait until System LED remains solid in amber. This indicates firmware upgrade is finished
7. Power off the NVR and remove the USB disk to power the unit back on again
8. Restore configuration file back if needed.

11.3.4 Resetting the NVR to Factory Default


Reset NVR to Factory Default

This will restore all configurations to their factory default values

When the DHCP server function is disabled, the default IP of the system is:192.168.0.20

***** Note ***:** Please DO NOT power off the system during the reset process. You will be notified once the process is complete.

To reset the recorder back to its factory default, click the “Restore Factory Default” button and begin the process.

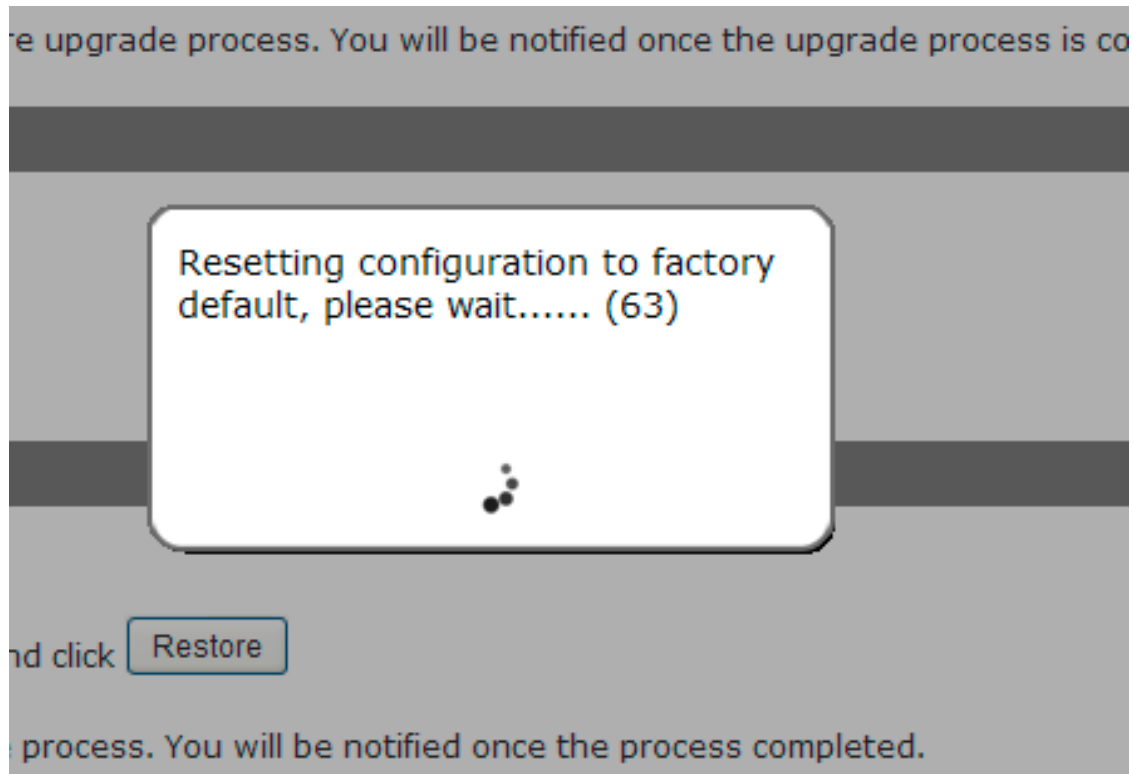

The process should be displayed and you should be prompted back to the “Live View” page after it is completed.

11.4 Disk Status

Disk Status							
Disk ID	Status	Capacity	Remaining Disk Space	Remaining	Online Time	Recording Period	Est. Remaining Time
Internal_1	Normal	469GB	441GB	93%	Dec 29 2011 20:23:24	Dec 29 2011 17:18:15 - Dec 30 2011 10:08:18	11 day(s) 1 hour(s)

“Disk Status” gives you more detailed information of the hard drive that is currently installed in the NVR.

11.5 USB Backup

NVR Setup

- System Configuration
- Channel Configuration
- Event Configuration
- Recording Configuration
- System Options
 - Device Information
 - System Logs
 - Maintenance
 - Disk Status
 - USB Backup

USB Backup

USB HDD: * Please format the HDD to FAT32 on a Windows PC before using it for backup

Channel:
 LNZ4001 LNE3003 LNE1001 cam4
 Channel 5 v1.0.0.5-2 Channel 7 Channel 8
 Channel 9 Channel 10 Channel 11 Channel 12
 Channel 13 Channel 14 Channel 15 Channel 16

Start Time:

End Time:

It's a function that allows users to back up the recording data in its database file format (not AVI) to the externally connected USB hard disk.

Disk Status

Disk ID	Status	Capacity	Remaining Disk Space	Remaining	Online Time	Recording Period	Est. Remaining Time
HDD 1	Online	222GB	216GB	97%	Aug 12 2010 11:21:12	May 21 2010 16:52:02 Aug 12 2010 13:07:12	2980 day(s) 21 hour (s)
USB HDD 1	Online	1935MB	553MB	28%		--	--

You can check the "Disk Status" page under "System Options" to see if the USB disk has been detected by the NVR. If it's available, it will also be in the USB HDD drop-down menu on the USB backup page.

** It needs a USB disk containing free space larger than 100MB.*

Note

USB Backup

USB HDD: * Please format the HDD

Channel:
 LNZ4001 LNE3003
 Channel 5 v1.0.0.5-2
 Channel 9 Channel 10
 Channel 13 Channel 14

Start Time:

End Time:

Once it's detected, go back to the "USB Backup" page and it should be available for further configuration

USB Backup

USB HDD: USB HDD 1, 553MB available ▼ * Please format the HDD

LNZ4001 LNE3003
 Channel 5 v1.0.0.5-2

The USB hard disk(s) will be listed in the drop-down menu displaying the remaining disk space. Make your selection from the drop-down menu if you have more than one disks connected to the NVR.

USB HDD: USB HDD 1, 553MB available ▼ * Please format the HDD

Channel:

LNZ4001 LNE3003
 Channel 5 v1.0.0.5-2
 Channel 9 Channel 10
 Channel 13 Channel 14

Next, select channels which you would like to back up the recording data from. A maximum of 4 channels can be selected at once.

Start Time: May 21, 2010 ▼ 16 : 52 : 02 ▲
▼

End Time: May 21, 2010 ▼ 16 : 52 : 02 ▲
▼

Backup

Configure the start and end time of the recording data you would like to back up and click the "Backup" button to begin.

11.5.1 Things to Pay Attention to the USB Backup Function

Limitation:

- It does not support USB Hub extending the number of HDD connected to the NVR.
- Only one backup process can be performed at a time.
- A maximum of channels can be selected for backup.
- Only FAT32 USB hard disk is supported for backup.
- The USB hard disk needs to have more than 100MB remaining space.
- If multiple partitions are presented in one disk, only the first partition will be detected and used for backup


Process:

- Progress will be displayed on the UI.
- If the backup process gets interrupted, in which the process stops at a point of time that is before the “END Time” user defined, such time will be displayed on the UI.
- A folder will be automatically created in the USB hard disk with a name format like 0028687831_20100610151515_2010060511 0010_20100606110010 (MAC_backupbuttonclicktime_starttime_ endtime).

Note:

- Please plug in the USB HDD only after the NVR is fully started, or the HDDs will be incorrectly mounted.


11.5.2 Playing the Backup File with the NVR Media Player

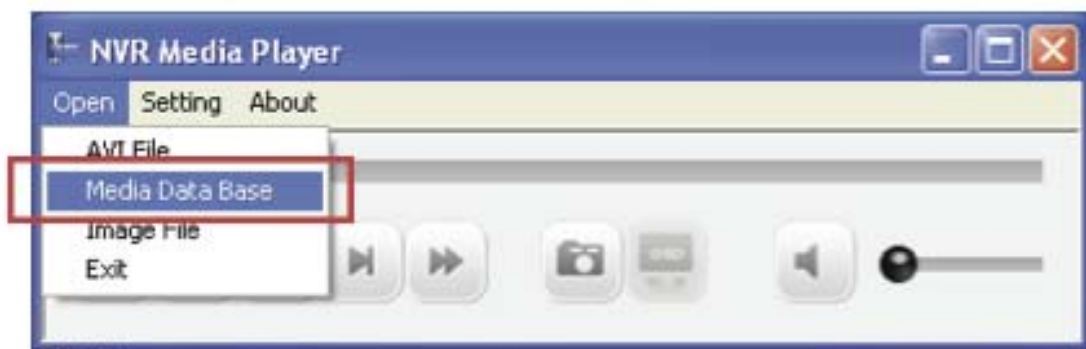


The backup files can be played with the NVR media player. To do it, open the player and select “Open” >> “Media Database”.




Click “Browse...” to select the file from the USB disk.

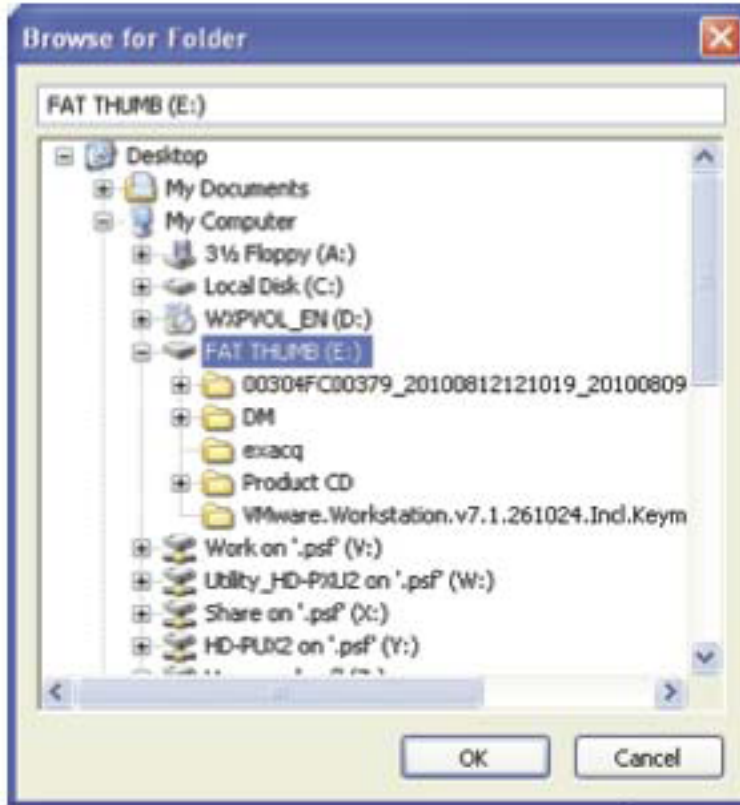

A new dialog should be prompted for you to select the file location.

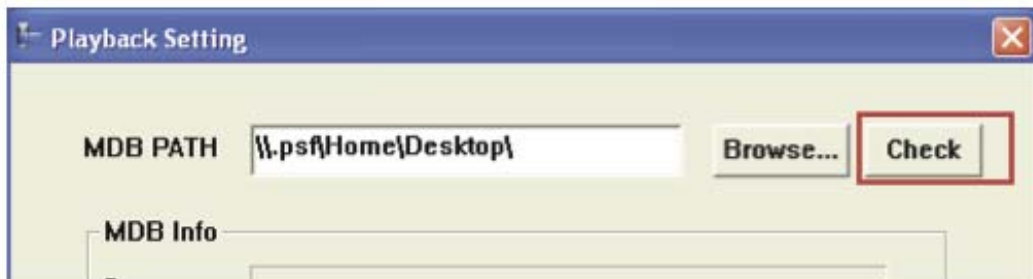

When done, click "Check" to validate the file.

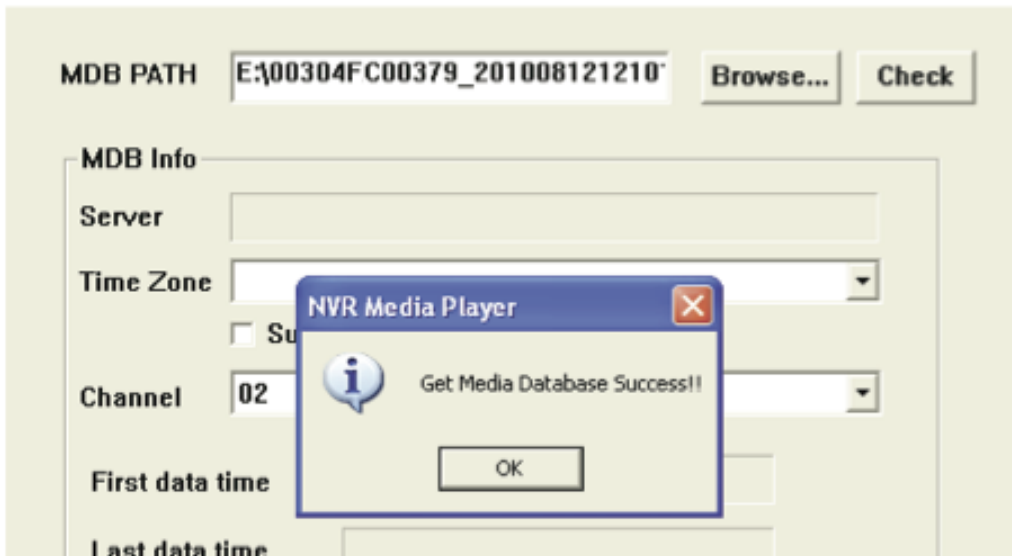

Once the file has been successfully verified, you should be prompted with the message shown below.



Select the time zone according to your current location.




Finally, click "OK" to begin playing. The player should now play the backup file.

Chapter 12. NVR Local Interface


12.1 System Configuration

12.1.1 Service

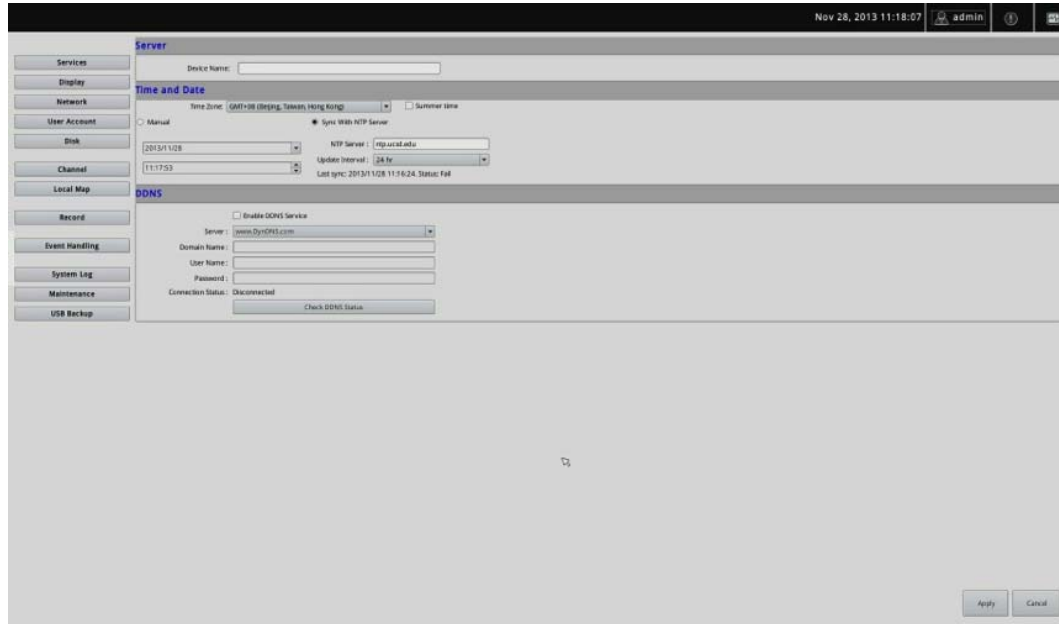

You will see the "Service" configuration page first when visiting the Configuration page. You are able to set a unique device name, set system time and configure DDNS on this page.

12.1.2 Display

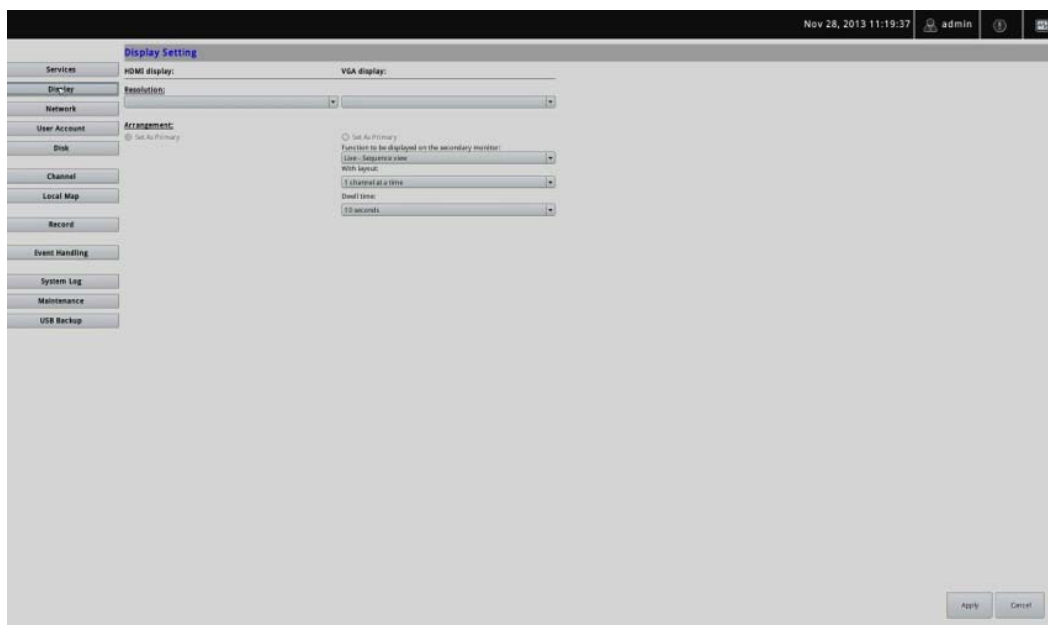


The "Display" configuration page allows you to choose the most optimized display resolution for the monitor that's used with NVR, as there will be circumstances that the incorrect resolution may be used when the system first boots up.

The NVR comes with two video outputs (HDMI: Primary as default, VGA: Secondary as default). You can set which to be used as primary and secondary on this page other than setting the resolution.


You are also able to set the function to be displayed on the secondary monitor on this page.

Currently you can configure the secondary monitor to display live videos with selected channels in desired layout, or live video in automatic sequence view.



NOTE: The NVR will reboot automatically upon change of resolution/or monitor for the new setting to take effect or be detected.


12.1.3 Network

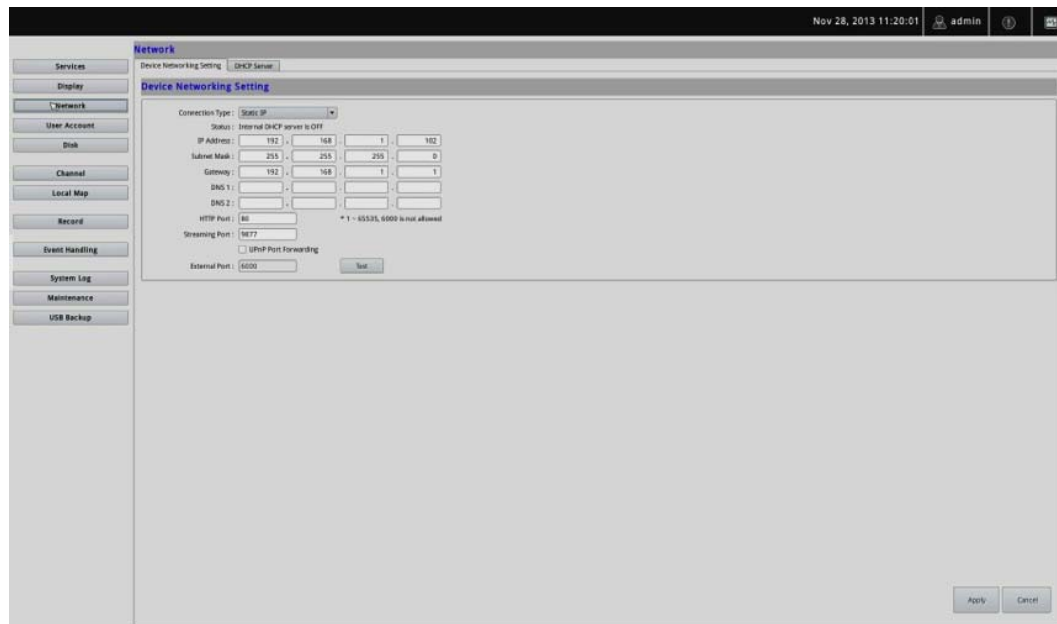



You need to adjust settings on this page for the device to work properly in your network. It is critical that settings here are configured correctly based on your network configurations so that the recorder can be administered through the local area network and cameras can be connected from it.

By default, the recorder is set to "Auto Mode" which if there's a DHCP server in the same local network, the NVR can obtain IP address from the DHCP server. And you can locate the NVR by using the NVR search utility.

If there's no DHCP server in the network, and the NVR is set to "Auto Mode", it will use its own default static IP **192.168.0.20**




** The recorder can detect the presence of a DHCP server upon startup. It sets itself to use static IP address if there is no DHCP server currently presented in the network. Its DHCP server function is also turned on at the same time to assign IP addresses to cameras that are later connected to the network or you can manually turn off the DHCP server function at the bottom of this page.*

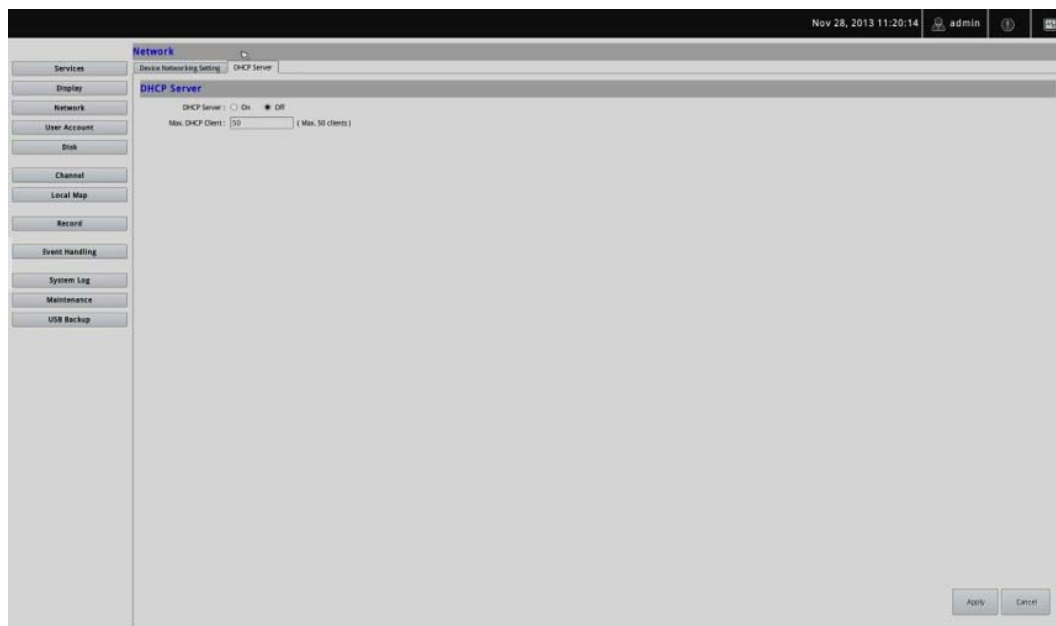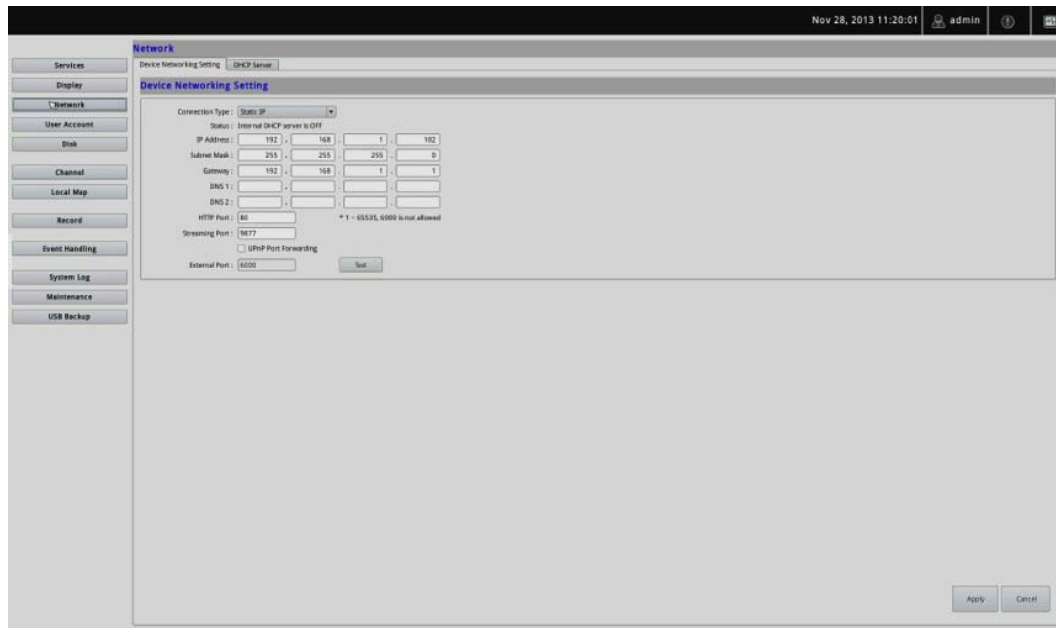


The built-in DHCP Server function is **NOT** always configurable and is greatly dependent to the connection type that is used:

1. If the connection type is "Auto Mode", the DHCP server function is NOT configurable. It will be ON if the NVR doesn't obtain an IP from a DHCP server in the local network and uses its own default static IP 192.168.0.20.
2. If the connection type is "Auto Mode", the DHCP server function is NOT configurable. It will be OFF if the NVR obtains an IP from a DHCP server in the local network.
3. If the connection type is "DHCP Client", the DHCP server function is NOT configurable. It will be OFF if the NVR obtains an IP from a DHCP server in the local network.
4. If the connection type is "DHCP Client", the DHCP server function is NOT configurable. It will be ON if the NVR doesn't obtain an IP from a DHCP server in the local network and uses its own default static IP 192.168.0.20.
5. If the connection type is "Static IP", the DHCP server function is configurable and can be turned on/off manually.

12.1.4 User Account -- User setting

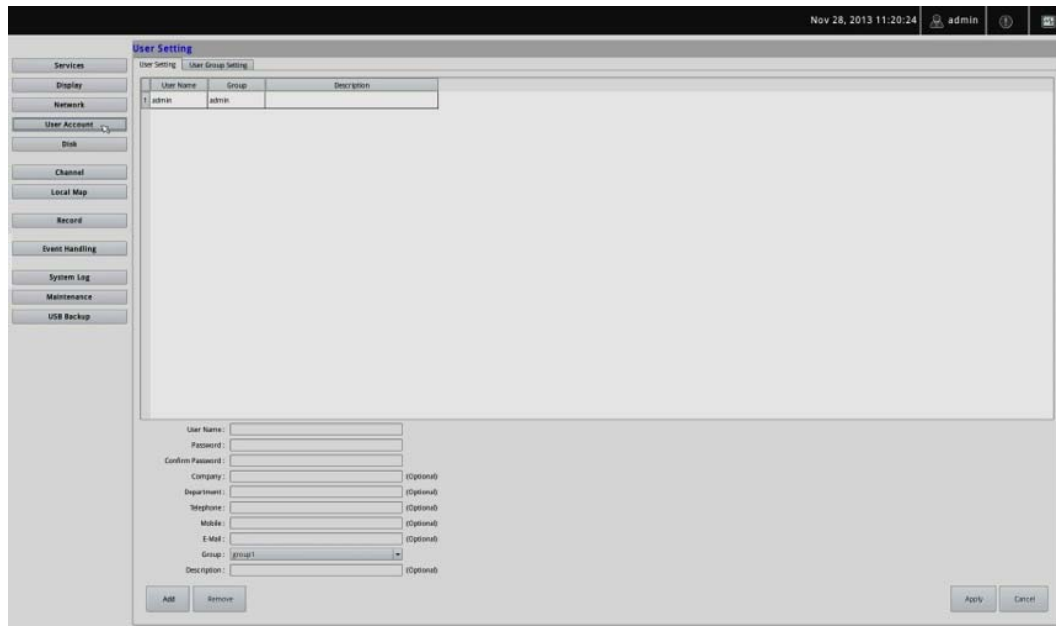


Multiple users can access the recorder simultaneously. You can add, remove, and edit users by using options provided on this page to keep user information organized. Each recorder comes with a built-in “admin” account with password “admin”. It’s highly recommended to change the password upon your initial login.

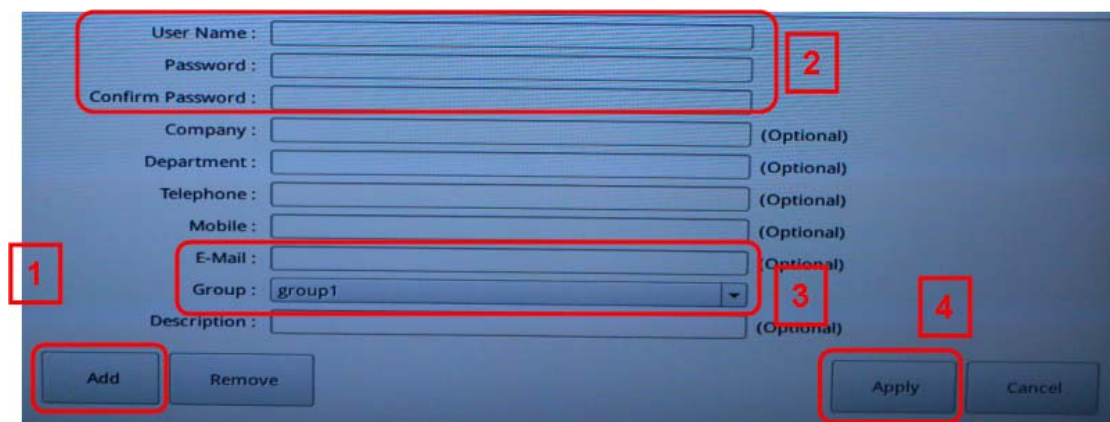


- Click "Add" to add a new user.
- Enter a user name and password. All other fields are optional for your own reference.
- Select a group from the “Group” drop-down menu to assign the new user to a particular group. Enter a short description for the account if you wish.
- Click “Apply” to finish configuration.

12.1.5 User Account -- User Group Setting

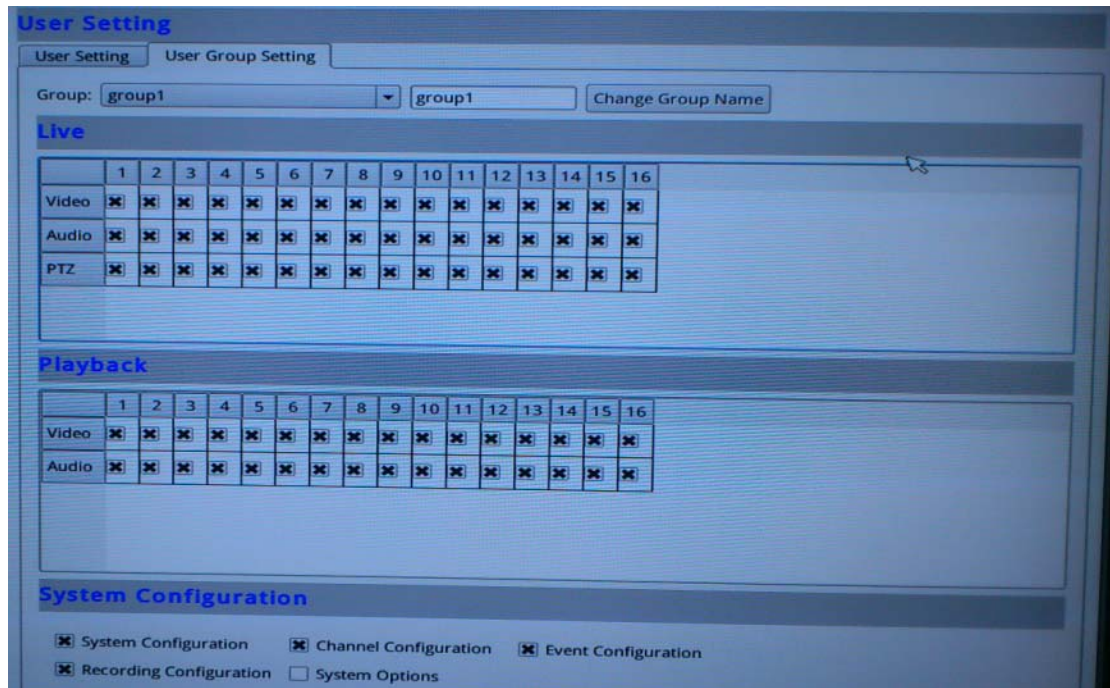

Group Privilege is where you can create multiple customized access policies for situations if you need the recorder to be accessed by users other than the administrator. You can do so by creating a group, and then remove access privileges for certain configuration pages or cameras. Users that are created and assigned to this group will have limited access instead of full administration rights.

The recorder comes with seven built-in groups and five built-in privilege profiles, except the “admin” and the “guest” accounts; the other five groups are fully customizable or you can simply assign a group with one of the default privilege profiles. You can, however, assign more than one users to the “admin” account if you wish to do so. The guest account comes with a “view-only” privilege on the “Live View” page, and users in this group do not have the power to make any changes on the “Live View” page or have access to pages other than the “Live View” page.

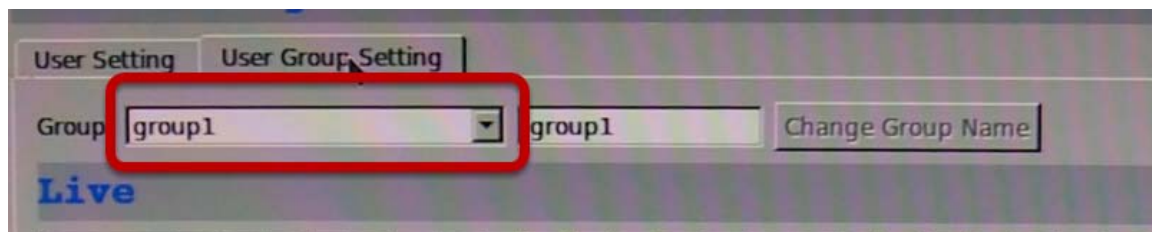

To create a group, select a group from the “Group” drop-down menu.



You can change the group name by typing in a new group name and click the “Change Group Name” button to finish.

Channel

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Video	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Audio	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
PTZ	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

Functions

Check to grant privilege

Playback

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Video	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Audio	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

System Configuration

System Configuration Channel Configuration Event Configuration
 Recording Configuration System Options

Use the checkboxes to allow or deny access to certain functions/channels. You can also restrict access on the certain system wise configuration pages.

12.1.6 Disk

Hard Disk Setting

Internal

Disk ID	Type	Capacity	Status	
1	Internal	1878 GB	Normal	Format
2	Internal	1878 GB	Normal	Format


Services
Display
Network
User Account
Disk
Channel
Local Map
Record
Event Handling
System Log
Disk Status
Maintenance
USB Backup

Once you install a new hard disk to the recorder, it will be listed on this page and shown status "offline". You would need to initialize it so that it can be ready for recording. You can obtain basic information about the disk you installed on this page.


To initialize it, simply click the "Format" button.

- *This page will list the Internal disks only. The HDD will be formatted in EXT3 file system.
- *The USB HDDs will only be listed on the "USB Backup" page. The USB HDDs have to be formatted in advance in FAT16/FAT32 or EXT3 file system. (FAT32 is recommended)
- * The internal disks that are formatted in EXT3 or FAT32 elsewhere will be listed on this page and shown as "Online" after they are installed to the NVR. It's highly recommended that it's formatted by the NVR, which will be formatted to EXT3 file system to ensure best performance. FAT32 can be used but will result in a performance slowdown.
- * HDDs formatted in file systems other than EXT2/3, or FAT32 will not be listed, and therefore cannot be used.

12.1.7 Channel Configurations -- Adding a Camera (Automatic Search)

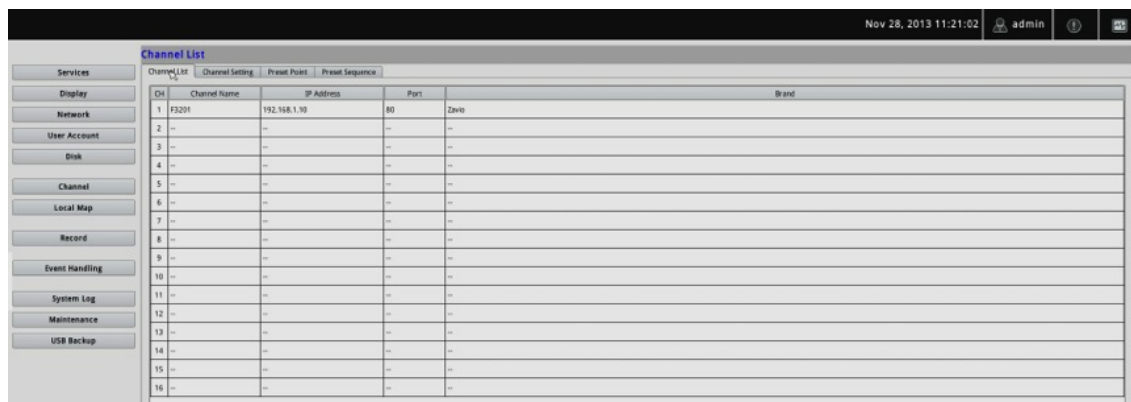


CH	Channel Name	IP Address	Port	Brand
1	F3201	192.168.1.10	80	Zivio
2	--	--	--	--
3	--	--	--	--
4	--	--	--	--
5	--	--	--	--
6	--	--	--	--
7	--	--	--	--
8	--	--	--	--
9	--	--	--	--
10	--	--	--	--
11	--	--	--	--
12	--	--	--	--
13	--	--	--	--
14	--	--	--	--
15	--	--	--	--
16	--	--	--	--

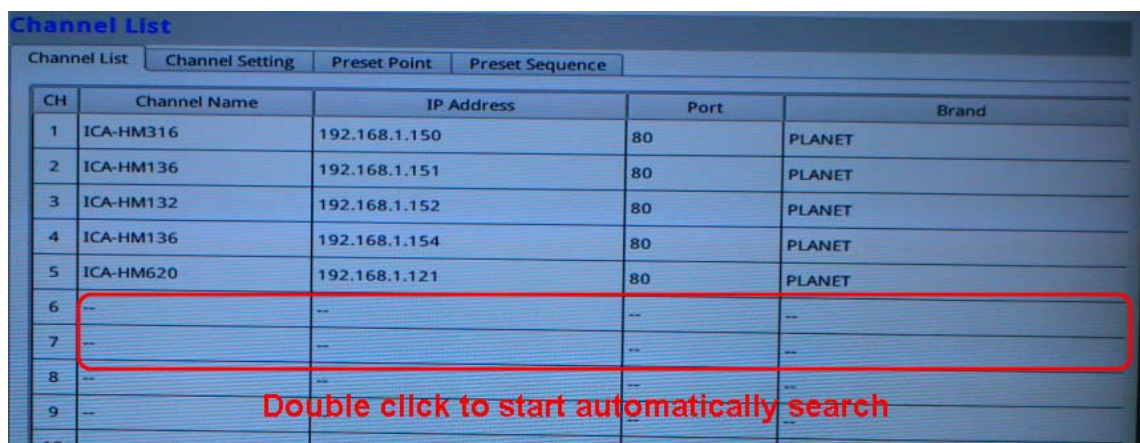


CH	Channel Name	IP Address	Port	Brand
1	ICA-HM316	192.168.1.150	80	PLANET
2	ICA-HM136	192.168.1.151	80	PLANET
3	ICA-HM132	192.168.1.152	80	PLANET
4	ICA-HM136	192.168.1.154	80	PLANET
5	ICA-HM620	192.168.1.121	80	PLANET
6	--	--	--	--
7	--	--	--	--
8	--	--	--	--
9	--	--	--	--
10	--	--	--	--

Double click to start automatically search

The NVR provides two options for adding a new camera. Users have the option to let the recorder automatically find the cameras or it is possible to enter camera's information and add it manually. You will be greeted with the "Channel List" page when you first enter the "Channel" configuration page. Simply double-click on any channel in the list to start automatic search and add camera to that channel.

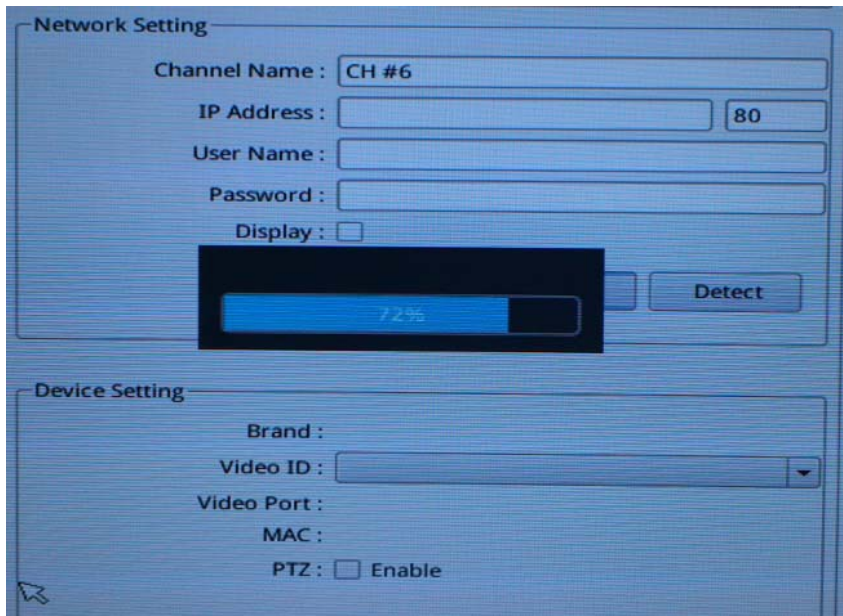


The progress will be displayed, and you will be switched to the "Channel setting" page for more configurations.

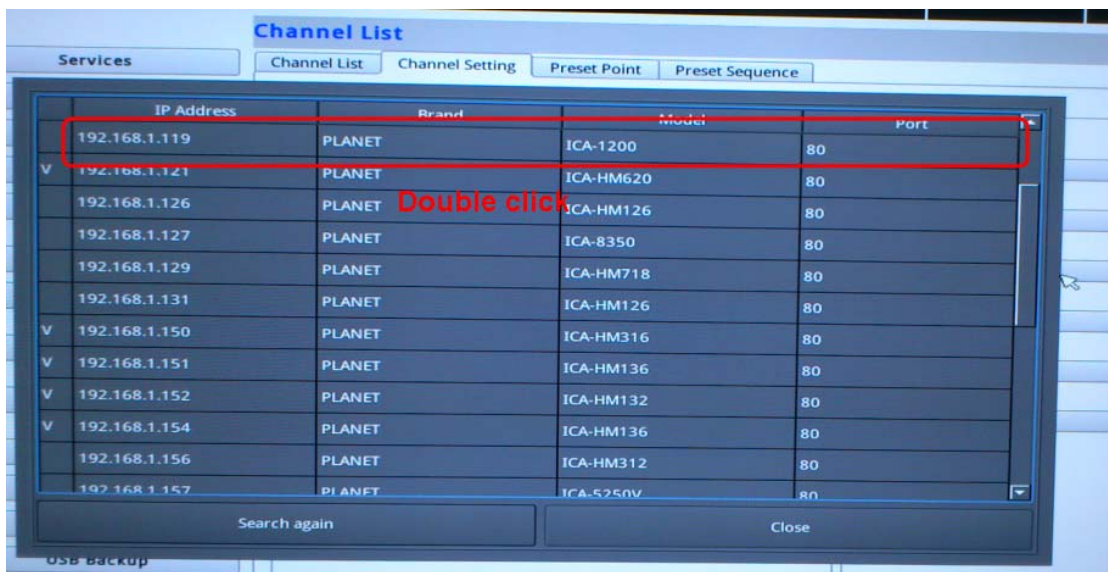


IP Address	Brand	Model	Port
192.168.1.119	PLANET	ICA-1200	80
V 192.168.1.121	PLANET	ICA-HM620	80
192.168.1.126	PLANET	ICA-HM126	80
192.168.1.127	PLANET	ICA-8350	80
192.168.1.129	PLANET	ICA-HM718	80
192.168.1.131	PLANET	ICA-HM126	80
V 192.168.1.150	PLANET	ICA-HM316	80
V 192.168.1.151	PLANET	ICA-HM136	80
V 192.168.1.152	PLANET	ICA-HM132	80
V 192.168.1.154	PLANET	ICA-HM136	80
192.168.1.156	PLANET	ICA-HM312	80
192.168.1.157	PLANET	ICA-5250V	80

Double-click on one from the search result to add it and for more detailed configurations.

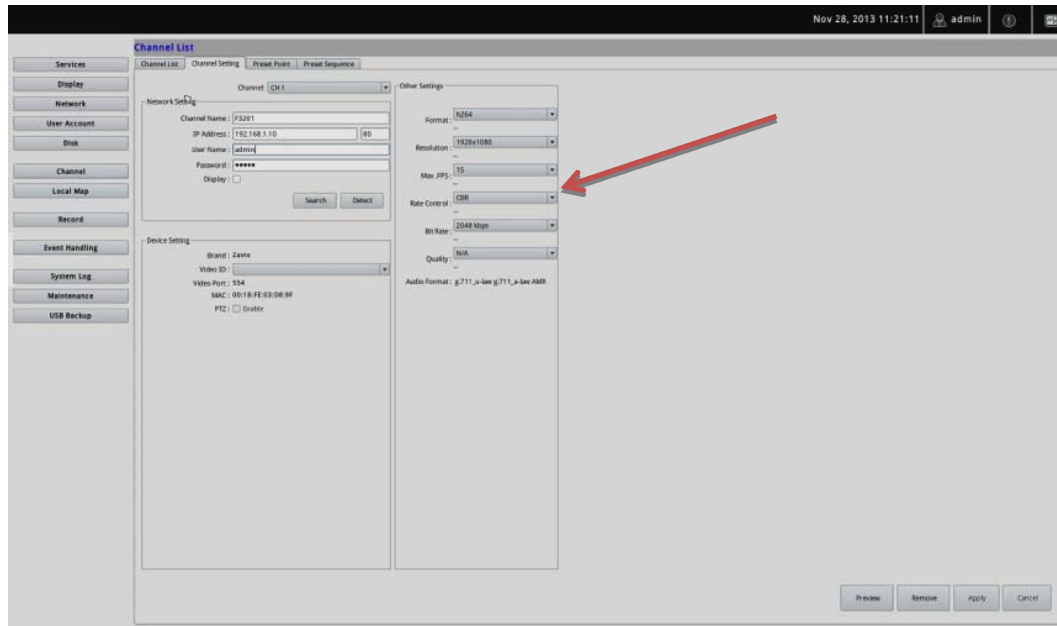


The camera's current settings will be displayed on the right and you can adjust settings such as "Format", "Resolution" or "FPS" before adding it to the NVR.

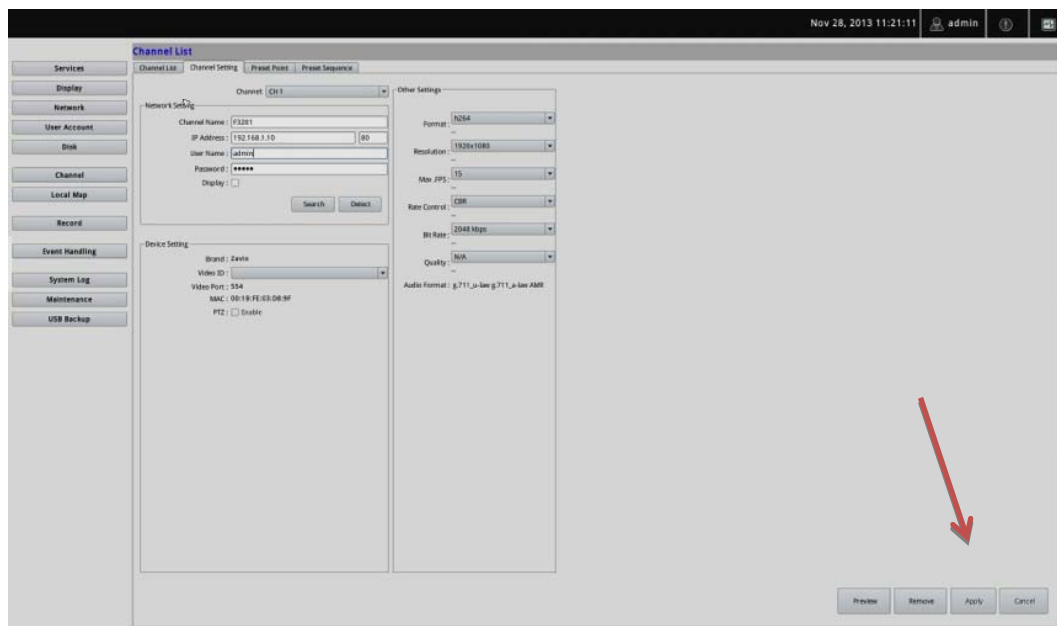


Click "Apply" to finish and save the settings.


12.1.8 Channel Configurations -- Adding a Camera (Add manually)

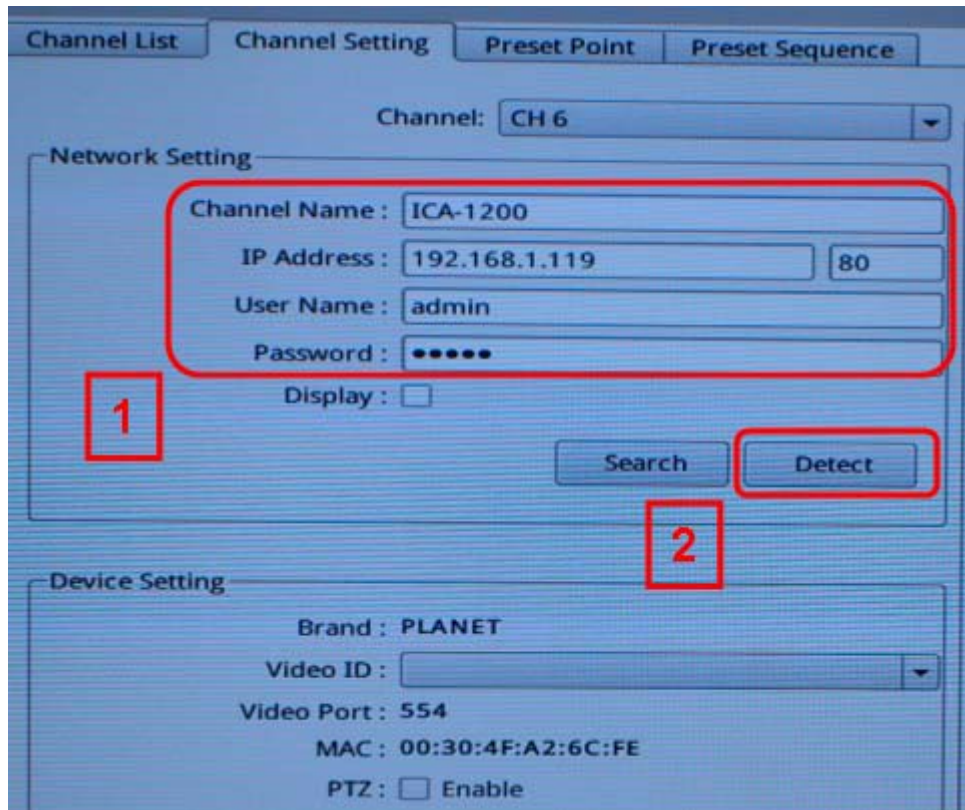

To add a camera manually, go directly to the "Channel Setting" page, and enter the camera's IP address, HTTP port, user name and password. Click "Detect" to retrieve camera's settings.

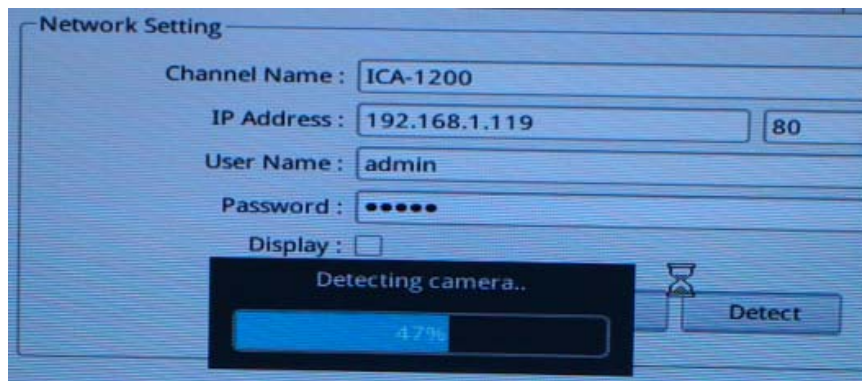


The progress will be displayed. Once it's successfully detected, follow the procedures described in the previous section to finish configuring and adding camera to the NVR.

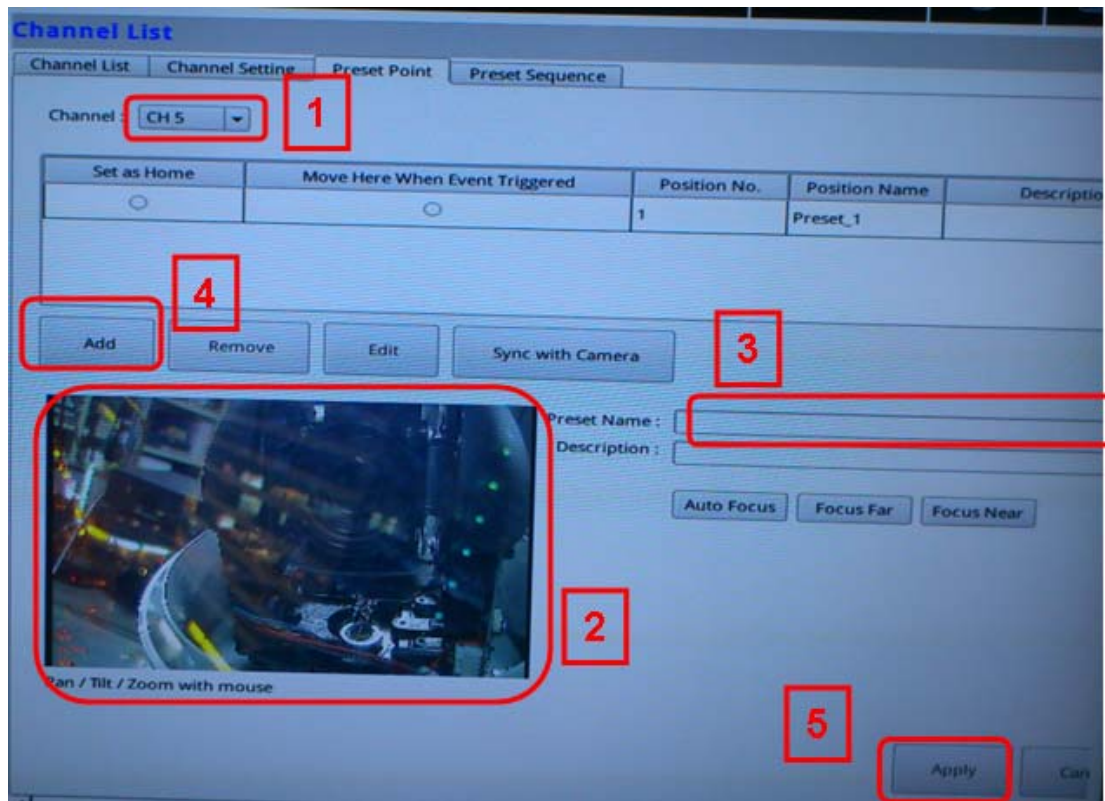

You can create up to 8 preset points for each channel if it's a PTZ-capable camera. To add a preset point:

1. Select a channel from the "Channel" list and its video will be displayed at the lower-left hand corner.
2. Click on the video to change its pointing direction.
3. Assign a name to this preset position.
4. Click "Add" to add it.
5. Click "Apply" to save the settings.

Once you have multiple preset points defined for a camera, it is convenient for monitoring to set up the sequencing viewing among those preset points and let the recorder automatically switch between them for you.

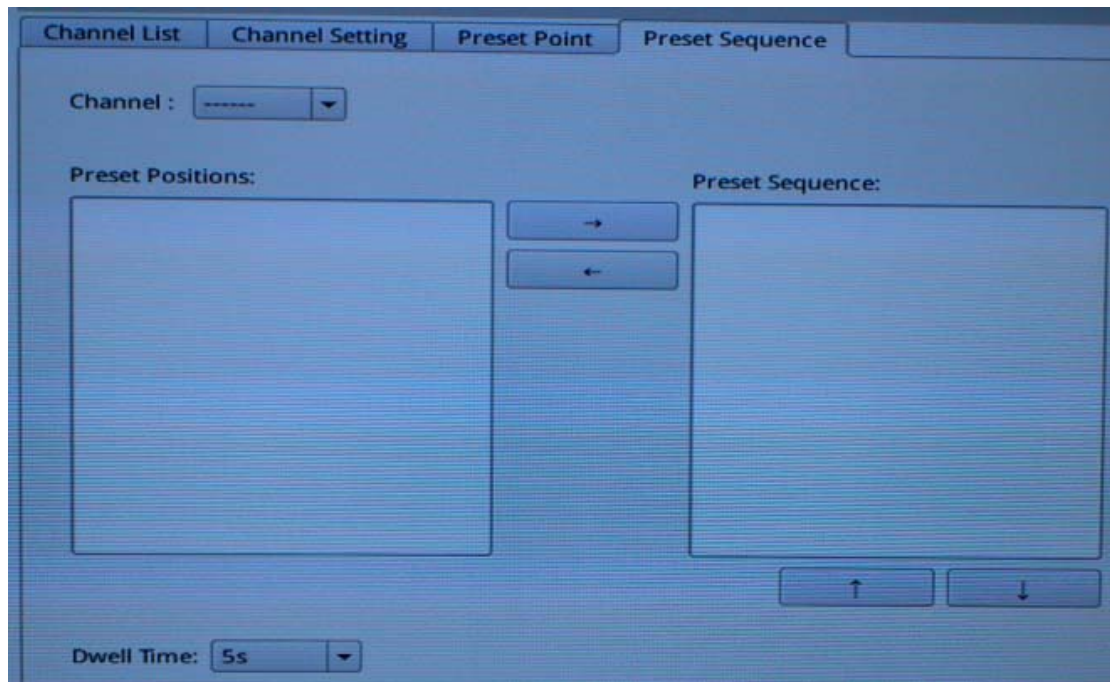


To configure preset sequence for a camera,


1. Select a channel from the "Channel" drop-down menu. The available preset points should be listed in the "Camera Presets" section.
2. Pick the ones you like for sequence viewing and press the "->" button to move them to the "Preset Sequence" section, and then
3. Use the Up and Down buttons to adjust their sequencing positions.
4. Finally, select a dwell time from the drop-down menu and click "Apply" to save the configuration.

12.1.9 E-Map




E-Map monitoring is a function that alerts users whenever there is an event triggered (e.g. motion detected) from a camera with a geographical perspective. With this function, users can quickly identify which camera has detected an unusual event and where this event is happening. This function works by incorporating the event detection function as well as the recording function, which, as a result, helps users take all the necessary actions when an unusual event occurs.

 **Note** E-Map setting page in the local UI only allows you to configure the position of each camera (by using drag and drop). For detailed settings such as changing the E-Map image, please do so in the web configuration UI.

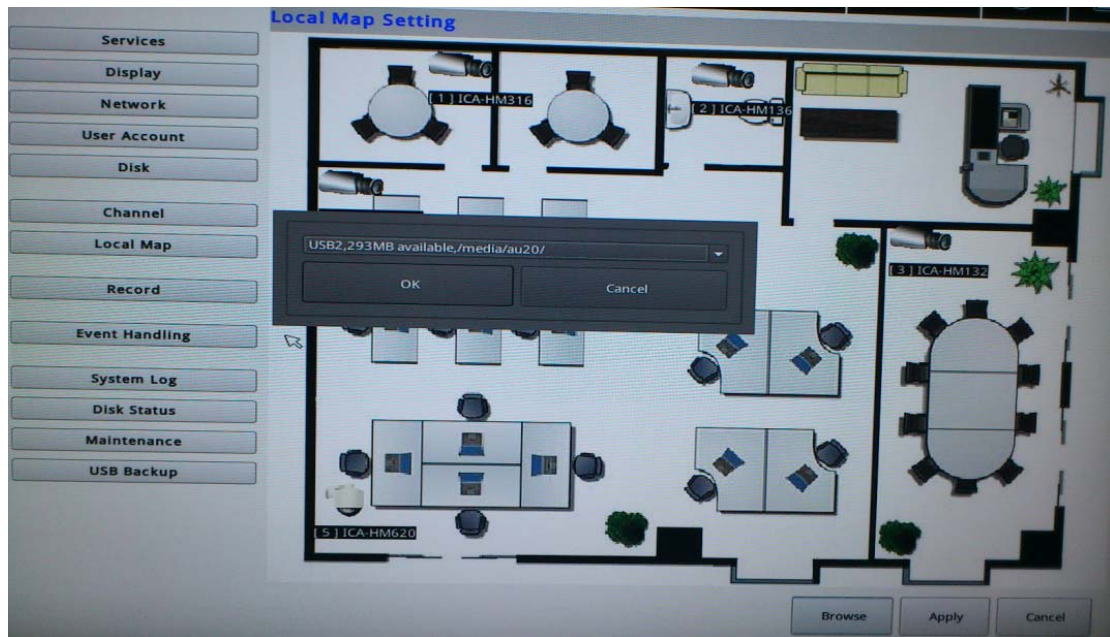


To change the map image, place your own image on a USB disk and plug it into one of the USB ports on the NVR. Click the "Browse" button and select the USB disk when prompted.

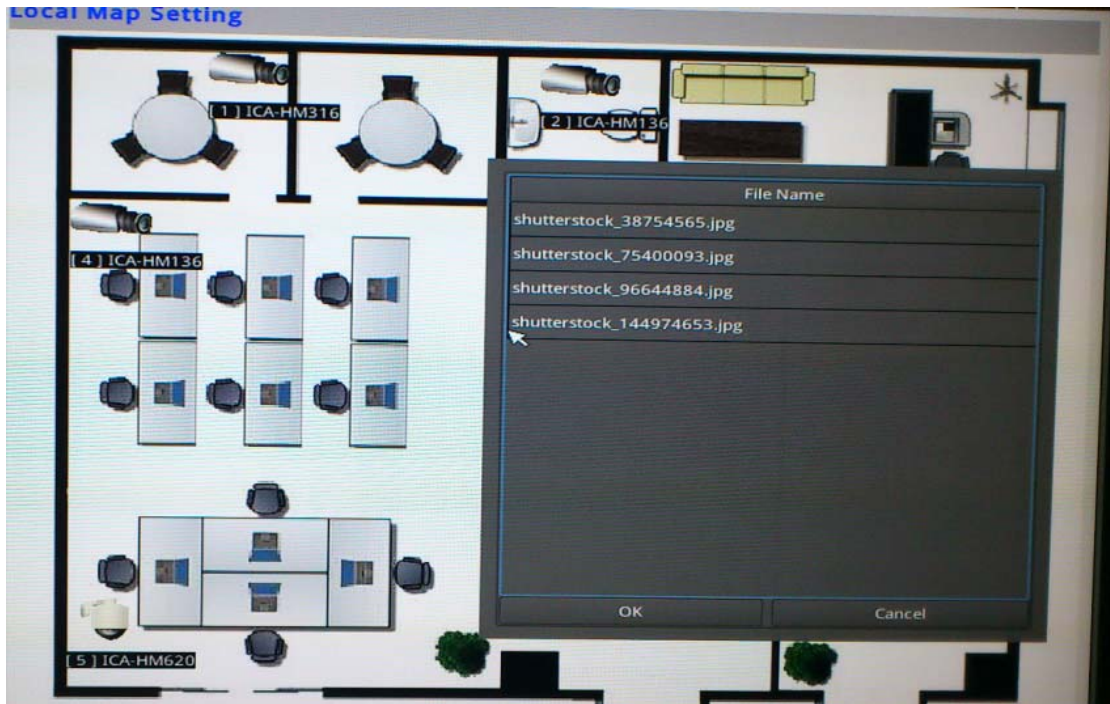


Locate the image file (.jpg) and click "Open" to finish.




12.1.10 Recording

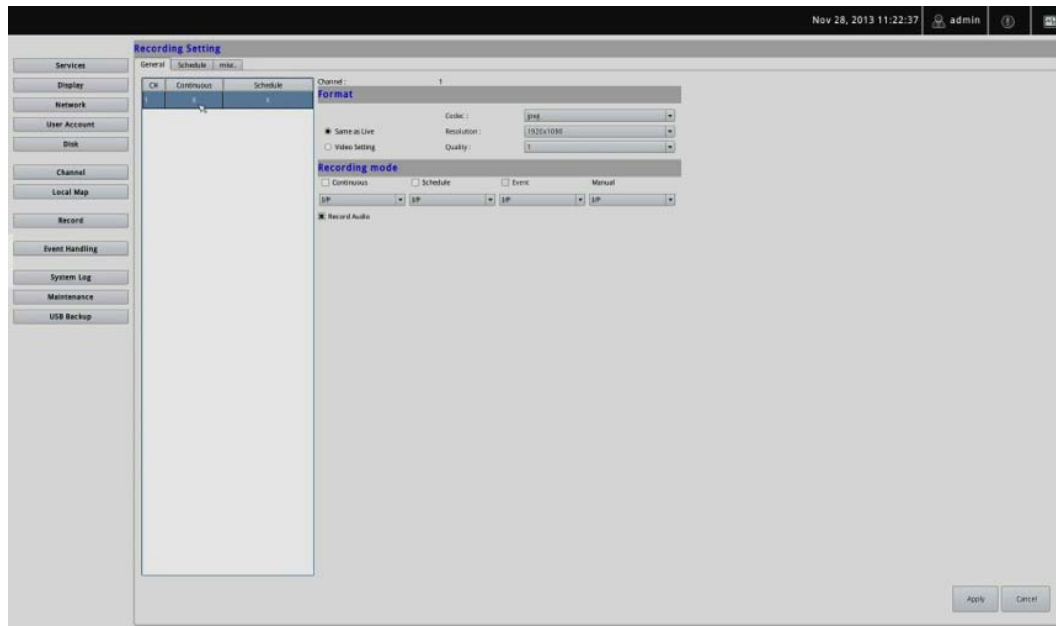


The “recording configurations” gives users the overall control of how and when a recording is performed and the quality of different types of recordings that will be performed on each channel. It can help the NVR to operate with sufficient system resource by performing recording only when it’s necessary with adjustable recording frame rate. The NVR supports displaying live video and recording with different video quality settings or format if camera supports outputting multiple video streams.

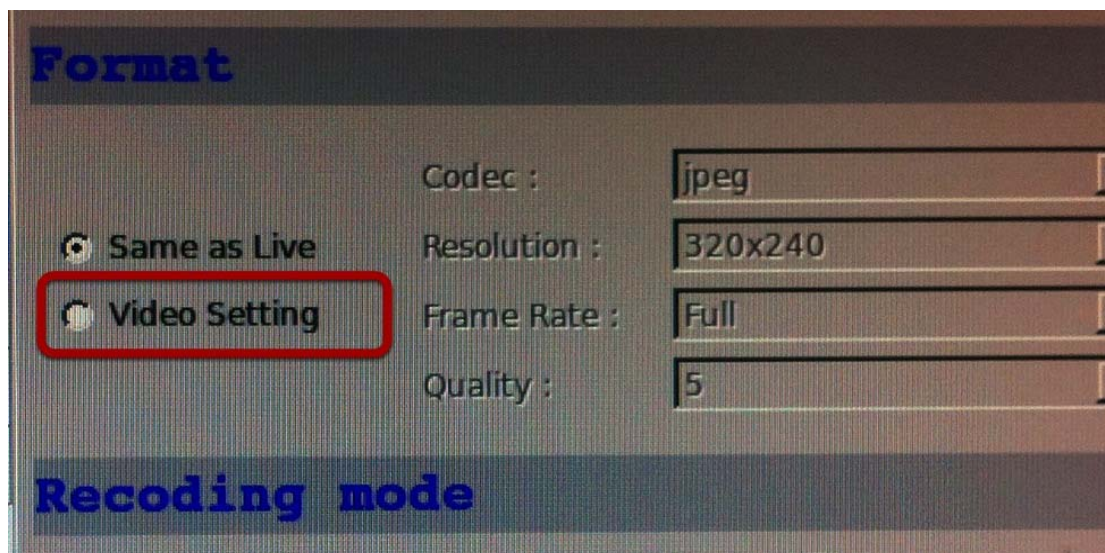


You can tell that you are configuring a multi-stream capable camera if the "Video setting" option is available.

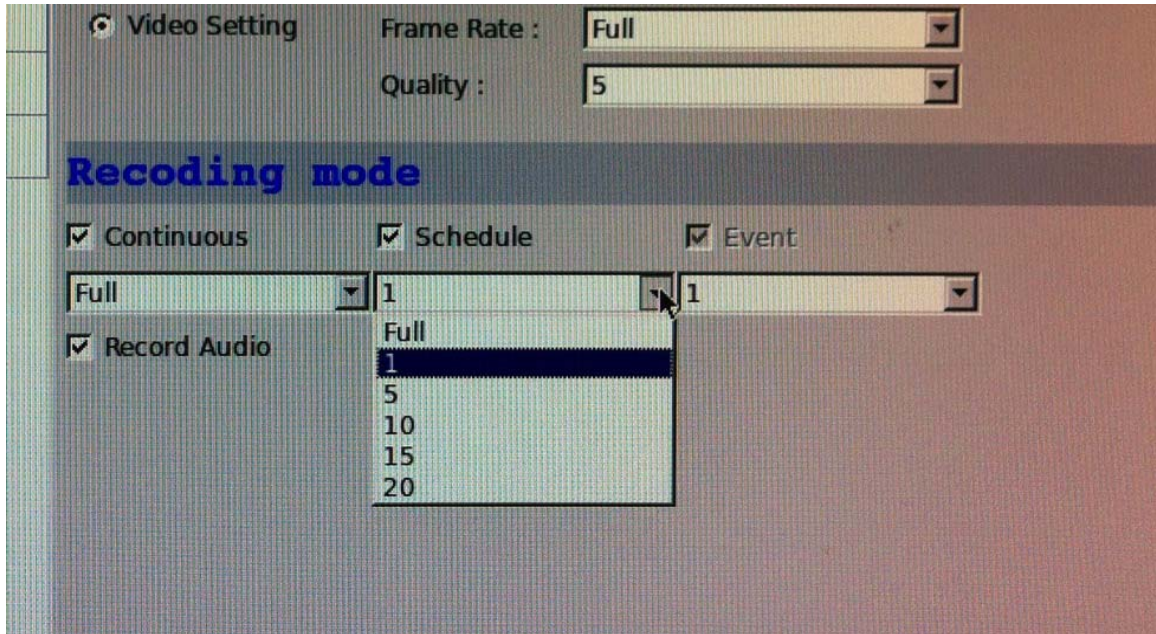


You can further configure the recording frame rate for different types of recordings, and choose whether to record audio or not.

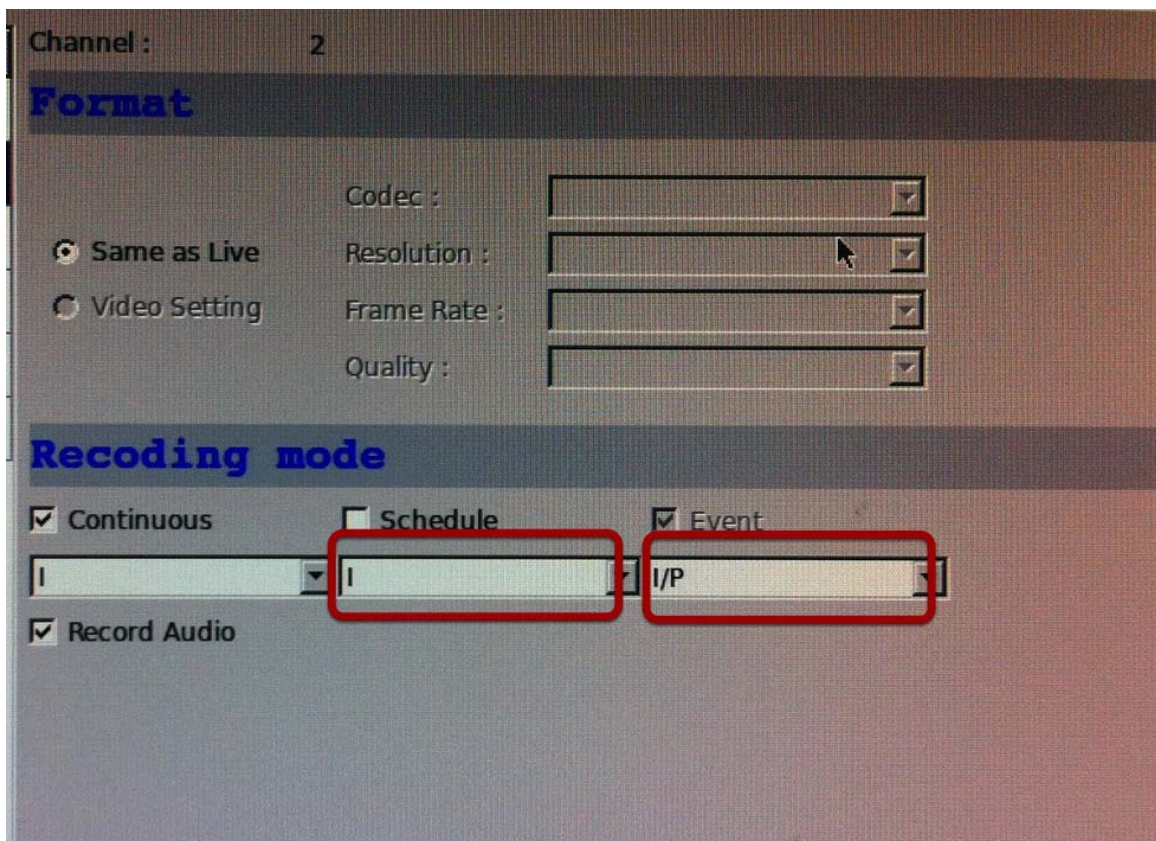


You will be given with options to record i frame only or i+p frames if the recording format is MPEG4 or H.264.

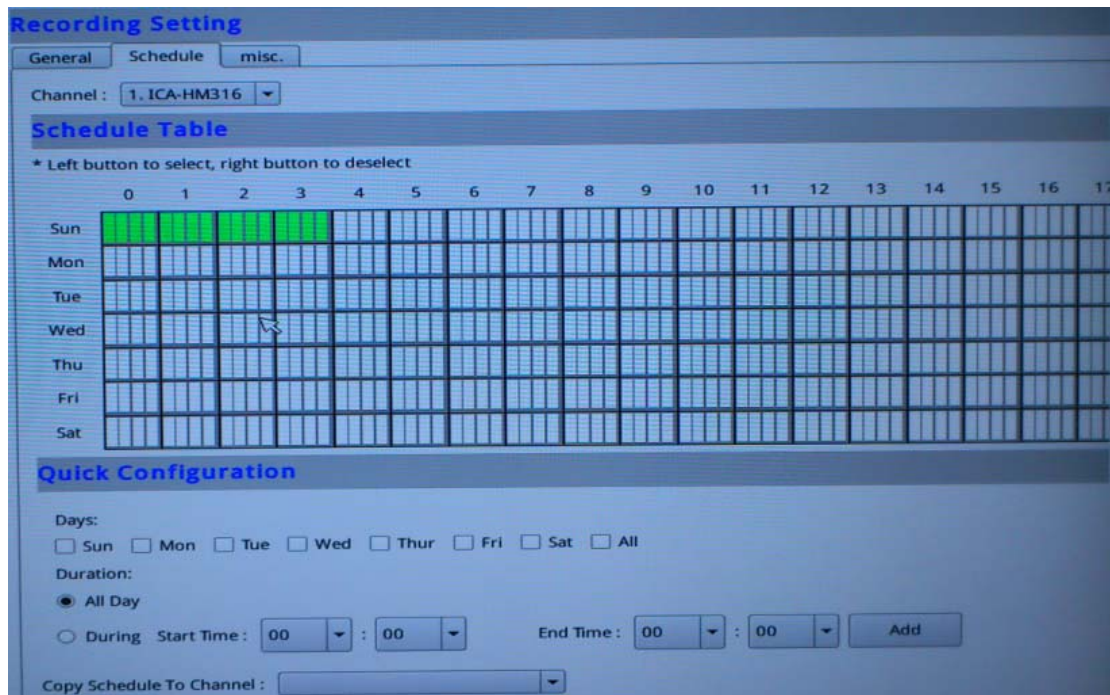


On the "Schedule" page, you are able to configure the NVR to recording during a particular time frame for each channel.

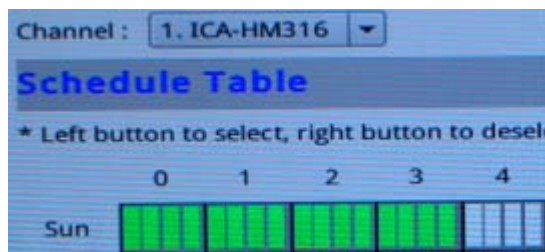


Start by selecting a channel for configuration from the upper-right hand corner.

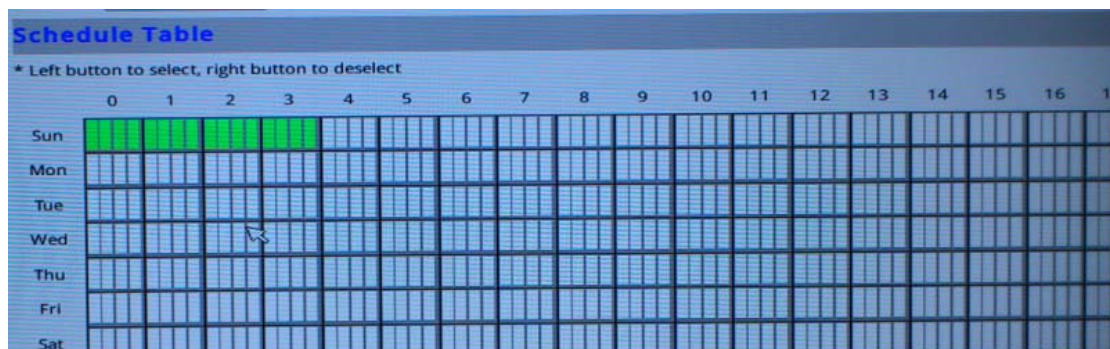

Use the schedule table to define recording time frame. Each cell box represents 15 minutes. You can click one to select or click and hold down the mouse left button and drag horizontally to select consecutive hours of a particular day, or drag vertically to select a particular hour for multiple days.

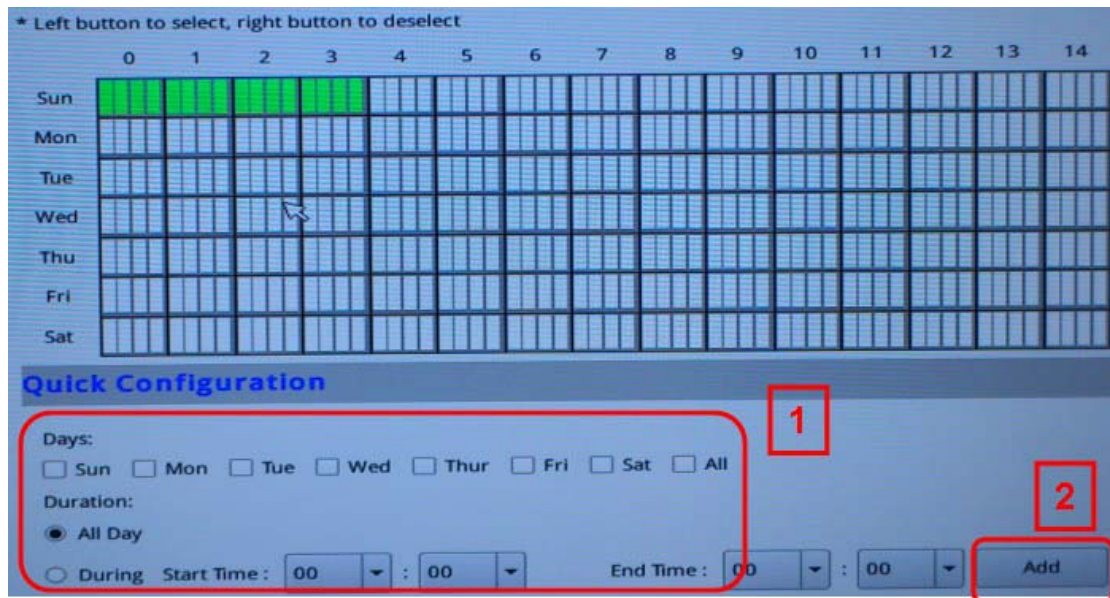

You can also use the options in the "Quick Configuration" section to quickly define the recording time frame without using the schedule table.

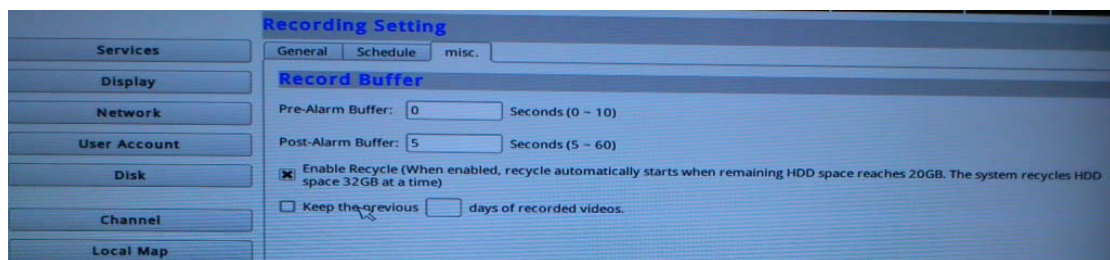


The record buffer allows you to set the NVR to start recording with a certain period of time before and after an event trigger.

12.1.11 Event Setting

The "Event Handling" section allows users to define conditions that constitute an event, its corresponding trigger action and when it will be triggered. Such setting can reduce the management overhead and notify the administrator only when it's necessary.


The general settings section can help you quickly configure when an event is triggered, how often events are triggered and the corresponding actions when events are triggered.

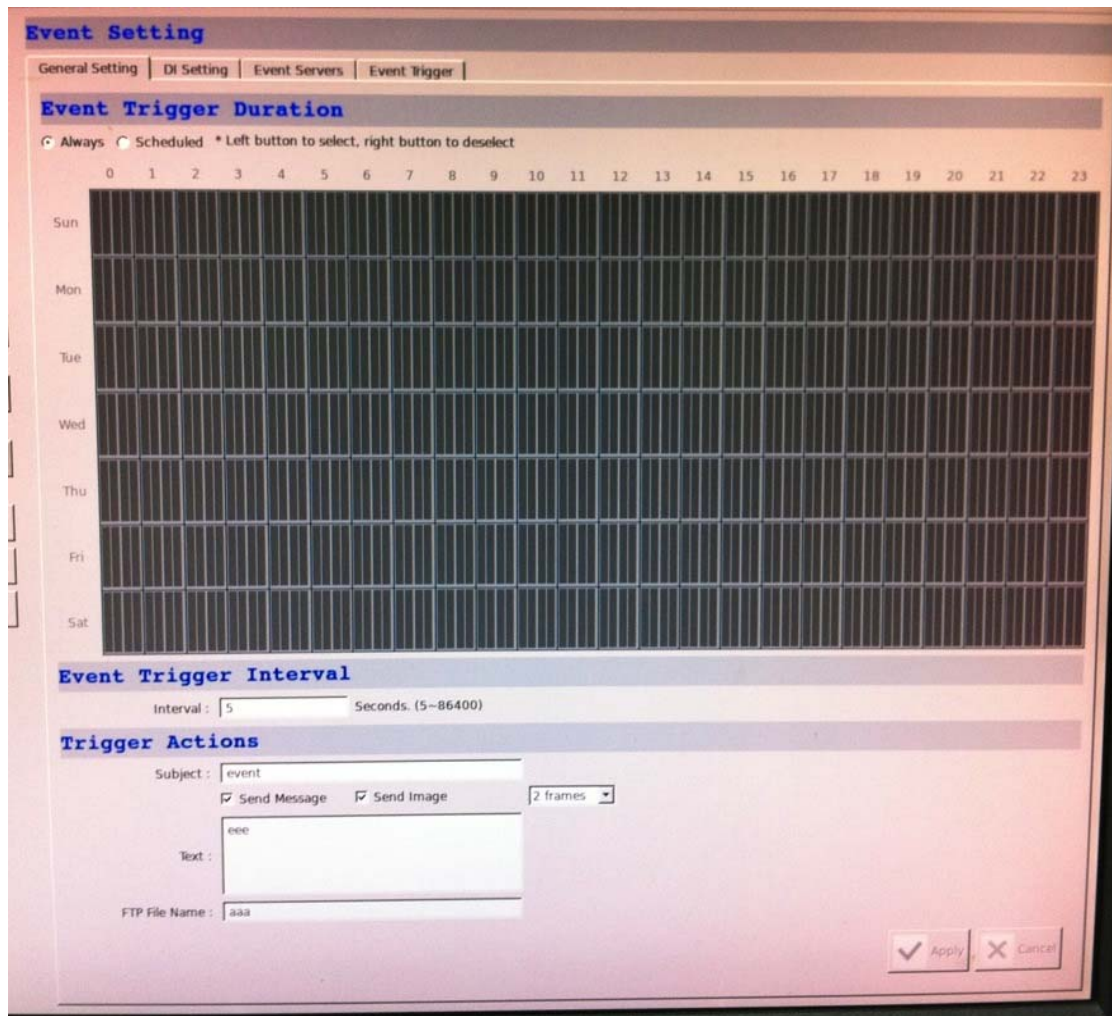

Start the configuration by defining the general settings:

Define when an event will be triggered


- Choose "Always" or "Scheduled" under "Event Trigger Duration"

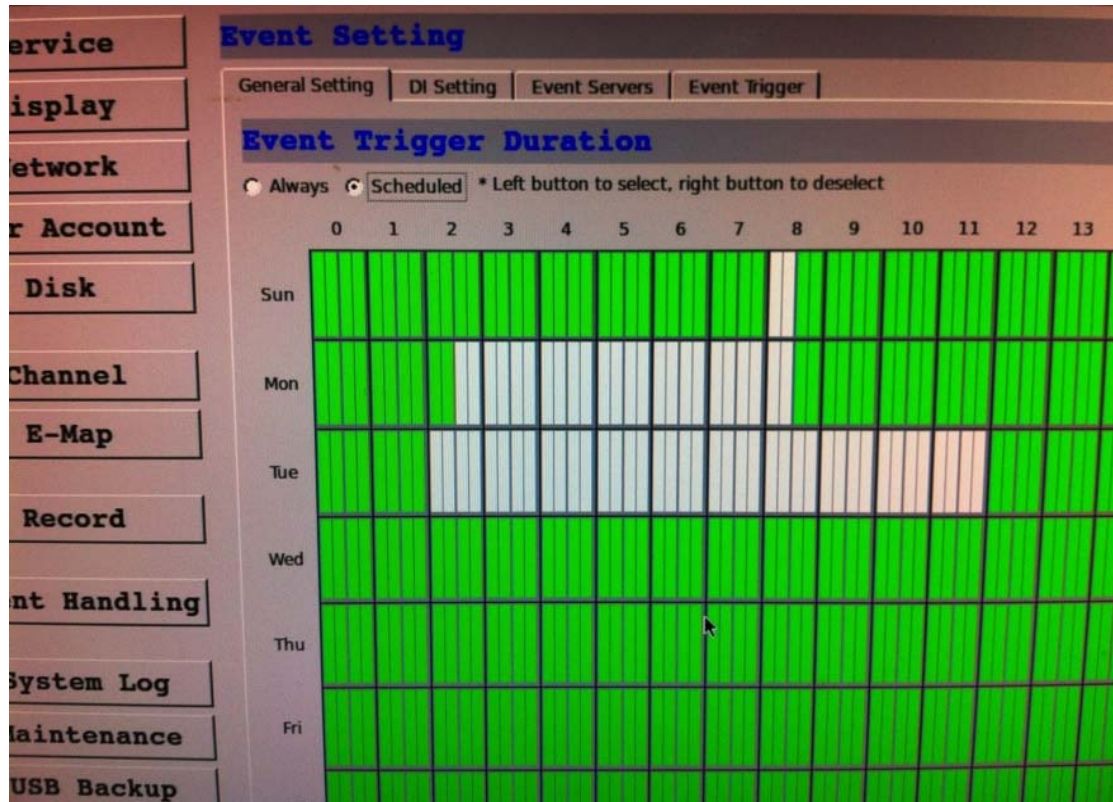


The screenshot shows the 'Event Setting' configuration page. The 'Event Trigger' tab is selected, and the 'Event Trigger Duration' section is active. The 'Scheduled' option is selected. Below the options is a table for defining event trigger durations. The table has columns for hours (0-13) and rows for days of the week (Sun-Fri). The table is currently mostly green, indicating that events are scheduled for all hours on all days.

	0	1	2	3	4	5	6	7	8	9	10	11	12	13
Sun	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green
Mon	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green
Tue	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green
Wed	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green
Thu	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green
Fri	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green	Green

• For the “Scheduled” option, use the table to define a range of time if you would like events to trigger corresponding actions only during a certain period of time.

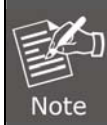

* Use the mouse left button to select and the right button to deselect.
 * You can click and hold down the left button and drag horizontally to quickly select consecutive hours of a particular day, or drag vertically to select the same time for multiple days. Drag diagonally to select consecutive hours/days at once.
 * Each cell box represents 15 minutes of time.

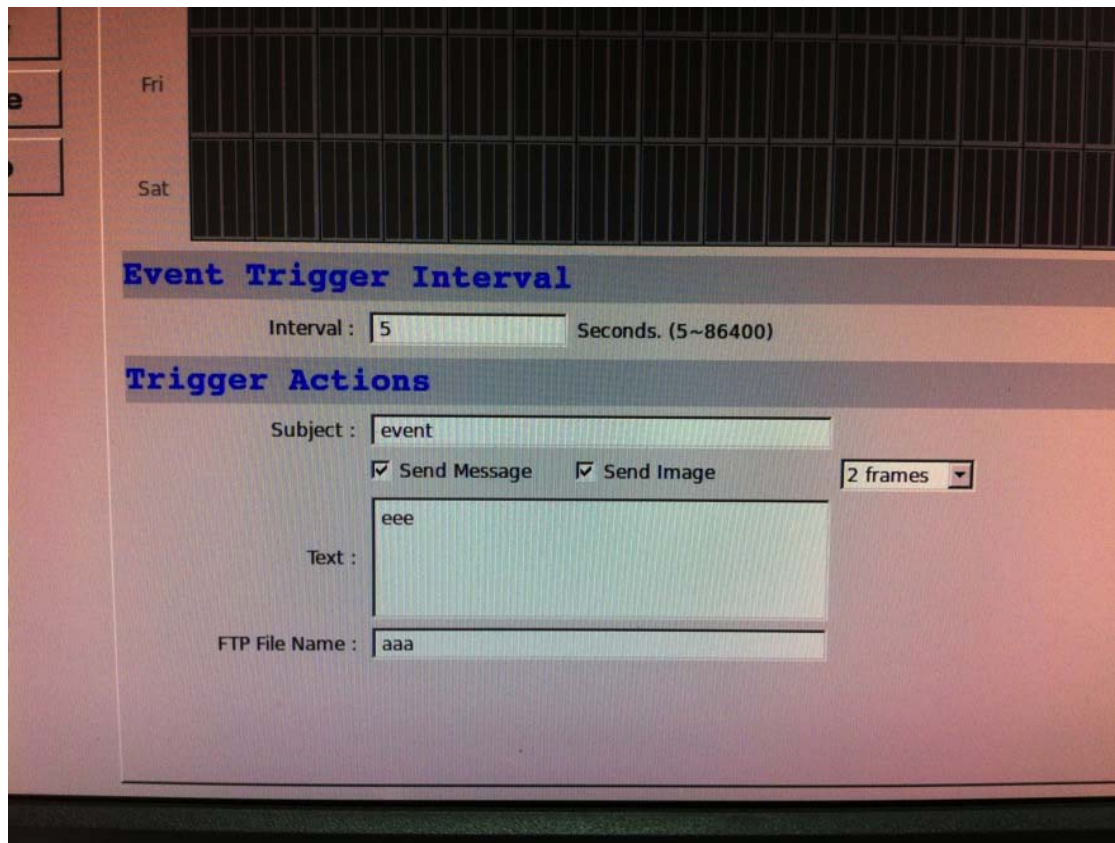


How often an event is triggered

- Set a time interval under “Event Trigger Interval” to define how often events are triggered.


Trigger action

Now that you have the event trigger duration and interval defined, choose what action to be taken during an event trigger:

- You can choose to have the recorder sent out the first few frames of the video recorder upon an event is triggered.
- You can also choose to have the recorder sent out a warning message in e-mail or in txt file format and upload it to a destined FTP server.

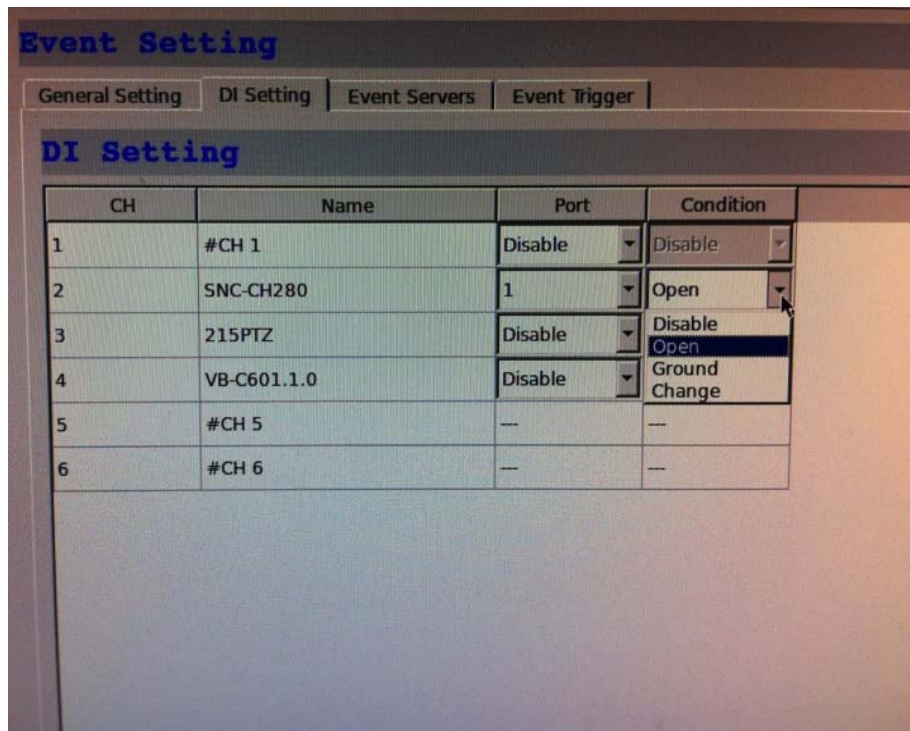

This function allows users to use camera's digital input port from the recorder as source of an event. You can set up the recorder to receive events from a particular camera's input port and then trigger the NVR to start recording.


 Note


**The recorder only acts as a medium for pairing up input/output ports between cameras and the recorder.*

**Only connected cameras will be displayed in the list.*


**Some cameras only allow one trigger source to be configured at a time, e.g., If the camera has the motion detection function turned on, its digital input will be disabled and vice versa. Under such circumstance, if you set to use camera's digital input port as the event trigger source, you will not be able to select motion detection as the trigger source for this camera under "Event Trigger" setup page.*

** The image(s) that are uploaded to the destined FTP server or emailed to a destined mail recipient are in their own proprietary image file format (.h4i or .p4i), which can only be opened by the NVR media player.*

Event servers are to be used with event trigger actions. In case of unusual motion detected by the camera or a disk failure, the recorder can send notification with the acceptable format (image / txt) to a destined event server according to the configuration.

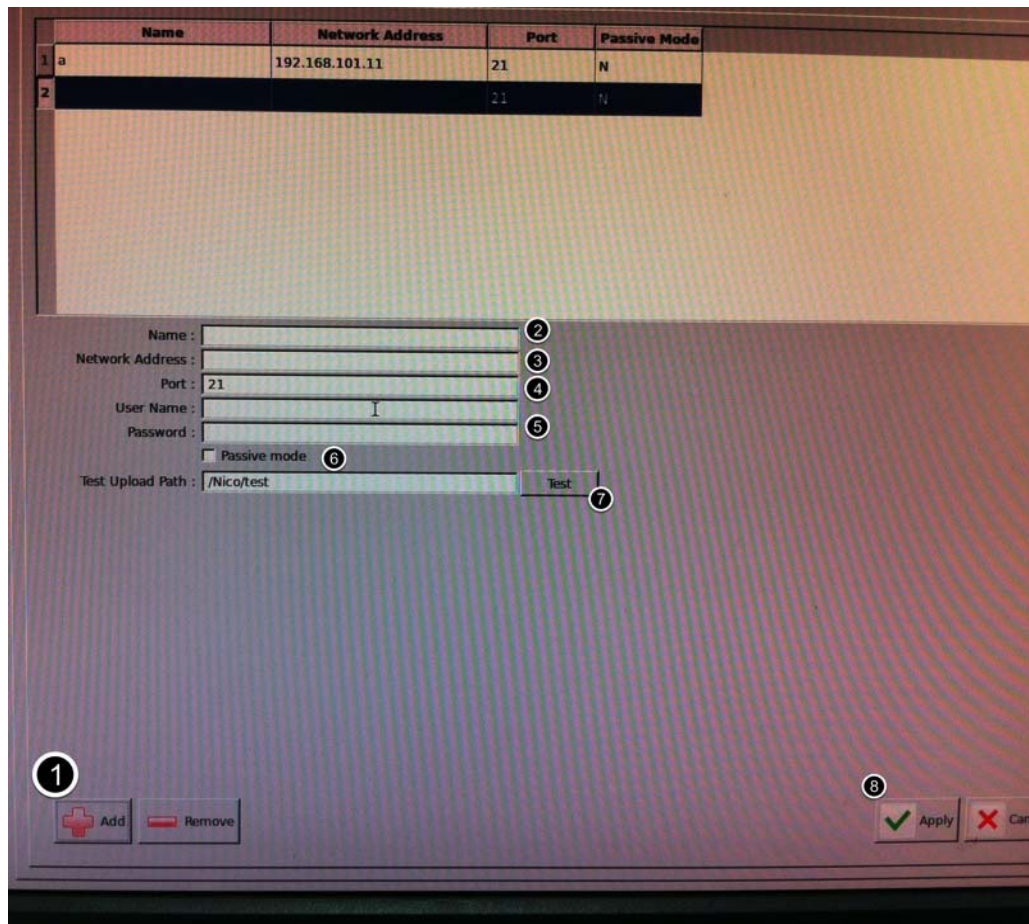


- To add an FTP server,
1. Click "Add" to begin
 2. Start by giving a name to the server that you are adding to the recorder
 3. Enter the host name or the IP address of the FTP server
 4. Enter the communication port of the FTP server (usually port 21)
 5. Enter the user name and password of the FTP server if it's required
 6. Check "Use Passive Mode" if it's required or leave it unchecked to use active mode
 7. Click "Test" to verify if all information is entered correctly and the connection to the FTP server can be established successfully
 8. Click "Apply" for the settings to take effect

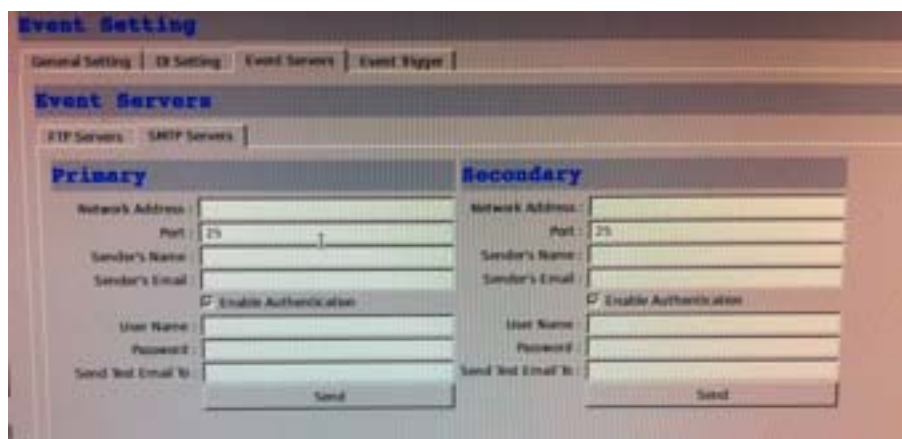

To add an SMTP server,


1. Enter the host name or the IP address of the SMTP server.
2. Enter the port of the SMTP server.
3. Specify the sender's name in the "Sender's name" field.
4. Enter the sender's e-mail address.
5. Check "Enable Authentication" and enter the user name and password of the SMTP server if it requires authentication.
6. Click "Apply" to save the configuration.

*The NVR supports SMTP servers that use base64 or MD5 authentication methods.

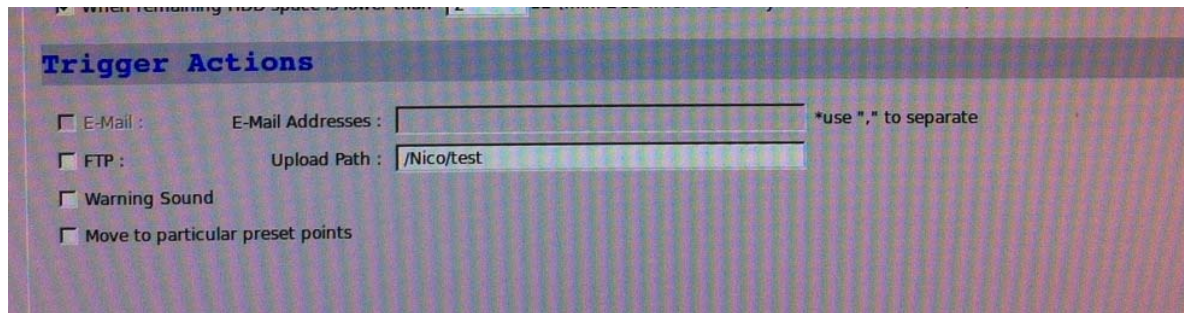


We have finished defining how an event will be triggered and which servers will be receiving notifications in the previous two sections, now we can finish up the event configuration by setting:

- Which channels will have event trigger function enabled
- Add system events if you will
- Where the warnings will be sent to and how they will be sent.

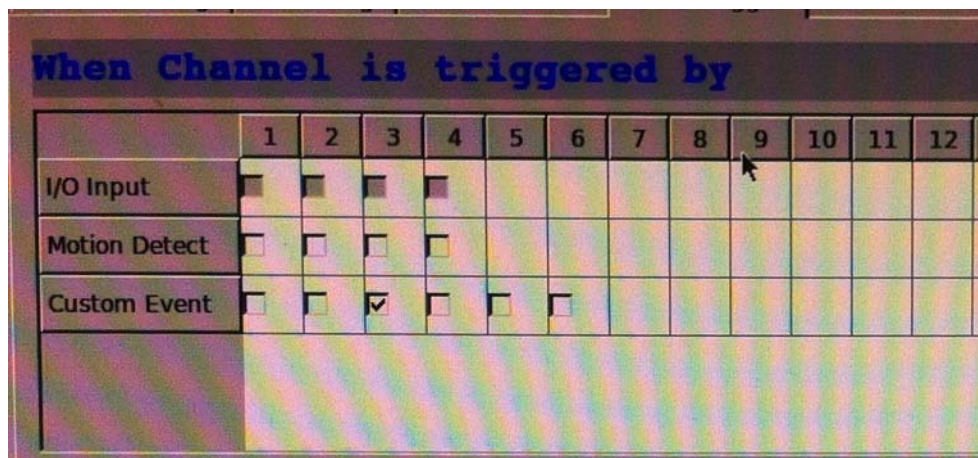

Use the checkbox to enable event trigger on the desired channels.



Note

**Once motion detection is enabled on this page, please configure the motion area and enable motion detection in the corresponding channels (cameras) from camera's own web UI. The NVR only detects the first motion area set in the camera. The NVR recognizes the first motion area by its ID number set in the camera.*

** Grayed out checkboxes represent the function that is either not available on the camera, or the event notification method used in the camera is not supported by the NVR.*

** Enabling "Custom Event" allows events from the CMS software to trigger the NVR to start recording.*

When NVR is triggered by


- Disk Fail
- Recycled
- When NVR Start Up
- When NVR System Configuration Changed
- When Channel Configuration Changed
- When camera connection status changed
- When remaining HDD space is lower than GB (min. 2GB when HDD recycle function is disabled)
- When system temperature is too high

Define which system events should trigger the recorder to send out notifications if you will.

Trigger Actions

- E-Mail : E-Mail Addresses : *use "," to separate
- FTP : Upload Path :
- Warning Sound
- Move to particular preset points

Define how the notifications will be sent and where they will be sent.




Event trigger may not work for cameras that are placed outside of your local network or on the Internet until the "UPnP Port Forwarding" is enabled in both the NVR and the router.

12.1.12 System Log

ID	Time	Type	SubType	Channel	SourceIP	IP	User
1	2013/11/28 18:24:32	Service	Some system logs are too old and have been cleared by system auto-				
2	2013/11/28 18:24:49	Recording	Not enough HDD space. Recording stopped				
3	2013/11/28 18:24:49	User	User login		NVR UI	127.0.0.1	admin
4	2013/11/28 18:24:32	Service	Service Start				
5	2013/11/28 18:51:05	User	User login		Web Event Recorder	192.168.1.60	admin
6	2013/11/28 18:47:03	User	User logout		Web Event Recorder	192.168.1.60	admin
7	2013/11/28 18:45:43	User	User login		Web Event Recorder	192.168.1.60	admin
8	2013/11/28 18:37:08	Channel	Camera connected	1			
9	2013/11/28 18:34:51	Channel	Camera disconnected	1			
10	2013/11/28 18:30:44	Channel	Camera connected	1			
11	2013/11/28 18:30:16	User	User logout		Web Event Recorder	192.168.1.60	admin
12	2013/11/28 18:30:07	User	User login		Web Event Recorder	192.168.1.60	admin
13	2013/11/28 18:26:16	User	User logout		Web Event Recorder	192.168.1.60	admin
14	2013/11/28 18:25:58	User	User login		Web Event Recorder	192.168.1.60	admin
15	2013/11/28 18:25:55	User	User login		Web	192.168.1.60	admin
16	2013/11/28 18:24:24	Service	Backup Configuration				
17	2013/11/28 18:22:49	Service	Some system logs are too old and have been cleared by system auto-				
18	2013/11/28 18:22:02	Service	Backup Configuration				
19	2013/11/28 18:21:59	Service	Backup Configuration				
20	2013/11/28 18:21:55	Service	Backup Configuration				
21	2013/11/28 18:21:51	Service	Backup Configuration				
22	2013/11/28 18:21:45	Service	Backup Configuration				
23	2013/11/28 18:21:06	Recording	Not enough HDD space. Recording stopped				
24	2013/11/28 18:21:05	User	User login		NVR UI	127.0.0.1	admin
25	2013/11/28 18:20:48	Service	Service Start				
26	2013/11/28 18:19:43	User	User logout		NVR UI	127.0.0.1	admin
27	2013/11/28 18:19:43	Service	Service Stop				
28	2013/11/28 18:19:41	Service	Backup Configuration				


"System Log" keeps a record of what's been happening to the device and provides basic information for troubleshooting.

12.1.13 Maintenance

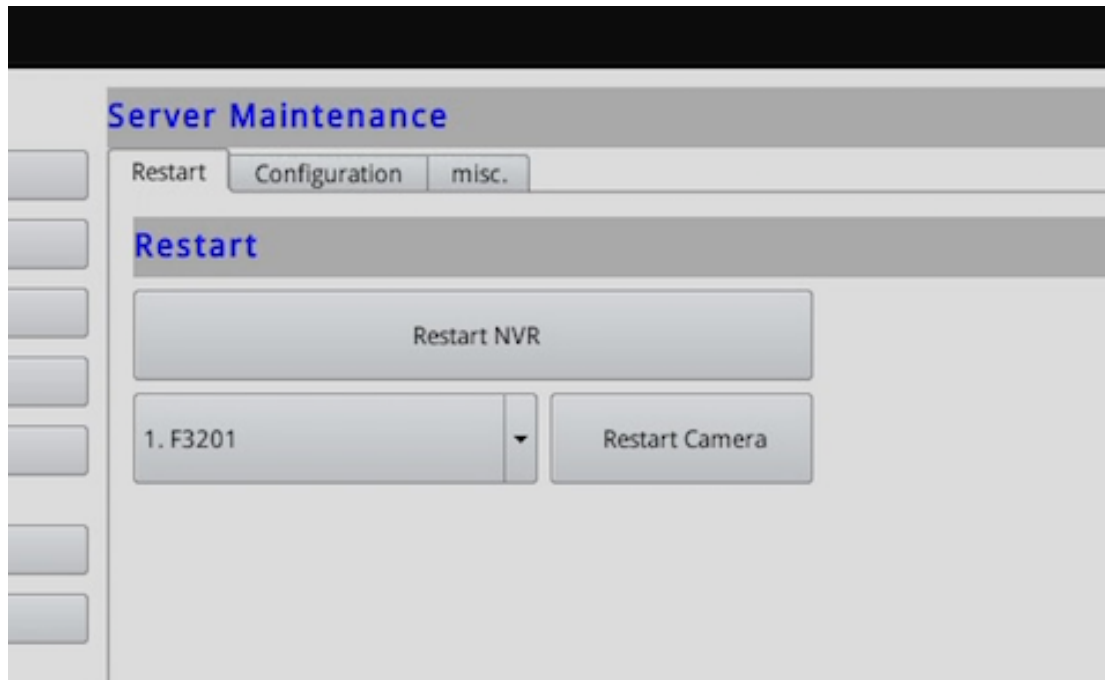


“Maintenance” provides functions for users to:


- Reboot the NVR when necessary
- Reboot cameras directly from the NVR
- Perform Firmware Upgrade
- Back up the NVR’s settings to a local hard drive
- Restore the NVR’s settings from a previously saved configuration file
- Reset the NVR’s settings to their factory default values

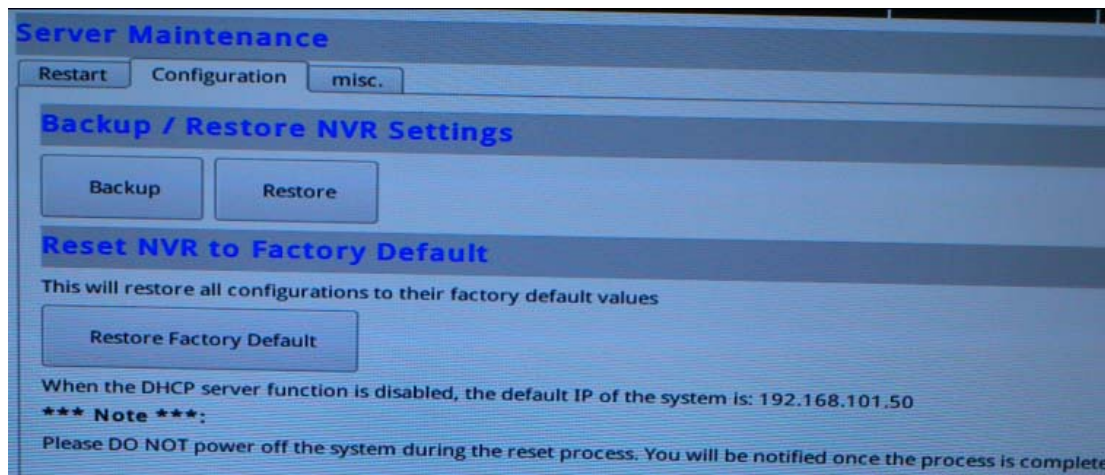

The configuration can be backed up to or restore from a USB disk. It is required to plug in a USB disk formatted in FAT32, EXT3, or EXT4 prior to using the backup and restore functions.

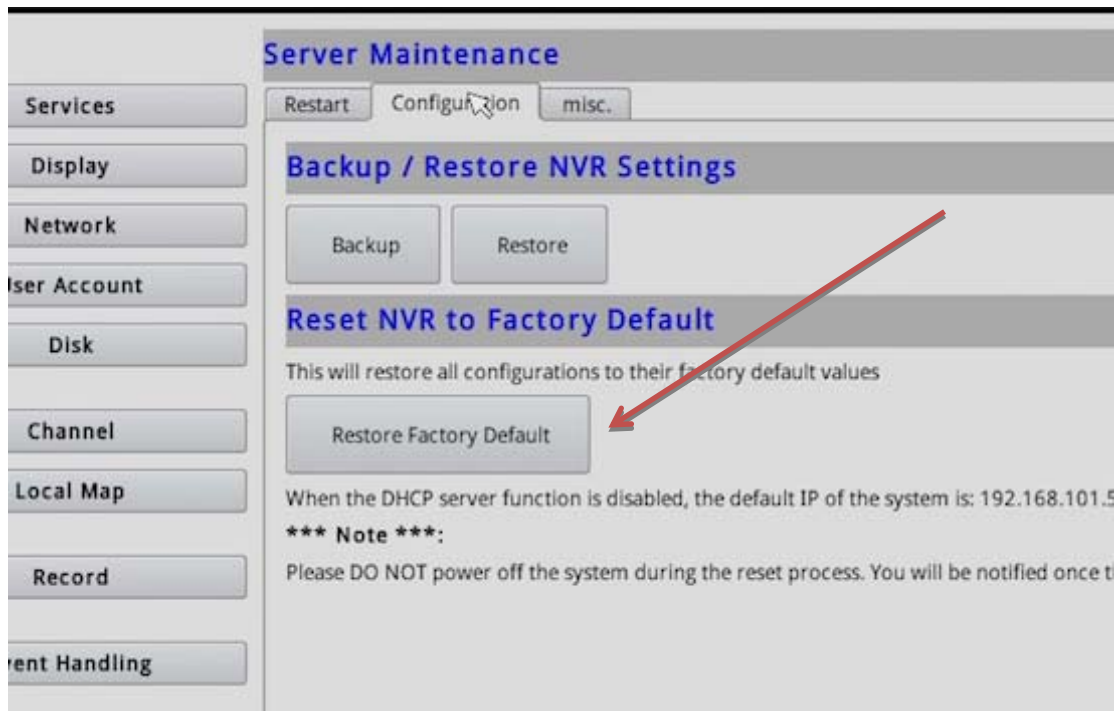


To reset the recorder back to its factory default, click the “Restore Factory Default” button and begin the process.

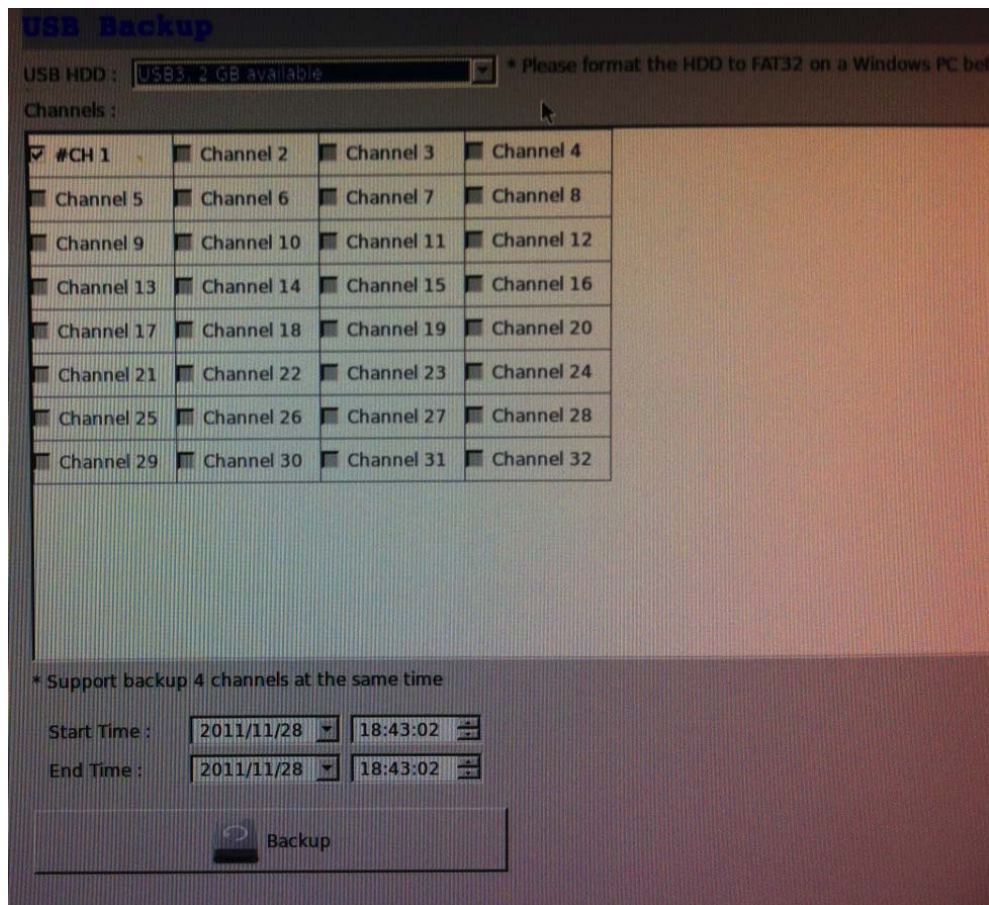

It's a function that allows users to back up the recording data in its database file format as well as in AVI to the externally connected USB hard disk.


12.1.14 USB Backup

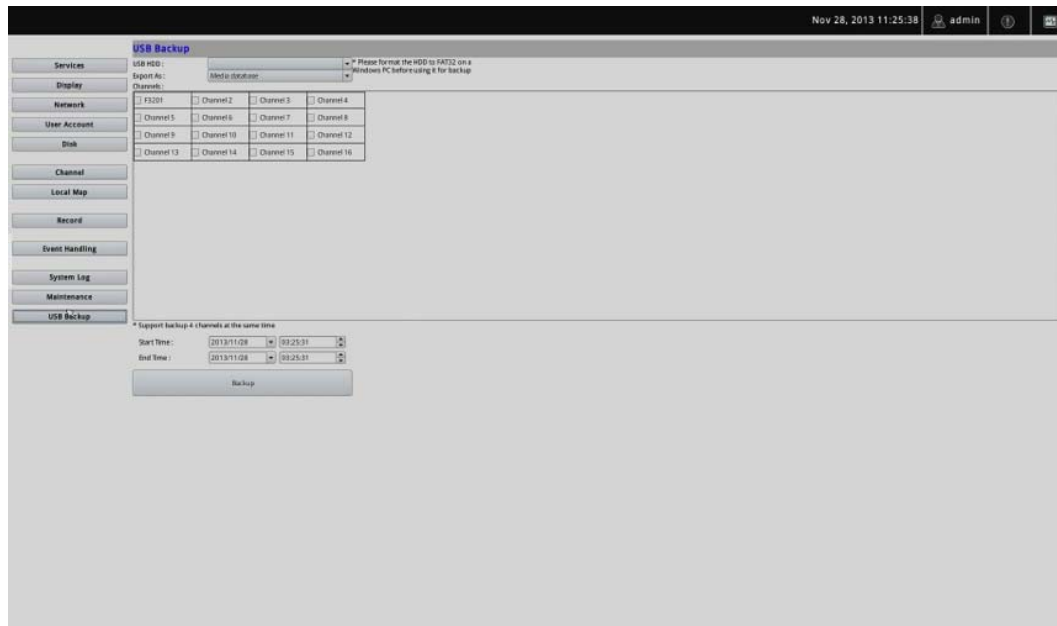


It's a function that allows users to back up the recording data in its database file format as well as in AVI to the externally connected USB hard disk.



The USB hard disk(s) will be listed in the drop-down menu displaying the remaining disk space. Make your selection from the drop-down menu if you have more than one disk connected to the NVR.

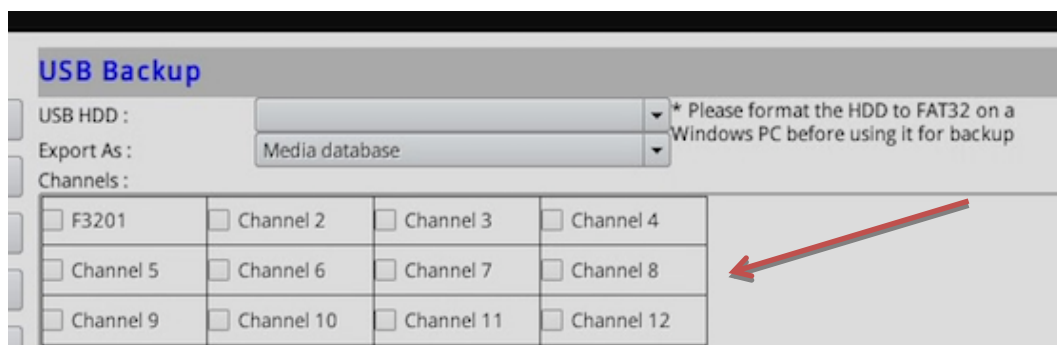

Next, select channels which you would like to back up the recording data from. A maximum of 4 channels can be selected at once.

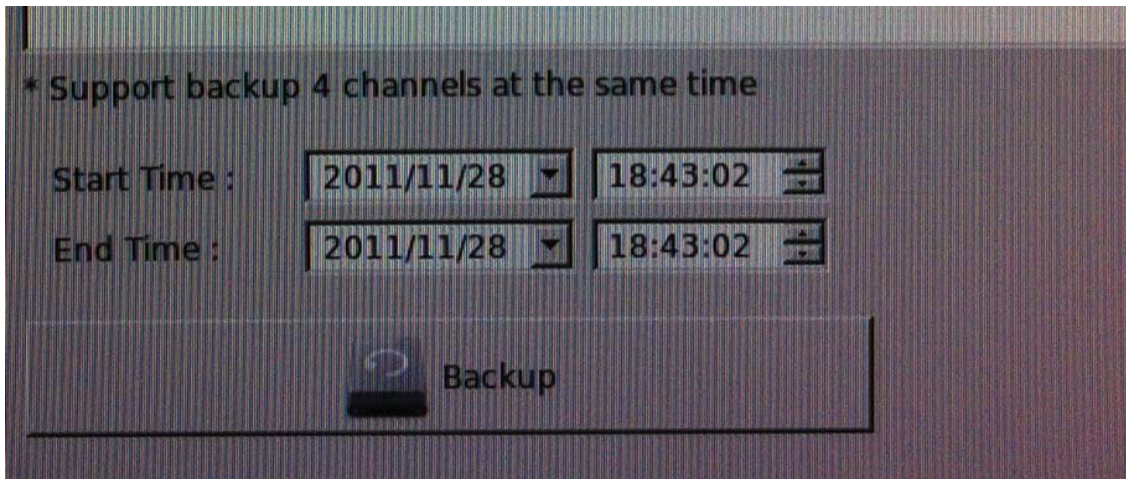

Configure the start and end time of the recording data you would like to back up and click the "Backup" button to begin.

Things to pay attention to the USB Backup function

Limitation:

- It does not support USB Hub, extending the number of HDDs connected to the NVR.
- Only one backup process can be performed at a time.
- A maximum of 4 channels can be selected for backup.
- Only FAT32 USB hard disk is supported for backup.
- The USB hard disk needs to have more than 100MB remaining space.
- If multiple partitions are presented in one disk, only the first partition will be detected and used for backup.



Process:

- Progress will be displayed on the UI.
- If the backup process gets interrupted, in which the process stops at a point of time that is before the "END Time" user defined, such time will be displayed on the UI.
- A folder will be automatically created in the USB hard disk with a name format like 0028687831_20100610151515_2010060511 0010_20100606110010 (MAC_backupbuttonclicktime_starttime_endtime).

Note:

- Please plug in the USB HDD only after the NVR is fully started, or the HDDs will be incorrectly mounted.
- Play the backup files using the NVR media player.


Appendix A: Ping IP Address

The ping (Packet Internet Groper) command is used to detect whether a specific IP address is accessible by sending a packet to the specific address and waiting for a reply. It's also a very useful tool to confirm whether or not Internet camera is installed or if the IP address conflicts with any other device over the network.

If you want to make sure the IP address of Internet camera, utilize the ping command as follows:

- Start a DOS window.
- Type ping x.x.x.x, where x.x.x.x is the IP address of the Internet camera.

The replies, as illustrated below, will provide an explanation to the problem.

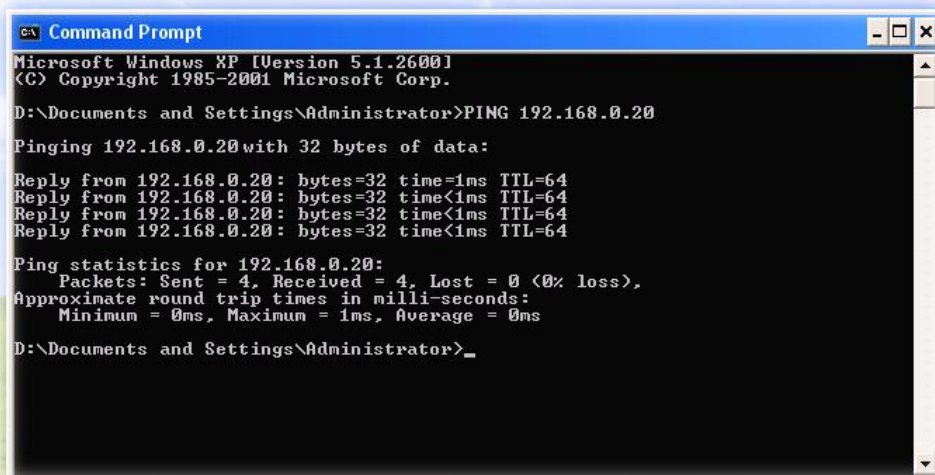

```
Command Prompt
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

D:\Documents and Settings\Administrator>PING 192.168.0.20

Pinging 192.168.0.20 with 32 bytes of data:

Reply from 192.168.0.20: bytes=32 time=1ms TTL=64
Reply from 192.168.0.20: bytes=32 time<1ms TTL=64
Reply from 192.168.0.20: bytes=32 time<1ms TTL=64
Reply from 192.168.0.20: bytes=32 time<1ms TTL=64

Ping statistics for 192.168.0.20:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 1ms, Average = 0ms

D:\Documents and Settings\Administrator>_
```

If you want to detect any other device that conflicts with the IP address of Internet camera, you also can utilize the ping command but you must disconnect the Internet camera from the network first.


Appendix B: Planet DDNS Application

Configuring PLANET DDNS Steps:

Step 1 Enable DDNS option through accessing web page of the ICA-3200.

Step 2 Select on DDNS server provided, and register an account if you do not use yet.

Let's take dyndns.org as an example. Register an account at <http://planetddns.com>

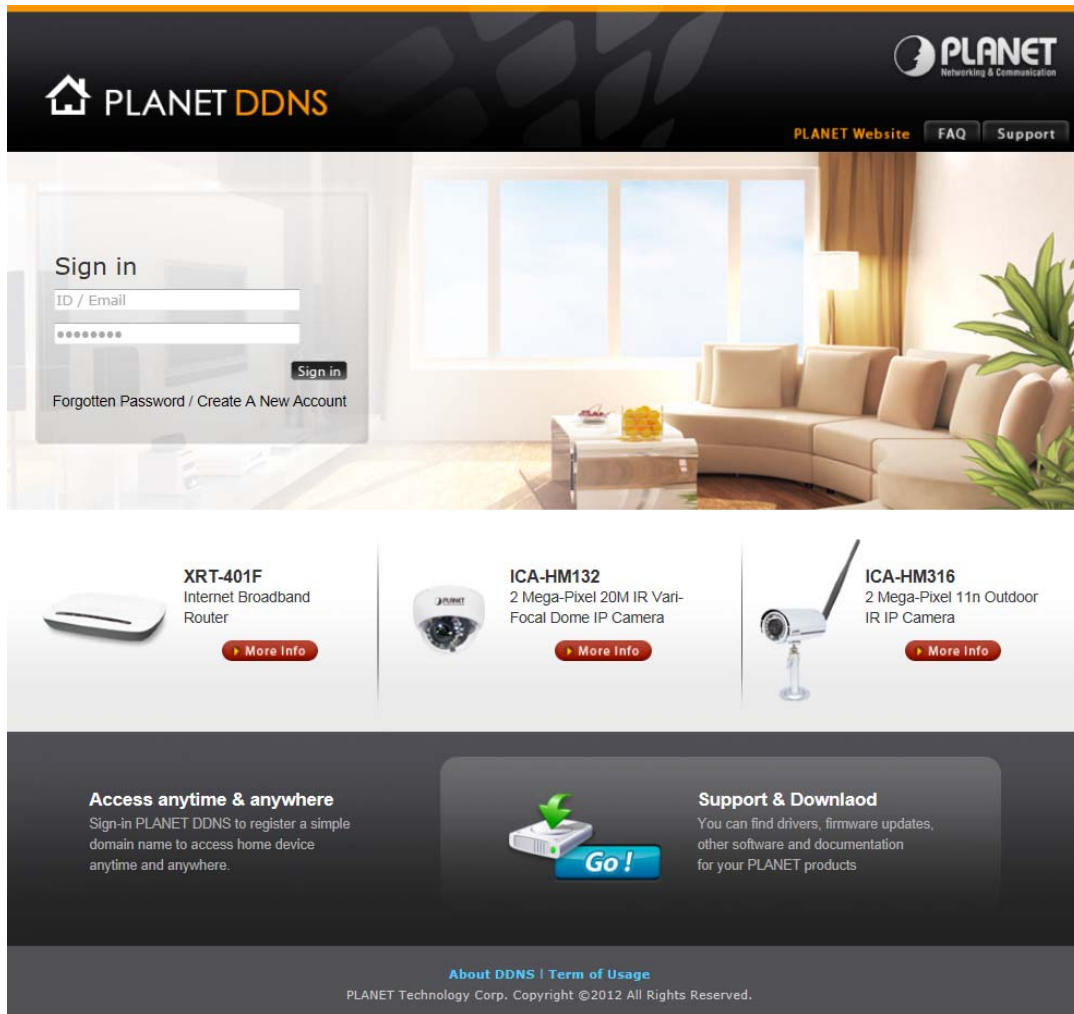

The screenshot shows the PLANET DDNS website. At the top, there is a navigation bar with the PLANET logo and links for 'PLANET Website', 'FAQ', and 'Support'. The main content area features a 'Sign in' form with fields for 'ID / Email' and a password field, a 'Sign in' button, and links for 'Forgotten Password / Create A New Account'. Below the sign-in form, there are three product cards: 'XRT-401F Internet Broadband Router', 'ICA-HM132 2 Mega-Pixel 20M IR Vari-Focal Dome IP Camera', and 'ICA-HM316 2 Mega-Pixel 11m Outdoor IR IP Camera'. Each card includes a 'More Info' button. At the bottom, there are two sections: 'Access anytime & anywhere' with a sign-in instruction and 'Support & Download' with a 'Go!' button and a link to find drivers and firmware updates. The footer contains the text 'About DDNS | Term of Usage' and 'PLANET Technology Corp. Copyright ©2012 All Rights Reserved.'

Appendix C: Configuring Port Forwarding Manually

The device can be used with a router. If the device wants to be accessed from the WAN, its IP address needs to be set up as a fixed IP address. The port forwarding or Virtual Server function of router also needs to be set up. This device supports UPnP traversal function. Therefore, user could use this feature to configure port forwarding of NAT router first. However, if user needs to configure port forwarding manually, please follow the steps below:

Manually installing the device with a router on your network is an easy 3–step procedure as follows:

1. Assign a local/fixed IP address to your device
2. Access the Router with Your Web browser
3. Open/Configure Virtual Server Ports of Your Router

1. Assigning a local/fixed IP address to your device

The device must be assigned a local and fixed IP Address that allows it to be recognized by the router. Manually set up the device with a fixed IP address, for example, 192.168.0.100.

2. Accessing the Router with Your Web browser

The following steps generally apply to any router that you have on your network. PLANET WNRT-620 is used as an example to clarify the configuration process. Configure the initial settings of the router by following the steps outlined in the router's **Quick Installation Guide**. If you have cable or DSL service, you will most likely have a dynamically assigned WAN IP Address. 'Dynamic' means that your router's WAN IP address can change from time to time depending on your ISP. A dynamic WAN IP Address identifies your router on the public network and allows it to access the Internet. To find out what your router's WAN IP Address is, go to the **Status** screen on your router and locate the WAN information for your router. As shown on the following page the WAN IP Address will be listed. This will be the address that you will need to type in your web browser to view your camera over the Internet. Be sure to uncheck the **Reset IP address at the next boot** button at the top of the screen after modifying the IP address. Failure to do so will reset the IP address when you restart your computer.

PLANET
Networking & Communication

Home | General Setup | Status | Tool

Internet Broadband Router

Internet Connection

View the current internet connection status and related information.

Attain IP Protocol :	Dynamic IP disconnect
IP Address :	
Subnet Mask :	
Default Gateway :	0.0.0.0
MAC Address :	00:11:22:33:44:56
Primary DNS :	
Secondary DNS :	

Current Time
1/1/2000 2:01:15

Your WAN IP Address will be listed here.


3. Opening/Setting Virtual Server Ports to enable remote image viewing

The firewall security features built into the router and most routers prevent users from accessing the video from the device over the Internet. The router connects to the Internet over a series of numbered ports. The ports normally used by the device are blocked from access over the Internet. Therefore, these ports need to be made accessible over the Internet. This is accomplished using the **Virtual Server** function on the router. The Virtual Server ports used by the camera must be opened through the router for remote access to your camera.

Follow these steps to configure your router's Virtual Server settings

- Click **Enabled**.
- Enter a unique name for each entry.
- Select **Both** under **Protocol Type (TCP and UDP)**
- Enter your camera's local IP Address (e.g., **192.168.0.100**, for example) in the **Private IP** field.
- If you are using the default camera port settings, enter **80** into the **Public** and the **Private Port** section and click **Add**.

A check mark appearing before the entry name will indicate that the ports are enabled.

 **Note**

Some ISPs block access to port 80. Be sure to check with your ISP so that you can open the appropriate ports accordingly. If your ISP does not pass traffic on port 80, you will need to change the port the camera uses from 80 to something else, such as 8080. Not all routers are the same, so refer to your user manual for specific instructions on how to open ports.

PLANET Networking & Communication | Home | General Setup | Status | Tool

Internet Broadband Router

Virtual Server ?

You can configure the Broadband router as a Virtual Server so that remote users accessing services such as the Web or FTP at your local site via Public IP Addresses can be automatically redirected to local servers configured with Private IP Addresses. In other words, depending on the requested service (TCP/UDP) port number, the Broadband router redirects the external service request to the appropriate internal server (located at one of your LAN's Private IP Address).

Enable Virtual Server

Private IP	Private Port	Type	Public Port	WAN Port	Comment
<input type="text"/>	<input type="text"/>	Both	<input type="text"/>	WAN1	<input type="text"/>

Current Virtual Server Table:

Private IP	Private Port	Type	Public Port	WAN Port	Comment	Select
192.168.0.100	80	TCP+UDP	80	WAN1	ICA-HM230	<input type="checkbox"/>

Enter valid ports in the **Virtual Server** section of your router. Please make sure to check the box on this line to enable settings. Then the device can be accessed from WAN by the router's WAN IP Address.

By now, you have finished your entire PC configuration for this device.