


## Peer to Peer call: FXO to FXO

### Scenario description:

User (500) on site A (VIP-880FO) wishes to have telephone calls to extension (600) on Site B (VIP-880FO B). User (500) on site B (VIP-880FO B) can connect to ser A in the same way.

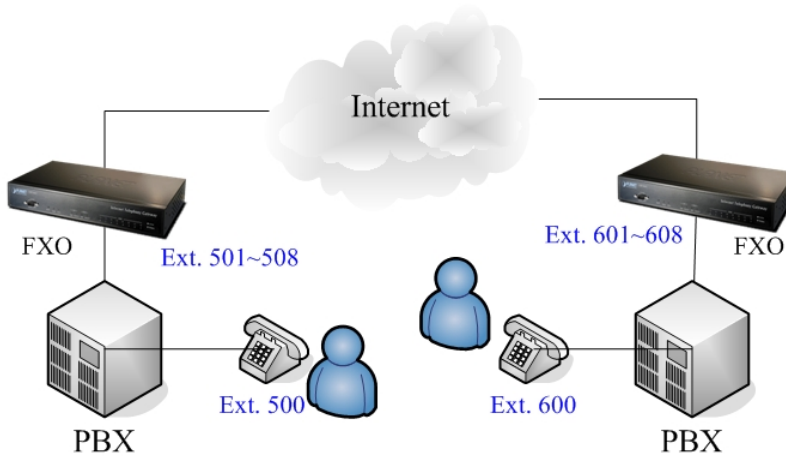

IP address of VIP-880FO\_A is: **172.16.0.1**

VIP-880FO\_A number and dial plan setting:

Each port number is **100,200,300,400,500,600,700,800**

IP address of VIP-880FO\_B is: **172.16.0.2**

VIP-880FO\_B number and dial plan setting:

Each port number is **100,200,300,400,500,600,700,800**

VoIP Protocol Setting

E.164 Number Setting (MAX 20 digit) :

Port 1 E.164 Number	<input type="text" value="100"/>
Port 2 E.164 Number	<input type="text" value="200"/>
Port 3 E.164 Number	<input type="text" value="300"/>
Port 4 E.164 Number	<input type="text" value="400"/>
Port 5 E.164 Number	<input type="text" value="500"/>
Port 6 E.164 Number	<input type="text" value="600"/>
Port 7 E.164 Number	<input type="text" value="700"/>
Port 8 E.164 Number	<input type="text" value="800"/>

The dial plan of VIP-880FO\_A dial plan setting: that means call **0xxx** leading number go to IP address 172.16.0.2

gateway (VIP-880FO\_B).

**Outgoing Dial Plan: (maximun 50 entries, maximun length of prefix digits is 16 digit, maximun length of number is 20 digit)**

Item	Outgoing no.	Length of Number	Delete Length	Prefix no.	Destination IP/DNS	Operation
1	0	4 ~ 4	1	None	172.16.0.2	
	<input type="text"/>	<input type="text"/> ~ <input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	ADD
<input type="button" value="DELETE"/> Outbound Dial Plan From <input type="text"/> To <input type="text"/>						

The dial plan of VIP-880FO\_B dial plan setting: that means call **0xxx** leading number go to IP address 172.16.0.1 gateway (VIP-880FO\_A).

**Outgoing Dial Plan: (maximun 50 entries, maximun length of prefix digits is 16 digit, maximun length of number is 20 digit)**

Item	Outgoing no.	Length of Number	Delete Length	Prefix no.	Destination IP/DNS	Operation
1	0	4 ~ 4	1	None	172.16.0.1	
	<input type="text"/>	<input type="text"/> ~ <input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	ADD
<input type="button" value="DELETE"/> Outbound Dial Plan From <input type="text"/> To <input type="text"/>						

**Usage:**

The ext.509 dial to ext 501 (connect to FXO port 1) will hear the dial tone, and then dial **0100** go to IP address gateway 172.16.0.2 (VIP-880FO\_B), and hear the dial tone again, then dial 609 ext, the ext.609 will ring.



**PLANET Technology Corporation**

11F, No. 96, Min Chuan Road, Hsin Tien, Taipei, Taiwan, R.O.C.  
 Tel: 886-2-2219-9518 Fax: 886-2-2219-9528  
 Email: [sales@planet.com.tw](mailto:sales@planet.com.tw) Web site: <http://www.planet.com.tw>  
 VoIP Gateway: [vip.planet.com.tw](http://vip.planet.com.tw)

*Planet reserves the right to change specifications without prior notice.  
 All brand names and trademarks are property of their respective owners.  
 Copyright (c) 2006 PLANET Technology Corp. All rights reserved*