

User's Manual

FGSW-2402VS
FGSW-2620VSF
FGSW-2624SF

***24-Port 10/100Mbps
with 2-Gigabit
Web Smart Ethernet Switch***



Trademarks

Copyright © PLANET Technology Corp. 2006.

Contents subject to revision without prior notice.

PLANET is a registered trademark of PLANET Technology Corp. All other trademarks belong to their respective owners.

Disclaimer

PLANET Technology does not warrant that the hardware will work properly in all environments and applications, and makes no warranty and representation, either implied or expressed, with respect to the quality, performance, merchantability, or fitness for a particular purpose.

PLANET has made every effort to ensure that this User's Manual is accurate; PLANET disclaims liability for any inaccuracies or omissions that may have occurred.

Information in this User's Manual is subject to change without notice and does not represent a commitment on the part of PLANET. PLANET assumes no responsibility for any inaccuracies that may be contained in this User's Manual. PLANET makes no commitment to update or keep current the information in this User's Manual, and reserves the right to make improvements to this User's Manual and/or to the products described in this User's Manual, at any time without notice.

If you find information in this manual that is incorrect, misleading, or incomplete, we would appreciate your comments and suggestions.

FCC Warning

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the Instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

CE Mark Warning

This is a Class A product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

WEEE Warning



To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, end users of electrical and electronic equipment should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of WEEE as unsorted municipal waste and have to collect such WEEE separately.

Revision

PLANET 24-Port 10/100Mbps with 2-Gigabit Web Smart Ethernet Switch User's Manual

FOR MODELS: FGSW-2402VS/FGSW-2620VSF

REVISION: 2.1(JANUARY.2007)

Part No.: 2080-A81030-001

TABLE OF CONTENTS

1. INTRODUCTION.....	5
1.1 CHECKLIST	5
1.2 ABOUT THE SWITCH.....	5
1.3 FEATURES	6
1.4 SPECIFICATION.....	6
2. HARDWARE DESCRIPTION	8
2.1 FRONT PANEL	8
2.2 REAR PANEL.....	9
2.3 HARDWARE INSTALLATION	10
2.3.1 Desktop Installation	10
2.3.2 Rack Mounting.....	10
2.3.3 Installing the SFP transceiver	11
3. SWITCH MANAGEMENT	13
3.1 OVERVIEW.....	13
3.2 MANAGEMENT METHOD	13
3.2.1 Web Management	13
3.3 LOGGING ON TO THE WEB SMART SWITCH.....	13
4. WEB MANAGEMENT.....	14
4.1 LOGIN IN TO THE SWITCH.....	14
4.2 PORT STATUS	15
4.3 PORT CONFIGURATION.....	16
4.4 TRUNK CONFIGURATION	18
4.5 VLAN CONFIGURATION	20
4.5.1 Enable port-based VLAN function and add a port-based VLAN group	20
4.5.2 Edit existence port-based VLAN group.....	25
4.5.3 Delete existence port-based VLAN group.....	26
4.5.4 Disable port-based VLAN function.....	28
4.5.5 Enable 802.1Q VLAN function and add a new VLAN group	31
4.5.6 Configure Advanced 802.1Q VLAN Setting	34
4.5.7 Edit existence 802.1Q VLAN group	36
4.5.8 Delete existence 802.1Q VLAN group.....	37
4.6 PORT MONITORING.....	39
4.7 QoS CONFIGURATION.....	40
4.8 PORT COUNTERS	43
4.9 ACCESS CONTROL LIST.....	44
4.10 WEB SMART FUNCTION.....	52
4.11 MISC OPERATION	57
4.11.1 Switch Configuration.....	58
4.11.2 TFTP Firmware Upgrade.....	61
4.11.3 Password Setting.....	62
4.11.4 IP Configuration.....	63
4.11.5 Factory Default	64
4.11.6 Reboot System	66
4.11.7 System Information.....	68
4.12 LOGOUT	69
5. SWITCH OPERATION.....	72
5.1 ADDRESS TABLE	72
5.2 LEARNING	72
5.3 FORWARDING & FILTERING.....	72
5.4 STORE-AND-FORWARD	72
5.5 AUTO-NEGOTIATION	72
6.TROUBLESHOOTING.....	73
APPENDIX A - NETWORKING CONNECTION	74
A.1 SWITCH'S RJ-45 PIN ASSIGNMENTS	74
A.2 RJ-45 CABLE PIN ASSIGNMENT	74
APPENDIX B - ACCESS CONTROL LIST APPLICATION GUIDE	76
Before the ACL Configure	77
Case 1: Deny specific Source IP Address – Host.....	78
Case 2: Deny specific Source IP Address – Class C.....	80
Case 3: Deny IP packets to specific Class C network.....	82
Case 4: Deny specific VLAN packets	84

Case 5: Deny Specify Protocol – HTTP / WWW	86
Case 6: Deny Specify Protocol – SMTP	88

1. INTRODUCTION

1.1 Checklist

Check the contents of your package for following parts:

- The Web Smart Switch x1
- User's manual CD x1
- Quick installation guide x1
- Power cord x 1
- Rubber feet x 4
- Rack mount accessory x 1

If any of these pieces are missing or damaged, please contact your dealer immediately, if possible, retain the carton including the original packing material, and use them against to repack the product in case there is a need to return it to us for repair.

In the following section, the term “**Web Smart Switch**” means the Switch devices, ie. FGSW-2402VS, FGSW-2620VSF and FGSW-2624SF; term of “**switch**” can be any third switches.

1.2 About the Switch

The FGSW-2402VS offers 24 10/100Mbps Fast Ethernet ports with 2 open slots (port25, 26). The two open slots can be installed by optionally two of 1000Base-T port, 100Base-FX, or 1000Base-SX/LX fiber-optic interfaces. The distance can be extended from 100 meters (TP), 2 kilometers (Multi-mode, ST or SC), up to 15 kilometers (Single-mode, SC).

The FGSW-2620VSF provides 24 10/100Mbps Fast Ethernet ports and 2 Gigabit TP/SFP combo ports.

The FGSW-2624SF provides 24 100Base-FX Fast Ethernet ports and 2 Gigabit TP/SFP combo ports.

The two Gigabit ports of FGSW-2620VSF and FGSW-2624SF either can be 1000Base-T for 10/100/1000Mbps or 1000Base-SX/LX through SFP (Small Factor Pluggable) interface. The distance can be extended from 100 meters (TP), 550 meters (Multi-mode fiber), up to above 10/50/70/120 kilometers (Single-mode fiber).

Both Web Smart Switches are equipped with non-blocking 8.8Gbps backplane greatly simplifies the tasks of upgrading your LAN to cater for increased bandwidth demands.

For efficient management, the Web Smart Switch is equipped with web interface. The two Web Smart Switches can be programmed for basic switch management functions such as port speed configuration, Port Trunking, IEEE 802.1Q Tag-Based VLAN and Port-based VLAN, Port Mirroring, QoS, bandwidth control, Access Control list and Misc Configuration.

The Web Smart Switch provides port-based VLAN (including overlapping). The VLAN groups allowed on the 2 Web Smart Switches will be maximally up to 26 for port-based VLAN. Via supporting port trunking, the Web Smart Switch allows the operation of a high-speed trunk combining multiple ports. The Web Smart Switch provides seven groups of up to 8-ports for trunking, and it supports fail-over as well.

With its Auto-Negotiation capability, all the RJ-45/STP ports of Web Smart Switch can be configured to speeds of 10/20Mbps or 100/200Mbps automatically. In addition, the product is equipped with the MDI/MDI-X auto detection for easily plug and play connection, regardless of cabling types-straight through or crossover.

1.3 Features

- ◆ Complies with the IEEE 802.3, IEEE 802.3u, IEEE 802.3z and IEEE 802.3ab Gigabit Ethernet standard
- ◆ 24-Port 10/100 Mbps Fast Ethernet Switch
- ◆ 2 open slots for 1000Base-T and 100Base-FX, 1000Base-SX/LX fiber-optic interface with various connection media and distances (FGSW-2420VS)
- ◆ 2-Port Gigabit TP/SFP combo ports(FGSW-2620VSF)
- ◆ Each Switching ports support auto-negotiation-10/20, 100/200Mbps supported
- ◆ Auto-MDI/MDI-X detection on each RJ-45 port
- ◆ Prevents packet loss with back pressure (half-duplex) and 802.3x PAUSE frame flow control (full- duplex)
- ◆ High performance Store and Forward architecture, broadcast storm control, runt/CRC filtering eliminates erroneous packets to optimize the network bandwidth
- ◆ 8K MAC address table, automatic source address learning and ageing
- ◆ 512K Bytes packet buffers
- ◆ Web interface for Switch basic management and setup
- ◆ Support IEEE 802.1Q Tagged VLAN
- ◆ Support up to 26 port-based VLAN groups
- ◆ Support up to 7 Trunk groups, each trunk for up to maximum 8 port with 800Mbps bandwidth
- ◆ Port mirroring allows monitoring of the traffic across any port in real time
- ◆ Support QoS and bandwidth control on each port
- ◆ Supports Access Control List function
- ◆ 19-inch rack mount size
- ◆ Internal full-range power supply suitable for worldwide use
- ◆ EMI standards comply with FCC, CE class A

1.4 Specification

Product	FGSW-2402VS	FGSW-2620VSF	FGSW-2624SF
Hardware Specification			
10/100Mbps Ports	24 10/ 100Base-TX RJ-45 Auto-MDI/MDI-X ports		--
100Base-FX Ports	--		24 100Base-FX
Module Slots	2 open slots for 1000Base-T and 100Base-FX, 1000Base-SX/LX fiber -optic interface	2 Gigabit TP/SFP combo ports	
Switch Processing Scheme	Store-and-forward		
Throughput (packet per second)	6.547Mpps		
Switch fabric	8.8Gbps		
Address Table	8K entries		
Share data Buffer	512K Bytes		
Flow Control	Back pressure for half duplex, IEEE 802.3x Pause Frame for full duplex		
Dimensions	440 x 120 x 44 mm, 1U height		440 x 220 x 44

Weight	1.87kg	1.85kg	2.6kg
Power Requirement	100~240V AC, 50-60 Hz		
Power Consumption / Dissipation	13.5 Watts maximum / 46 BTU/hr maximum		5 watts (without SFP) 23.1 watts maximum / 73 BTU
Temperature	Operating: 0~50 degree C, Storage -40~70 degree C		
Humidity Operating:	10% to 90%, Storage: 5% to 95% (Non-condensing)		
Smart function			
System Configuration	Web interface		
Port Status	Display per port's disable/enable status, per port's link status and speed duplex mode. Flow control status		
Port Configuration	Per port disable/enable, Auto-negotiation disable/enable. 10/100Mbps full and half duplex mode selection. Flow control disable/enable and bandwidth control on each port		
Trunk Configuration	Support 7 groups of 8-Port trunk support		
VLAN Configuration	Maximum up to 26 VLAN groups for both Port-based VLAN and 802.1Q VLAN		
Port Monitoring	One Mirroring port to monitor one mirrored port. The monitor modes are RX, TX and RX & TX		
QoS Configuration	IEEE 802.1p QoS on each port		
Port counters	Display detail traffic counters on each port		
Access Control List	Supports up to 16 Access Control list group		
Standards Conformance			
Regulation Compliance	FCC Part 15 Class A, CE		
Standards Compliance	IEEE 802.3 (Ethernet) IEEE 802.3u (Fast Ethernet) IEEE 802.3ab(Gigabit Ethernet) IEEE 802.3z(Gigabit Ethernet) IEEE 802.3x (Full-duplex flow control) IEEE 802.1p Priority QoS IEEE 802.1Q Tagged VLAN		

2. HARDWARE DESCRIPTION

This product provides three different running speeds – 10Mbps, 100Mbps and 1000Mbps in the same Web Smart Switch and automatically distinguishes the speed of incoming connection.

This section describes the hardware features of Web Smart Switch. For easier management and control of the Web Smart Switch, familiarize yourself with its display indicators, and ports. Front panel illustrations in this chapter display the unit LED indicators. Before connecting any network device to the Web Smart Switch, read this chapter carefully.

2.1 Front Panel

The Front Panel of the Web Smart Ethernet Switch consists of 24x Auto-Sensing 10/100Mbps Ethernet RJ-45 Ports, the FGSW-2402VS provide two open slots can be installed by optionally two of 1000Base-T port, 100Base-FX, or 1000Base-SX/LX fiber-optic interfaces. The FGSW-2620VSF provides 2 Gigabit TP/SFP combo ports either can be 1000Base-T for 10/100/1000Mbps or 1000Base-SX/LX through SFP (Small Factor Pluggable) interface. For the Fiber switch FGSW-2624SF, it provides 24 100Base-FX Fast Ethernet ports and 2 Gigabit TP/SFP combo ports.

The LED Indicators are also located on the front panel of the Web Smart Switch.




Figure 2-1: FGSW-2402VS Switch front panel




Figure 2-2: FGSW-2620VSF Switch front panel




Figure 2-3: FGSW-2624SF Switch front panel

2.1.1 LED indicators

System

LED	Color	Function
PWR	Green	Lights to indicate that the Switch has power.

Per 10/100Mbps port

LED	Color	Function
LNK/ACT	Green	Lights to indicate the link through that port is successfully established.
100	Orange	Lights to indicate the port is running in 100Mbps speed.

Per 10/100/1000Base-T port /SFP interfaces (FGSW-2620VSF only)

LED	Color	Function
LNK/ACT 1000	Green	Lit: indicate that the port is operating at 1000Mbps. Off: indicate that the port is operating at 10Mbps or 100Mbps. Blink: indicate that the switch is actively sending or receiving data over that port.
LNK/ACT 100	Green	Lit: indicate that the port is operating at 100Mbps. Off: indicate that the port is operating at 10Mbps or 1000Mbps. Blink: indicate that the switch is actively sending or receiving data over that port.
FDX	Green	Lit: indicate that the port is operating at full-duplex mode. Off: indicate that the port is operating at half-duplex mode.

Per 100Base-FX port (FGSW-2624SF only)

LED	Color	Function
LNK/ACT	Green	Lit: indicate that the port is operating at 100Mbps. Off: indicate that the port is link down Blink: indicate that the switch is actively sending or receiving data over that port.

Notice:

1. Press the RESET button once. The Web Smart Switch will reboot automatically.
2. Press the RESET button for 5 seconds. The Web Smart Switch will back to the factory default mode; the entire configuration will be erased.
3. The FGSW-2402VSv2 must work with **MII-V series module** for 100Base-FX fiber connection.
4. The 2 Gigabit TP/SFP combo ports are shared with port 25/26 of FGSW-2620VSF/ FGSW-2624SF. Either of them can operate at the same time.

2.2 Rear Panel

The rear panel of the Web Smart Switch indicates an AC inlet power socket, which accepts input power from 100 to 240VAC, 50-60Hz.



Figure 2-4: FGSW-2402VS/FGSW-2620VSF Switch rear panel



Figure 2-5: FGSW-2624SF Switch rear panel

Power Notice:

1. The device is a power-required device, it means, it will not work till it is powered. If your networks should active all the time, please consider using UPS (Uninterrupted Power Supply) for your device. It will prevent you from network data loss or network downtime.

2. In some area, installing a surge suppression device may also help to protect your Web Smart Switch from being damaged by unregulated surge or current to the Web Smart Switch.

2.3 Hardware Installation

This part describes how to install your Web Smart Ethernet Switch and make connections to the Switch. Please read the following topics and perform the procedures in the order being presented. To install your Web Smart Switch on a desktop or shelf, simply completed the following steps.


2.3.1 Desktop Installation

To install Web Smart Switch on a desktop or shelf, simply completed the following steps:

Step 1: Attached the rubber feet to the recessed areas on the bottom of the Web Smart Switch.


Step 2: Place the Web Smart Switch on a desktop or shelf near an AC power source.

Step 3: Keep enough ventilation space between the Web Smart Switch and the surrounding objects.

 **Notice:** When choosing a location, please keep in mind the environmental restrictions discussed in Chapter 1, Section 4, Specification.

Step 4: Connect your Switch to network devices.

- A. Connect one end of a standard network cable to the 10/100 RJ-45 ports on the front of the Web Smart Switch.
- B. Connect the other end of the cable to the network devices such as printer servers, workstations or routers...etc.

 **Notice:** Connection to the Web Smart Switch requires UTP Category 5 network cabling with RJ-45 tips. For more information, please see the Cabling Specification in **Appendix A**.

Step 5: Supply power to the Web Smart Switch.

- A. Connect one end of the power cable to the Web Smart Switch.
- B. Connect the power plug of the power cable to a standard wall outlet then power on the Web Smart Switch.

When the Web Smart Switch receives power, the Power LED should remain solid Green.

2.3.2 Rack Mounting

To install the Web Smart Switch in a **19-inch** standard rack, follow the instructions described below.

Step 1: Place your Web Smart Switch on a hard flat surface, with the front panel positioned towards your front side.

Step 2: Attach a rack-mount bracket to each side of the Web Smart Switch with supplied screws attached to the package.

[Figure 2-6](#) shows how to attach brackets to one side of the Web Smart Switch.



Figure 2-6 Attaching the brackets to the Web Smart Switch

Caution:

You must use the screws supplied with the mounting brackets. Damage caused to the parts by using incorrect screws would invalidate your warranty.

Step 3: Secure the brackets tightly.

Step 4: Follow the same steps to attach the second bracket to the opposite side.

Step 5: After the brackets are attached to the Web Smart Switch, use suitable screws to securely attach the brackets to the rack, as shown in [Figure 2-7](#).

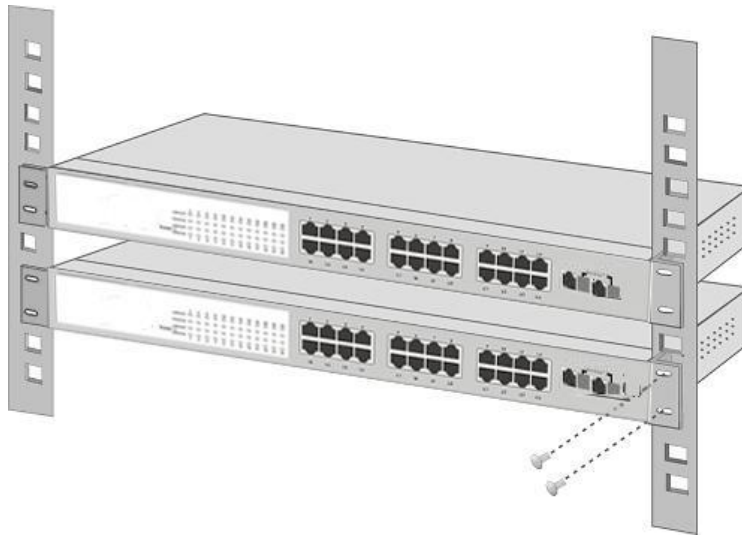


Figure 2-7 Mounting the Web Smart Switch in a Rack

Step 6: Proceed with the steps 4 and steps 5 of section **2.3.1 Desktop Installation** to connect the network cabling and supply power to your Web Smart Switch.

2.3.3 Installing the SFP transceiver

The sections describe how to insert an SFP transceiver into an SFP slot.

The SFP transceivers are hot-plug e and hot-swappable. You can plug-in and out the transceiver to/from any SFP port without having to power down the Switch. As the Figure 2-8 appears.

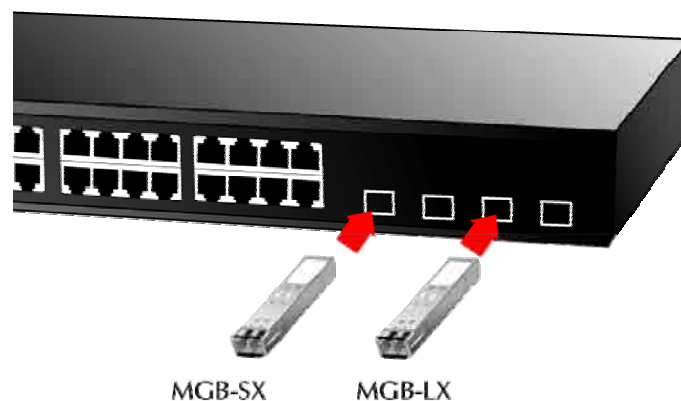


Figure 2-8 Plug-in the SFP transceiver

Approved PLANET SFP Transceivers

PLANET Web Smart switches support both single mode and multi mode SFP transceiver. The following list of approved PLANET SFP transceivers is correct at the time of publication:

- MGB-SX SFP (1000BASE-SX SFP transceiver)
- MGB-LX SFP (1000BASE-LX SFP transceiver)
- MFB-FX SFP (100Base-FX SFP transceiver - 2Km)
- MFB-F20 SFP (100Base-FX SFP transceiver -20Km)



Note: It recommends using PLANET SFPs on the Switch. If you insert a SFP transceiver that is not supported, the Switch will not recognize it.

Before connect the other switches, workstation or Media Converter.

1. Make sure both side of the SFP transfer are with the same media type, for example: 1000Base-SX to 1000Base-SX, 1000Bas-LX to 1000Base-LX.
2. Check the fiber-optic cable type match the SFP transfer model.
 - To connect to **1000Base-SX** SFP transfer, use the **multi-mode** fiber cable- with one side must be male duplex LC connector type.
 - To connect to **1000Base-LX** SFP transfer, use the **single-mode** fiber cable-with one side must be male duplex LC connector type.

Connect the fiber cable

1. Attach the duplex LC connector on the network cable into the SFP transceiver.
2. Connect the other end of the cable to a device – switches with SFP installed, fiber NIC on a workstation or a Media Converter..
3. Check the LNK/ACT LED of the SFP slot on the front of the Switch. Ensure that the SFP transceiver is operating correctly.
4. Check the Link mode of the SFP port if the link failed. Co works with some fiber-NICs or Media Converters, set the Link mode to “1000 Force” is needed.

3. SWITCH MANAGEMENT

This chapter describes how to manage the Web Smart Switch. Topics include:

- Overview
- Management method
- Logging on to the Web Smart Switch

3.1 Overview

The Web Smart Switch provides a user-friendly, web interface. Using this interface, you can perform various switch configuration and management activities, including:

Please refer to the following Chapter 4 for the details.

3.2 Management Method

User can manage the Web Smart Switch by Web Management via a network or dial-up connection.

3.2.1 Web Management

You can manage the Web Smart Switch remotely by having a remote host with web browser, such as Microsoft Internet Explorer or Netscape Navigator.

Using this management method:

The Web Smart Switch must have an Internet Protocol (IP) address accessible for the remote host.

3.3 Logging on to the Web Smart Switch

When you log on to the Web Smart Switch Web interface for the first time, a sign-on string appears and you are prompted for a Web login username and password.



The factory default login username and password is **admin**.



1. For security reason, please change and memorize the new password after this first setup.
2. Only accept command in lowercase letter under Web interface.

4. WEB MANAGEMENT

To modify your PC's IP domain to the same with Web Smart Switch then use the default IP address (**192.168.0.100**) to remote configure Web Smart Switch through the **Web** interface.



Notice: The following section will base on the console screens of FGSW-2620VSF, for FGSW-2402VS and FGSW-2624SF the display will be the same to FGSW-2620VSF.

4.1 Login in to the Switch

To access the Web-browser interface you must first enter the user name and password, the default user name and password is "**admin**". You will see the following screen comes out on the Web browser program:



Figure 4-1 Web login screen

After the User name and Password is entered, you will see the web main menu screen.



Figure 4-2 Web main menu screen

4.2 Port Status

This section provides current status of each port from Web Smart Switch, the screen in Figure 4-3 appears and table 4-1 describes the port status object of Web Smart Switch.

Port	Enable	Link Status	Spd/Dpx	Flow Control	Port	Enable	Link Status	Spd/Dpx	Flow Control
1	Enable	Down	-----	----	2	Enable	Down	-----	---
3	Enable	Down	-----	----	4	Enable	Down	-----	---
5	Enable	Down	-----	----	6	Enable	Down	-----	---
7	Enable	Down	-----	----	8	Enable	Down	-----	---
9	Enable	Down	-----	----	10	Enable	Down	-----	---
11	Enable	Down	-----	----	12	Enable	Down	-----	---
13	Enable	Down	-----	----	14	Enable	Down	-----	---
15	Enable	Down	-----	----	16	Enable	Down	-----	---
17	Enable	Down	-----	----	18	Enable	Down	-----	---
19	Enable	Down	-----	----	20	Enable	Down	-----	---
21	Enable	Down	-----	----	22	Enable	Down	-----	---
23	Enable	Down	-----	----	24	Enable	Down	-----	---
MOD1	Enable	Down	-----	----	MOD2	Enable	Up	100F	Off

Figure 4-3 Port Status Web Page screen

Object	Description
Port	Indicate port 1 to port 26.
Enable	Display the port Disable or Enable state of each port on Web Smart Switch.
Link Status	The state of the link, indicating a valid link partner device. " Up " means a device is successful connected to the port. " Down " means no device is connected.
Spd/Dpx	Display the Speed duplex mode of each port on Web Smart Switch.
Flow Control	Display the flow control On or Off state of each port on Web Smart Switch.
Refresh button	Press this button for refresh current status of each port on Web Smart Switch.

Table 4-1 Descriptions of the Port Status screen Objects

4.3 Port Configuration

This section introduces detail settings of per port on Web Smart Switch; the screen in Figure 4-4 & 4-5 appears and table 4-2 descriptions the Port Configuration objects of Web Smart Switch.

Port	Enable	Auto	Spd/Dpx	Flow Control	InRate	OutRate
1	Enable	On	Auto	On	0	0
2	Enable	On	Auto	On	0	0
3	Enable	On	Auto	On	0	0
4	Enable	On	Auto	On	0	0
5	Enable	On	Auto	On	0	0
6	Enable	On	Auto	On	0	0
7	Enable	On	Auto	On	0	0
8	Enable	On	Auto	On	0	0
9	Enable	On	Auto	On	0	0
10	Enable	On	Auto	On	0	0
11	Enable	On	Auto	On	0	0
12	Enable	On	Auto	On	0	0
13	Enable	On	Auto	On	0	0

Figure 4-4 Port Configuration Web Page screen



Figure 4-5 Port Configuration Web Page screen

Object	Description
Port	Indicate port 1 to port 26.
Enable	Per port Disable or Enable on Web Smart Switch.
Auto	Per port Disable (Off) or enable (On) Auto negotiation on Web Smart Switch.
Spd/Dpx	Adjust per port speed duplex mode on Web Smart Switch; the available options are Auto, 100F, 100H, 10F, 10H. Default mode is Auto.
Flow Control	Per port Flow control Disable (Off) or enable (On) on Web Smart Switch. Default mode is On.
InRate*	Input the value of packet rate sent from the connected port to this port must enable the flow control feature of this port for the function to work normally. The available value ranges from 1 to 99 and rate unit: 1Mbps.
OutRate*	Input the value of packet rate sent from this port to the connected port. The available value ranges from 1 to 99 and rate unit: 1Mbps.
Apply button	Press this button for save current configuration of each port on Web Smart Switch.

Table 4-2 Descriptions of the Port Configuration screen Objects

 **Remark:** InRate/OutRate setting are only for Fast Ethernet Port.

4.4 Trunk configuration

This function allows to configuring the trunk function. It provides up to 7 trunk groups and each trunk group provides 2 to 8 member ports. Please check the member port from “Normal” to 7 trunk groups and the screen in [Figure 4-6 & 4-7](#) appears.

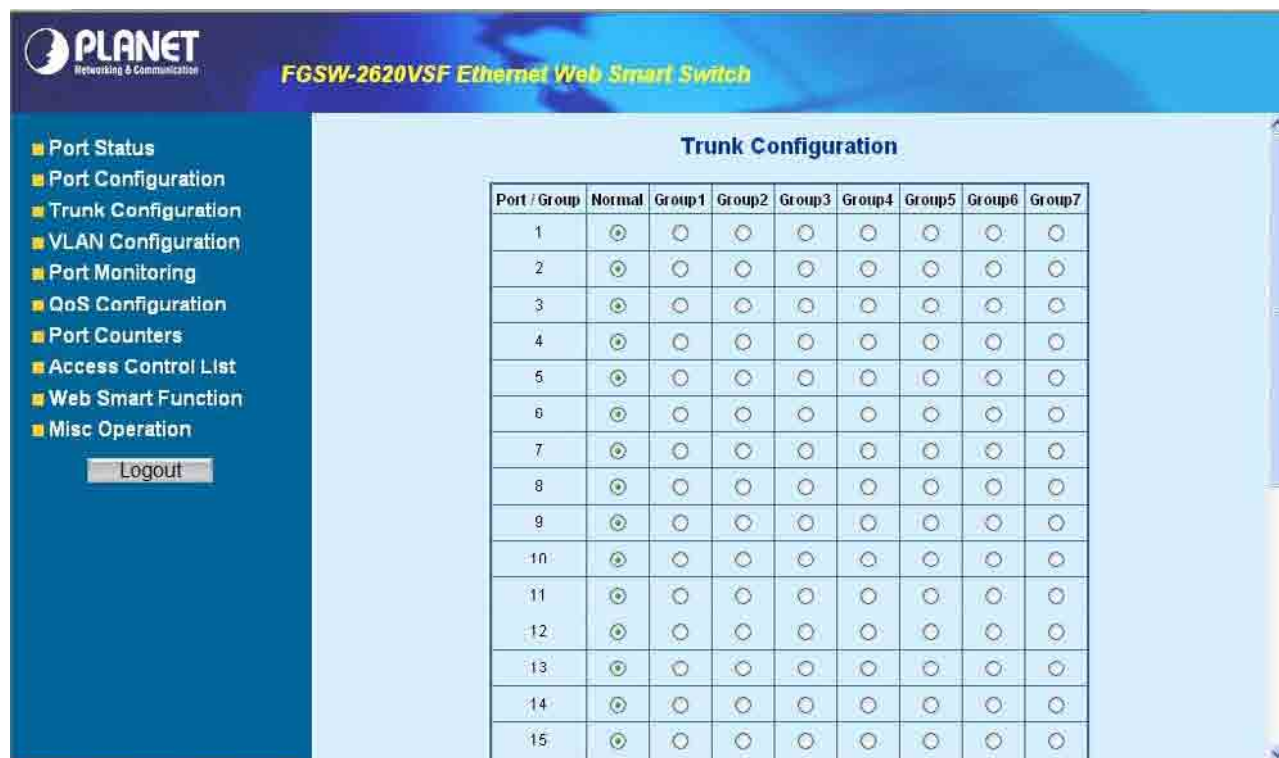


Figure 4-6 Trunk Configuration Web Page screen

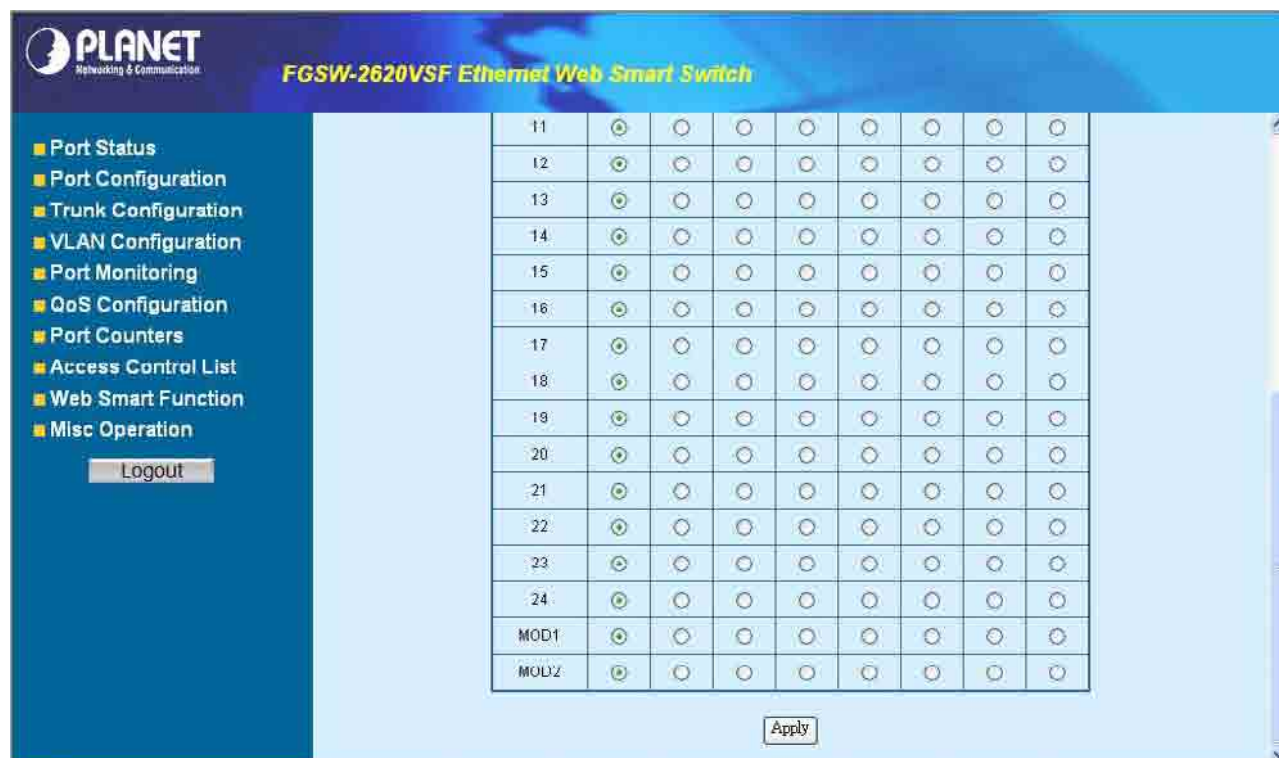


Figure 4-7 Trunk Configuration Web Page screen

After setup completed, please press “Apply” button to take effect and the screen in [Figure 4-8](#) appears.

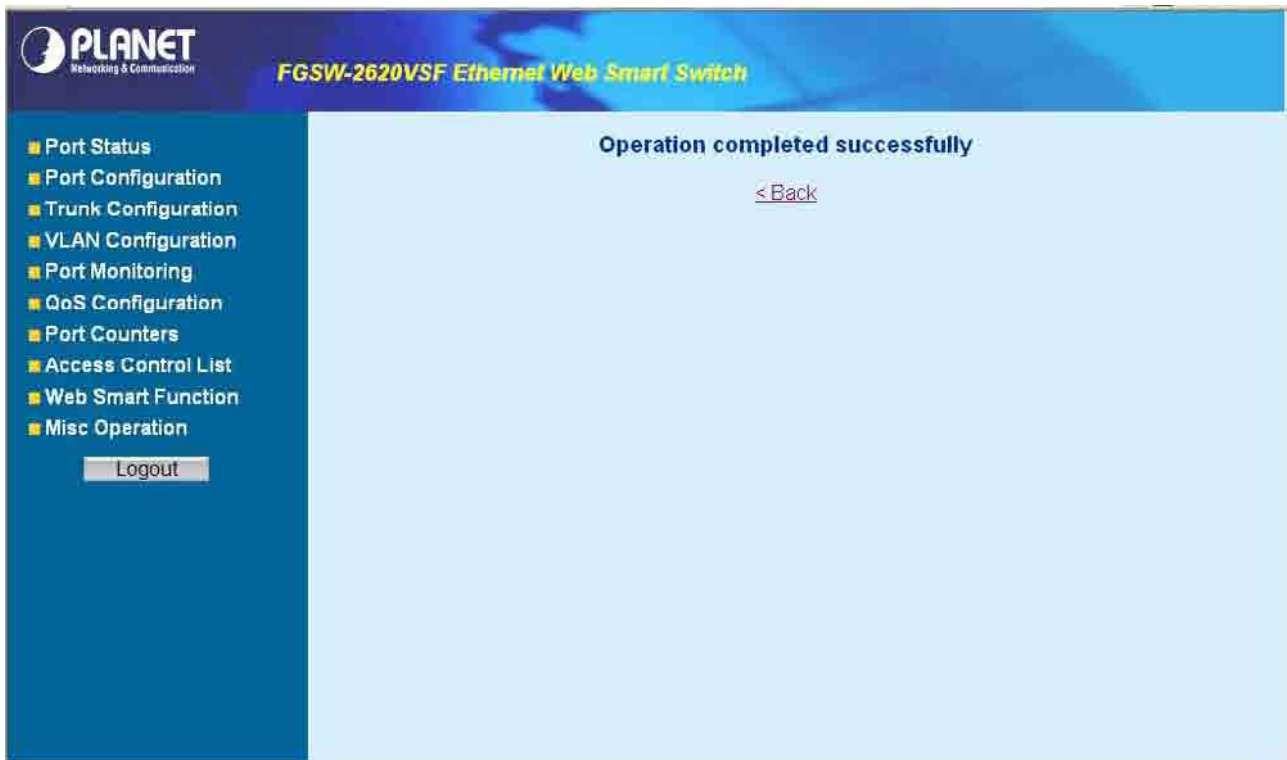


Figure 4-8 Trunk Configuration Web Page screen

Please press “**Back**” for return to Trunk configuration screen for further configuration. If the member port from each trunk group is out of range or less than 2 ports than the following screen appears.

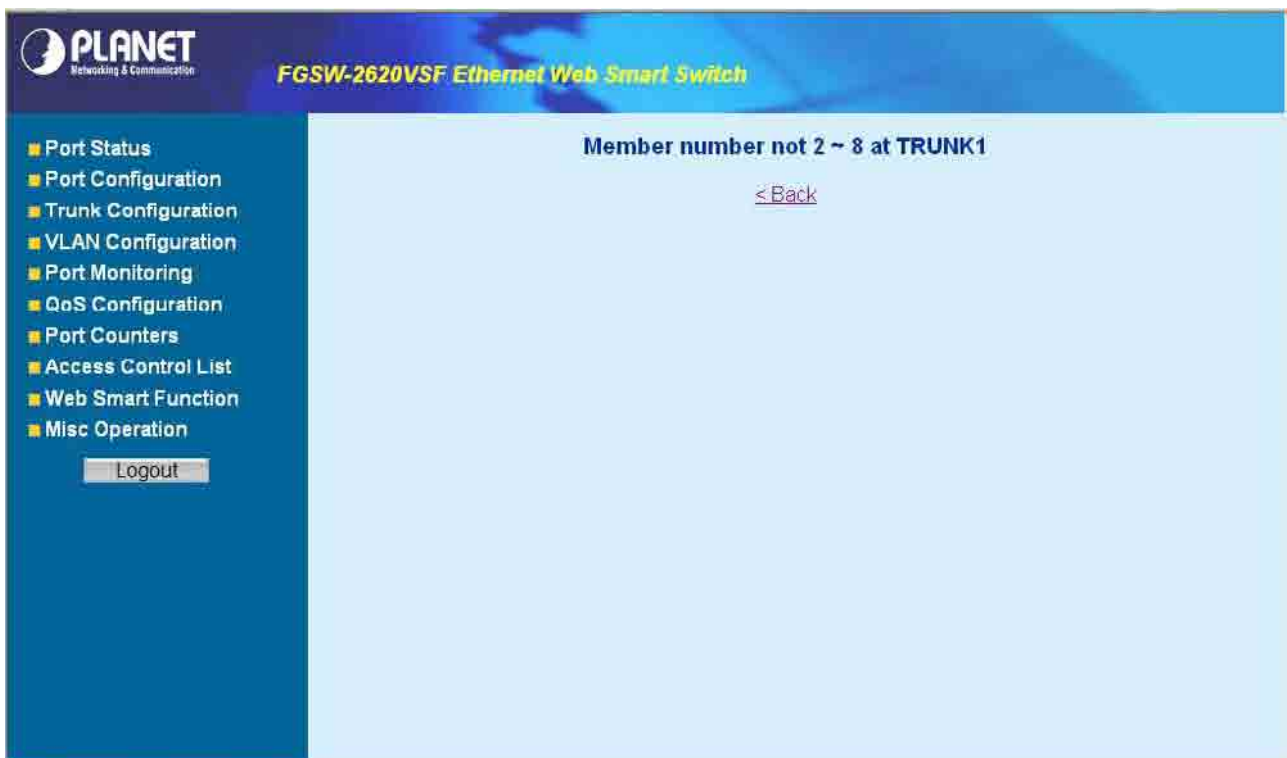


Figure 4-9 Trunk Configuration Web Page screen

Please press “**Back**” for return to Trunk configuration screen for adds other trunk group.

4.5 VLAN configuration

A Virtual LAN (VLAN) is a logical network grouping that limits the broadcast domain. It allows you to isolate network traffic so only members of the VLAN receive traffic from the same VLAN members. The Web Smart Switch supports two type of VLAN configuration – 802.1Q Tagged VLAN and Port-Based VLAN. The Port-Based VLAN supports up to 26 VLAN groups. In the default configuration with VLAN disable, the screen in [Figure 4-10](#) appears.

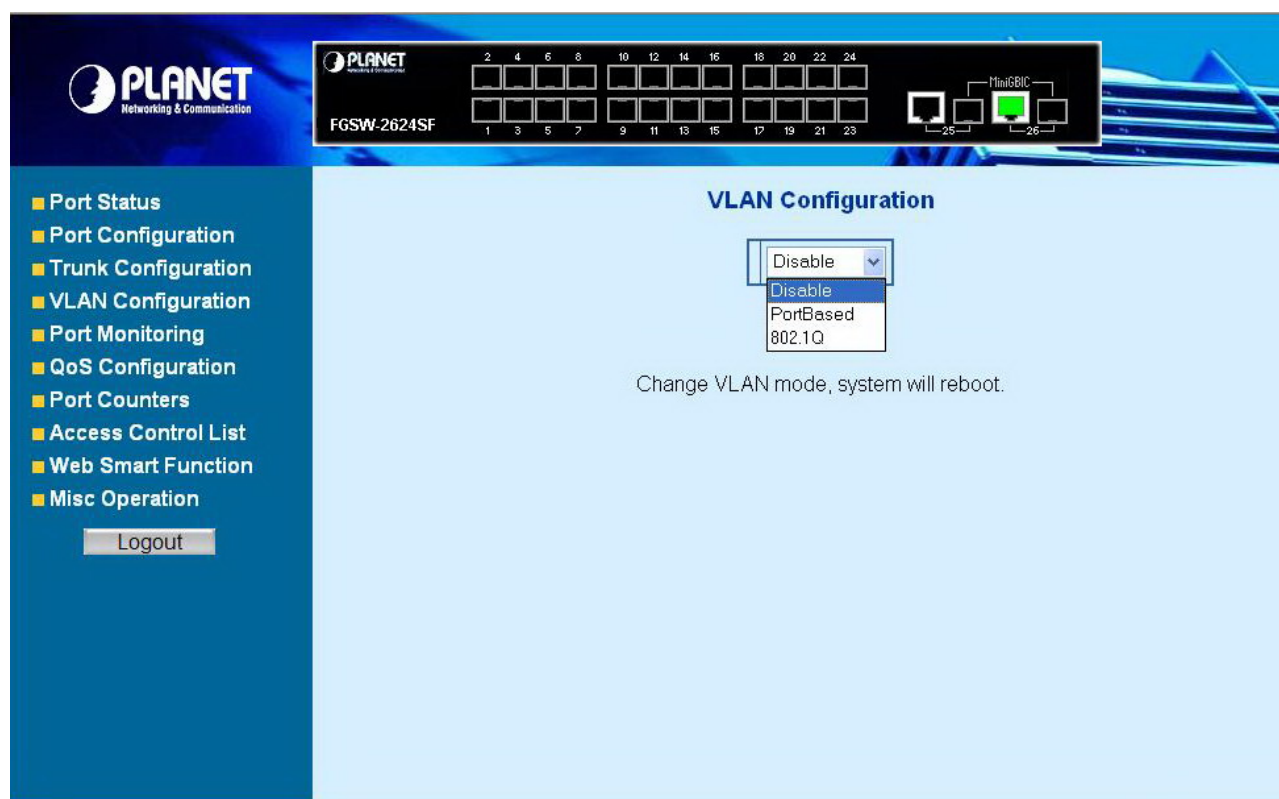


Figure 4-10 VLAN Setting Web Page screen

4.5.1 Enable port-based VLAN function and add a port-based VLAN group

Select “**PortBased**” and press “**Apply**” button, to enable the port-based VLAN function then the Web Smart Switch will reboot for take affect. The screen in [Figure 4-11](#) appears.


 **Notice:** Any change of VLAN mode will need system reboot to take effect.



Figure 4-11 Port-based VLAN Setting Web Page screen

Press “**Relogin**” to re-login the Web Smart Switch and the screen in [Figure 4-12](#) appears.



Figure 4-12 Port-based VLAN Setting Web Page screen

After login web interface of Web Smart Switch and choose VLAN configuration, the screen in [Figure 4-13](#) appears.

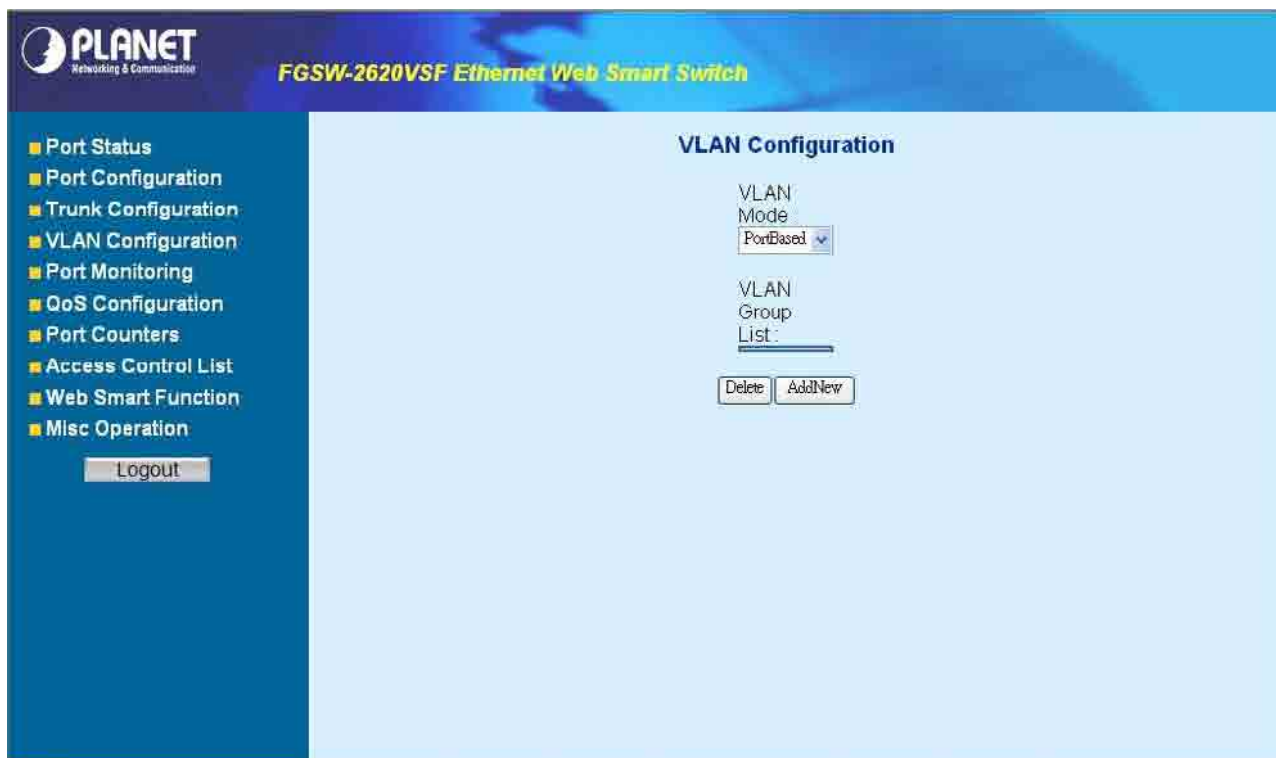


Figure 4-13 Port-based VLAN Configuration Web Page screen

Press “**AddNew**” button to add a port-based VLAN group and setup procedure is shown as below:

1. Input a VLAN group ID and **available range is 1-4094**.
2. Select specific port as member port and the screen in [Figure 4-14](#) appears.
3. After setup completed, please press “**Apply**” button to take effect and the screen in [Figure 4-15](#) appears.
4. Please press “**Back**” for return to VLAN configuration screen to add other VLAN group, the screen in [Figure 4-16](#) appears.



Figure 4-14 Port-based VLAN Setting Web Page screen

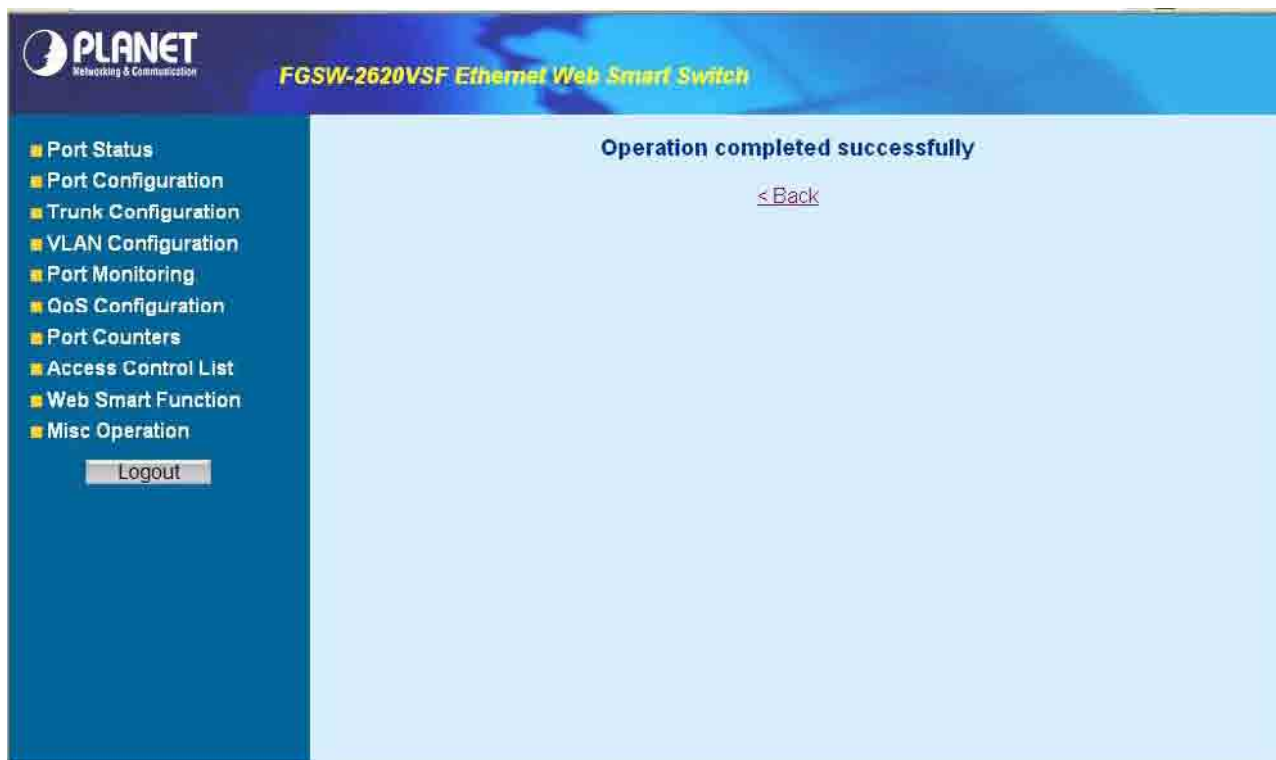


Figure 4-15 Port-based VLAN Setting Web Page screen



Figure 4-16 Port-based VLAN Setting Web Page screen

4.5.2 Edit existence port-based VLAN group

Click **existence VLAN group ID** to edit existence port-based VLAN group, the edit procedure is shown as below:

1. Select specific port as member port and the screen in [Figure 4-17](#) appears.
2. After setup completed, please press “**Apply**” button to take effect and the screen in [Figure 4-18](#) appears.
3. Please press “**Back**” for return to VLAN configuration screen to continue VLAN configuration.



Figure 4-17 Edit Port-based VLAN Setting Web Page screen

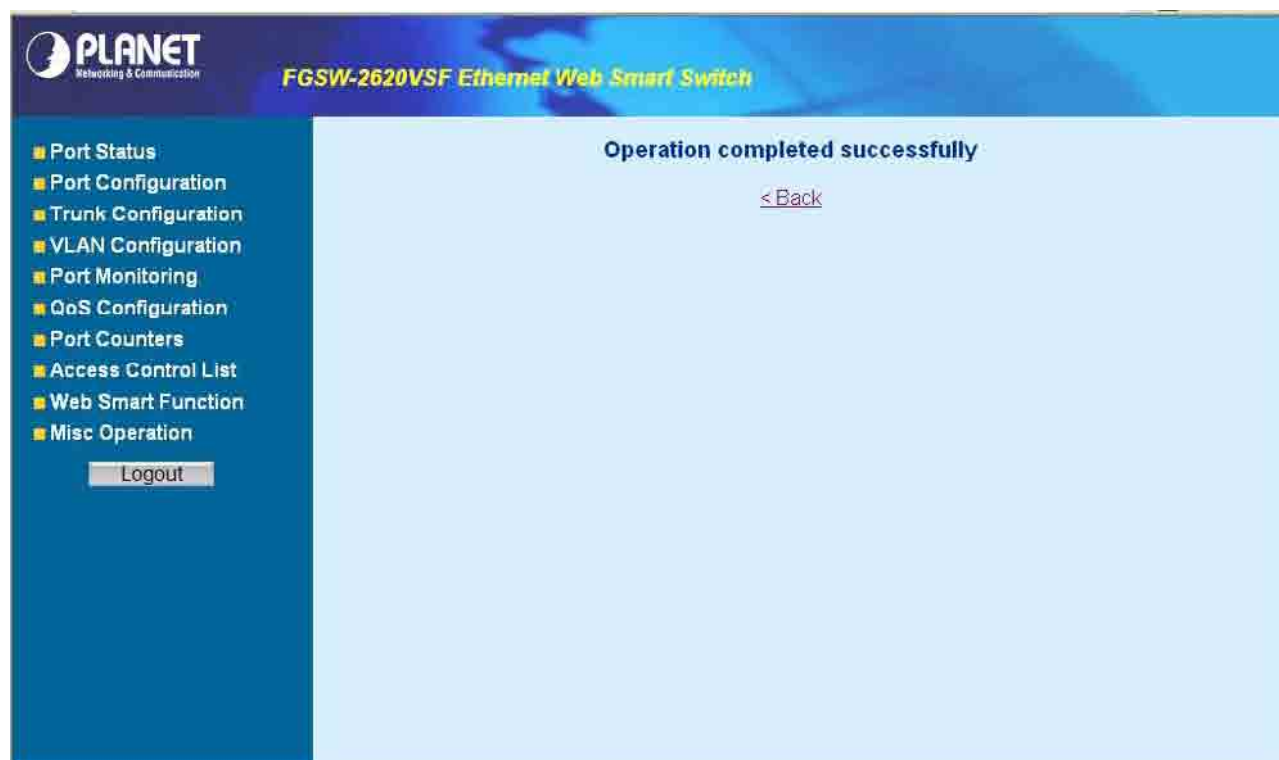


Figure 4-18 Edit Port-based VLAN Setting Web Page screen

4.5.3 Delete existence port-based VLAN group

The port-based VLAN group delete procedure is shown as below:

1. Check **existence VLAN group ID** and the screen in [Figure 4-19](#) appears.
2. Press **“Delete”** button to delete existence port-based VLAN group.
3. Then the **“Delete all checked groups”** window appears, please press **“OK”** to continue the delete VLAN group procedure and the screen in [Figure 4-20](#) appears.
4. Please press **“Back”** for return to VLAN configuration screen to continue VLAN configuration. The screen in [Figure 4-21 & 4-22](#) appears.



Figure 4-19 Delete Port-based VLAN group Web Page screen



Figure 4-20 Delete Port-based VLAN group Web Page screen

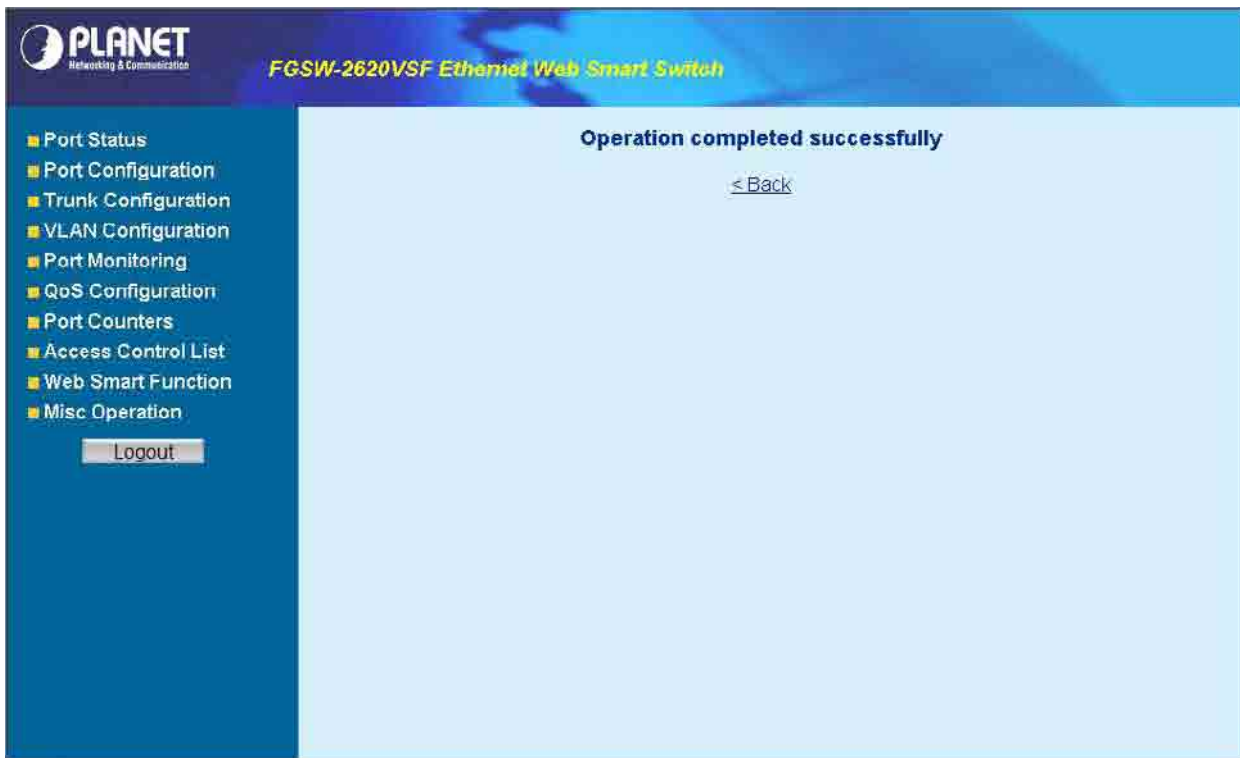


Figure 4-21 Delete Port-based VLAN group Web Page screen



Figure 4-22 Port-based VLAN group Web Page screen

4.5.4 Disable port-based VLAN function

Select “Disable” and pop window appears, press “OK” to disable the port-based VLAN function then the Web Smart Switch will reboot for take affect. The screen in [Figure 4-23 & 4-24 & 4-25 & 4-26 & 4-27](#) appears.

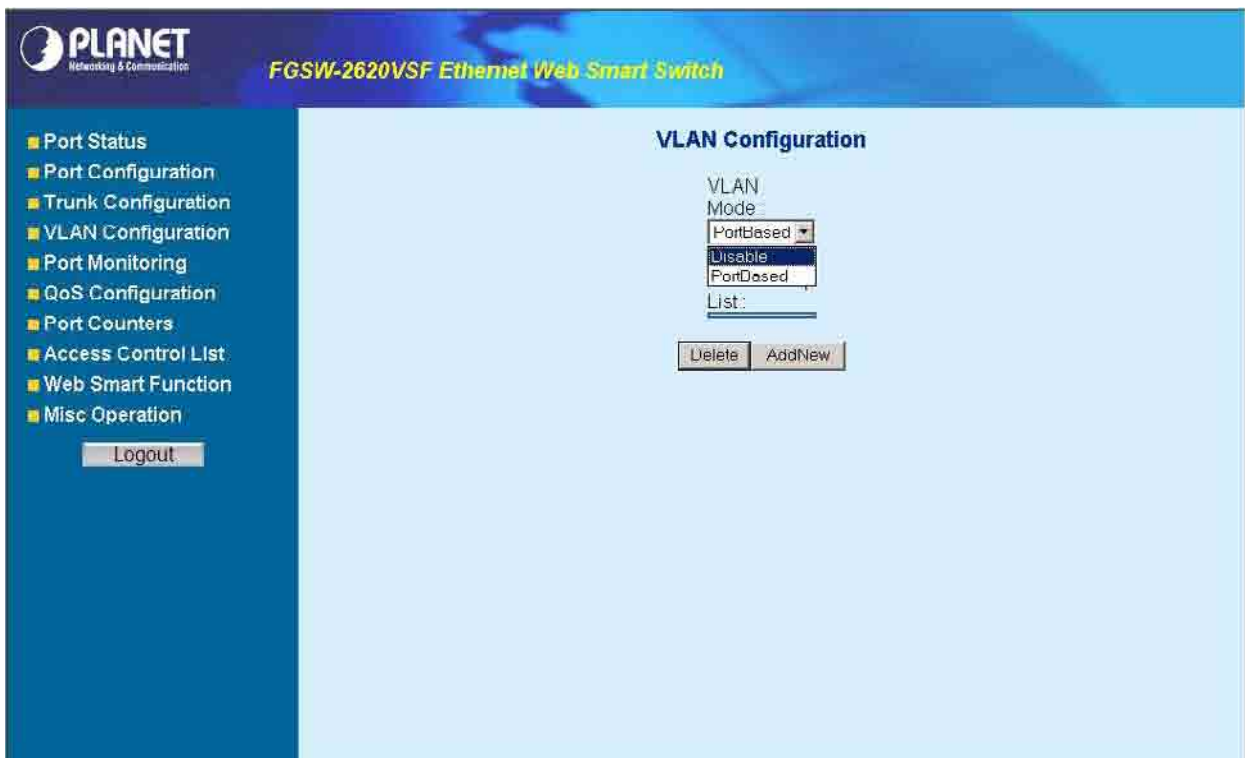


Figure 4-23 Disable Port-based VLAN function Web Page screen

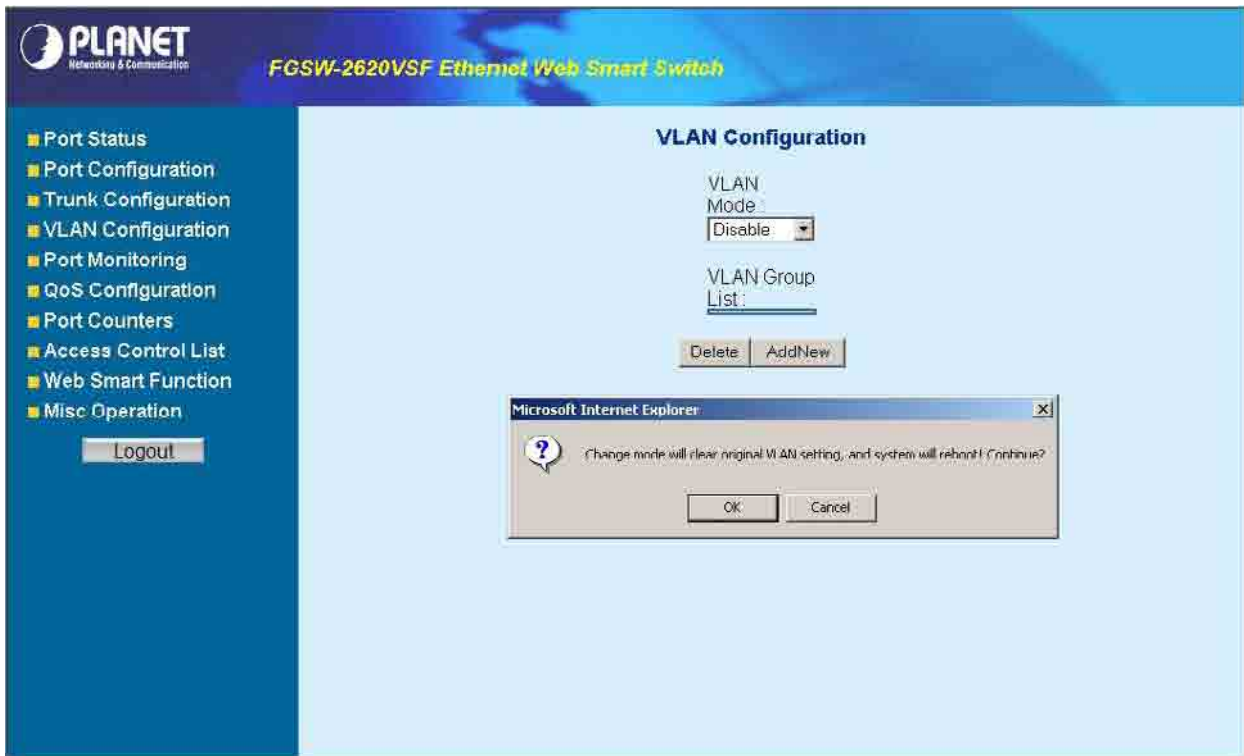


Figure 4-24 Disable Port-based VLAN function Web Page screen

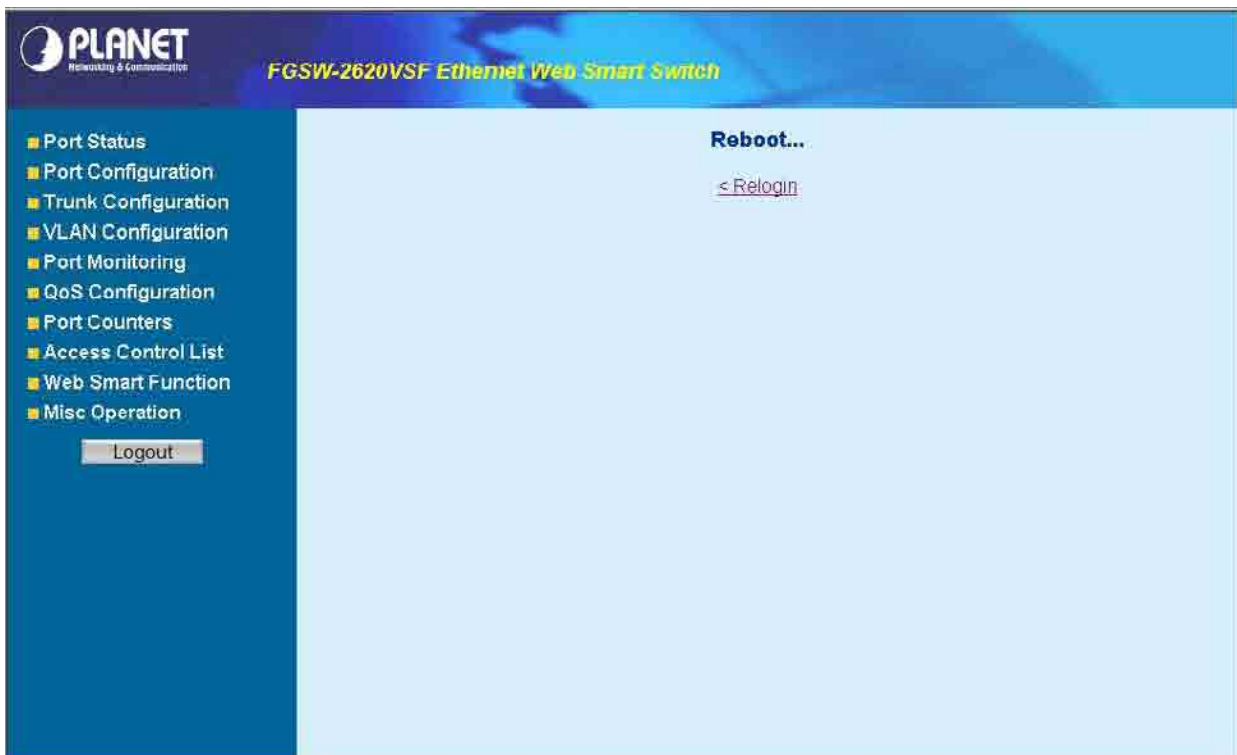


Figure 4-25 Disable Port-based VLAN function Web Page screen



Figure 4-26 Disable Port-based VLAN function Web Page screen

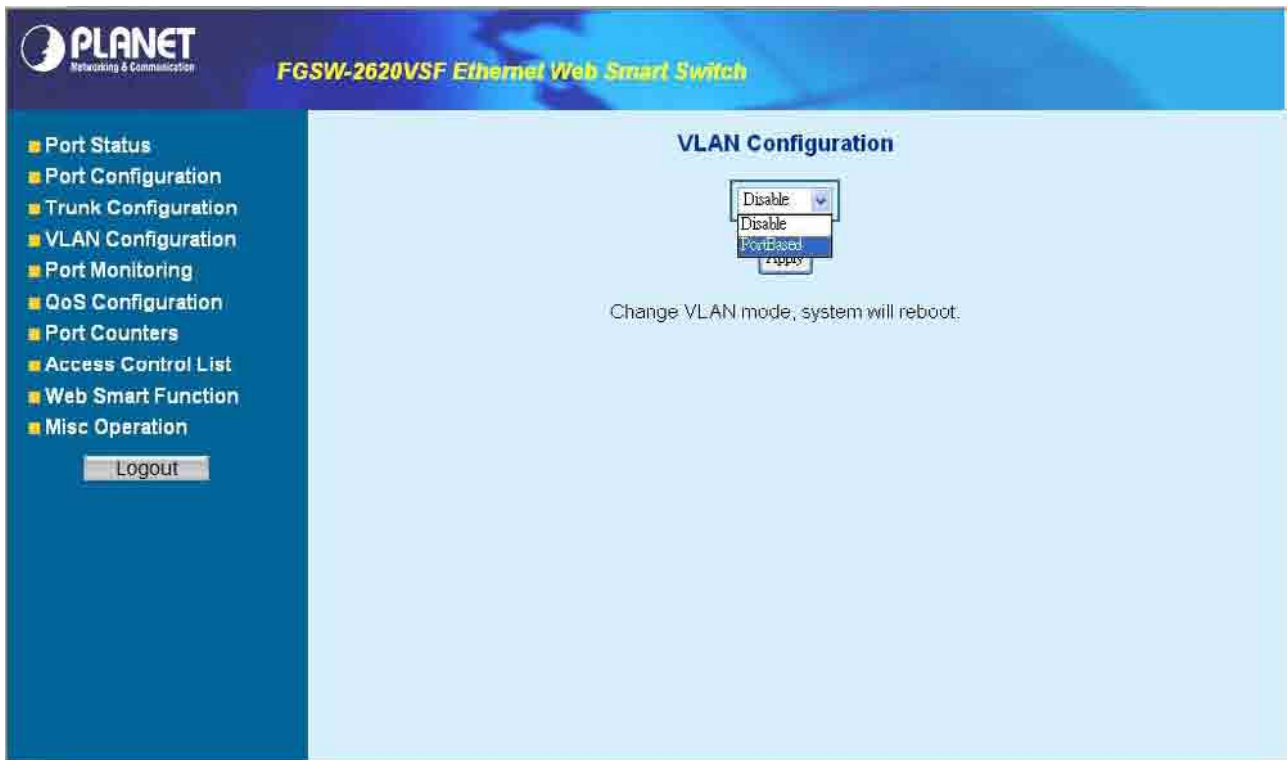


Figure 4-27 Disable Port-based VLAN function Web Page screen

4.5.5 Enable 802.1Q VLAN function and add a new VLAN group

Select “802.1Q” and press “Apply” button, to enable the 802.1Q VLAN function then the Web Smart Switch will reboot for take affect. The screen in [Figure 4-28](#) appears.

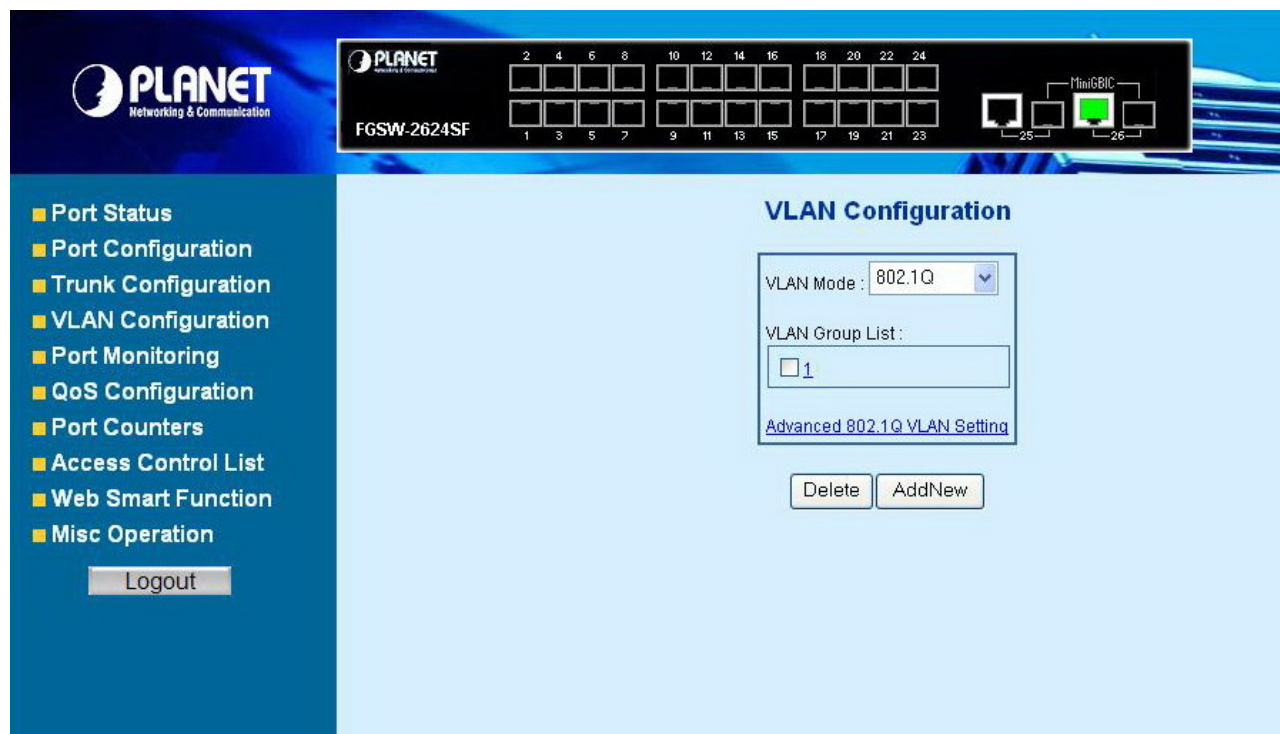


Figure 4-28 802.1Q VLAN Setting Web Page screen

Press “Relogin” to re-login the Web Smart Switch and the screen in [Figure 4-29](#) appears.



Figure 4-29 802.1Q VLAN Setting Web Page screen

After login web interface of Web Smart Switch and choose VLAN configuration, the screen in [Figure 4-30](#) appears.

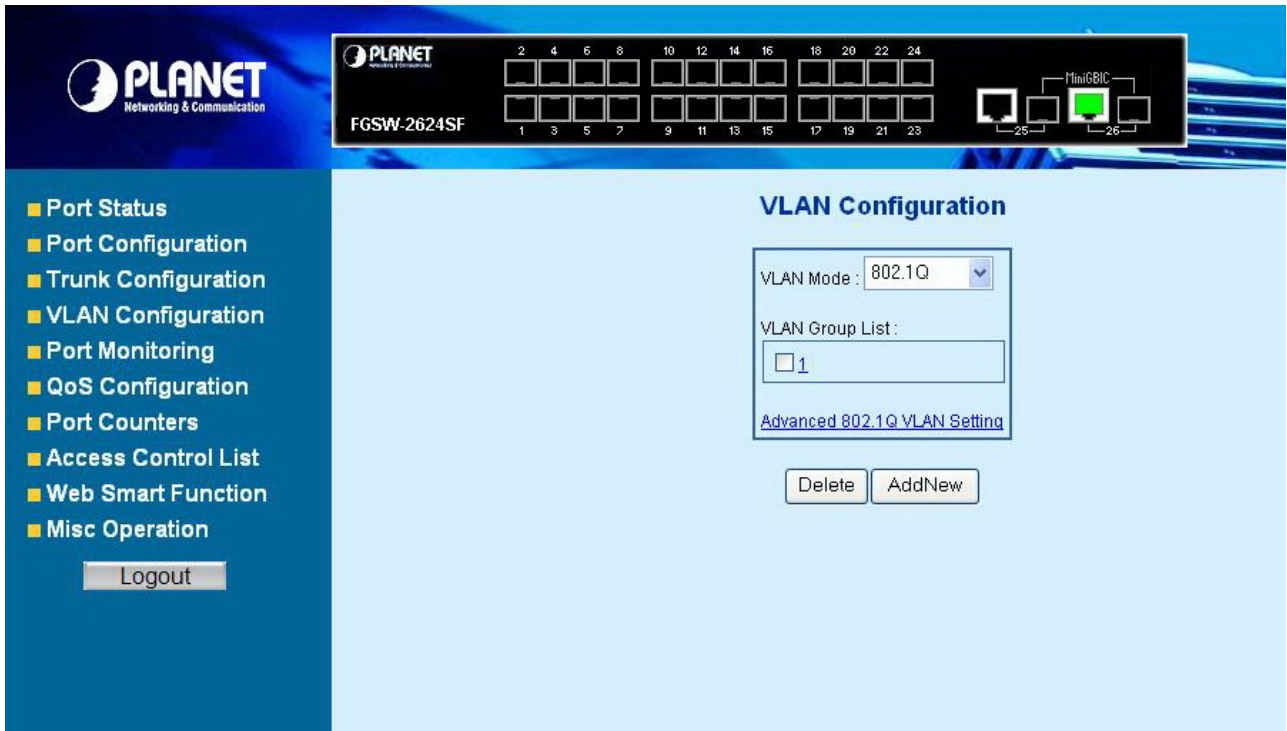


Figure 4-30 802.1Q VLAN Configuration Web Page screen

Press “**AddNew**” button to add a 802.1Q VLAN group and setup procedure is shown as below:

1. Input a VLAN group ID and **available range is 1-4094**.
2. Select specific port as member port and the screen in [Figure 4-31](#) appears.
3. After setup completed, please press “**Apply**” button to take effect and the screen in [Figure 4-32](#) appears.
4. Please press “**Back**” for return to VLAN configuration screen to add other VLAN group, the screen in [Figure 4-33](#) appears.

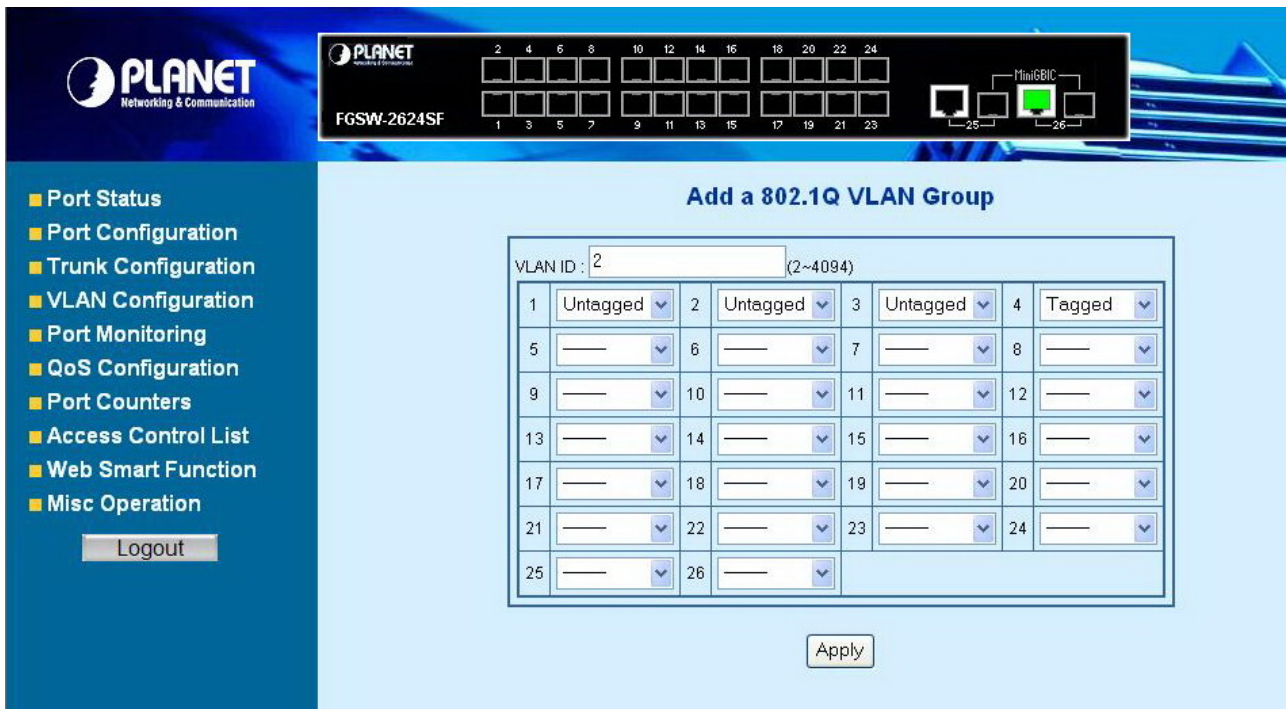


Figure 4-31 802.1Q VLAN Setting Web Page screen

Object	Description
	You can configure the ID number of the VLAN by this item. This field is used to add VLANs one at a time. The VLAN group ID and available range is 2-4094
Port	Indicate port 1 to port 26.
VLAN Type	----- Forbidden ports are not included in the VLAN
	Untagged Packets forwarded by the interface are untagged
	Tagged Defines the interface as a tagged member of a VLAN. All packets forwarded by the interface are tagged. The packets contain VLAN information



Figure 4-32 802.1Q VLAN Setting Web Page screen

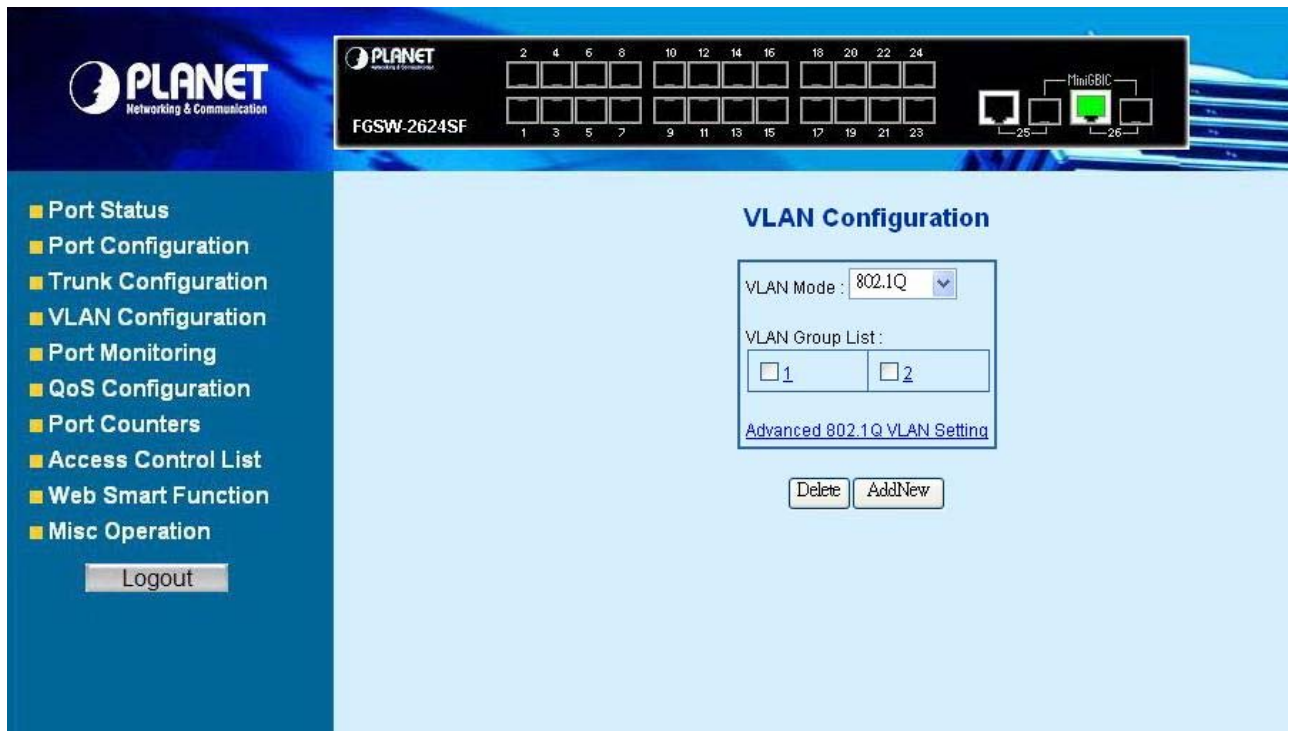


Figure 4-33 802.1Q VLAN Setting Web Page screen

4.5.6 Configure Advanced 802.1Q VLAN Setting

Click “Advanced 802.1Q VLAN Setting” to set the per-port 802.1Q VLAN function. The screen in Figure 4-34 appears.

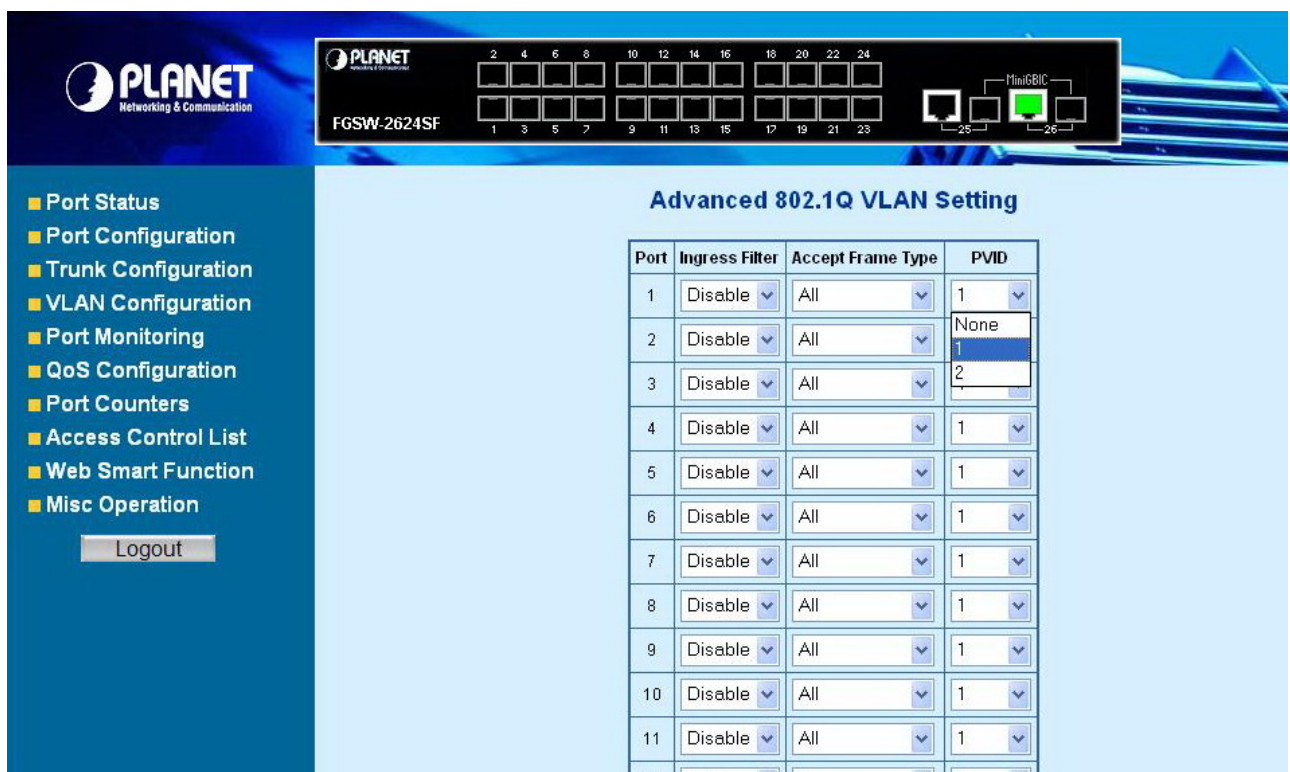


Figure 4-34 802.1Q VLAN Setting Web Page screen

Object	Description
Port	Indicate port 1 to port 26.
Ingress Filter	Enabled The frame is discarded if this port is not a member of the VLAN with which this frame is associated. In a tagged frame, the VLAN is identified by the VLAN ID in the tag. In an untagged frame, the VLAN is the Port VLAN ID specified for the port that received this frame.
	Disabled All frames are forwarded in accordance with the 802.1Q VLAN bridge specification. The factory default is disabled.
Acceptable Frame Types	All Untagged frames or priority tagged frames received on this port are accepted and assigned the value of the Port VLAN ID for this port.
	Tagged only Untagged frames or priority tagged frames received on this port are discarded.
PVID	Allow assign PVID for selected port. The range for the PVID is 1-4094 The PVID will be inserted into all untagged frames entering the ingress port. The PVID must as same as the VLAN ID that the port belong to VLAN group, or the untagged traffic will be dropped.

4.5.7 Edit existence 802.1Q VLAN group

Click **existence VLAN group ID** to edit existence 802.1Q VLAN group, the edit procedure is shown as below:

1. Select specific port as member port and the screen in [Figure 4-35](#) appears.
2. After setup completed, please press “**Apply**” button to take effect and the screen in [Figure 4-36](#) appears.
3. Please press “**Back**” for return to VLAN configuration screen to continue VLAN configuration.



Figure 4-34 Edit 802.1Q VLAN Setting Web Page screen

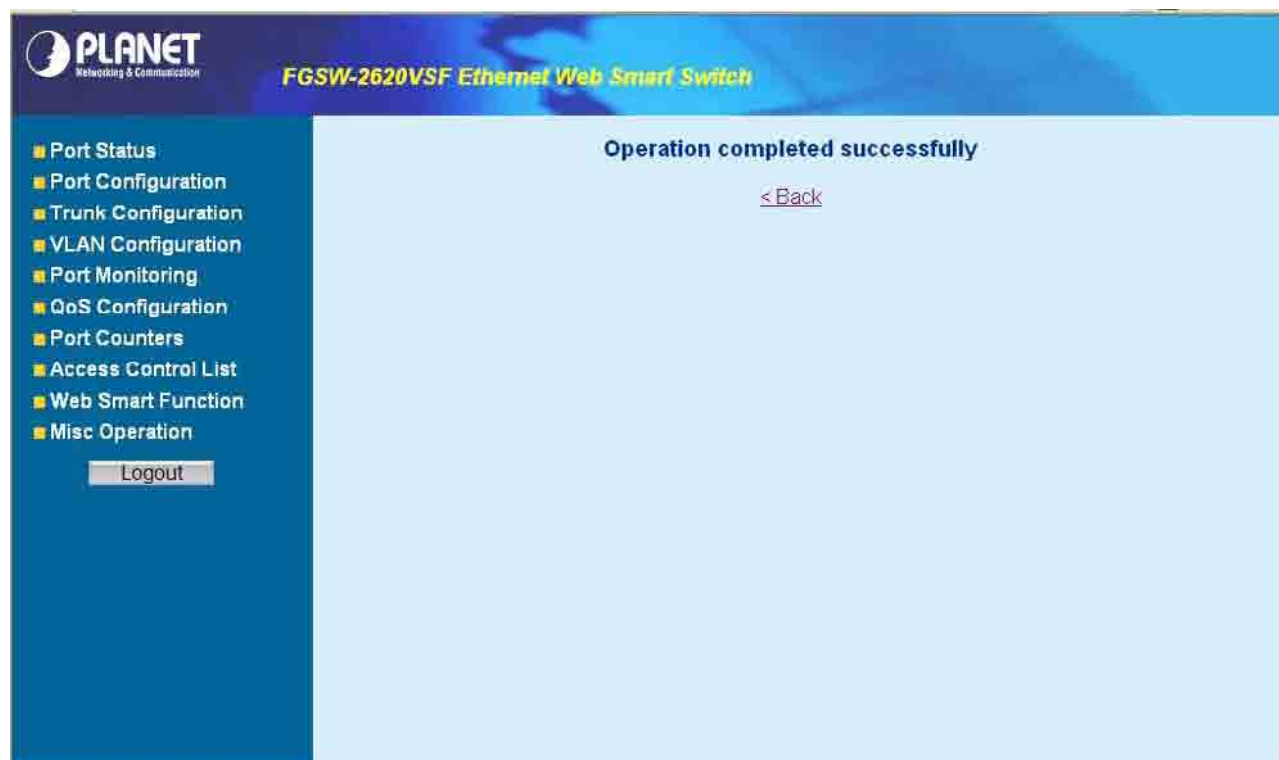


Figure 4-36 Edit 802.1Q VLAN Setting Web Page screen

4.5.8 Delete existence 802.1Q VLAN group

The 802.1Q VLAN group delete procedure is shown as below:

1. Check **existence VLAN group ID** and the screen in [Figure 4-37](#) appears.
2. Press **“Delete”** button to delete existence port-based VLAN group.
3. Then the **“Delete all checked groups”** window appears, please press **“OK”** to continue the delete VLAN group procedure and the screen in [Figure 4-38](#) appears.
4. Please press **“Back”** for return to VLAN configuration screen to continue VLAN configuration. The screen in [Figure 4-39 & 4-40](#) appears.

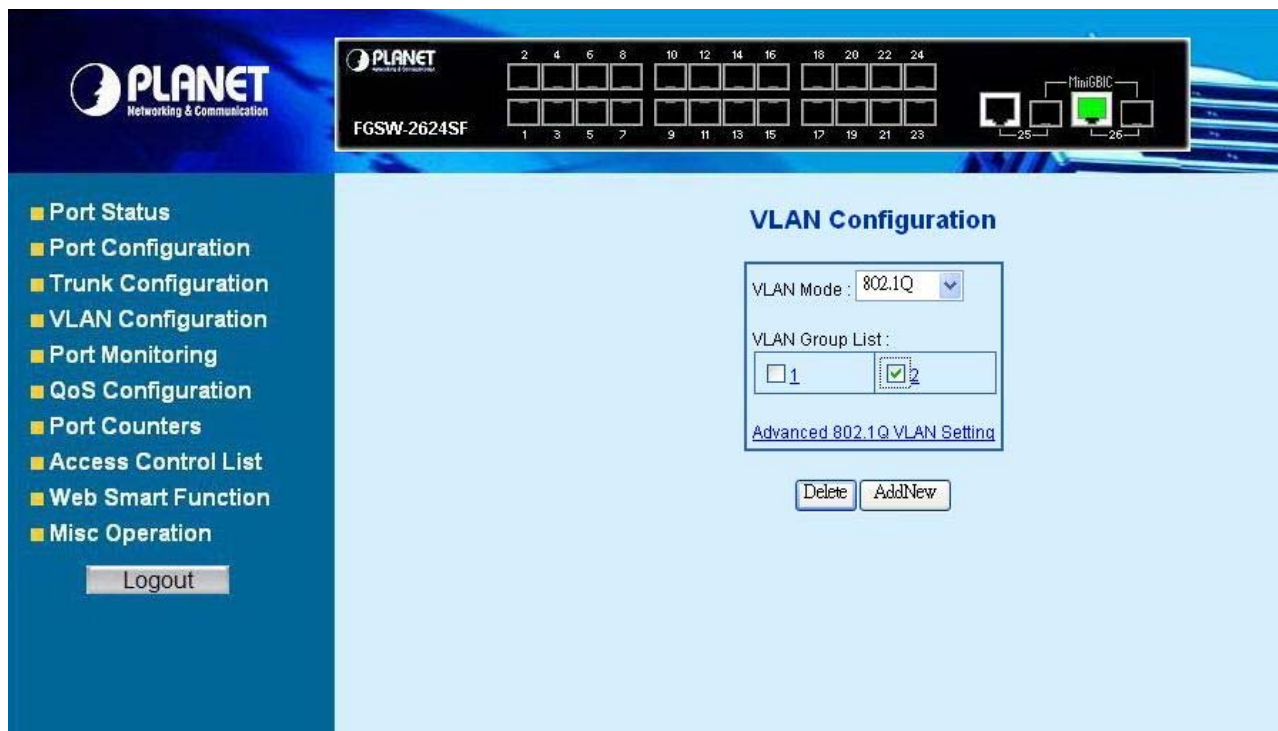


Figure 4-37 Delete 802.1Q VLAN group Web Page screen

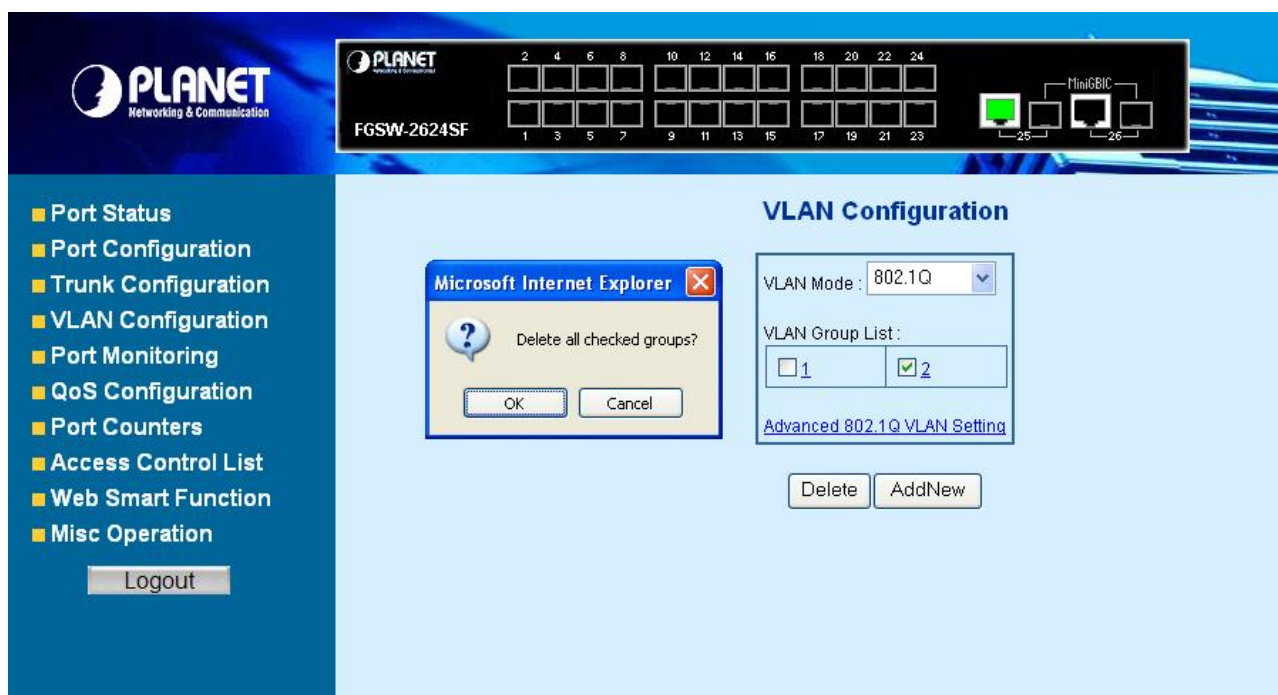


Figure 4-38 Delete 802.1Q VLAN group Web Page screen



Figure 4-39 Delete 802.1Q VLAN group Web Page screen

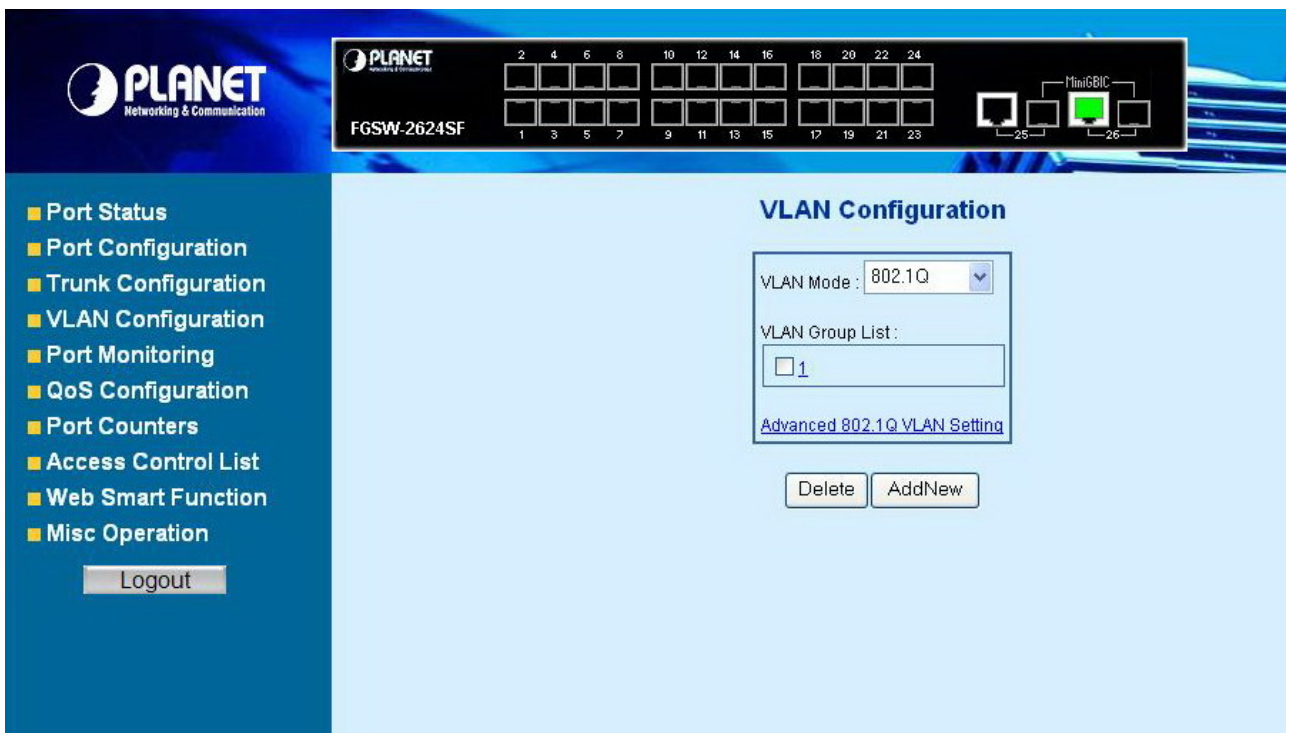


Figure 4-40 802.1Q VLAN group Web Page screen

4.6 Port Monitoring

This function provide to monitoring network traffic that forwards a copy of each incoming or outgoing packet from one port of a network Switch to another port where the packet can be studied. It enables the manager to keep close track of switch performance and alter it if necessary. The screen in [Figure 4-41](#) appears and table 4-3 describes the port Monitoring object of Web Smart Switch.



Figure 4-41 Port Monitoring Web Page screen

Object	Description
Port Monitoring Mode	Provide Disable , RX , TX and RX & TX different modes for port Monitoring function. Default mode is Disable .
Monitoring Port	The monitoring port can be used to see all monitor port traffic. It can connect monitoring port to LAN analyzer or Netxray.
Monitored Port	The monitored port that want to monitor. All monitor port traffic will be copied to mirror port. It can select 1 monitored port in the Web Smart switch.
Apply button	Press this button for save current port monitoring configuration on Web Smart Switch.

Table 4-3 Descriptions of the Port Monitoring screen Objects

4.7 QoS Configuration

This function provides QoS Configuration of Web Smart Switch, the screen in [Figure 4-42](#) appears and [table 4-4](#) descriptions the QoS Configuration of Web Smart Switch.

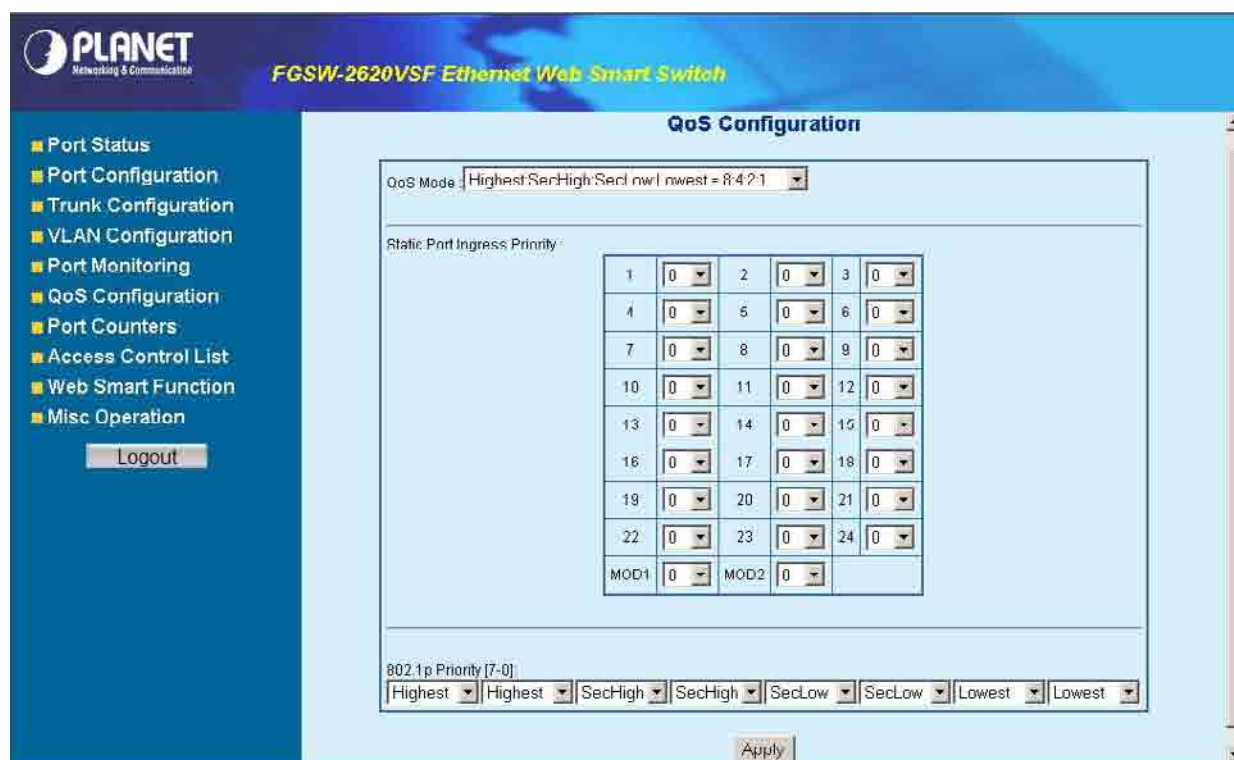


Figure 4-42 QoS Configuration Web Page screen

Object	Description
QoS Mode	Provide different modes for QoS Configuration, the available options are shown as below: Disable QoS Priority, High Empty Then Low, Highest:secHigh:SecLow:Lowest=8:4:2:1 Highest:secHigh:SecLow:Lowest=15:7:3:1 Highest:secHigh:SecLow:Lowest=15:10:5:1 Default mode is Highest:secHigh:SecLow:Lowest=8:4:2:1 , the screen in Figure 4-43 appears.
Static Port Ingress Priority	Allow to assign Ingress priority on each port of Web Smart Switch, the available options are OFF and 0-7 . Default mode is 0 and the screen in Figure 4-44 appears.
802.1p Priority [7-0]	Allow assign high and low on each priority, the available options are shown as below: Lowest, SecLow, SecHigh, Highest , the screen in Figure 4-45 appears.
Apply button	Press this button for save current QoS configuration of each port on Web Smart Switch.

Table 4-4 Descriptions of the QoS Configuration screen Objects

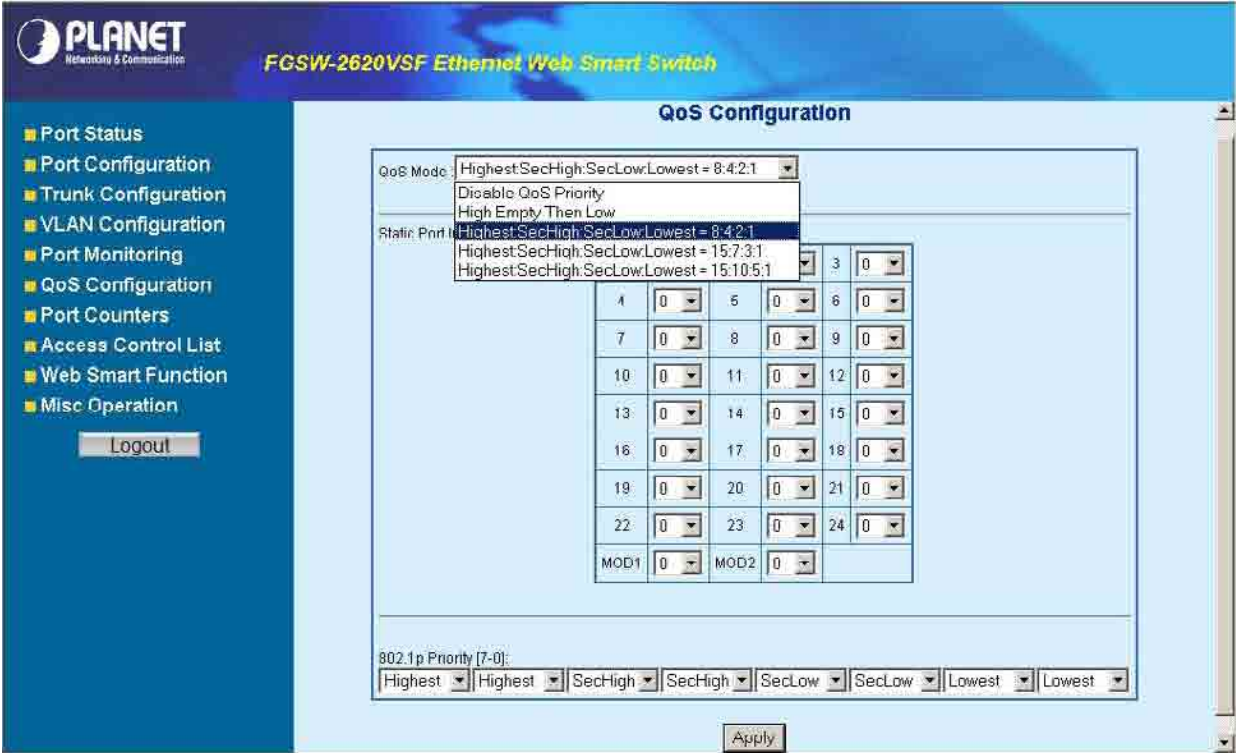


Figure 4-43 QoS Configuration Web Page screen

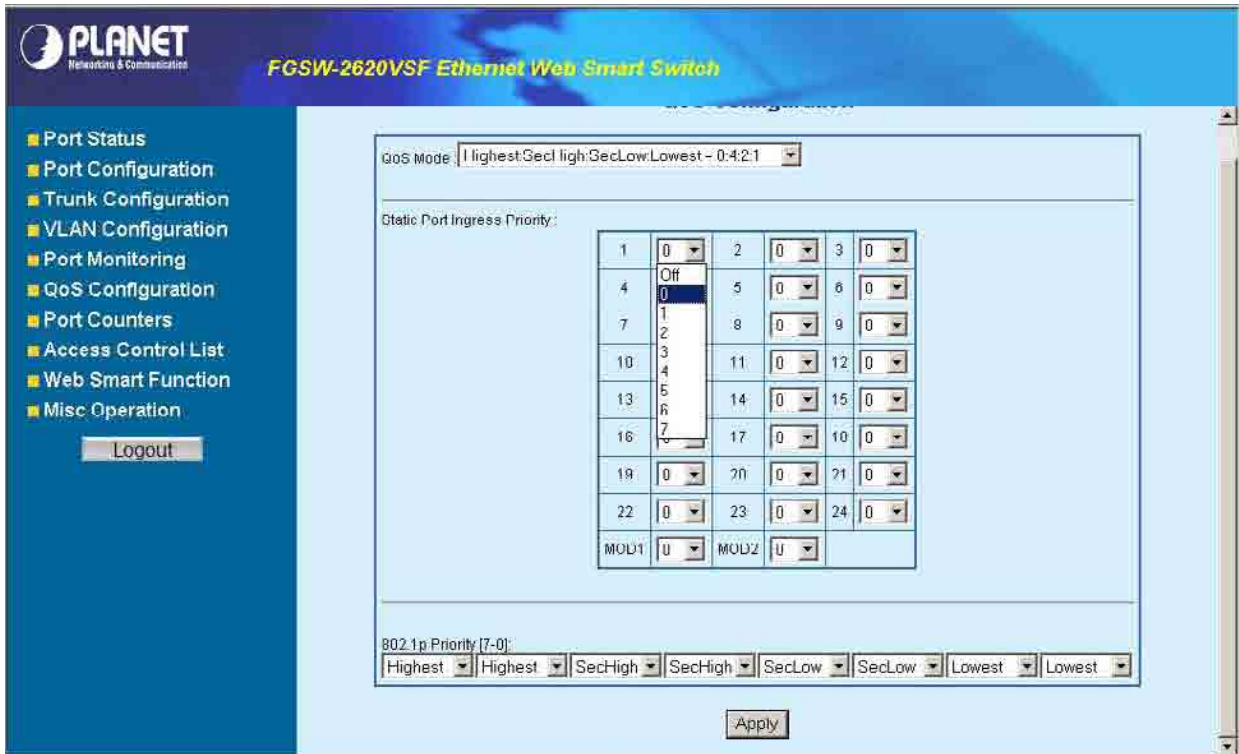


Figure 4-44 QoS Configuration Web Page screen

- Port Status
- Port Configuration
- Trunk Configuration
- VLAN Configuration
- Port Monitoring
- QoS Configuration
- Port Counters
- Access Control List
- Web Smart Function
- Misc Operation

Logout

QoS Configuration

QoS Mode: Highest,SecHigh,SecLow,Lowest = 8.4.2.1

Static Port Ingress Priority:

1	0	2	0	3	0
4	0	5	0	6	0
7	0	8	0	9	0
10	0	11	0	12	0
13	U	14	U	15	U
16	0	17	0	18	0
19	0	20	0	21	0
22	0	23	0	24	0
MOD1	0	MOD2	0		

802.1p Priority (7-0):

Highest Highest SecHigh SecHigh SecLow SecLow Lowest Lowest

- Lowest
- SecLow
- SecHigh
- Highest

Apply

Figure 4-45 QoS Configuration Web Page screen

4.8 Port counters

This function could provide you with an individual statistical counter; it is a useful page for administrator to monitor each port's usage condition. Also, it is helpful to troubleshooting network problems. The screen in [Figure 4-46 & 4-47](#) appears.

Port	RxGoodPkt	RxBadPkt	TxGoodPkt	TxBadPkt	DropPkt	TxAbnr	Collision
1	0	0	0	0	0	0	0
2	0	0	0	0	0	0	0
3	0	0	0	0	0	0	0
4	0	0	0	0	0	0	0
5	0	0	0	0	0	0	0
6	0	0	0	0	0	0	0
7	0	0	0	0	0	0	0
8	0	0	0	0	0	0	0
9	0	0	0	0	0	0	0
10	0	0	0	0	0	0	0
11	0	0	0	0	0	0	0
12	0	0	0	0	0	0	0
13	0	0	0	0	0	0	0
14	U	U	U	U	U	U	U
15	0	0	0	0	0	0	0
16	0	0	0	0	0	0	0
17	U	U	U	U	U	U	U
18	0	0	0	0	0	0	0
19	0	0	0	0	0	0	0

Figure 4-46 Port Counters Web Page screen

7	0	0	0	0	0	0	0
8	0	0	0	0	0	0	0
9	0	0	0	0	0	0	0
10	0	0	0	0	0	0	0
11	0	0	0	0	0	0	0
12	0	0	0	0	0	0	0
13	0	0	0	0	0	0	0
14	U	U	U	U	U	U	U
15	0	0	0	0	0	0	0
16	0	0	0	0	0	0	0
17	0	0	0	0	0	0	0
18	0	0	0	0	0	0	0
19	0	0	0	0	0	0	0
20	U	U	U	U	U	U	U
21	0	0	0	0	0	0	0
22	0	0	0	0	0	0	0
23	0	0	0	0	0	0	0
24	0	0	0	0	0	0	0
MOD1	0	0	0	0	0	0	0
MOD2	397	0	201	0	23	0	0

Figure 4-47 Port Counters Web Page screen

Press “**ClearAllCnt**” button to refresh current per port counters on Web Smart Switch.

4.9 Access Control List

The **Access Control List (ACL)** is a concept in [computer security](#) used to enforce [privilege separation](#). It is a means of determining the appropriate [access rights](#) to a given object depending on certain aspects of the [process](#) that is making the request, principally the process's [user](#) identifier. **Access Control List (ACL)** is a mechanism that implements access control for a system resource by listing the identities of the system entities that are permitted or denied to access the resource. The screen in following screen appears; table 4-5 descriptions the Access Control List of Web Smart Switch.

Figure 4-48 Access Control List (ACL) Web Page screen

Object	Description
Group id	Input a group ID and available range is 1-255.
Action	To assign “Permit” or “Deny” for Access Control List, the screen in Figure 4-49 appears.
VLAN	To choose VLAN type as “Any” or by “VID (1-4094)”, the screen in Figure 4-50 appears.
Packet Type	To choose Packet type as “IPv4” or by “Non-IPv4”, the screen in Figure 4-51 appears.
IP Fragment	To decide to “check” or “Uncheck” the IP fragment, the screen in Figure 4-52 appears.
L4 Protocol	Provide additional L4 protocol for security on Layer 4 level, the screen in Figure 4-53 & 4-54 & 4-55 appears.
Current List	Display “IPv4” or “Non-IPv4” ACL groups, maximum up to 16 groups and the screen in Figure 4-56 appears.
Add button	Press this button for add Access Control List group on Web Smart Switch, the screen in Figure 4-57 & 4-58 appears.
Del button	Press this button for delete Access Control List group on Web Smart Switch, the screen in Figure 4-59 to 4-60 appears.

Table 4-5 Descriptions of the Access Control List (ACL) screen Objects

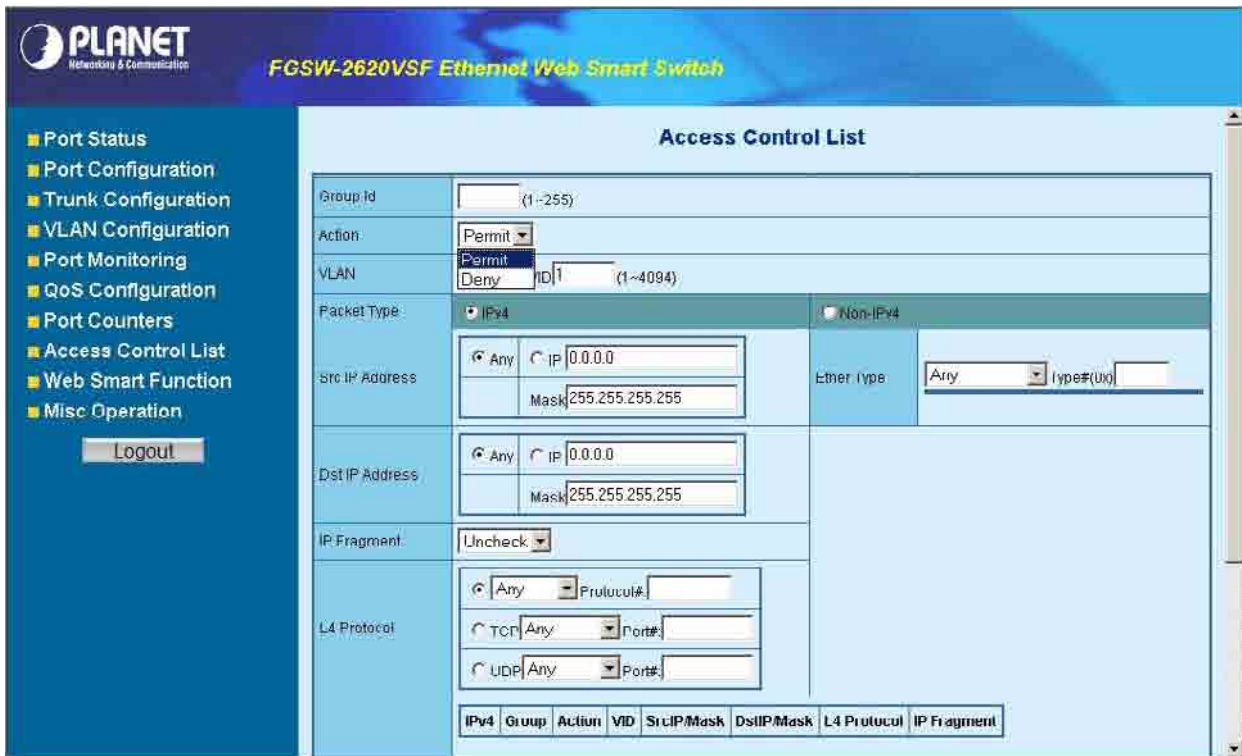


Figure 4-49 Access Control List (ACL) Web Page screen

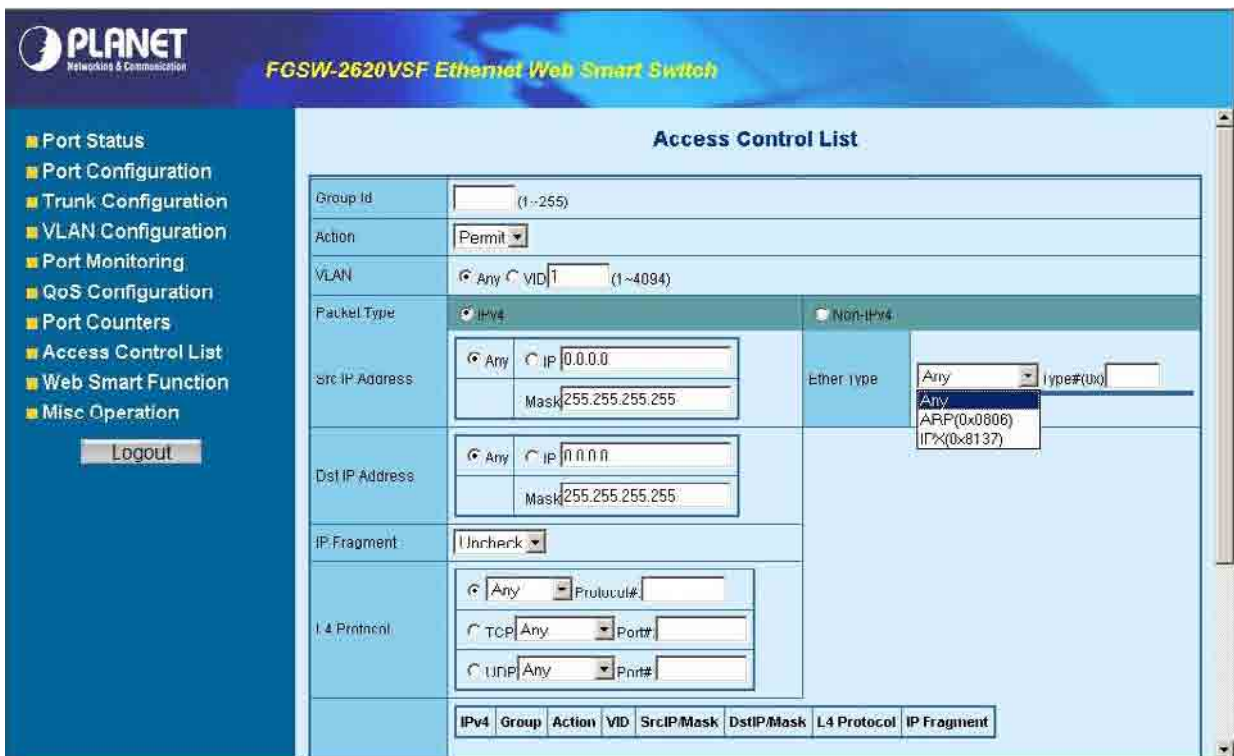


Figure 4-50 Access Control List (ACL) Web Page screen

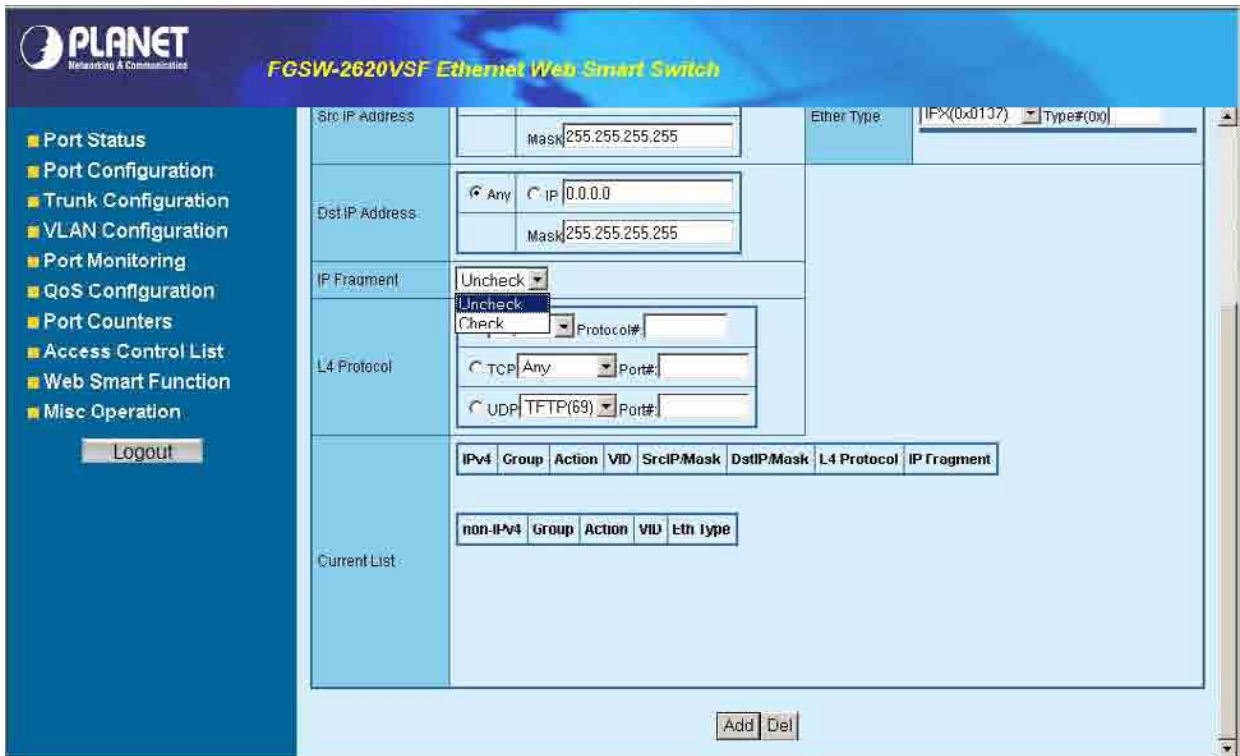


Figure 4-51 Access Control List (ACL) Web Page screen

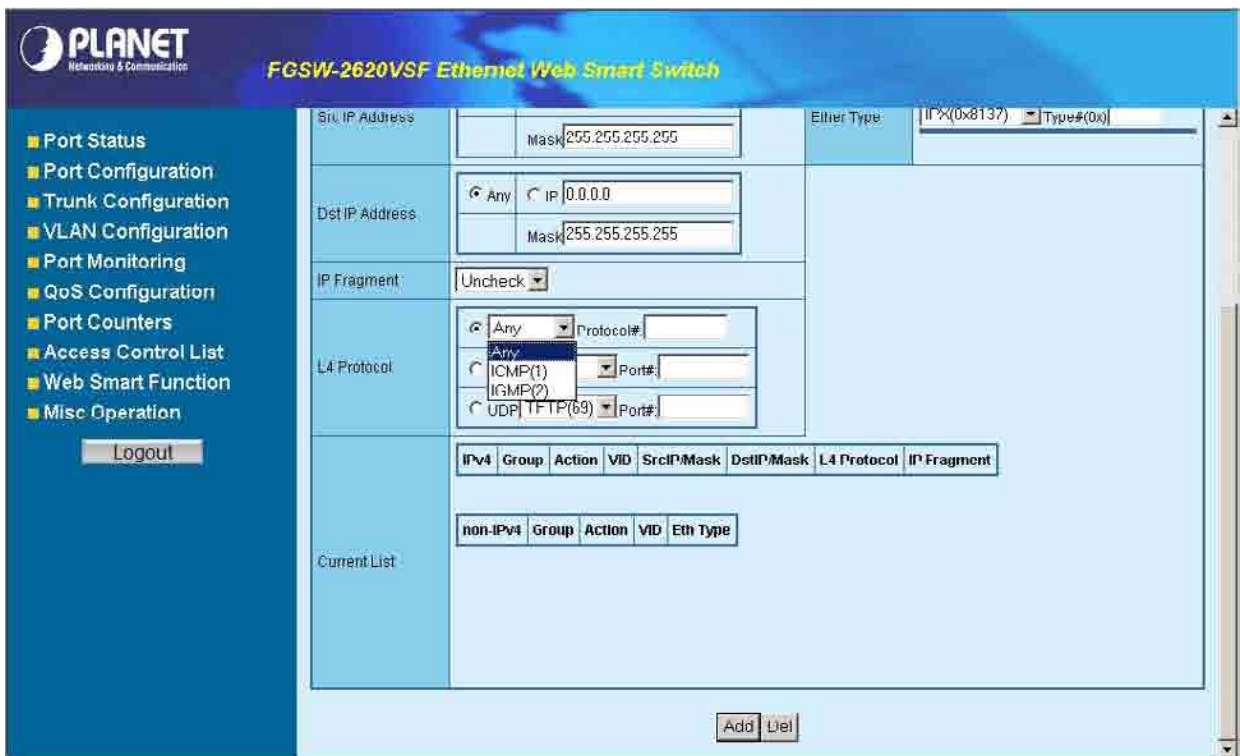


Figure 4-52 Access Control List (ACL) Web Page screen

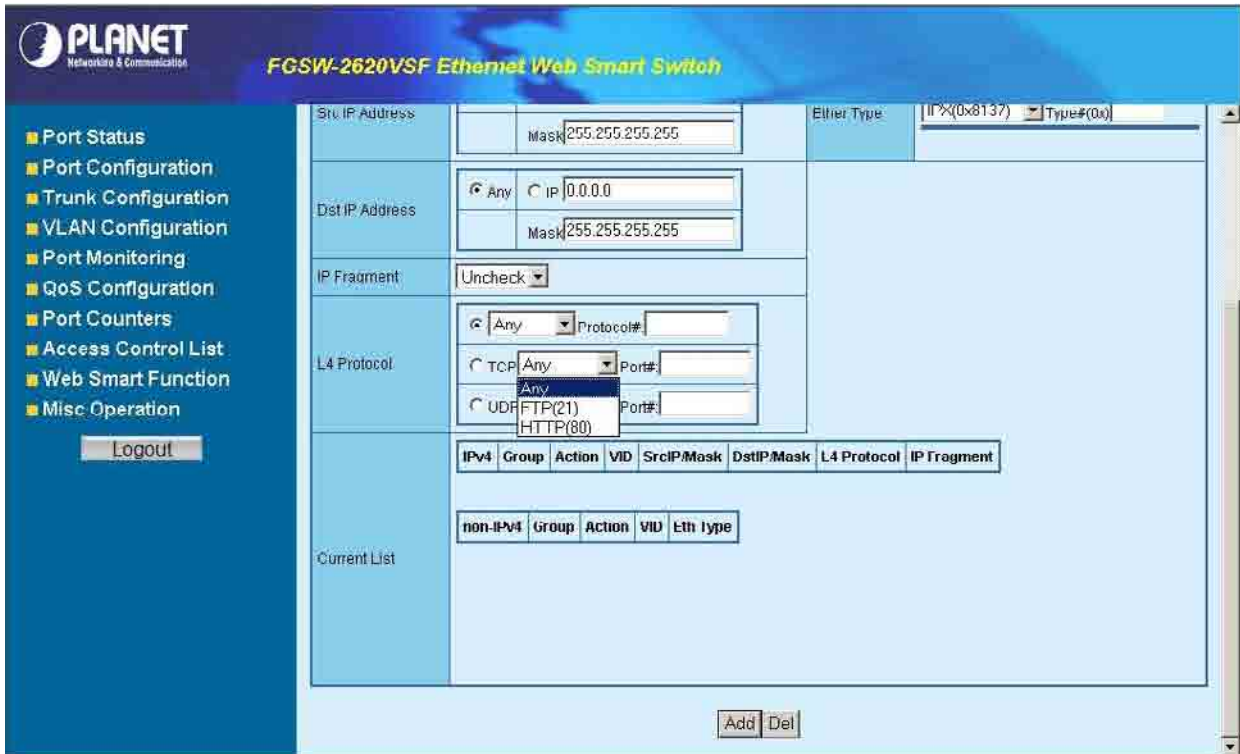


Figure 4-53 Access Control List (ACL) Web Page screen

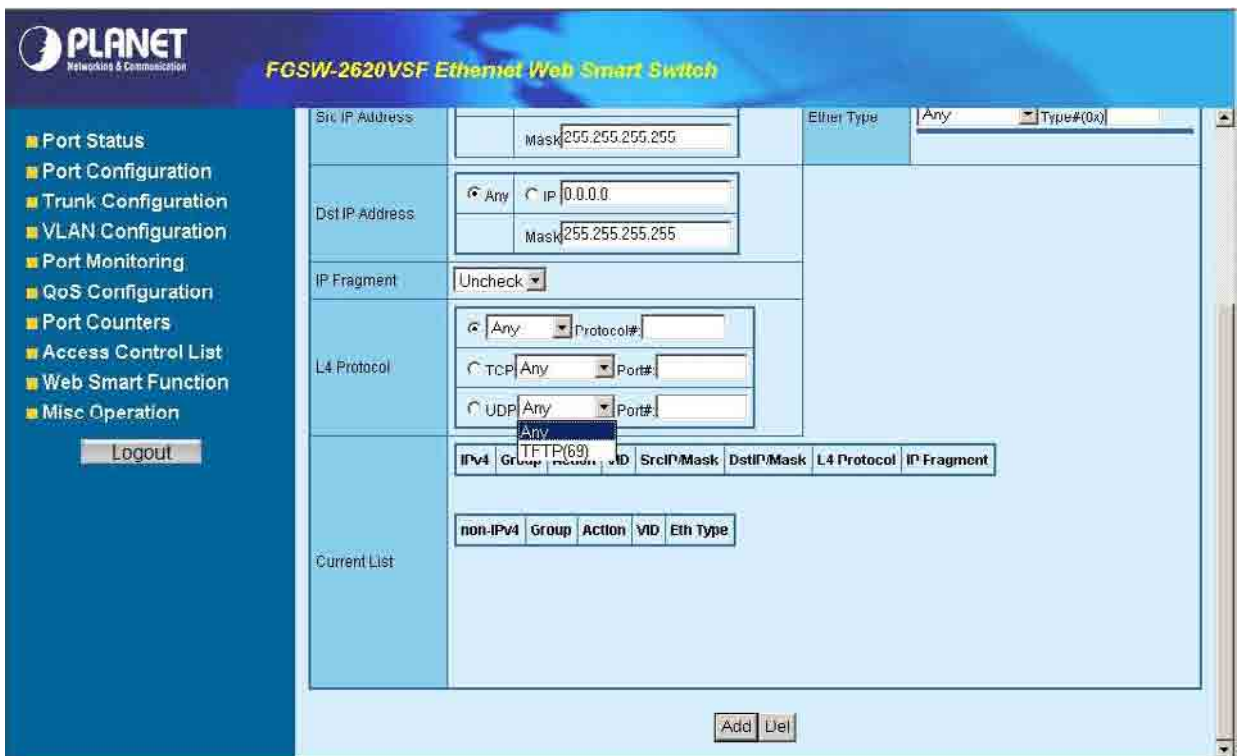


Figure 4-54 Access Control List (ACL) Web Page screen

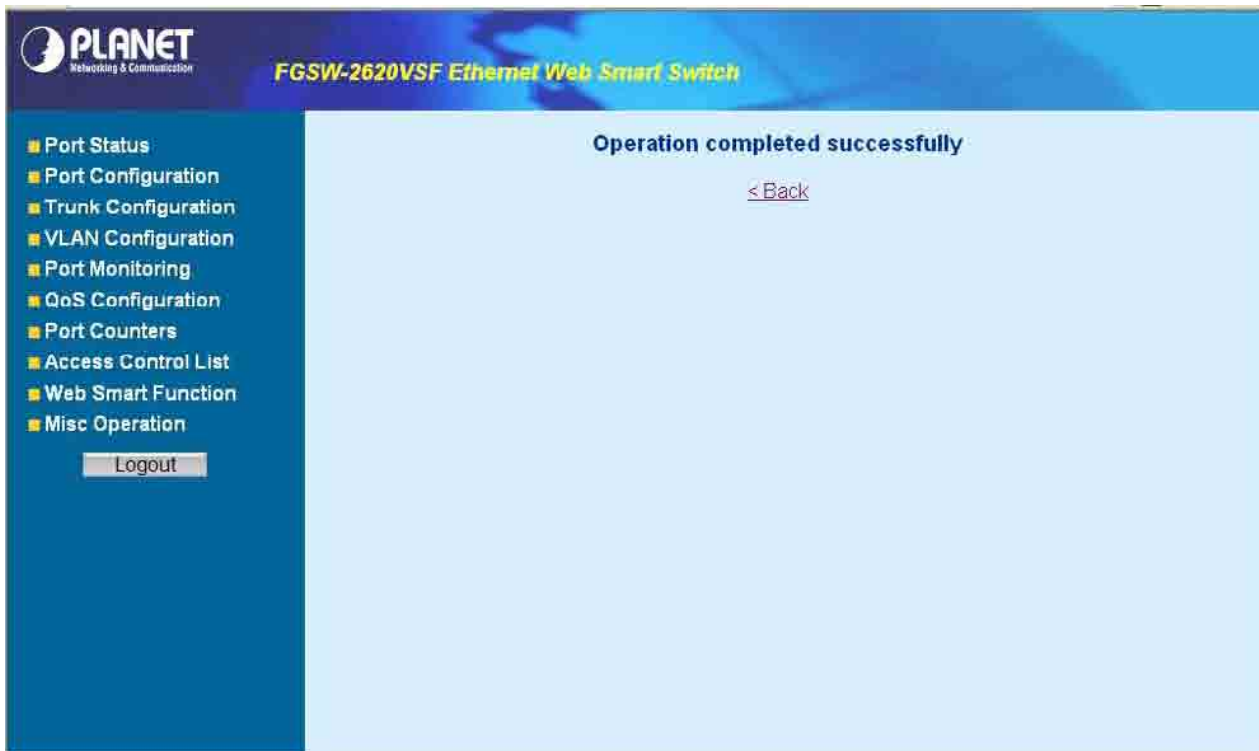


Figure 4-55 Access Control List (ACL) Web Page screen

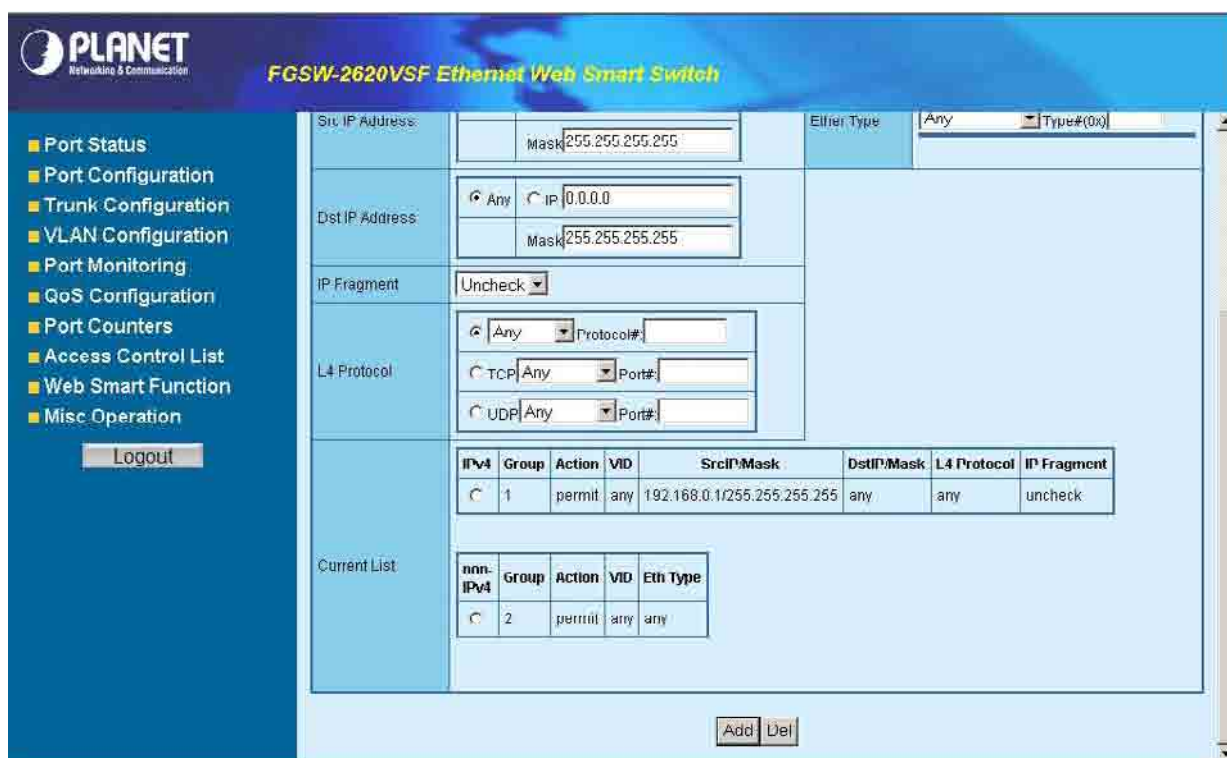


Figure 4-56 Access Control List (ACL) Web Page screen

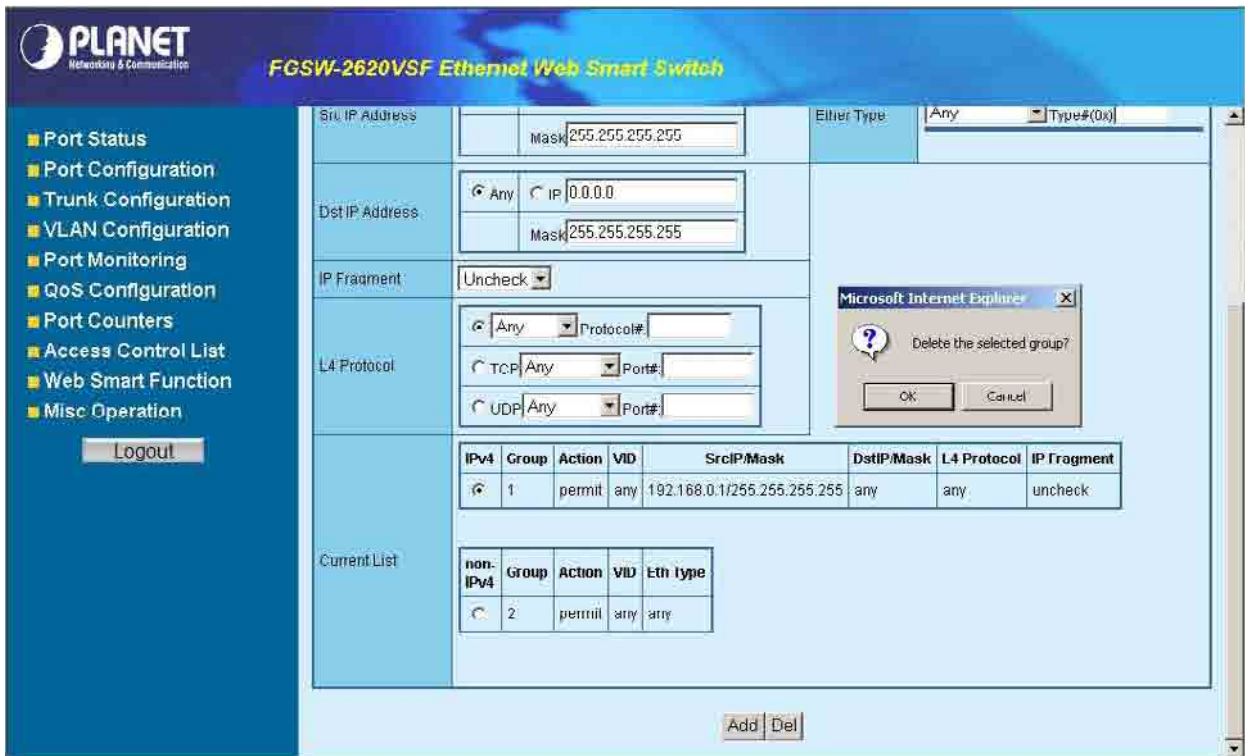


Figure 4-57 Access Control List (ACL) Web Page screen

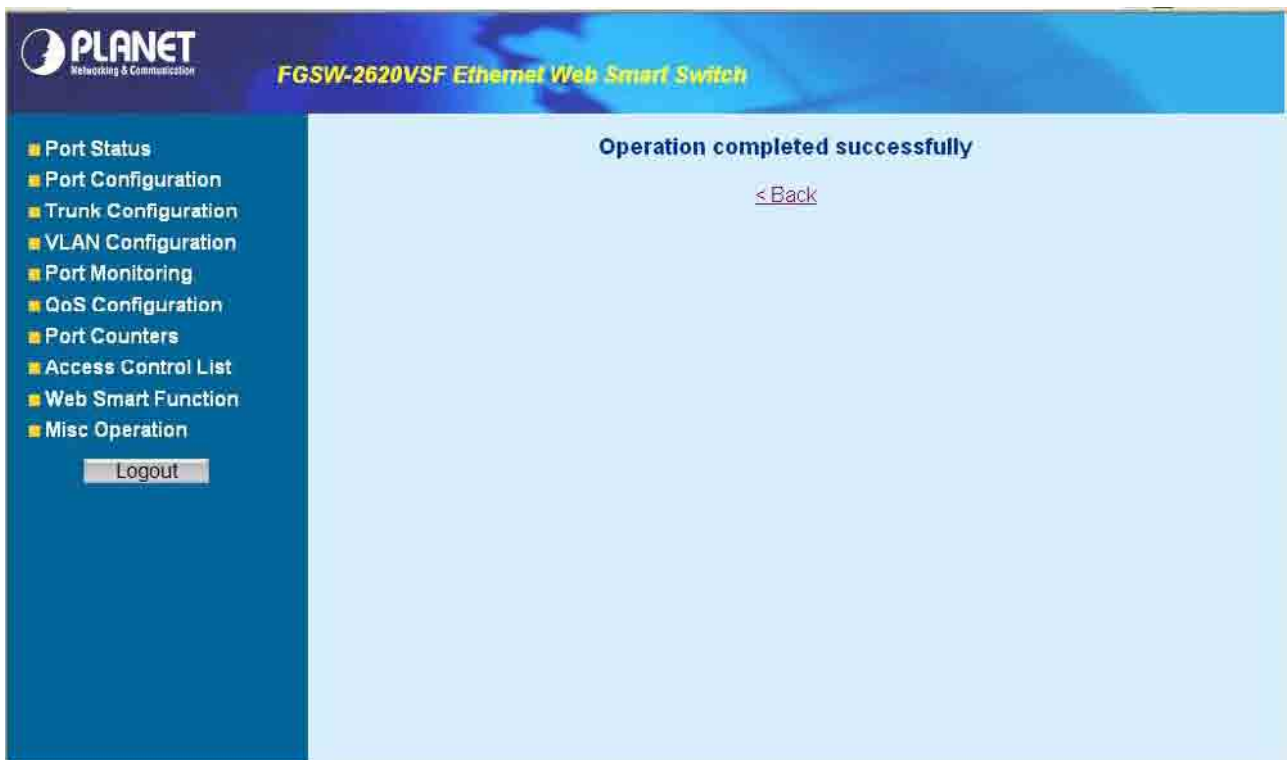


Figure 4-58 Access Control List (ACL) Web Page screen

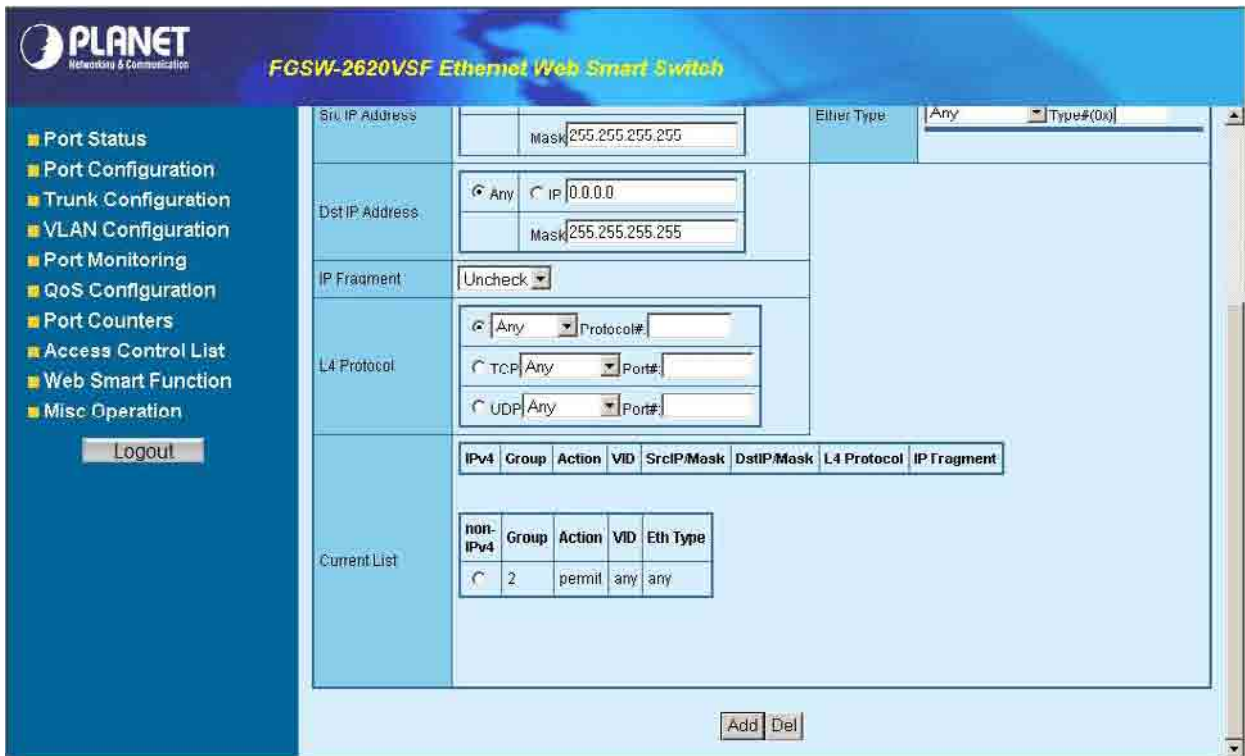


Figure 4-59 Access Control List (ACL) Web Page screen

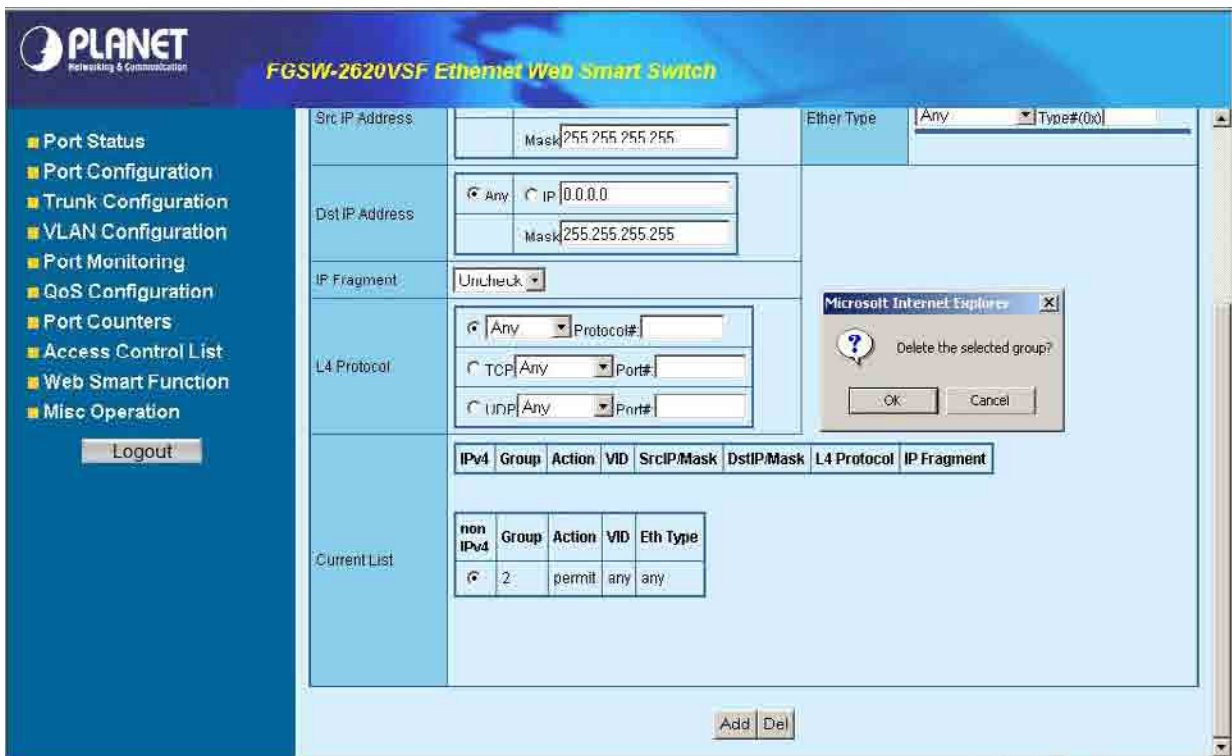


Figure 4-60 Access Control List (ACL) Web Page screen

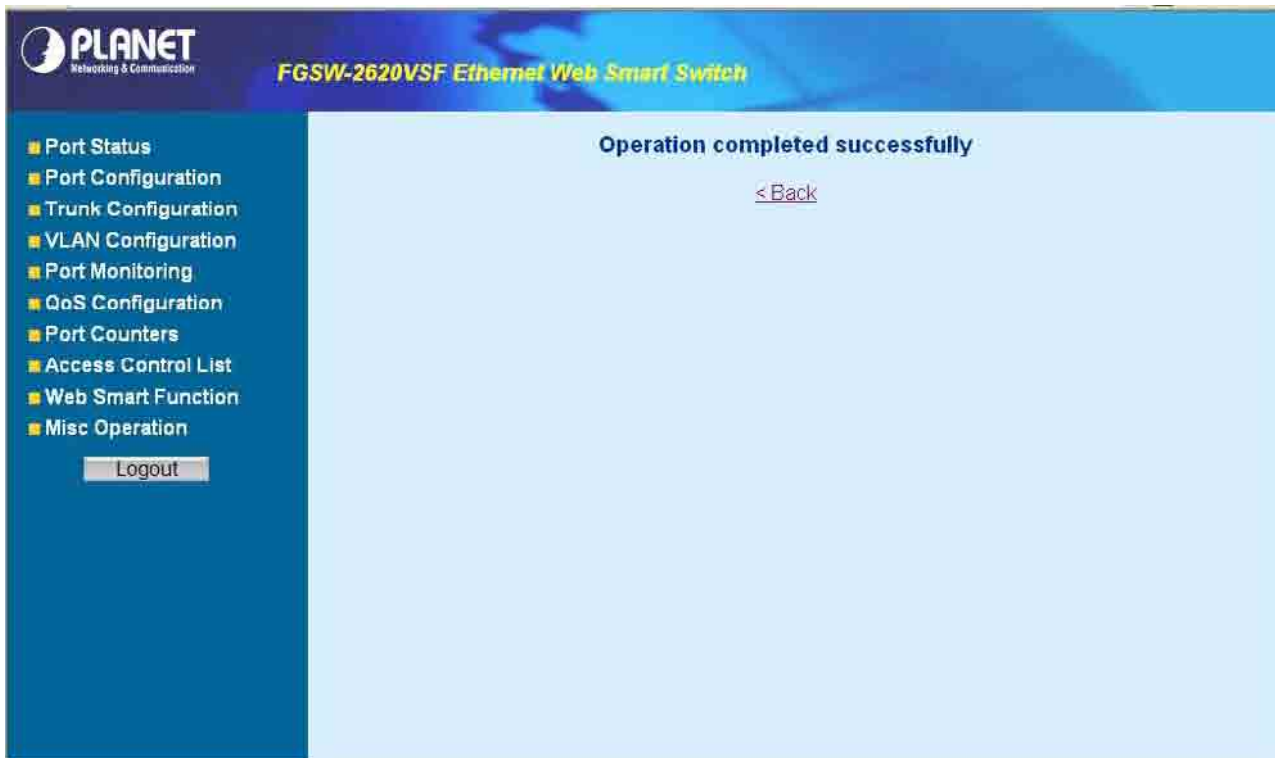


Figure 4-61 Access Control List (ACL) Web Page screen

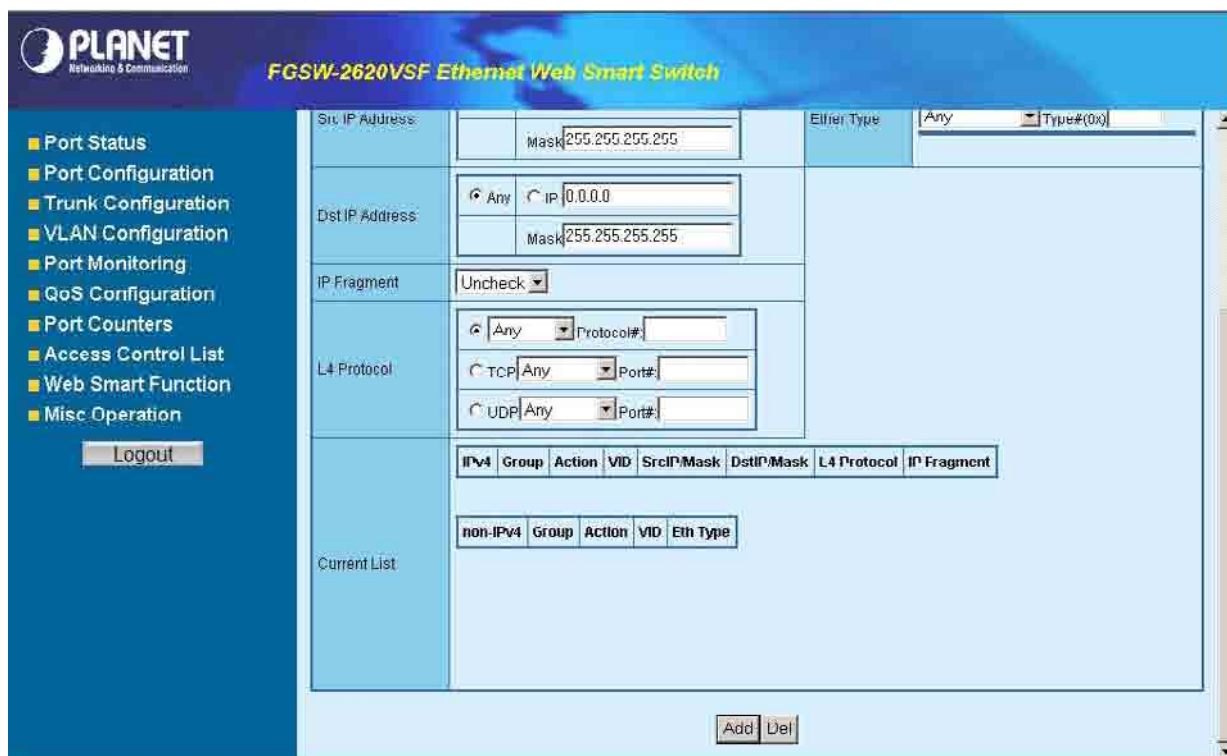


Figure 4-62 Access Control List (ACL) Web Page screen

For more detail information about Access Control List applications, please refer to Appendix B at [page 71](#)

4.10 Web Smart Function

This function could provide you to define device indicate connect to each port on Web Smart Switch, the screen in [Figure 4-63](#) appears.

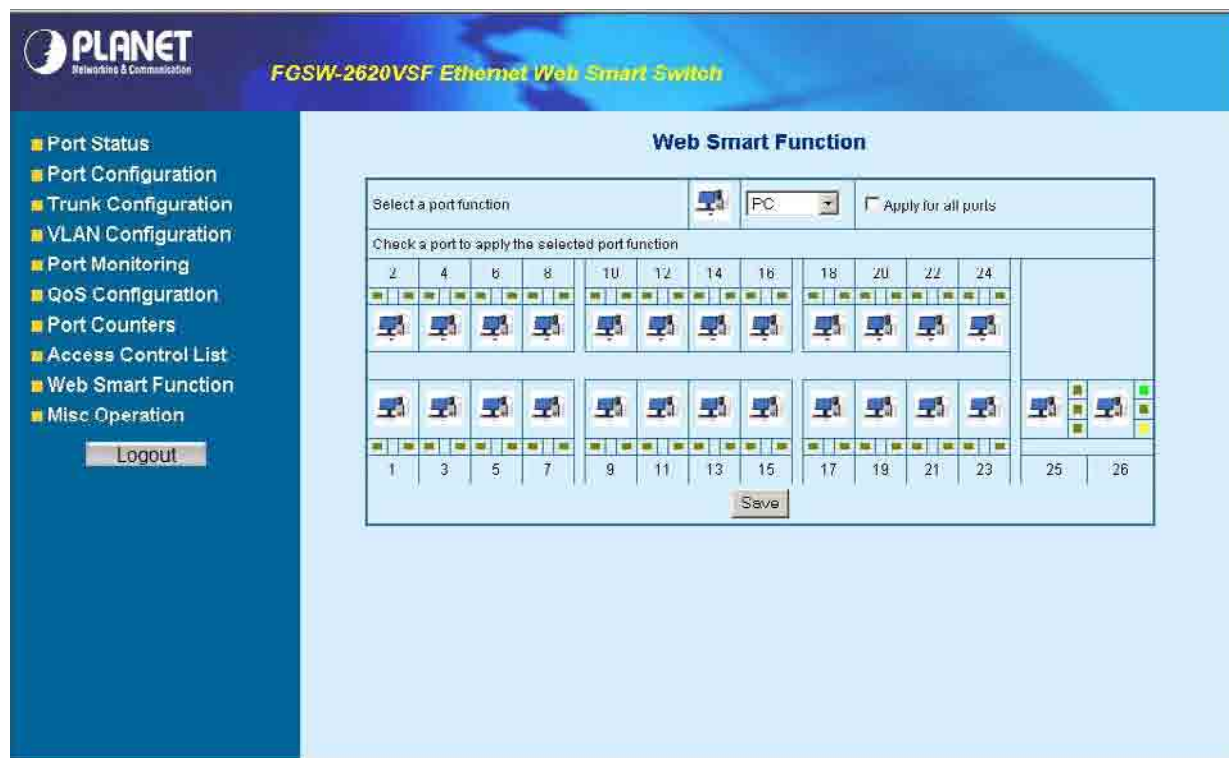


Figure 4-63 Web Smart Function Web Page screen

The available options are shown as below:

1. PC
2. PC+Voip
3. Switch
4. Router
5. AP
6. Server
7. Printer
8. Guest
9. Other

The screen in [Figure 4-64](#) appears and the setup procedure shown as below:

1. Choose a device from options of Select a port function, the screen in [Figure 4-65](#) appears.
2. Check the port that need to marked, the screen in [Figure 4-66](#) appears.
3. After setup completed, press “**Save**” to save current configuration, the screen in [Figure 4-67](#) appears.
4. Please press “**Back**” for return to Web Smart Function screen, the screen in [Figure 4-68](#) appears.

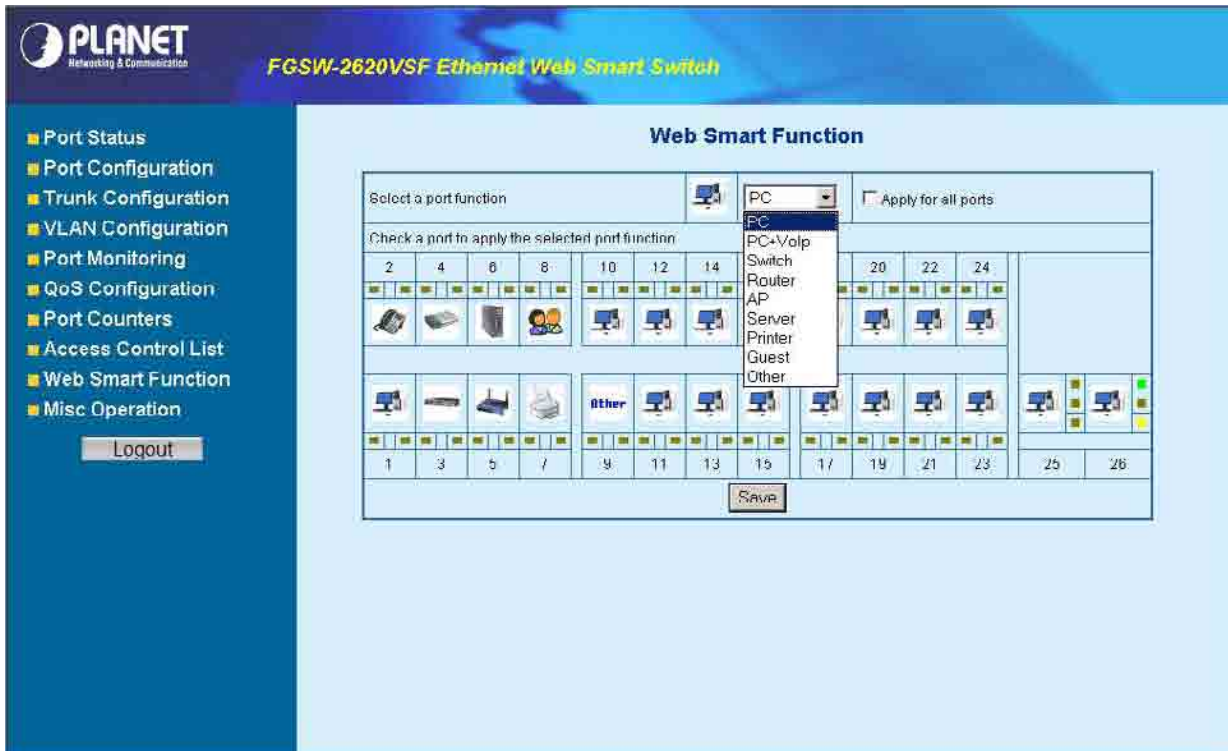


Figure 4-64 Web Smart Function Web Page screen

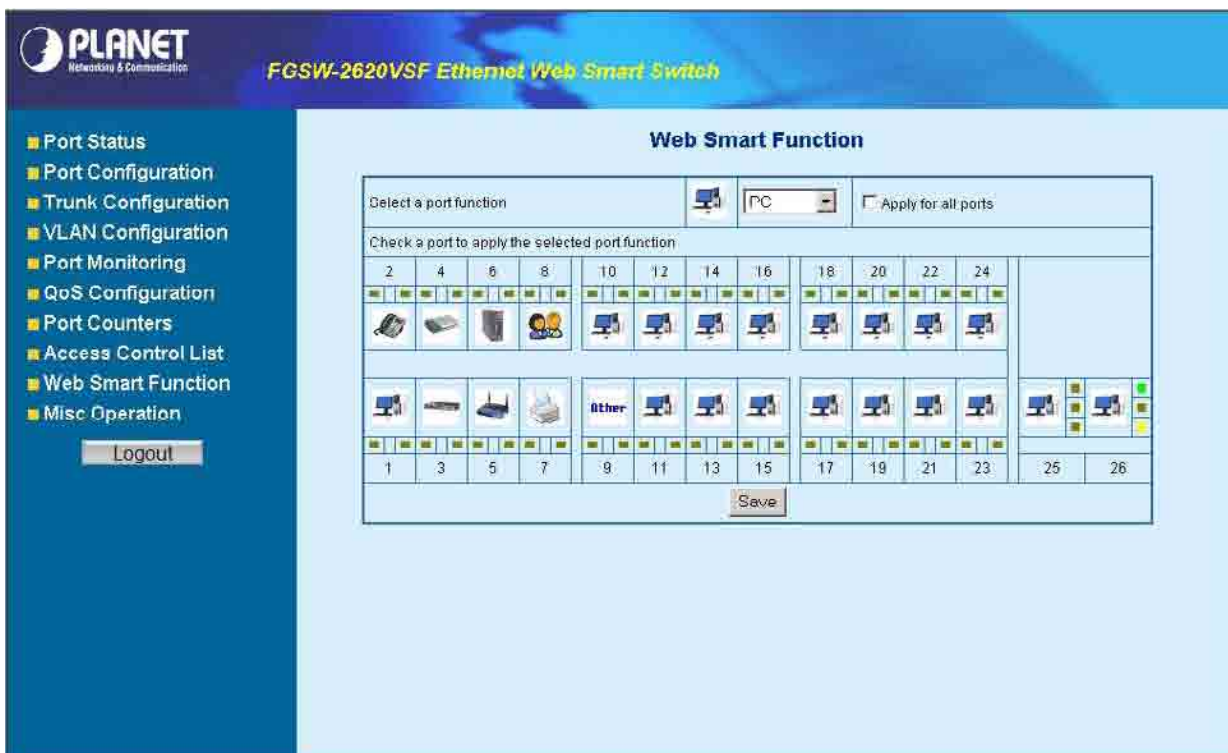


Figure 4-65 Web Smart Function Web Page screen

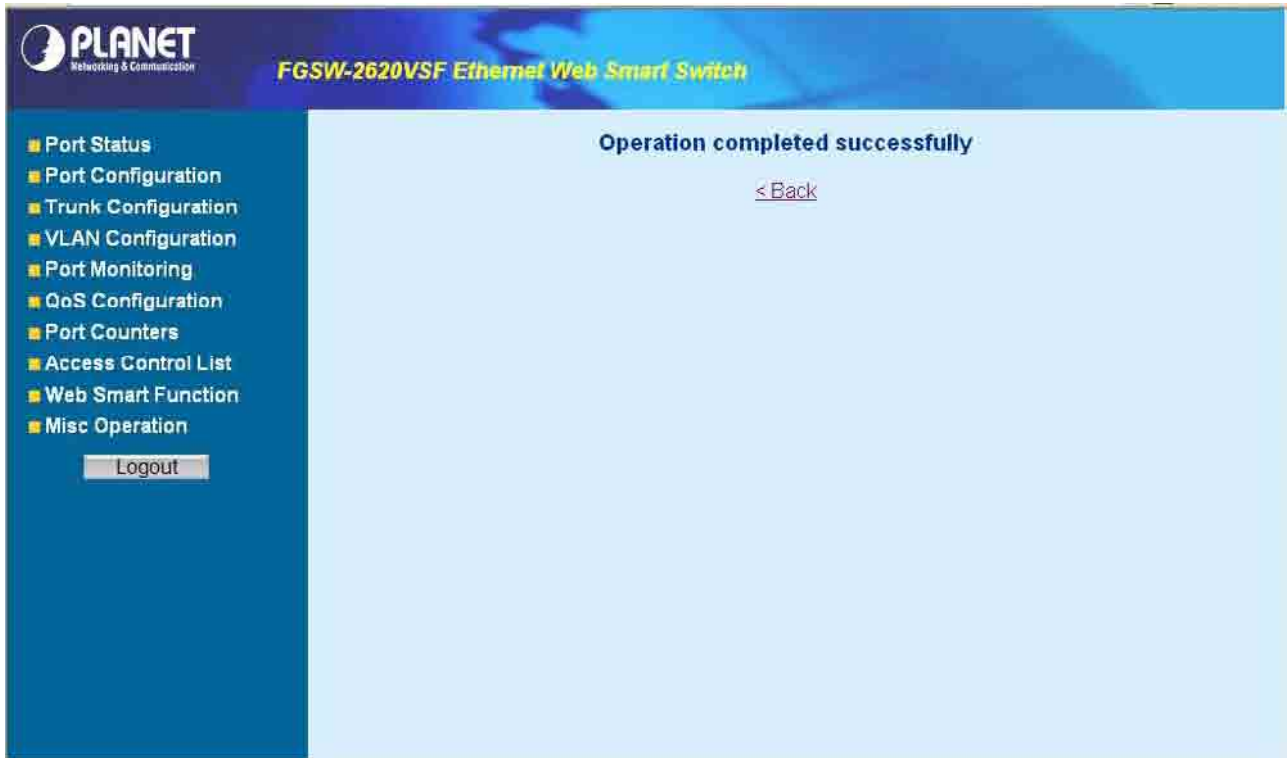


Figure 4-66 Web Smart Function Web Page screen

This function also provides **Apply for all ports** option from Select a port function, the setup procedure shown as below:

1. Choose a device and check “**Apply for all ports**” from options of Select a port function, the screen in [Figure 4-67](#) appears.
2. Check any port then all port will be select; the screen in [Figure 4-68](#) appears.
3. After setup completed, press “**Save**” to save current configuration, the screen in [Figure 4-69](#) appears.
4. Please press “**Back**” for return to Web Smart Function screen, the screen in [Figure 4-70](#) appears.

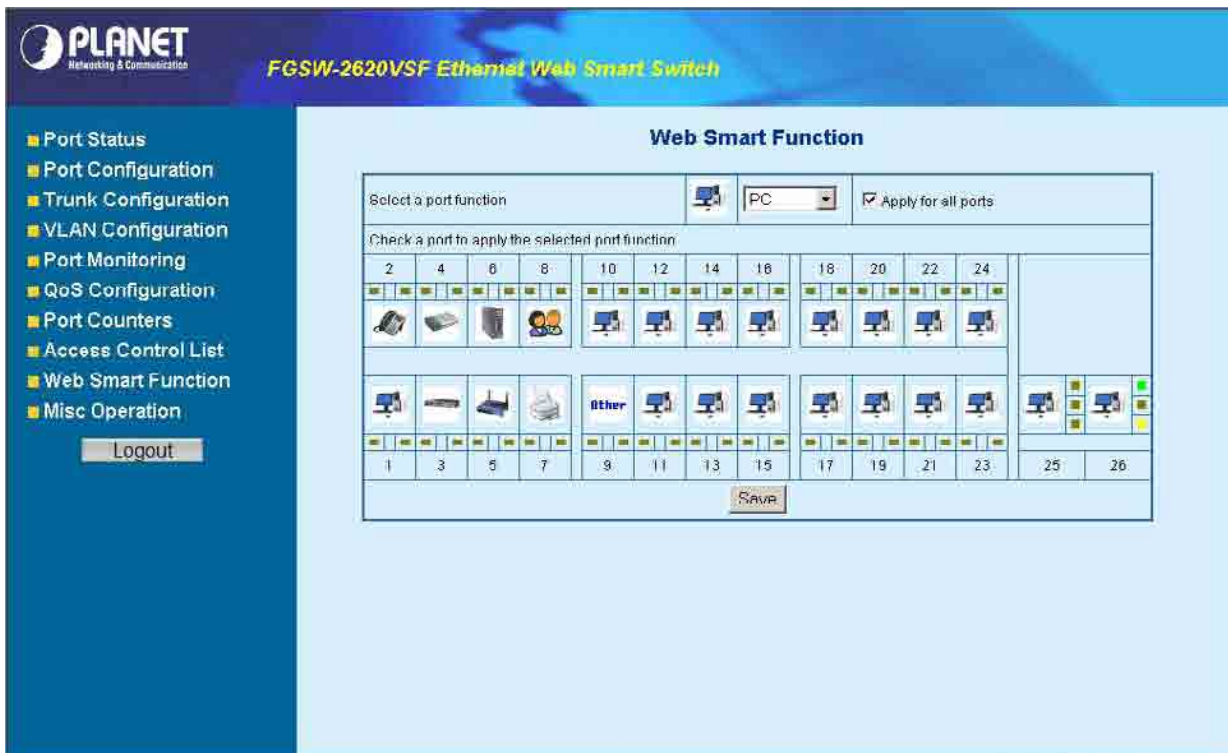


Figure 4-67 Web Smart Function Web Page screen

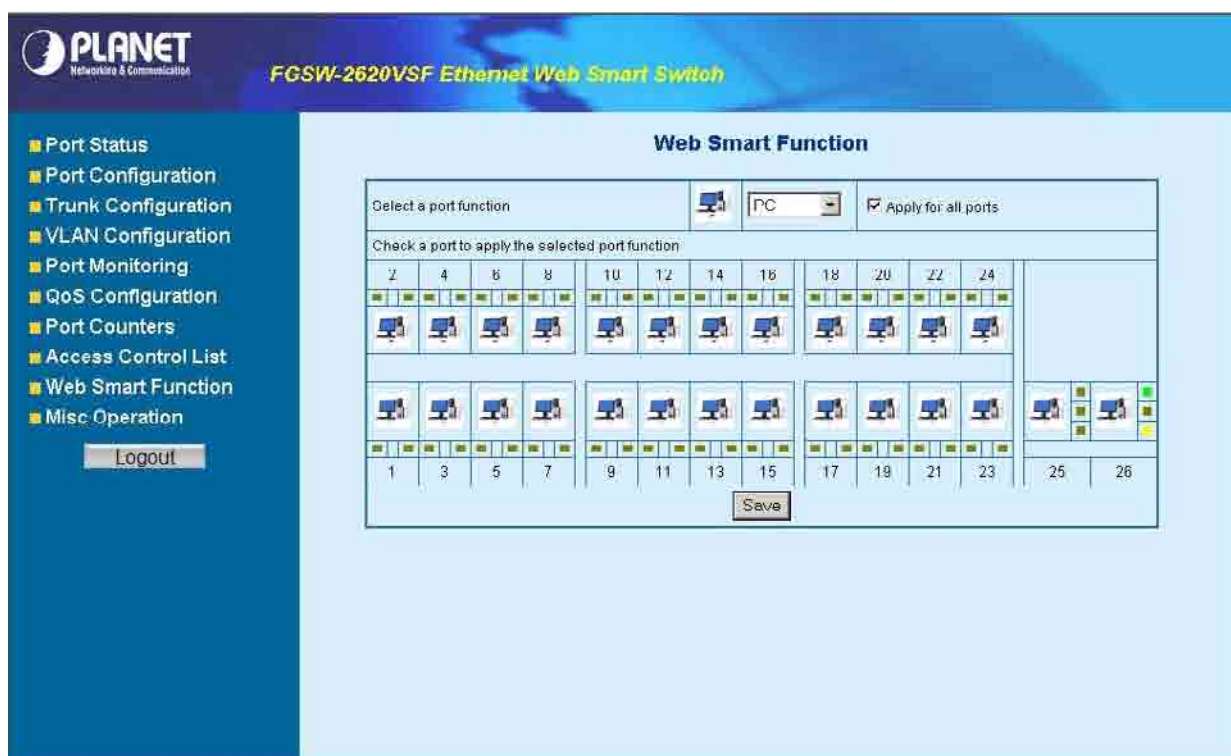


Figure 4-68 Web Smart Function Web Page screen

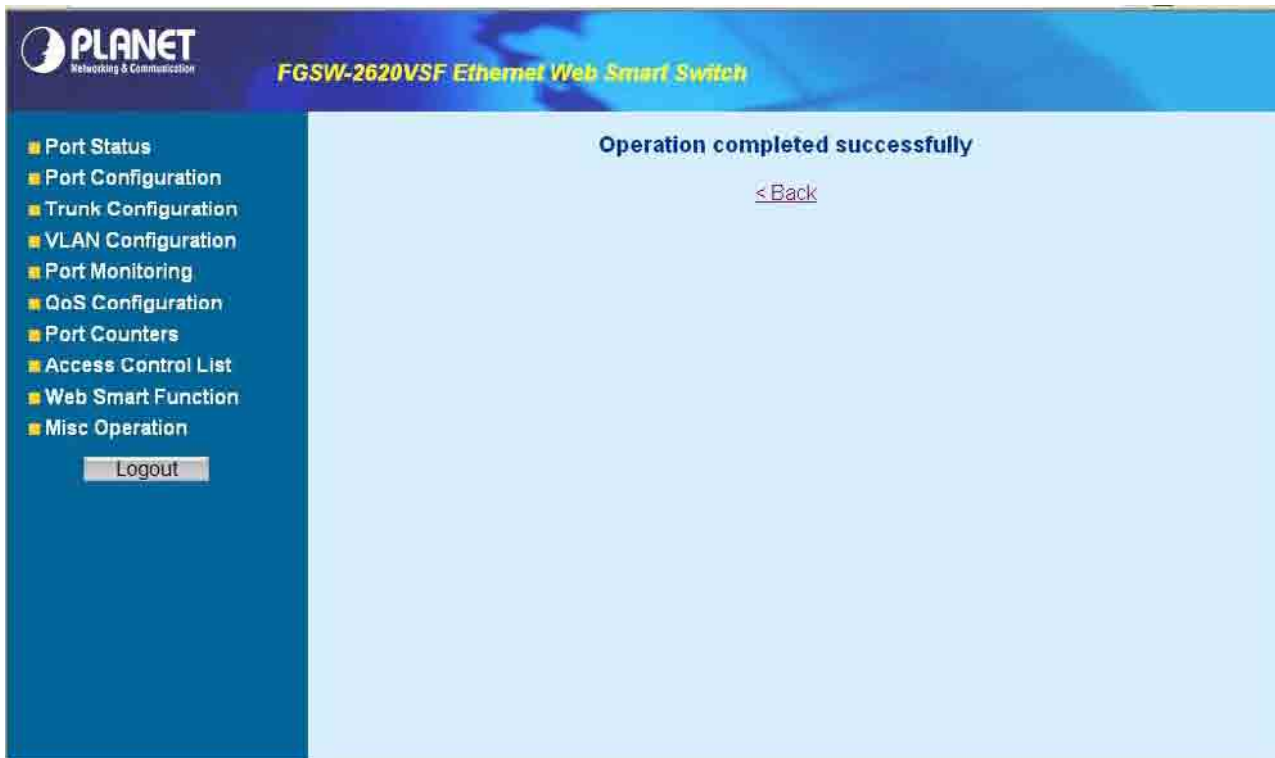


Figure 4-69 Web Smart Function Web Page screen

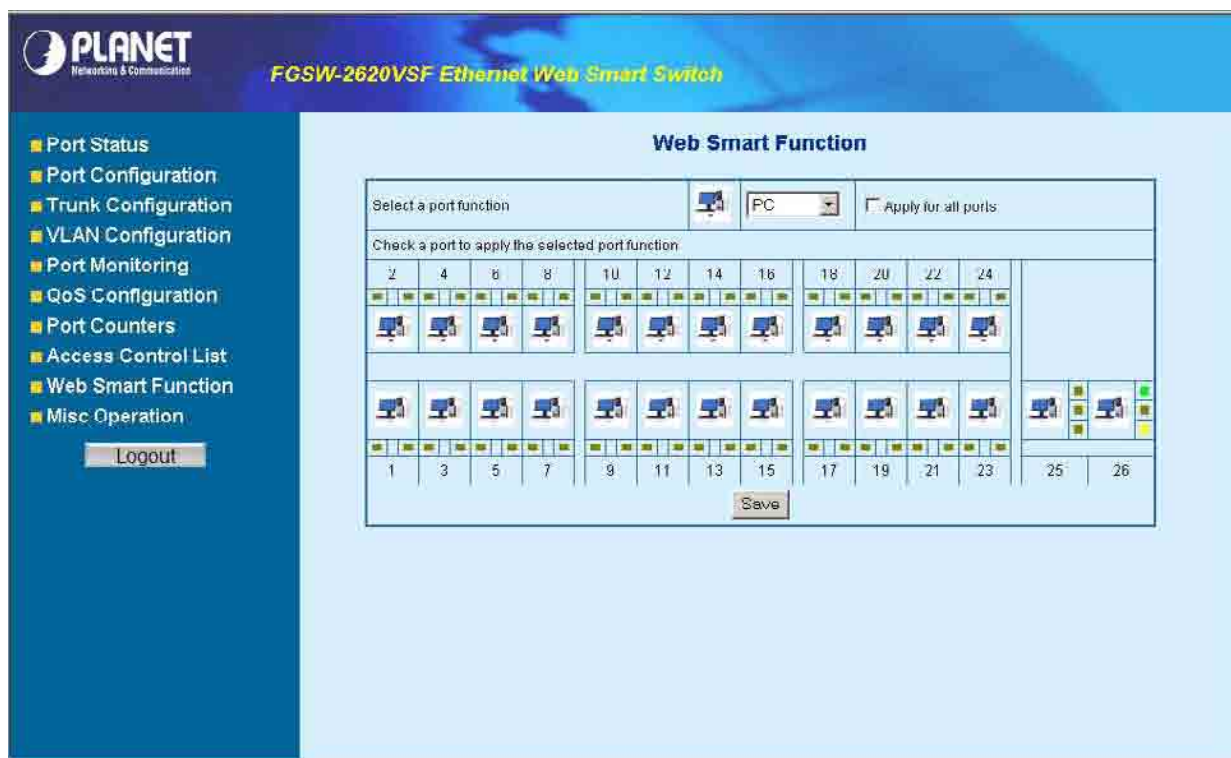


Figure 4-70 Web Smart Function Web Page screen

4.11 Misc Operation

This section provide Misc Operation of Web Smart Switch, the screen in [Figure 4-71](#) appears and table 4-6 descriptions the Misc Operation objects of Web Smart Switch.



Figure 4-71 Misc Operation Web Page screen

Object	Description
Switch Configuration	Provide Advanced Switch Configuration and available options are Broadcast Storm Filter. Collision Retry Forever. MAC Table Auto-Aging. MAC Table Hashing. Web Auto Logout Time. Please refer to section 4.11.1 for detail description.
TFTP Firmware Update	Provide firmware upgrade on Web Smart Switch; please refer to section 4.11.2 for detail description.
Password Setting	Provide password setting on Web Smart Switch; please refer to section 4.11.3 for detail description.
IP Configuration	Provide IP address configuration on Web Smart Switch; please refer to section 4.11.4 for detail description.
Factory Default	Provide Factory Default function on Web Smart Switch; please refer to section 4.11.5 for detail description.
Reboot System	Provide Reboot function on Web Smart Switch; please refer to section 4.11.6 for detail description.
System Information	Display System Information on Web Smart Switch; please refer to section 4.11.7 for detail description.

Table 4-6 Descriptions of the Misc Operation screen Objects

4.11.1 Switch Configuration

Choose Switch Configuration from Misc Operation of Web Smart Switch(please see the [Figure 4-72](#)), the screen in [Figure 4-73](#) appears and table 4-7 descriptions the Switch Configuration from Misc Operation of Web Smart Switch.



Figure 4-72 Switch Configuration Web Page screen

Object	Description
Broadcast Storm Filter	Provide Broadcast storm filter function and available options are Off. 1/2. MAC 1/4. 1/8.1/16. Default mode is Off ; the screen in Figure 4-72 appears.
Collision Retry Forever	Provide Collision Retry Forever function " Disable " or " Enable " on Web Smart Switch; If this function is disabled, when a packet meet a collision, the Web Smart Switch will retry 6 times before discard the packets. Otherwise, the Web Smart Switch will retry until the packet is successfully sent. Default mode is Enable and the screen in Figure 4-73 appears.
MAC Table Auto-Aging	Provide MAC address table aging time setting on Web Smart Switch; available options are Disable. 150 sec. 300 sec. 600 sec. Default mode is 300 sec and the screen in Figure 4-74 appears.
MAC Table Hashing	Provide MAC address table Hashing setting on Web Smart Switch; available options are CRC Hash and Direct Map. Default mode is CRC Hash and the screen in Figure 4-75 appears.
Web Auto Logout Time	Provide Web auto logout time setting on Web Smart Switch; available options are 5 min. 10 min. 20 min. Default mode is 5 min and the screen in Figure 4-76 appears.
Apply button	Press this button for save current Switch configuration on Web Smart Switch.

Table 4-7 Descriptions of the Switch Configuration screen Objects



Figure 4-73 Switch Configuration Web Page screen

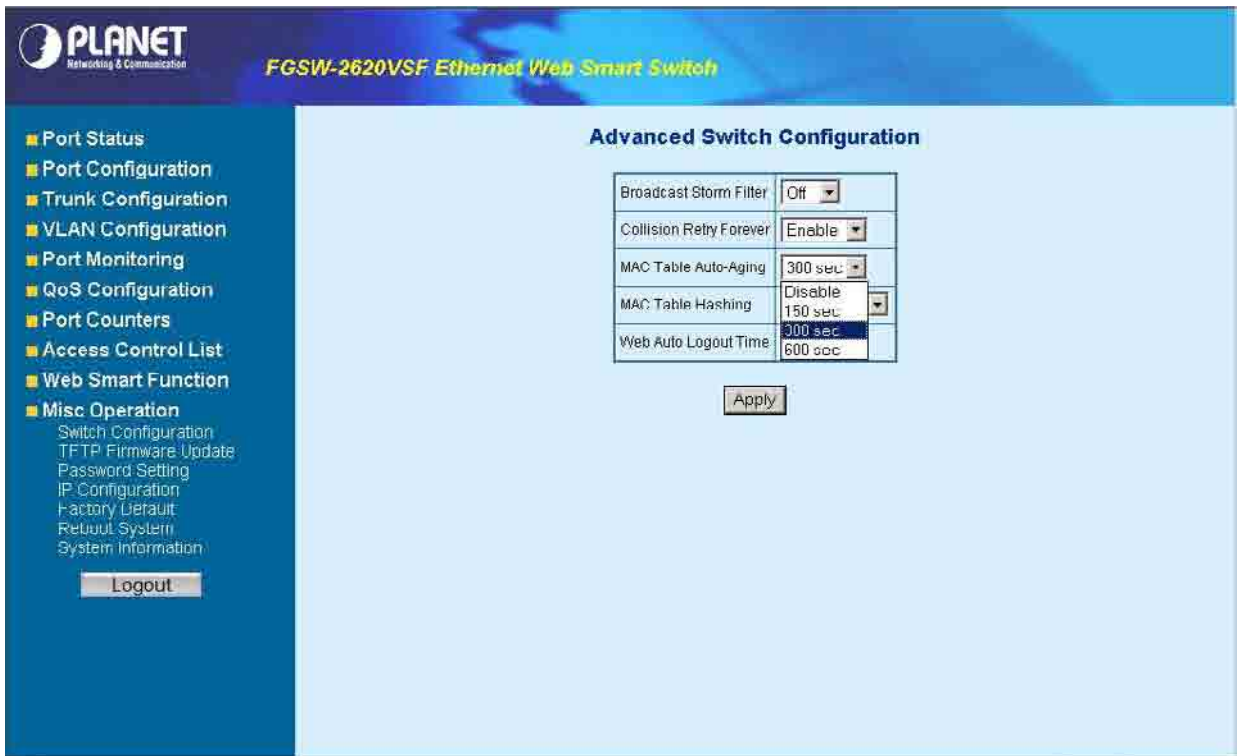


Figure 4-74 Switch Configuration Web Page screen



Figure 4-75 Switch Configuration Web Page screen

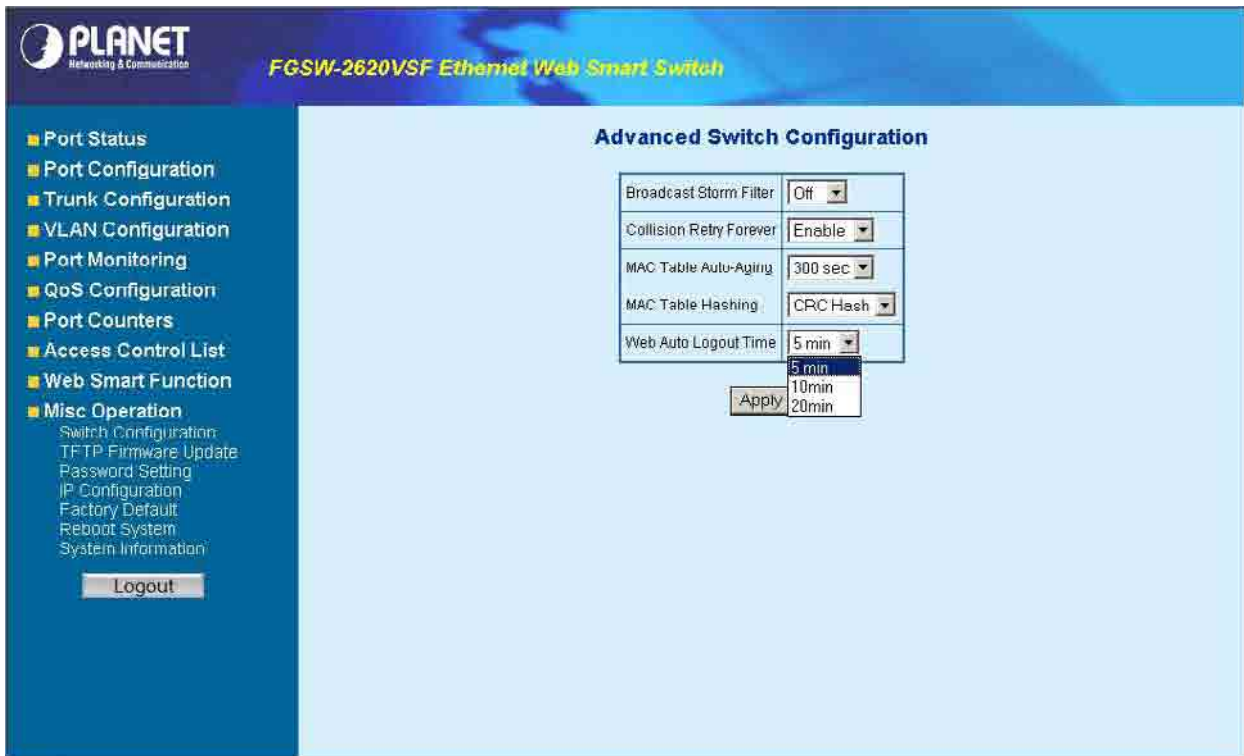


Figure 4-76 Switch Configuration Web Page screen

4.11.2 TFTP Firmware Upgrade

This section provides Firmware upgrade through TFTP method on Web Smart Switch, the screen in [Figure 4-77](#) appears.

PLANET
Networking & Communication

FGSW-2620VSF Ethernet Web Smart Switch

- Port Status
- Port Configuration
- Trunk Configuration
- VLAN Configuration
- Port Monitoring
- QoS Configuration
- Port Counters
- Access Control List
- Web Smart Function
- Misc Operation
 - Switch Configuration
 - TFTP Firmware Update
 - Password Setting
 - IP Configuration
 - Factory Default
 - Reboot System
 - System Information

Logout

TFTP Firmware Update

TFTP Server IP	192.168.1.99
Filename	FGSW-2620VSF_V1.0.BIN

Apply

Figure 4-77 TFTP Firmware Update Web Page screen

4.11.3 Password Setting

This section provides password setting of Web Smart Switch, the screen in Figure 4-78 appears and table 4-8 describes the Password Setting.



Figure 4-78 Password Setting Web Page screen

Object	Description
Password Protection	Provide Password protection function "Disable" or "Enable" on Web Smart Switch; Default mode is Enable .
User Name	Provide to modify password on Web Smart Switch and maximum up to six characters . Default User Name is admin .
New Password	Provide to modify and input a new password on Web Smart Switch; maximum up to six characters . Default password is admin .
Password Again	Provide to input again new password for confirm on Web Smart Switch; maximum up to six characters . Default password is admin .
Apply button	Press this button for save current Password Setting on Web Smart Switch.

Table 4-8 Descriptions of the Password Setting screen Objects

 **Notice:**

Once disable the password protection then user name and password modify is not allow to use.

4.11.4 IP Configuration

This section provides IP Configuration on Web Smart Switch; the screen in [Figure 4-79](#) appears and tables 4-9 descriptions the IP Configuration.

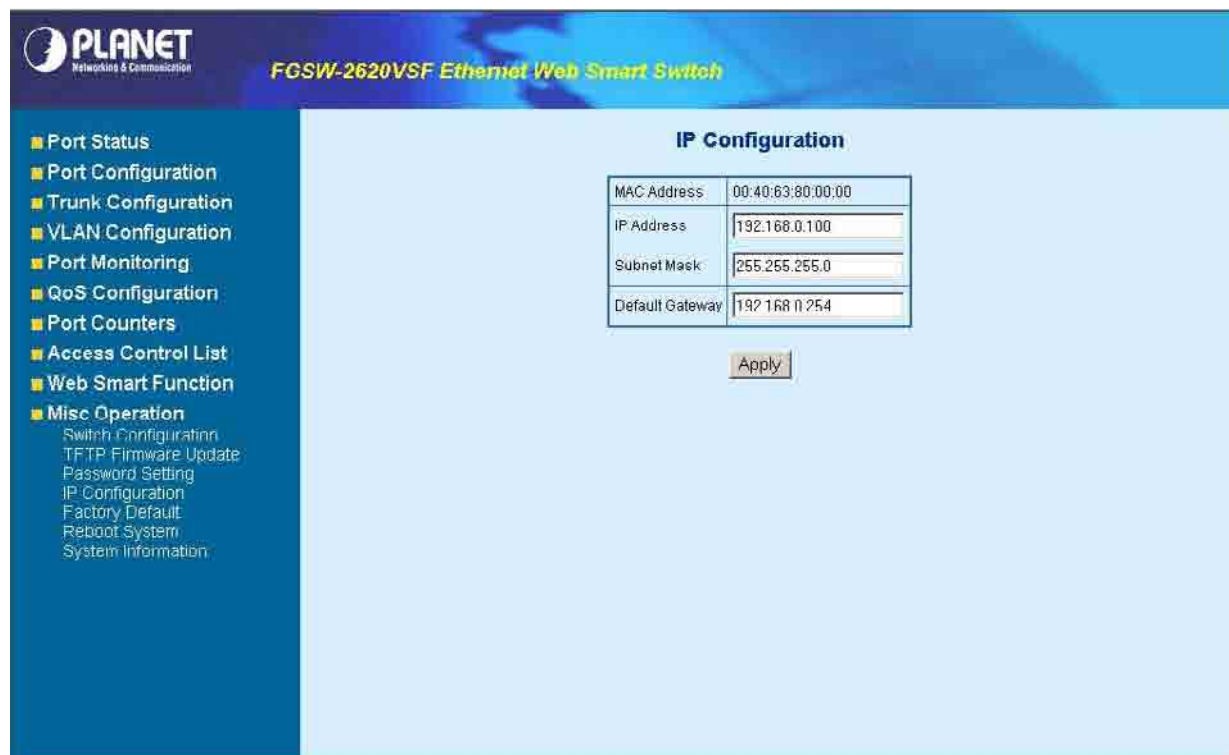


Figure 4-79 IP Configuration Web Page screen

MAC Address	Display MAC address on Web Smart Switch.
IP Address	Provide to modify IP Address on Web Smart Switch. Default IP address is 192.168.0.100 .
Subnet Mask	Provide to modify Subnet Mask on Web Smart Switch. Default Subnet Mask is 255.255.255.0 .
Default Gateway	Provide to modify Default Gateway on Web Smart Switch. Default Gateway is 192.168.0.254 .
Apply button	Press this button for save current IP Configuration on Web Smart Switch. Once press the Apply button then the pop window with “ IP changed. Please Click OK to Re-login ” appears. Press “ OK ” to re-login Web Smart Switch with new IP address.

Table 4-9 Descriptions of the IP Configuration screen Objects

4.11.5 Factory Default

This section provides Factory Default function on Web Smart Switch, after choose this function and the following screen appears in Figure 4-80. Please press “OK” button to take effect and the switch will reset to factory default mode and ask you to waiting rebooting around 10 sec, press “OK” button to re-login the Web Smart Switch. The screen in Figure 4-81 & 4-82 & 4-83 appears.



Figure 4-80 Factory Default Web Page screen

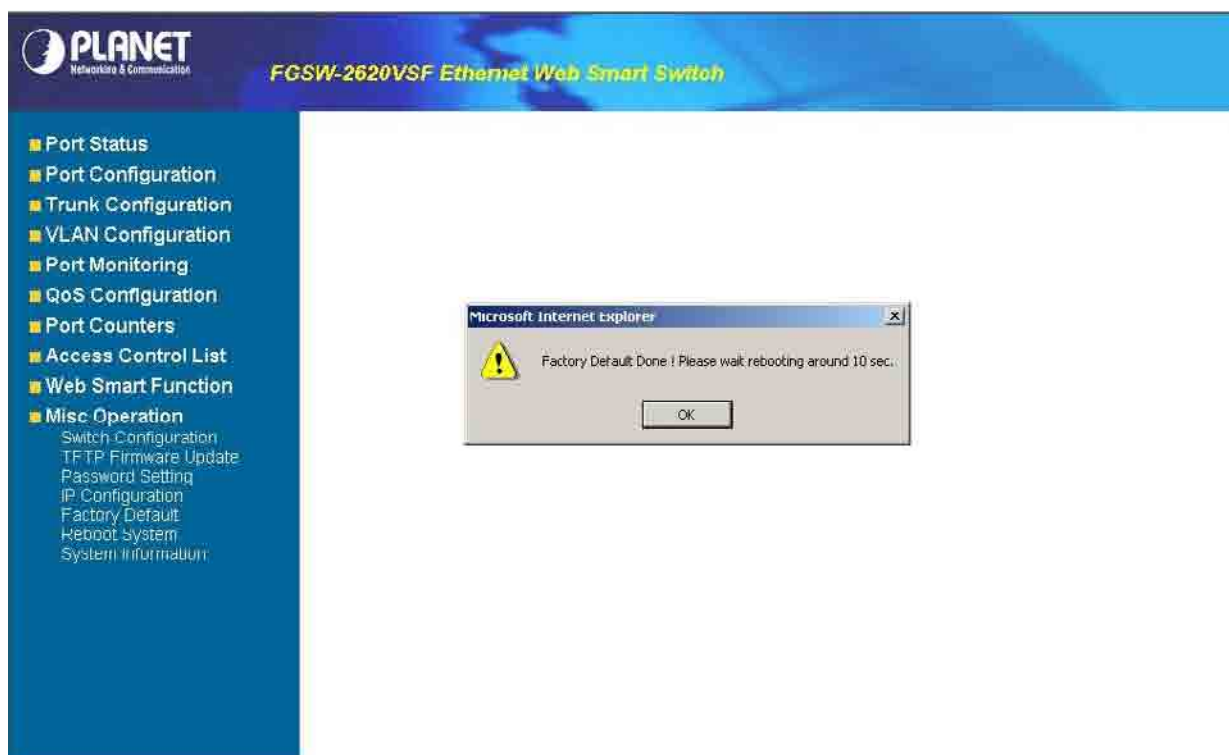


Figure 4-81 Factory Default Web Page screen



Figure 4-82 Factory Default Web Page screen



Figure 4-83 Factory Default Web Page screen

4.11.6 Reboot System

This section provides Reboot function on Web Smart Switch, after choose this function and the following screen appears in Figure 4-84. Please press “OK” button to take effect and the switch will reboot and ask you to waiting rebooting around 10 sec, press “OK” button to re-login the Web Smart Switch. The screen in Figure 4-85 & 4-86 & 4-87 appears.



Figure 4-84 Reboot Web Page screen

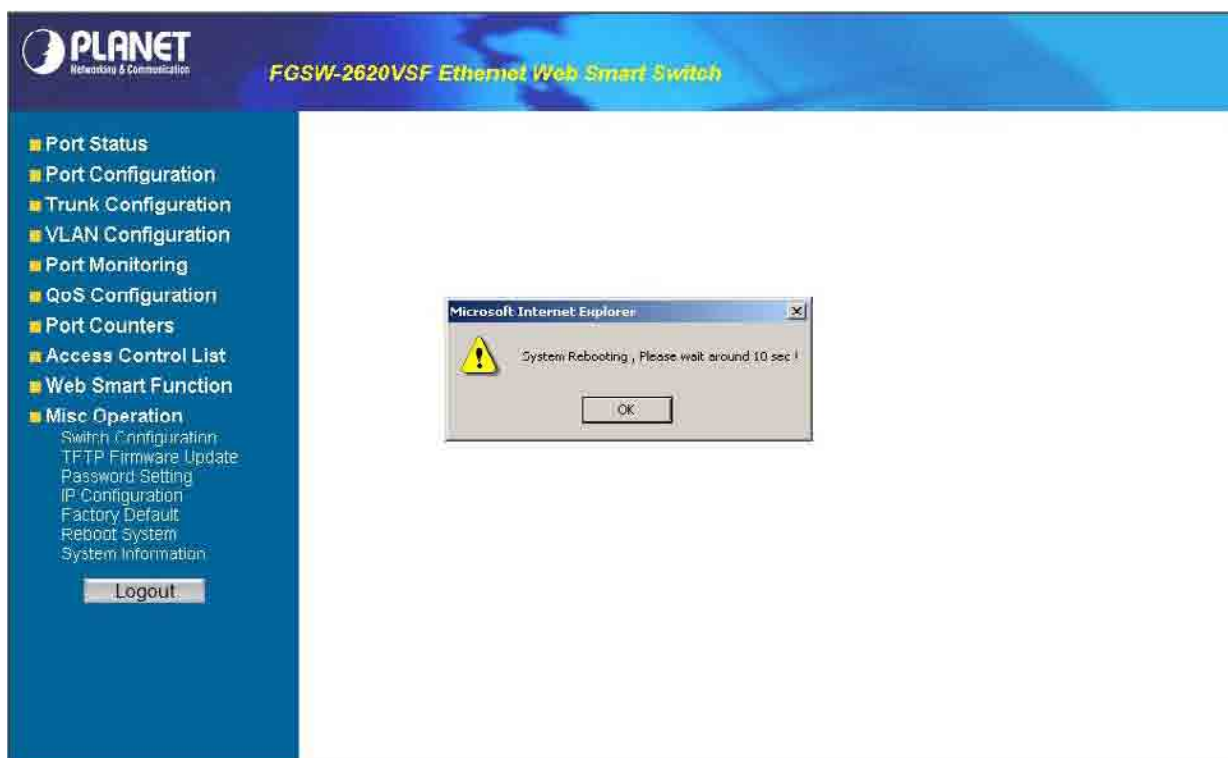


Figure 4-85 Reboot Web Page screen



Figure 4-86 Reboot Web Page screen



Figure 4-87 Reboot Web Page screen

4.11.7 System Information

This section display system information on Web Smart Switch, after choose this function and the following screen appears in Figure 4-88.

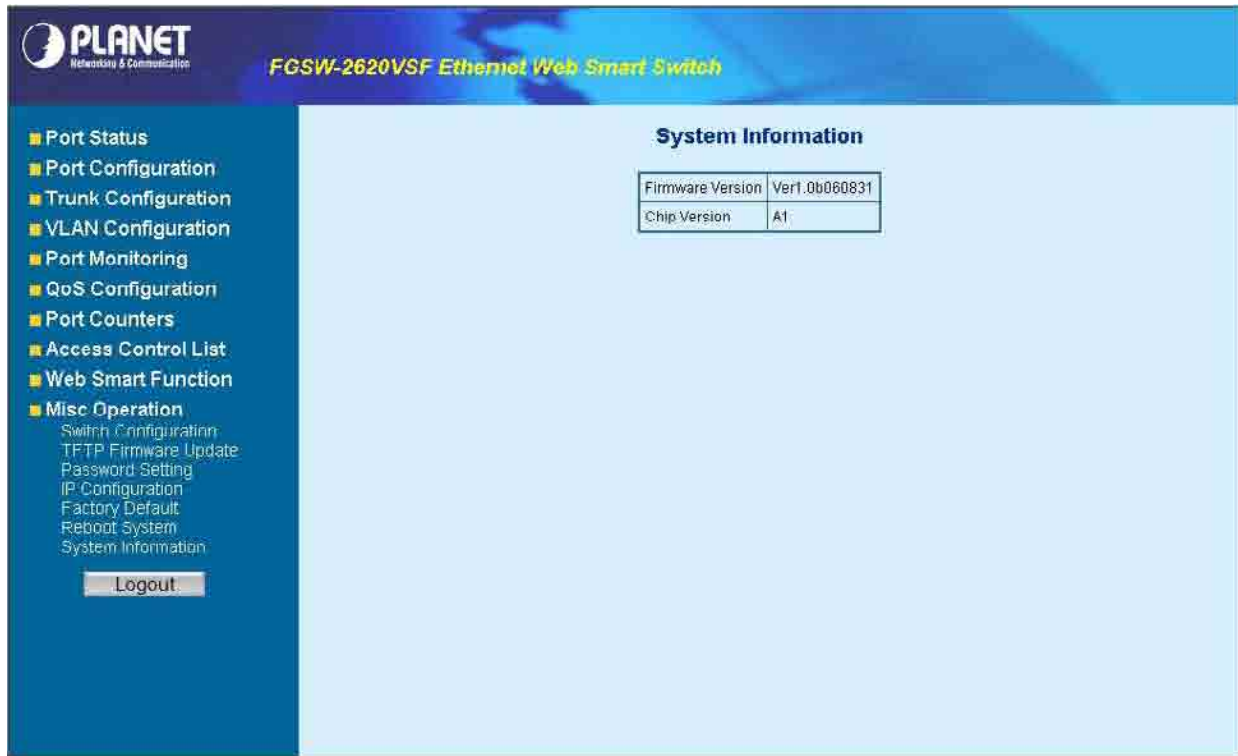


Figure 4-88 System Information Web Page screen

4.12 Logout

This section provide web logout function on Web Smart Switch, after choose this function and the following screen appears in Figure 4-89. Please press “OK” button to take effect and Logout pop window appears, press “OK” button to re-login the Web Smart Switch. The screen in Figure 4-90 & 4-91 & 4-92 appears.



Figure 4-89 Logout Web Page screen



Figure 4-90 Logout Web Page screen



Figure 4-91 Logout Web Page screen

- Port Status
- Port Configuration
- Trunk Configuration
- VLAN Configuration
- Port Monitoring
- QoS Configuration
- Port Counters
- Access Control List
- Web Smart Function
- Misc Operation

Logout

Welcome to PLANET FGSW-2620VSF

24 Ports 10/100Mbps

Web Smart Switch

[PLANET Technology Corporation](#)

11F, No. 96, Min-Chuan Road, Hsin-Tien,
Taipei, Taiwan, R.O.C.
Tel: 886-2-2219-9518
Fax: 886-2-2219-9528
Email: Sales@planet.com.tw

Copyright (c) 2006 Planet Technology Corp., all rights reserved!

Figure 4-92 Logout Web Page screen

5. SWITCH OPERATION

5.1 Address Table

The Switch is implemented with an address table. This address table composed of many entries. Each entry is used to store the address information of some node in network, including MAC address, port no, etc. This information comes from the learning process of Ethernet Switch.

5.2 Learning

When one packet comes in from any port. The Switch will record the source address, port no. And the other related information in address table. This information will be used to decide either forwarding or filtering for future packets.

5.3 Forwarding & Filtering

When one packet comes from some port of the Ethernet Switching, it will also check the destination address besides the source address learning. The Ethernet Switching will lookup the address-table for the destination address. If not found, this packet will be forwarded to all the other ports except the port which this packet comes in. And these ports will transmit this packet to the network it connected. If found, and the destination address is located at different port from this packet comes in, the Ethernet Switching will forward this packet to the port where this destination address is located according to the information from address table. But, if the destination address is located at the same port with this packet comes in, then this packet will be filtered. Thereby increasing the network throughput and availability.

5.4 Store-and-Forward

Store-and-Forward is one type of packet-forwarding techniques. A Store-and Forward Ethernet Switching stores the incoming frame in an internal buffer, do the complete error checking before transmission. Therefore, no error packets occurrence, it is the best choice when a network needs efficiency and stability.

The Ethernet Switch scans the destination address from the packet-header, searches the routing table provided for the incoming port and forwards the packet, only if required. The fast forwarding makes the switch attractive for connecting servers directly to the network, thereby increasing throughput and availability. However, the switch is most commonly used to segment existing hubs, which nearly always improves overall performance. An Ethernet Switching can be easily configured in any Ethernet network environment to significantly boost bandwidth using conventional cabling and adapters.

Due to the learning function of the Ethernet switching, the source address and corresponding port number of each incoming and outgoing packet are stored in a routing table. This information is subsequently used to filter packets whose destination address is on the same segment as the source address. This confines network traffic to its respective domain, reducing the overall load on the network.

The Switch performs "Store and forward" therefore, no error packets occur. More reliably, it reduces the re-transmission rate. No packet loss will occur.

5.5 Auto-Negotiation

The STP ports on the Switch have built-in "Auto-negotiation". This technology automatically sets the best possible bandwidth when a connection is established with another network device (usually at Power On or Reset). This is done by detect the modes and speeds at the second of both device is connected and capable of, both 10Base-T and 100Base-TX devices can connect with the port in either Half- or Full-Duplex mode. 1000Base-T can be only connected in Full-duplex mode.

6.TROUBLESHOOTING

This chapter contains information to help you solve problems. If the Switch is not functioning properly, make sure the Ethernet Switch was set up according to instructions in this manual.

The Link LED is not lit

Solution:

Check the cable connection and remove duplex mode of the Switch.

Some stations cannot talk to other stations located on the other port

Solution:

Please check the VLAN, port trunking function that may introduce this kind of problem.

Performance is bad

Solution:

Check the full duplex status of the Ethernet Switch. If the Ethernet Switch is set to full duplex and the partner is set to half duplex, then the performance will be poor.

100Base-TX port link LED is lit, but the traffic is irregular

Solution:

Check that the attached device is not set to dedicate full duplex. Some devices use a physical or software switch to change duplex modes. Auto-negotiation may not recognize this type of full-duplex setting.

Why the Switch doesn't connect to the network

Solution:

Check the LNK/ACT LED on the switch Try another port on the Switch Make sure the cable is installed properly Make sure the cable is the right type Turn off the power. After a while, turn on power again.

How to deal forgotten password situation of FGSW-2402VS/FGSW-2620VSF

Solution:

Please press Reset button at front panel for 5 seconds then the Web Smart Switch will reset to factory default mode(username and password: admin)

APPENDIX A - NETWORKING CONNECTION

A.1 Switch's RJ-45 Pin Assignments


1000Mbps, 1000Base-T

Contact	MDI	MDI-X
1	BI_DA+	BI_DB+
2	BI_DA-	BI_DB-
3	BI_DB+	BI_DA+
4	BI_DC+	BI_DD+
5	BI_DC-	BI_DD-
6	BI_DB-	BI_DA-
7	BI_DD+	BI_DC+
8	BI_DD-	BI_DC-

10/100Mbps, 10/100Base-TX

RJ-45 Connector pin assignment		
Contact	MDI Media Dependant Interface	MDI-X Media Dependant Interface -Cross
1	Tx + (transmit)	Rx + (receive)
2	Tx - (transmit)	Rx - (receive)
3	Rx + (receive)	Tx + (transmit)
4, 5	Not used	
6	Rx - (receive)	Tx - (transmit)
7, 8	Not used	

A.2 RJ-45 cable pin assignment

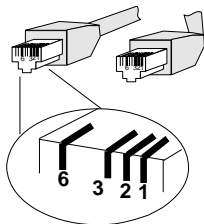

The standard RJ-45 receptacle/connector

There are 8 wires on a standard UTP/STP cable and each wire is color-coded. The following shows the pin allocation and color of straight cable and crossover cable connection:



Figure A-1: Straight-Through and Crossover Cable

Please make sure your connected cables are with same pin assignment and color as above picture before deploying the cables into your network.

APPENDIX B - ACCESS CONTROL LIST APPLICATION GUIDE

Introduction:

■ What is Access Control List

An Access Control List (ACL) consists of a set of rules which are matched sequentially against a packet. When a packet meets the match criteria of a rule, the specified rule action (Permit/Deny) is taken and the additional rules are not checked for a match. On this sample the switch to which an ACL applies must be specified, as well as whether it applies to inbound or outbound traffic. Rules for the ACL are specified/created using the ACL Rule Configuration menu.

■ ACL Concepts

Object	Description
Group id	Input a group ID and available range is 1-255 .
Action	To assign “Permit” or “Deny” for Access Control List
VLAN	To choose VLAN type as “Any” or by “VID (1-4094)”
Packet Type	To choose Packet type as “IPv4” or by “Non-IPv4”
IP Fragment	To decide to “check” or “Uncheck” the IP fragment
L4 Protocol	Provide additional L4 protocol for security on Layer 4 level
Current List	Display “IPv4” or “Non-IPv4” ACL groups, maximum up to 16 groups
Add button	Press this button for add Access Control List group on Web Smart Switch
Del button	Press this button for delete Access Control List group on Web Smart Switch

The screenshot displays the 'Access Control List' configuration page on the Planet FGSW-2620VSF Ethernet Web Smart Switch. The interface includes a navigation menu on the left with options like Port Status, Trunk Configuration, VLAN Configuration, and Access Control List. The main configuration area contains the following fields:

- Group Id:** Input field with a range of (1~255).
- Action:** Dropdown menu set to 'Permit'.
- VLAN:** Radio buttons for 'Any' and 'VID (1~4094)'. 'Any' is selected.
- Packet Type:** Radio buttons for 'IPv4' and 'Non-IPv4'. 'IPv4' is selected.
- Src IP Address:** Input field for IP (0.0.0.0) and Mask (255.255.255.255).
- Dst IP Address:** Input field for IP (0.0.0.0) and Mask (255.255.255.255).
- IP Fragment:** Dropdown menu set to 'Uncheck'.
- L4 Protocol:** Radio buttons for 'Any', 'TCP', and 'UDP'. 'Any' is selected. Below are input fields for Protocol#, Port#, and Port#.
- Ether Type:** Dropdown menu set to 'Any' and an input field for Type#(0x).

At the bottom, there is a table header for the ACL list:

IPv4	Group	Action	VID	SrcIP/Mask	DstIP/Mask	L4 Protocol	IP Fragment
------	-------	--------	-----	------------	------------	-------------	-------------


FGSW- ACL Configure screen

Before the ACL Configure ...

Notice –

It is important to set the VLAN mode to “**Port-Based**” or “**802.1Q**” VLAN before you start the ACL configure. Due to the ACL will check the VLAN ID if necessary, the VLAN mode must be set to **Port-Based** or **802.1Q** mode. And once the VLAN mode is changed, the system has to reboot to apply the new settings.

To set up the VLAN mode, click the “**VLAN Configuration**” at the Function Menu tree. The VLAN mode page appears as the following:

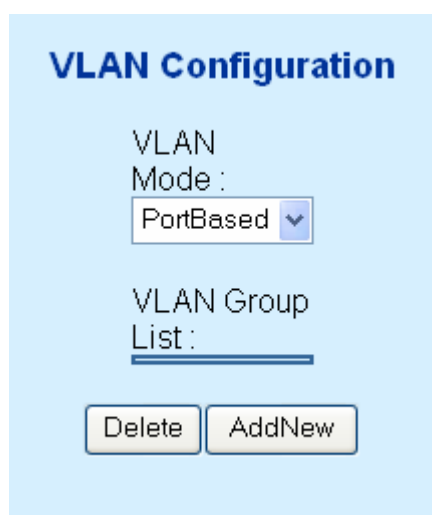

VLAN Configuration

VLAN
Mode :
PortBased ▼

VLAN Group
List :

Delete AddNew

Deny Policy Sample

Case 1: Deny specific Source IP Address – Host

Purpose:


Verify positive and negative matches to a specific host IP address with a **32 bit mask**, no matter the rule defined as permit or deny. Check for Class A,B, and C address.

1. To set a **Host** as the target at this case.
2. Once the deny policy be applied, all IP packets from the target Host IP Address will be **dropped**.
3. No matter IP packets form the target be transmitted to **Internet or Intranet** within the same IP segment, they will be **dropped**.

Case Design:

Action	DENY
Match	IP
Source IP Address	Host IP 192.168.1.1 / 255.255.255.255
Destination IP Address	ANY

Device Connection and Configuration:

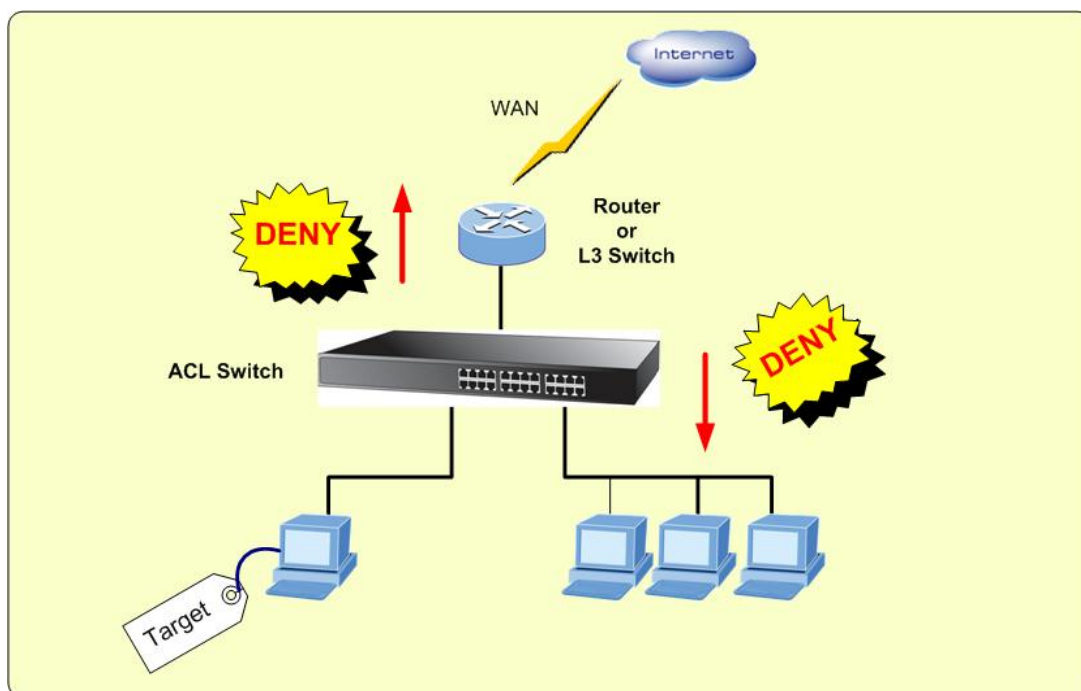

Target	Stream			Protocol
	ID	Source Address	Destination Address	
Host	1	192.168.1.1	Any	Any

ACL Policy Configuration:

Access Control List

Group Id	1 (1~255)		
Action	Deny		
VLAN	<input checked="" type="radio"/> Any <input type="radio"/> VID 1 (1~4094)		
Packet Type	<input checked="" type="radio"/> IPv4		<input type="radio"/> Non-IPv4
Src IP Address	<input type="radio"/> Any <input checked="" type="radio"/> IP 192.168.1.1 Mask 255.255.255.255	Ether Type	Any Type#(0x)
Dst IP Address	<input checked="" type="radio"/> Any <input type="radio"/> IP 0.0.0.0 Mask 255.255.255.255		
IP Fragment	Uncheck		
L4 Protocol	<input checked="" type="radio"/> Any Protocol#: <input type="radio"/> TCP Any Port#: <input type="radio"/> UDP Any Port#:		

ACL Policy Entry:

IPv4	Group	Action	VID	SrcIP/Mask	DstIP/Mask	L4 Protocol	IP Fragment
<input checked="" type="radio"/>	1	deny	any	192.168.1.1/255.255.255.255	any	any	uncheck

Case 2: Deny specific Source IP Address – Class C

Purpose:


Verify a positive and negative matches to network IP address with a **Class C (24 bit mask)**, no matter the rule defined as permit or deny.

1. Set **Hosts** within the same Class C Network domain, as the targets at this case.
2. Once the deny policy be applied, all IP packets from the targets' IP Addresses will be **dropped**.
3. No matter IP packets form the targets be transmitted to **Internet or Intranet** within the same IP segment, they will be **dropped**.

Case Design:

Action	DENY
Match	IP
Source IP Address	Class C 192.168.1.0 / 255.255.255.0
Destination IP Address	ANY

Device Connection and Configuration:

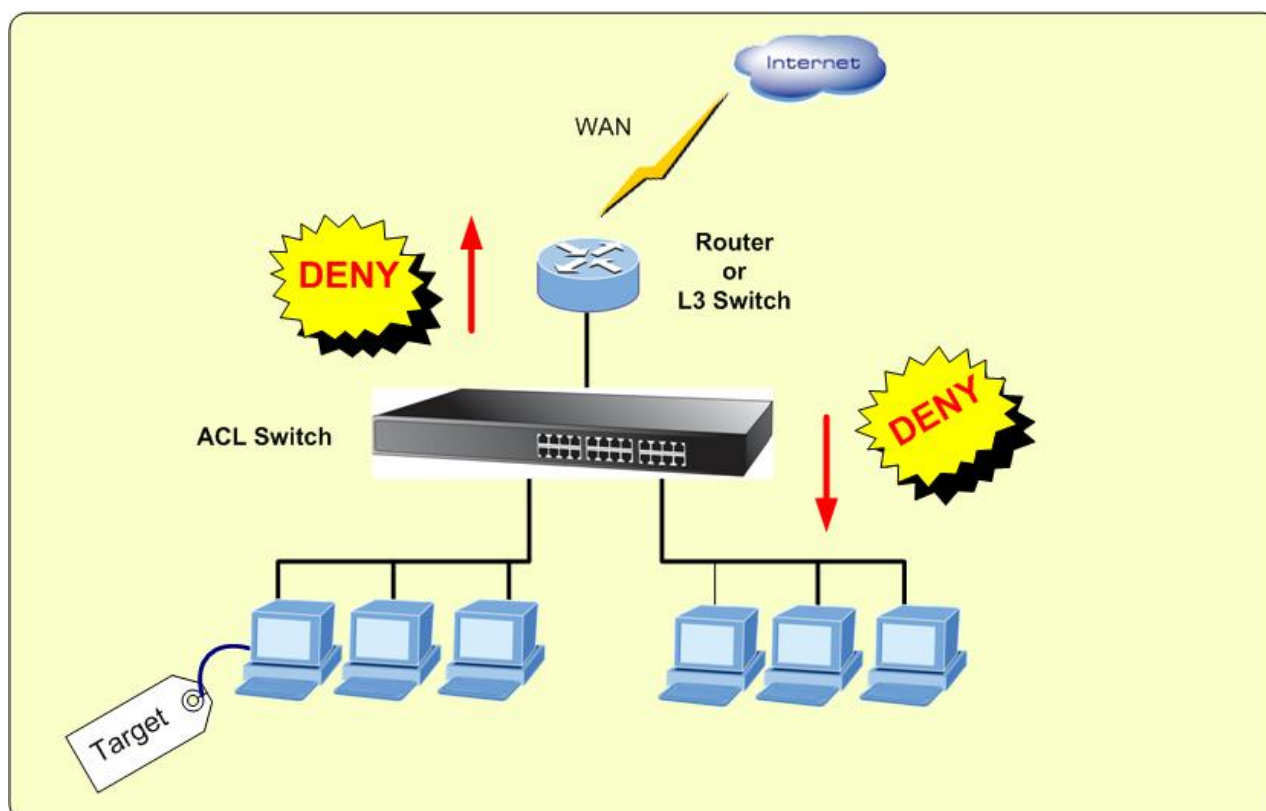

Target	Stream			Protocol
	ID	Source Address	Destination Address	
Class C	2	192.168.1.0 / 255.255.255.0	Any	Any

ACL Policy Configuration:

Access Control List

Group Id	2 (1~255)		
Action	Deny		
VLAN	<input checked="" type="radio"/> Any <input type="radio"/> VID 1 (1~4094)		
Packet Type	<input checked="" type="radio"/> IPv4		<input type="radio"/> Non-IPv4
Src IP Address	<input type="radio"/> Any <input checked="" type="radio"/> IP 192.168.1.0 Mask 255.255.255.0	Ether Type	Any Type#(0x)
Dst IP Address	<input checked="" type="radio"/> Any <input type="radio"/> IP 0.0.0.0 Mask 255.255.255.255		
IP Fragment	Uncheck		
L4 Protocol	<input checked="" type="radio"/> Any Protocol#: <input type="radio"/> TCP Any Port#: <input type="radio"/> UDP Any Port#:		

ACL Policy Entry:

IPv4	Group	Action	VID	SrcIP/Mask	DstIP/Mask	L4 Protocol	IP Fragment
<input type="radio"/>	2	deny	any	192.168.1.0/255.255.255.0	any	any	uncheck

Case 3: Deny IP packets to specific Class C network

Purpose:


Verify a positive and negative matches to network IP address with a **Class C (24 bit mask)**, no matter the rule defined as permit or deny.

1. **Any packets** pass through the switch will be **dropped** – if the Destination IP Addresses match specific **Class C**.
2. **Any packets** pass through the switch will be **forwarded** – if the Destination IP Addresses **not** match specific **Class C**.

Case Design:

Action	DENY
Match	IP
Source IP Address	Any
Destination IP Address	Class C 172.16.0.0 / 255.255.255.0

Device Connection and Configuration:

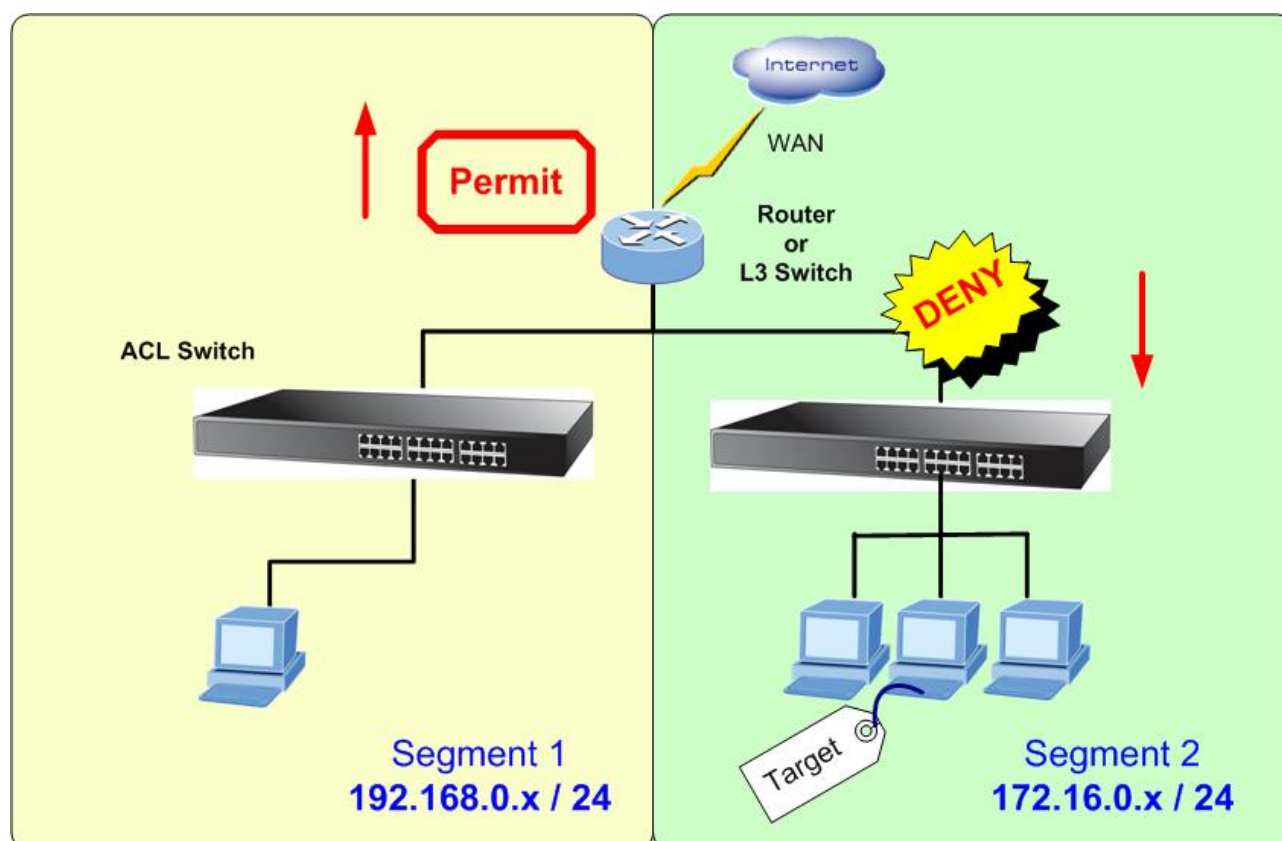

Target	Stream			Protocol
	ID	Source Address	Destination Address	
Any	3	Any	172.16.0.0 / 255.255.255.0	Any

ACL Policy Configuration:

Access Control List			
Group Id	3 (1~255)		
Action	Deny		
VLAN	<input checked="" type="radio"/> Any <input type="radio"/> VID 1 (1~4094)		
Packet Type	<input checked="" type="radio"/> IPv4		<input type="radio"/> Non-IPv4
Src IP Address	<input checked="" type="radio"/> Any <input type="radio"/> IP 0.0.0.0 Mask 255.255.255.255	Ether Type	Any Type#(0x)
Dst IP Address	<input type="radio"/> Any <input checked="" type="radio"/> IP 172.16.0.0 Mask 255.255.255.0		
IP Fragment	Uncheck		
L4 Protocol	<input checked="" type="radio"/> Any Protocol#: <input type="radio"/> TCP Any Port#: <input type="radio"/> UDP Any Port#:		

ACL Policy Entry:

IPv4	Group	Action	VID	SrcIP/Mask	DstIP/Mask	L4 Protocol	IP Fragment
<input type="radio"/>	3	deny	any	any	172.16.0.0/255.255.255.0	any	uncheck

Case 4: Deny specific VLAN packets

Purpose:


Verify a positive and negative matches to network IP address with a **specific VLAN ID**, no matter the rule defined as permit or deny.

1. Packets with VLAN ID= specific ACL VLAN ID will be **dropped**.
2. Packets with VLAN ID not match the specific ACL VLAN ID will be **forwarded**.

Case Design:

Action	DENY
Match	VLAN
Source IP Address	ANY
Destination IP Address	ANY

Device Connection and Configuration:

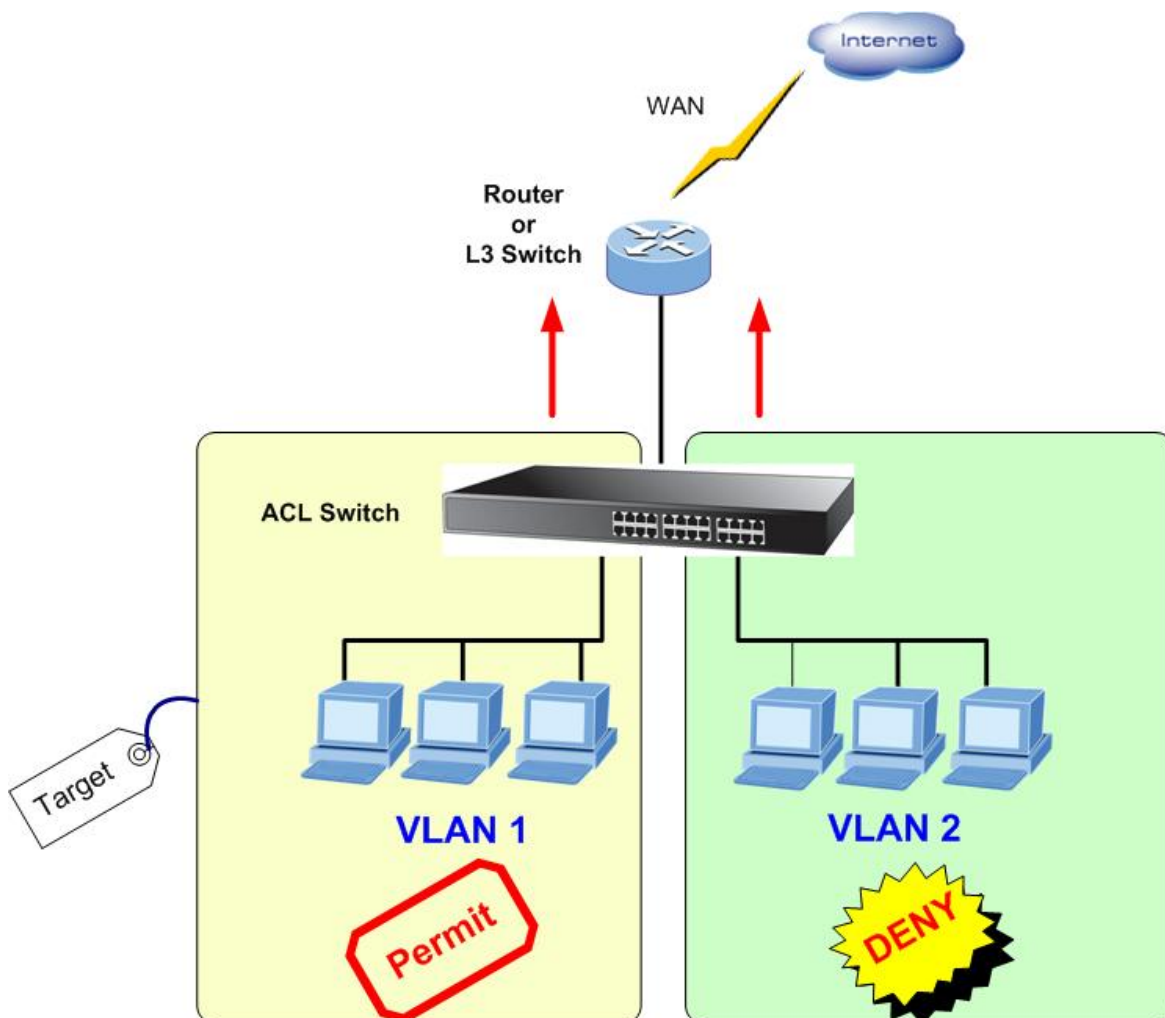

ACL Policy Configuration:

Group Id	<input type="text" value="7"/> (1~255)
Action	Deny <input type="button" value="v"/>
VLAN	<input type="radio"/> Any <input checked="" type="radio"/> VID <input type="text" value="2"/> (1~4094)
Packet Type	<input checked="" type="radio"/> IPv4
Src IP Address	<input checked="" type="radio"/> Any <input type="radio"/> IP <input type="text" value="0.0.0.0"/> <input type="text" value="Mask 255.255.255.255"/>
Dst IP Address	<input checked="" type="radio"/> Any <input type="radio"/> IP <input type="text" value="0.0.0.0"/> <input type="text" value="Mask 255.255.255.255"/>
IP Fragment	Uncheck <input type="button" value="v"/>
L4 Protocol	<input checked="" type="radio"/> Any <input type="button" value="v"/> Protocol#: <input type="text"/> <input type="radio"/> TCP Any <input type="button" value="v"/> Port#: <input type="text"/> <input type="radio"/> UDP Any <input type="button" value="v"/> Port#: <input type="text"/>

Case 5: Deny Specify Protocol – HTTP / WWW

Purpose:


Verify positive and negative matches to network IP address with a specific **protocol** or **TCP/UDP Port number**, no matter the rule defined as permit or deny.

1. Packets with Layer 4 protocol match the specific ACL protocol will be **dropped**.
2. Packets with Layer 4 protocol not match the specific ACL protocol will be **forwarded**.

Case Design:

Action	DENY
Match	Protocol
Service Type	HTTP/WWW (Port 80)
Source IP Address	Host
Destination IP Address	ANY

Device Connection and Configuration:

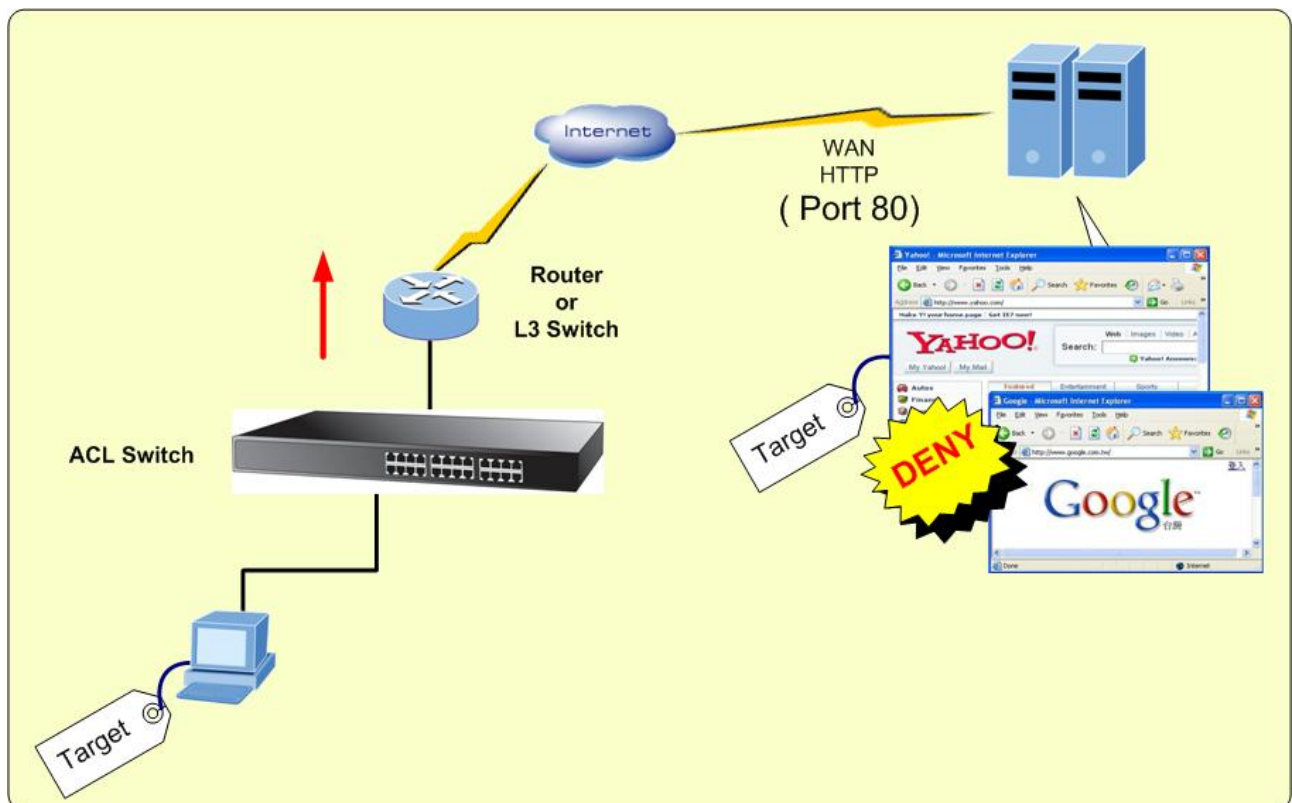

Target	Stream			Protocol
	ID	Source Address	Destination Address	
Host	5	192.168.1.1 / 255.255.255.255	ANY	HTTP (Port 80)

ACL Policy Configuration:

Access Control List

Group Id	<input type="text" value=""/> (1~255)		
Action	Deny <input type="button" value="v"/>		
VLAN	<input checked="" type="radio"/> Any <input type="radio"/> VID <input type="text" value="1"/> (1~4094)		
Packet Type	<input checked="" type="radio"/> IPv4		<input type="radio"/> Non-IPv4
Src IP Address	<input type="radio"/> Any <input checked="" type="radio"/> IP <input type="text" value="192.168.1.1"/> Mask <input type="text" value="255.255.255.255"/>	Ether Type	<input type="text" value="Any"/> <input type="button" value="v"/> Type#(0x) <input type="text" value=""/>
Dst IP Address	<input checked="" type="radio"/> Any <input type="radio"/> IP <input type="text" value="0.0.0.0"/> Mask <input type="text" value="255.255.255.255"/>		
IP Fragment	Uncheck <input type="button" value="v"/>		
L4 Protocol	<input type="radio"/> Any <input type="button" value="v"/> Protocol#: <input type="text" value=""/> <input checked="" type="radio"/> TCP <input type="text" value="HTTP(80)"/> <input type="button" value="v"/> Port#: <input type="text" value=""/> <input type="radio"/> UDP <input type="text" value="Any"/> <input type="button" value="v"/> Port#: <input type="text" value=""/>		

ACL Policy Entry:

IPv4	Group	Action	VID	SrcIP/Mask	DstIP/Mask	L4 Protocol	IP Fragment
<input type="radio"/>	5	deny	any	192.168.1.1/255.255.255.255	any	tcp#80	uncheck

Case 6: Deny Specify Protocol – SMTP


Purpose:

1. **SMTP packets** from specific Host IP Address will be **dropped**.
2. Other packets from specific Host IP Address will be forwarded.

Case Design:

Action	DENY
Match	Protocol
Service Type	SMTP (Port 25)
Source IP Address	Host
Destination IP Address	ANY

Device Connection and Configuration:

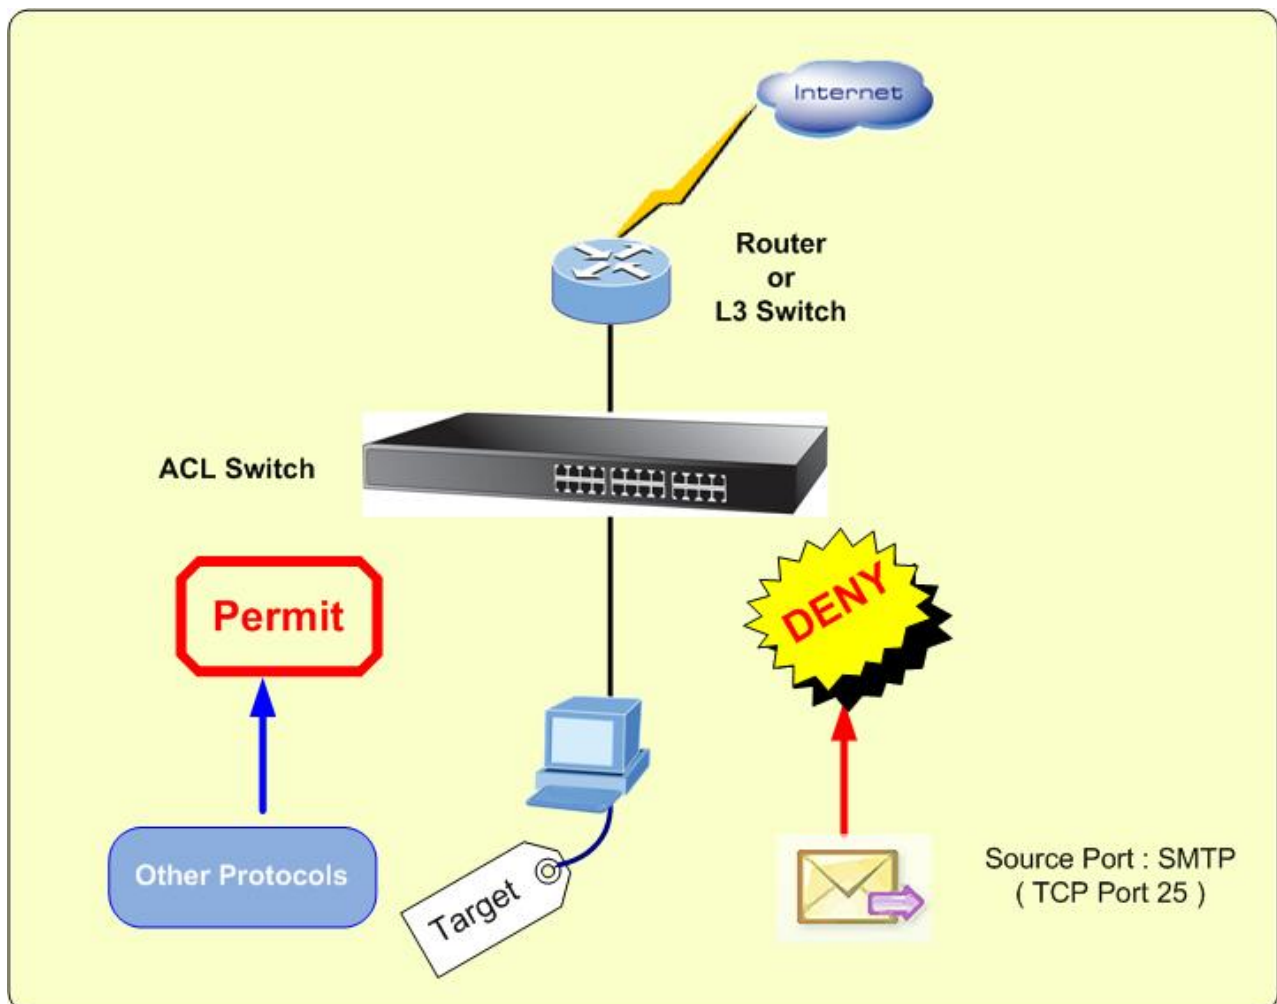

ACL Policy Configuration:

Access Control List

Group Id	6 (1~255)		
Action	Deny		
VLAN	<input checked="" type="radio"/> Any <input type="radio"/> VID 1 (1~4094)		
Packet Type	<input checked="" type="radio"/> IPv4 <input type="radio"/> Non-IPv4		
Src IP Address	<input type="radio"/> Any <input checked="" type="radio"/> IP 192.168.1.1 Mask 255.255.255.255	Ether Type	Any Type#(0x)
Dst IP Address	<input checked="" type="radio"/> Any <input type="radio"/> IP 0.0.0.0 Mask 255.255.255.255		
IP Fragment	Uncheck		
L4 Protocol	<input type="radio"/> Any Protocol#: <input checked="" type="radio"/> TCP Any Port#: 25 <input type="radio"/> UDP Any Port#:		

ACL Policy Entry:

IPv4	Group	Action	VID	SrcIP/Mask	DstIP/Mask	L4 Protocol	IP Fragment
<input type="radio"/>	6	deny	any	192.168.1.1/255.255.255.255	any	tcp#25	uncheck

2080-A81030-001

